

PITNEY BOWES
Sure-Feed Engineering

FlowMaster
RS Flex
10X13
Inserters

Parts Manual



SURE-FEED ENGINEERING

12050 49th STREET NORTH - CLEARWATER, FL. 33762-4301
PHONE: 727.571.3330 - FAX: 727.571.3443 - TOLL FREE: 1.800.INSERTER
web: sure-feed.com

TABLE OF CONTENTS

FRONT TABLE

FRAME ASSEMBLY (FIG. 1-1)	8
ENVELOPE CHAIN DRIVE ASSEMBLY (FIG 1-2)	10
REDUCER-MOTOR COMBO & INDEXING BOX (FIG. 1-3)	12
DRIVE SHAFT, RH JAW OPENER (FIG. 1-4)	14
TENSIONERS (FIG. 1-5)	16
CONVEYOR DRIVE ASSEMBLY (FIG. 1-6)	18
DRIVE SHAFT / CENTER JAW OPENER (FIG 1-7)	20
SHUTTLE DRIVE ASSEMBLY (FIG. 1-8)	22
PRIMARY AND SECONDARY DRIVE SHAFTS (FIG. 1-9)	24
SHUTTLE CAM DRIVE / TENSIONER (FIG. 1-10)	26
SHUTTLE ASSEMBLY (FIG. 1-11)	28
SHUTTLE GUIDE (FIG. 1-12)	30
SHUTTLE PLATE (FIG. 1-13)	32
TOP GUIDE ASSEMBLY (FIG. 1-14)	34
PAPER GUIDE ASSEMBLY (FIG. 1-15)	36
SIDE GUIDE / HOPPER GUIDE (FIG. 1-16)	38
GATE (FIG 1-17)	40
PLOW (FIG 1-18)	42
ROLLERS (FIG. 1-19)	44
GUIDE RAILS (FIG. 1-20)	46
WATER SUPPLY ASSEMBLY (FIG. 1-21)	48
WATER TANK / SOLENIOD (FIG. 1-22)	50
COVERS ASSEMBLY #1 (FIG. 1-23)	52
COVERS ASSEMBLY #2 (FIG. 1-24)	54
PNEUMATICS ASSEMBLY (FIG. 1-25)	56
VALVES (FIG. 1-26)	58

COLLATOR

FRAME ASSEMBLY (FIG. 2-1)	61
FEEDER DRIVE ASSEMBLY (FIG. 2-2)	64
CLUTCH / TENSIONER (FIG. 2-3)	66
MOTOR DRIVE (FIG. 2-4)	68
PUSHER ASSEMBLY (FIG. 2-5)	70
FRAME ASSEMBLY (FIG. 2-6)	72
PUSHER GUIDE, LH / RH (FIG. 2-7)	75
PUSHER ARM / CHAIN (FIG. 2-8)	77
FINGER DRIVE (FIG. 2-9)	79
ENTERING FINGERS (FIG. 2-10)	81

PITNEY BOWES

Sure-Feed Engineering

PUSHER DRIVE ASSEMBLY (FIG. 2-11)	83
PUSHER DRAG STRAP ASSEMBLY (FIG. 2-12)	85
COLLATOR CONVEYOR ASSEMBLY (FIG. 2-13)	87
SERVO MOTOR DRIVE (FIG. 2-14)	89
DRIVE SHAFT (FIG. 2-15)	91
CONVEYOR BELT TRACK (FIG. 2-16)	93
TENSIONER / ROLLER BRUSH / BRUSH STRIP (FIG. 2-17)	95
IDLER SHAFTS, FRONT AND REAR (FIG. 2-18)	97
COVERS ASSEMBLY - FEEDER DRIVE (FIG. 2-19)	99
COVERS ASSEMBLY – LOWER (FIG. 2-20)	101
COVERS ASSEMBLY – FEEDER LEXAN (FIG. 2-21)	103
10X13 @ POS. #1 / 10X13 @ ROTARY (FIG. 2-22)	105
ROTARY @ POS. #1 / BETWEEN ROTARYS (FIG. 2-23)	107
6X9 IN FRONT OF ROTARY (FIG. 2-24)	109
10X13 FEEDERS (FIG. 2-25)	111
6X9 @ ROTARY (FIG. 2-26)	113
WATER BRUSH ASSEMBLY (FIG. 2-27)	115
VACUUM ASSEMBLY (FIG. 2-28)	117
ROTARY AIR JET ASSEMBLY (FIG. 2-29)	119
PNEUMATICS ASSEMBLY (FIG. 2-30)	121
VALVE / REGULATOR (FIG. 2-31)	123
INSERT AIR FLOW CONTROL (FIG. 2-32)	125
TOUCHSCREEN (FIG. 2-33)	127
ELECTRICAL – FRONT SWITCH PLATE CABLES (FIG. 2-34)	129
MAIN SWITCH PLATE CABLES (FIG. 2-35)	131
10X13 FRICTION FEEDER	
FRICTION FEEDER (10X13) ASSEMBLY (FIG. 3-1)	134
FEEDER SHAFTS / TIMING (FIG. 3-2)	137
ELEVATOR / IDLER SUPPORT SHAFTS (FIG. 3-3)	139
NIP / DOUBLE DETECT / ACCEL SHAFTS (FIG. 3-4)	141
SEPERATOR (FIG. 3-5)	143
PAPER HOPPER / TONGUE (FIG. 3-6)	145
DOUBLE DETECT / BELT TENSIONER (FIG. 3-7)	147
DRAG STRAP (FIG. 3-8)	149
ELECTRICAL – REAR FEEDER PLATE (FIG. 3-9)	151
6X9 FRICTION FEEDER	
FRICTION FEEDER (6X9) ASSEMBLY (FIG. 4-1)	154
FEEDER SHAFTS / TIMING (FIG. 4-2)	157
CROWN / IDLER SUPPORT SHAFTS (FIG. 4-3)	159
NIP / DOUBLE DETECT SHAFTS (FIG. 4-4)	161

PITNEY BOWES

Sure-Feed Engineering

SEPERATOR (FIG. 4-5)	163
PAPER HOPPER / TONGUE (FIG. 4-6)	165
DOUBLE DETECT / BELT TENSIONER (FIG. 4-7)	167
DRAG STRAP (FIG. 4-8)	169
ELECTRICAL – REAR FEEDER PLATE (FIG. 4-9)	171
10X13 THIN MATERIAL FEEDER	
THIN MATERIAL FEEDER (10X13) ASSEMBLY (FIG. 5-1)	174
FEEDER SHAFTS / TIMING (FIG. 5-2)	177
CROWN / IDLER SUPPORT SHAFTS (FIG. 5-3)	179
DBL DETECT / SEPERATOR / ACCEL SHAFTS (FIG. 5-4)	181
SEPERATOR (FIG. 5-5)	184
PAPER TRANSPORT (FIG. 5-6)	186
PAPER HOPPER (FIG. 5-7)	188
DOUBLE DETECT / BELT TENSIONER (FIG. 5-8)	190
DRAG STRAP (5-9)	192
ELECTRICAL – REAR FEEDER PLATE (FIG. 5-10)	194
6X9 THIN MATERIAL FEEDER	
THIN MATERIAL FEEDER (6X9) ASSEMBLY (FIG. 6-1)	197
FEEDER SHAFTS / TIMING (FIG. 6-2)	200
CROWN / IDLER SUPPORT SHAFTS (FIG. 6-3)	202
DBL DETECT / SEPERATOR / ACCEL SHAFTS (FIG. 6-4)	204
SEPERATOR (FIG. 6-5)	206
PAPER TRANSPORT (FIG. 6-6)	208
PAPER HOPPER (FIG. 6-7)	210
DOUBLE DETECT / BELT TENSIONER (FIG. 6-8)	212
DRAG STRAP (FIG. 6-9)	214
ELECTRICAL – REAR FEEDER PLATE (FIG. 6-10)	216
ROTARY FEEDER	
ROTARY FEEDER ASSEMBLY #1 (FIG. 7-1)	219
ROTARY FEEDER ASSEMBLY #2 (FIG. 7-2)	221
ROTARY FEEDER ASSEMBLY #3 (FIG. 7-3)	223
UPPER FRAME #1 (FIG. 7-4)	225
UPPER FRAME #2 (FIG. 7-5)	227
DECK PLATE / SUCTION CUP BAR (FIG. 7-6)	229
SEPERATOR FINGER BAR (FIG. 7-7)	231
EXIT ROLLER / DRAG STRAP (FIG. 7-8)	233
DOUBLE DETECT (FIG. 7-9)	235

PITNEY BOWES

Sure-Feed Engineering

TURNOVER

TURNOVER ASSEMBLY (FIG. 8-1)	238
FRAME (FIG. 8-2)	240
TRANSPORT (FIG. 8-3)	242
SHAFT ADJUSTOR (FIG. 8-4)	244
ROLLER ASSEMBLIES (FIG. 8-5)	246
DC DRIVE ASSEMBLY (FIG. 8-6)	248
TENSIONERS (FIG. 8-7)	251
COVER ASSEMBLY #1 (FIG. 8-8)	253
COVER ASSEMBLY #2 (FIG. 8-9)	255

INFEEED CONVEYOR

INFEEED CONVEYOR ASSEMBLY (FIG. 9-1)	258
CONVEYOR BED ASSEMBLY (FIG. 9-2)	260
AIR LEG ASSEMBLY (FIG. 9-3)	263
PUMP BASE (FIG. 9-4)	265

SHINGLE CONVEYOR


SHINGLE CONVEYOR ASSEMBLY (FIG. 10-1)	268
KNOCK DOWN ASSEMBLY (FIG. 10-2)	270

Front Table / Turnover Combo

PITNEY BOWES
Sure-Feed Engineering

PITNEY BOWES
Sure-Feed Engineering

FRONT TABLE ***10X13***

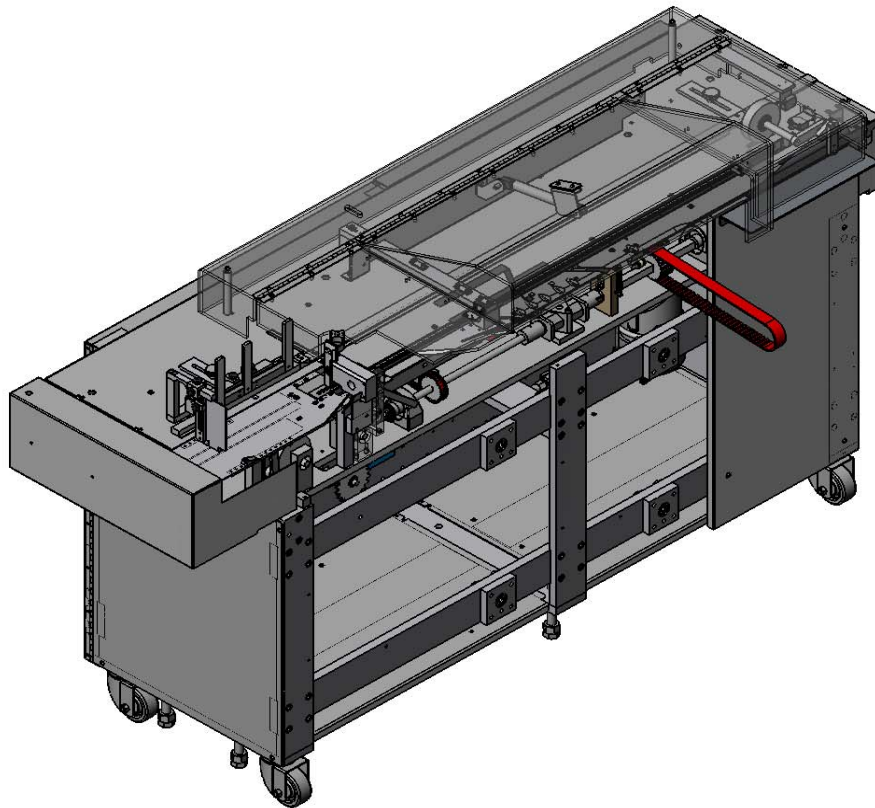


FRONT TABLE - FRAME ASSEMBLY (Fig. 1-1)
(18020-002)

ITEM	PART NO.	QTY.	DESCRIPTION
1	18020-264	1	ASSEMBLY, RH LEG
2	18020-265	1	ASSEMBLY, CENTER LEG
3	18020-266	1	ASSEMBLY, LH LEG
4	18008-040	1	BAR, LOWER FRONT BRACE
5	18008-039	1	BAR, LOWER REAR BRACE
6	18008-038	1	BAR, UPPER REAR BRACE
7	18011-011	4	BLOCK, COLLATOR ALIGNMENT
8	99006-007	4	LINEAR LOCATING PIN
9	18012-018	2	SPACER, FRONT TABLE SUPPORT
10	18007-044	3	BLOCK, TABLE SUPPORT
11	18007-038	1	BLOCK, ACTUATOR MTG.
12	99010-005	4	CASTOR, 1/2-13 STEM
13	18011-037	1	PLATE, WATER BOTTLE MTG.
14	18013-072	2	COVER, LOWER FLOOR
15	-	6	BOLT, HEX HEAD, 5/8-11 X 6
16	-	6	NUT, HEX, 5/8-11
17	-	4	NUT, HEX, 1/2-13
18	-	2	SCREW, SKT HEAD, #10-24 X 5/8
19	-	2	SCREW, SKT HEAD, #10-24 X 1/2
20	-	20	WASHER, FLAT, 3/8
21	-	32	BOLT, SKT HEAD, 3/8-16 X 1
22	-	2	BOLT, SKT HEAD, 1/4-20 X 5/8
23	-	4	BOLT, SKT HEAD, 3/8-16 X 1-1/2
24	-	2	BOLT, SKT HEAD, 3/8-16 X 1-1/8
25	-	24	BOLT, SKT HEAD, 3/8-16 X 3/4

PITNEY BOWES

Sure-Feed Engineering

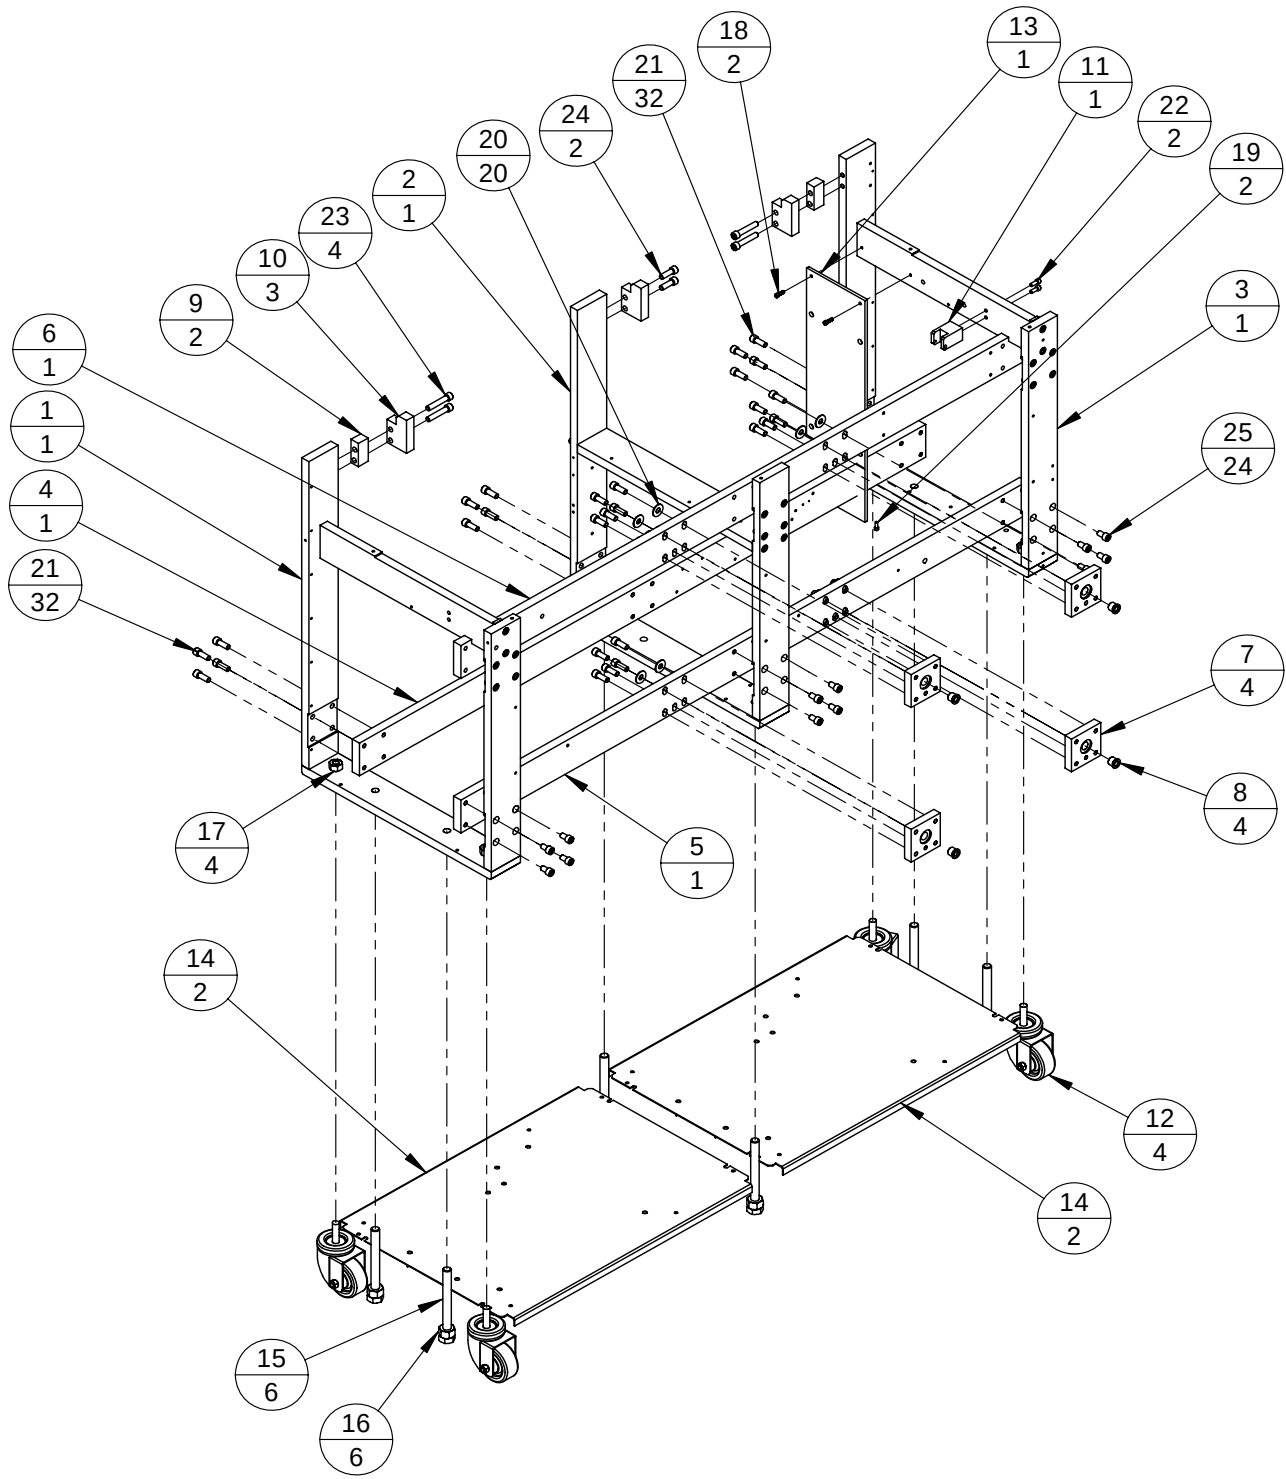


FRONT TABLE (Fig. 1-2)
ENVELOPE CHAIN DRIVE ASSEMBLY (18020-384)

ITEM	PART NO.	QTY.	DESCRIPTION
1	SEE FIG. 1-4	1	ASSEMBLY, CHAIN DRIVE (18020-267)
2	SEE FIG. 1-5	2	ASSEMBLY, CHAIN TENSIONER (18020-058)
3	SEE FIG. 1-3	1	ASSY, REDUCE - MOTOR COMBO, 16K (18020-385)
4	SEE FIG. 1-3	1	ASSEMBLY, INDEXING BOX (18020-057)
5	SEE FIG. 1-5	1	ASSEMBLY, TENSIONER W/ ENCODER (18020-386)
6	SEE FIG. 1-4	1	ASSEMBLY, RH JAW OPENER (18020-011)
7	18011-028	1	PLATE, FRONT TABLE
8	18007-091	1	BLOCK, ACTUATOR MTG.
9	18011-010	4	BLOCK, GIB, DRIVE PLATE GUIDE
10	18007-105	1	BLOCK, FRONT TABLE STOP
11	99000-016	1	BELT, TIMING, 920-8M-20
12	18007-078	2	BLOCK, TAKE UP
13	99014-002	1	LINEAR ACTUATOR, 4"
14	99000-055	1	BELT, TIMING, 1040-8M-20 SH
15	99033-001	1	SHOULDER BOLT, 1/4 X 1
16	99000-336	1	BELT, TIMING, 170XL025
17	18003-019	1	BAR, CHAIN GUIDE SUPPORT
18	18003-021	1	BAR, CHAIN GUIDE SUPPORT W/ SLOT
19	18005-039	1	GUIDE, ENVELOPE CHAIN, LH
20	18005-038	1	GUIDE, ENVELOPE CHAIN, RH
21	18014-009	1	ASSY, ENVELOPE GRIPPER CHAIN (NOT SHOWN)
22	-	4	BOLT, SKT HEAD, 1/4-20 X 1-1/8
23	-	24	BOLT, SKT HEAD, 1/4-20 X 1
24	-	4	WASHER, FLAT, 3/8
25	-	4	BOLT, SKT HEAD, 5/16-18 X 1-1/4
26	-	4	BOLT, SKT HEAD, 3/8-16 X 1-1/4
27	-	2	BOLT, HEX HEAD, 1/4-20 X 3/4
28	-	2	NUT, HEX, 1/4-20
29	-	4	WASHER, FLAT, 5/16
30	-	2	BOLT, SKT HEAD, 1/4-20 X 5/8
31	-	2	WASHER, FLAT, 1/4
32	-	2	BOLT, SKT HEAD, 1/4-20 X 1/2
33	-	2	BOLT, BUTTON HEAD, 1/4-20 X 1/2

PITNEY BOWES

Sure-Feed Engineering

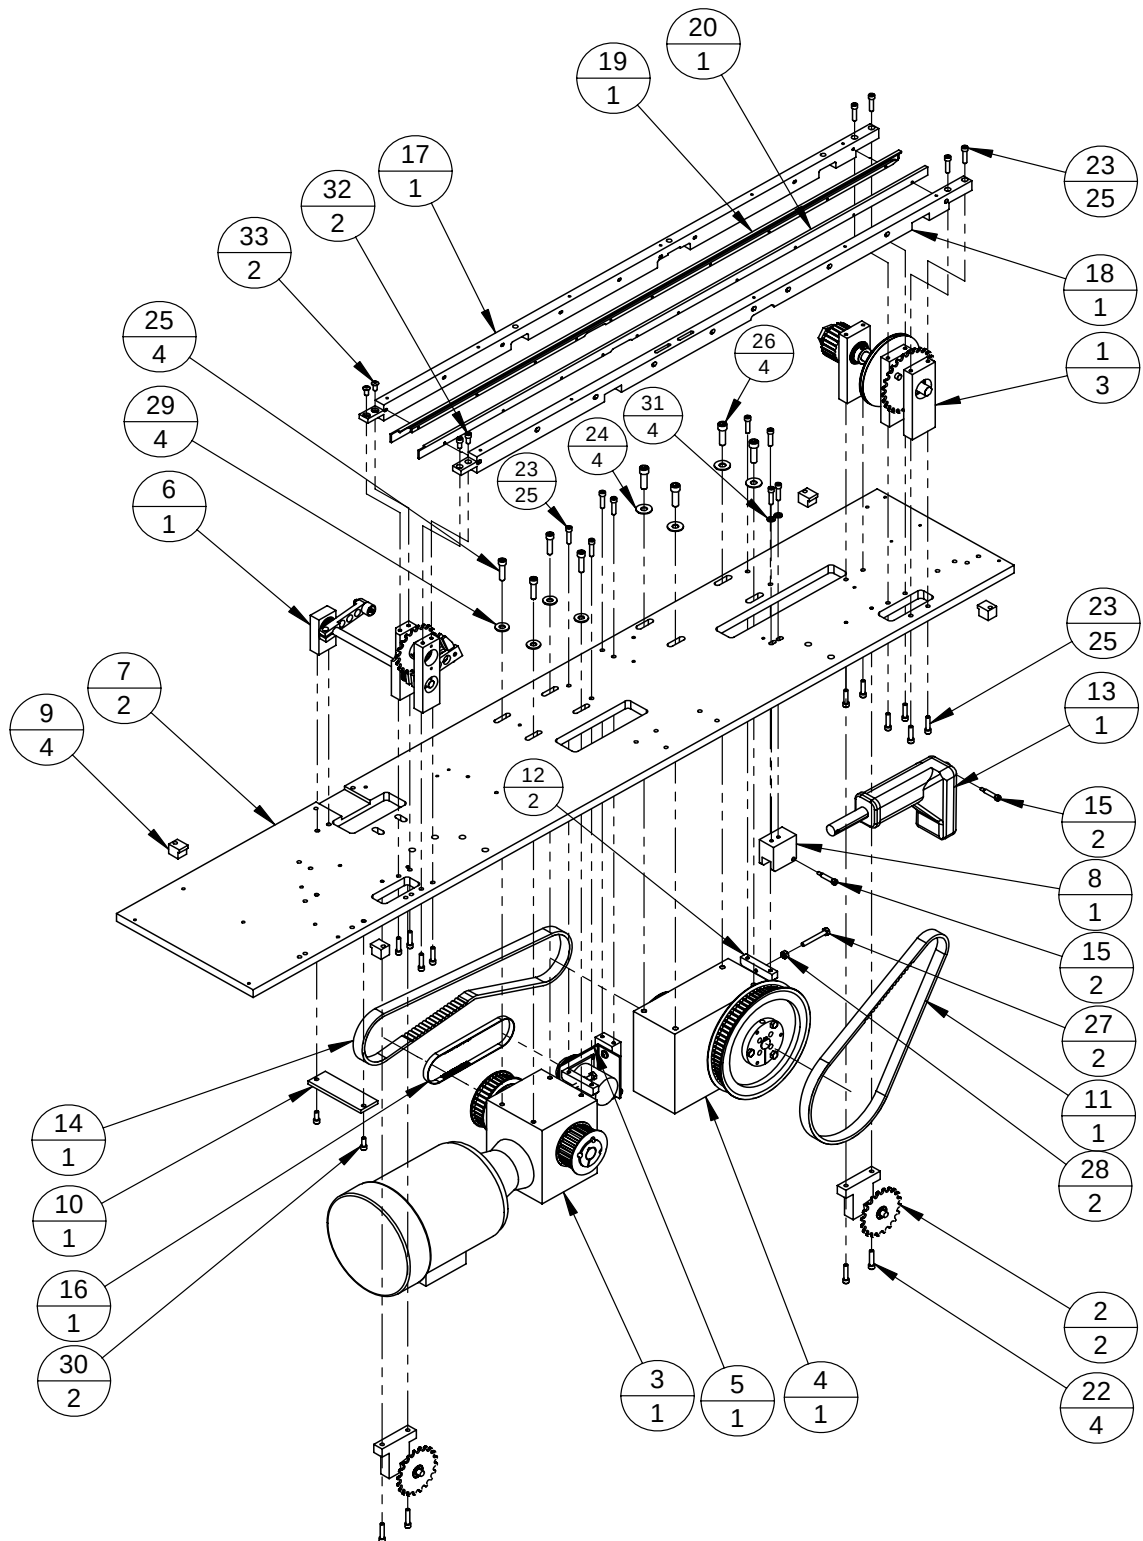


**FRONT TABLE - ENVELOPE CHAIN DRIVE (Fig. 1-3)
REDUCER – MOTOR COMBO, INDEXING BOX ASSEMBLIES**


ITEM	PART NO.	QTY.	DESCRIPTION
	18020-385	1	ASSEMBLY, REDUCER-MOTOR COMBO
1	99001-024	1	GEAR MOTOR – REDUCER COMBO
2	99002-014	1	PULLEY, TIMING, TL24L100-SH (1210 TAPERLOCK)
3	99017-011	1	BUSHING, TAPERLOCK, 1210, 3/4 BORE
4	99002-012	1	PULLEY, TIMING, 36-8M-20 SH
5	99017-007	1	BUSHING, QD, SH 7/8 BORE
6	99034-002	2	KEY, SQUARE, 3/16 X 1
7	18006-153	1	PULLEY, TIMING, 30XL025, 7/8 BORE
8	-	3	BOLT, HEX HEAD, 1/4-20 X 1-1/4
	18020-057	1	ASSEMBLY, INDEXING BOX
9	99015-003	1	INDEXING BOX, CAMCO 3-180
10	99002-012	1	PULLEY, TIMING, 36-8M-20 SH
11	99017-008	1	BUSHING, QD, SH 5/8 BORE
12	99002-013	1	PULLEY, TIMING, 72-8M-20 SDS
13	18011-086	1	PLATE, DRIVE ADAPTER
14	99034-002	2	KEY, SQUARE, 3/16 X 1
15	-	3	BOLT, HEX HEAD, 1/4-20 X 3/4
16	-	3	BOLT, HEX HEAD, 1/4-20 X 1-1/4
17	18006-075	1	BUSHING, OUTPUT
18	18012-054	1	SPACER, TIMING PULLEY
19	-	4	SCREW, SKT HEAD, #10-24 X 1

PITNEY BOWES

Sure-Feed Engineering

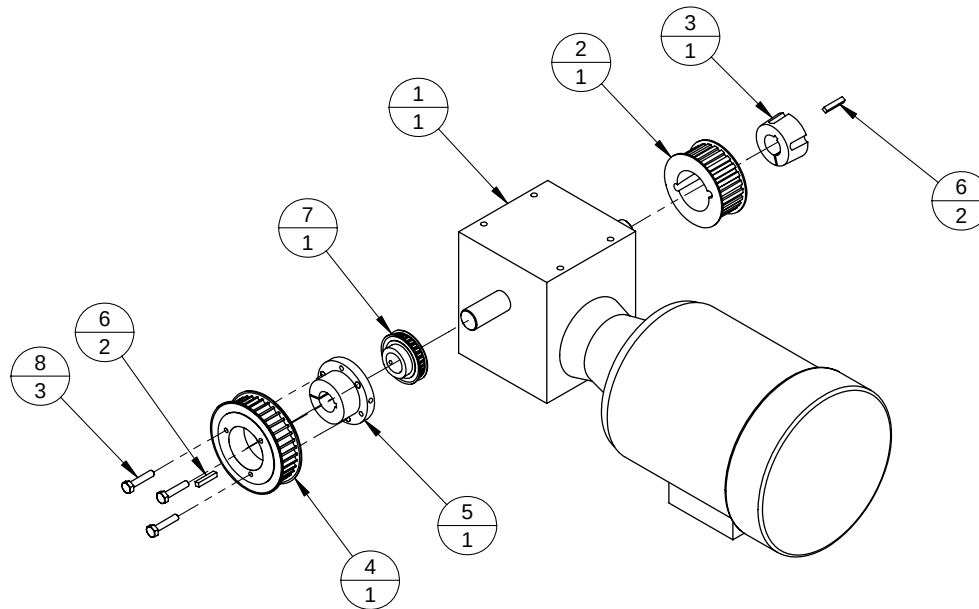

ASSY# 18020-385

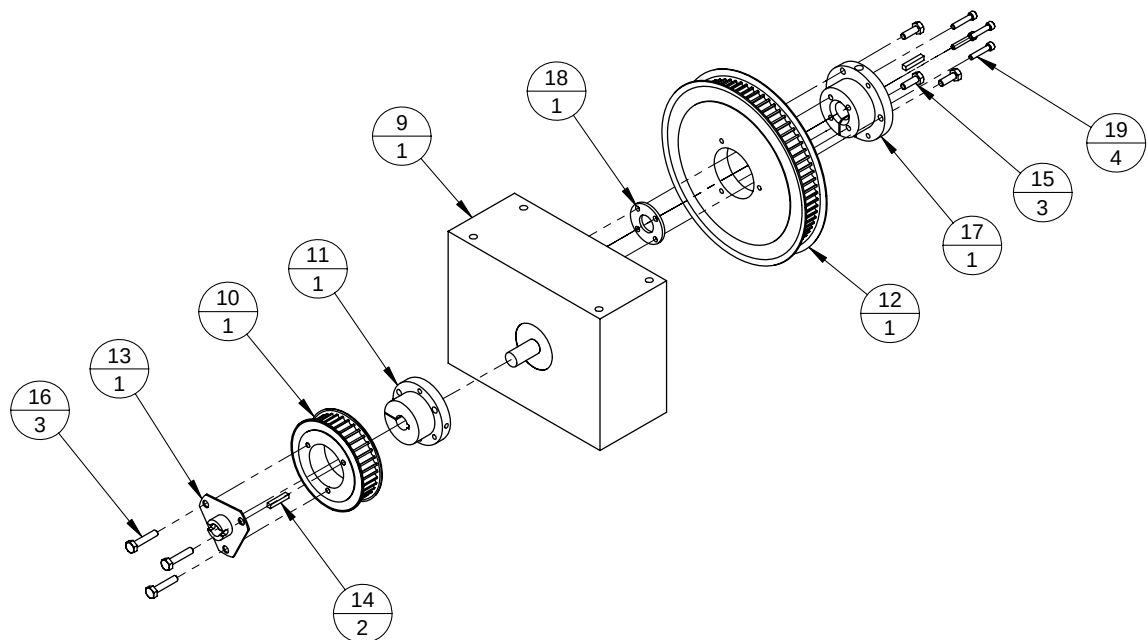



ASSY# 18020-057

**FRONT TABLE – ENVELOPE CHAIN DRIVE (Fig. 1-4)
 DRIVE SHAFT, RH JAW OPENER ASSEMBLIES**

ITEM	PART NO.	QTY.	DESCRIPTION
	18020-267	1	ASSEMBLY, CHAIN DRIVE SHAFT
1	18007-076	3	BLOCK, BEARING, CHAIN SUPPORT
2	18004-054	1	SPROCKET – SHAFT ASSY, 27T
3	99003-006	4	BEARING, 5/8 X 1-3/8 SEALED W/ S.R.
4	99003-029	1	BUSHING, SL, 5/8 X 3/4 X 1/2
5	99003-021	2	WASHER, NYLON, 5/8 X 1/16
6	18006-035	1	ROLLER, ENVELOPE DISCHARGE
7	18007-107	1	BLOCK, CLAMP
8	18014-005	1	BELT, ENVELOPE CLOSE
9	18006-020	1	PULLEY, ENVELOPE CHAIN DRIVE
10	99017-010	1	TRANTORQUE, 5/8
11	99017-005	1	COLLAR, 5/8 SHAFT
12	-	2	BOLT, SKT HEAD, 1/4-20 X 3/4
13	-	1	BOLT, SKT HEAD, 1/4-20 X 1
14	99022-008	1	SNAP RING, 5/8 EXTERNAL
	18020-011	1	ASSEMBLY, RH JAW OPENER
15	18007-027	1	BLOCK, BEARING, SHORT
16	99003-007	5	BEARING, 1/2 X 1-1/8 SEALED W/ S.R.
17	18004-072	1	ASSEMBLY, RH JAW SHAFT
18	18008-048	2	BAR, RH JAW OPENER
19	99036-001	1	SPACER, RH JAW OPENER
20	18020-124	1	ASSEMBLY, ARM, RH JAW OPENER
21	99003-018	6	WASHER, NYLON, 1/2 X 1/16
22	18007-026	1	BLOCK, BEARING, CHAIN SUPPORT W/ CHAMFER
23	18007-046	1	BLOCK, BEARING, CHAIN SUPPORT
24	18004-030	1	SHAFT, IDLER, ENVELOPE CHAIN
25	99003-039	1	BUSHING, SL, 1/2 X 3/4 X 1/2
26	99003-032	2	WASHER, NYLON, 1/2 X 1/32
27	18015-005	1	SPROCKET, IDLER, 20T
28	-	1	SCREW, SKT HEAD, 1/4-20 X 1
29	-	1	NUT, HEX, 1/4-20
30	-	1	BOLT, HEX HEAD, 3/8-24 X 3/4

PITNEY BOWES

Sure-Feed Engineering

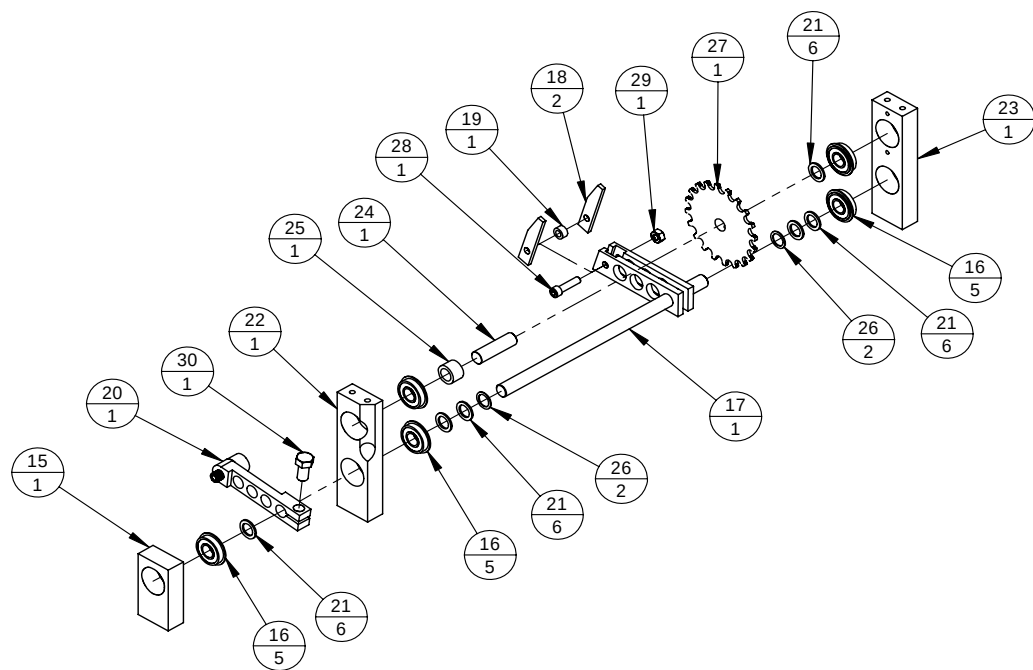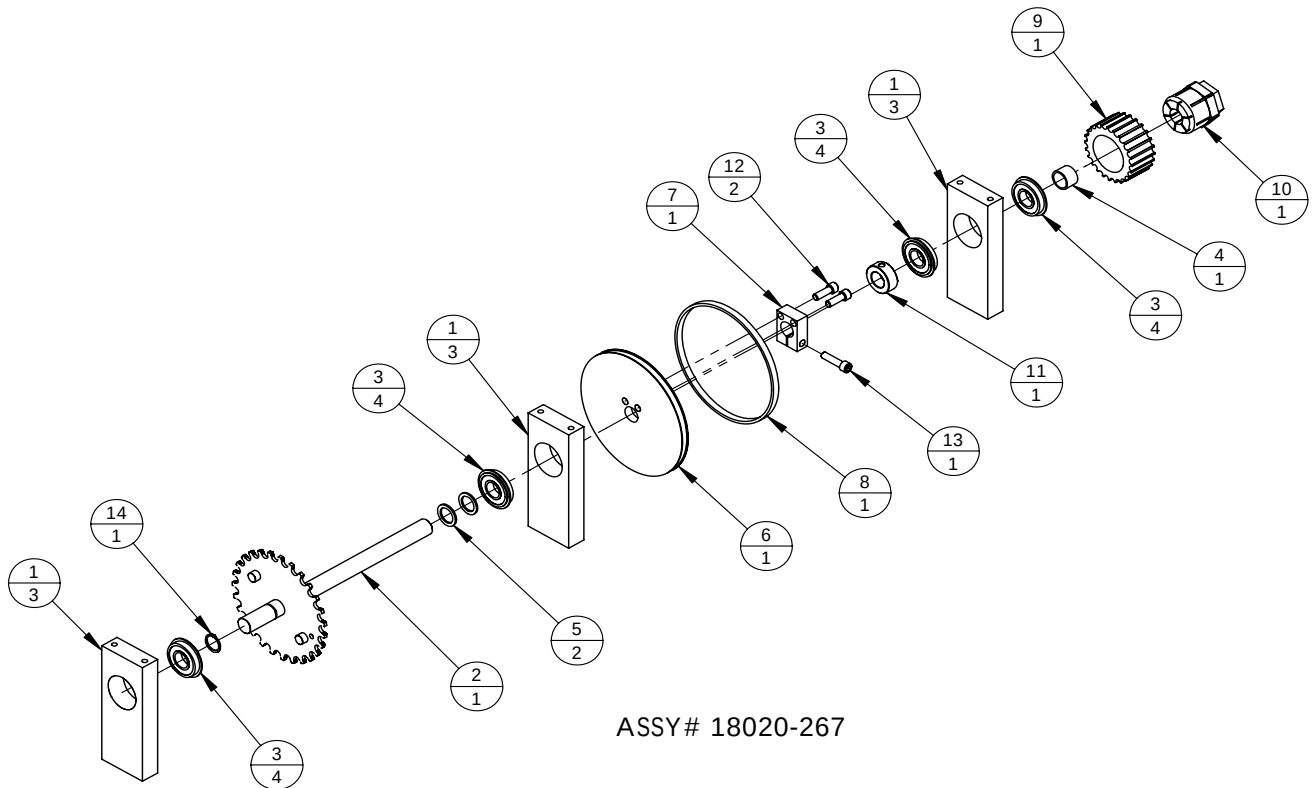


**FRONT TABLE - ENVELOPE CHAIN DRIVE (Fig. 1-5)
TENSIONER ASSEMBLIES**


ITEM	PART NO.	QTY.	DESCRIPTION
	18020-386	1	ASSEMBLY, TENSIONER W/ ENCODER
1	18007-031	1	BLOCK, TENSIONER MTG.
2	18004-022	1	SHAFT, ECCENTRIC IDLER, 1/2
3	18006-012	1	ROLLER, FLAT IDLER, 1-1/2 X 1-1/8
4	99003-007	2	BEARING, 1/2 X 1-1/8 SEALED W/ S.R.
5	99003-018	1	WASHER, NYLON, 1/2 X 1/16
6	99022-004	1	SNAP RING, 1/2
7	-	1	BOLT, SKT HEAD, 5/16-18 X 1-3/4
8	-	2	WASHER, FLAT, 1/4
9	-	2	BOLT, BUTTON HEAD, 1/4-20 X 3/4
10	18009-116	1	BRACKET, ENCODER (DANAHER)
11	98017-001	1	ENCODER, DANAHER
12	99002-152	1	PULLEY, TIMING, 30XL025, 3/8 BORE
13	-	4	FLAT WASHER, #6
14	-	4	SCREW, BUTTON HEAD, #6-32 X 5/8
	18020-058	2	ASSEMBLY, CHAIN TENSIONER
15	18004-024	1	SHAFT, ECCENTRIC IDLER, 3/8
16	18015-004	1	SPROCKET, IDLER, 20T
17	99003-008	2	BEARING, 3/8 X 7/8 SEALED
18	99003-017	2	WASHER, NYLON, 3/8 X 1/16
19	9902-003	1	SNAP RING, 3/8
20	-	1	BOLT, HEX HEAD, 5/16-18 X 3/4
21	18007-034	1	BLOCK, IDLER MTG.

PITNEY BOWES

Sure-Feed Engineering

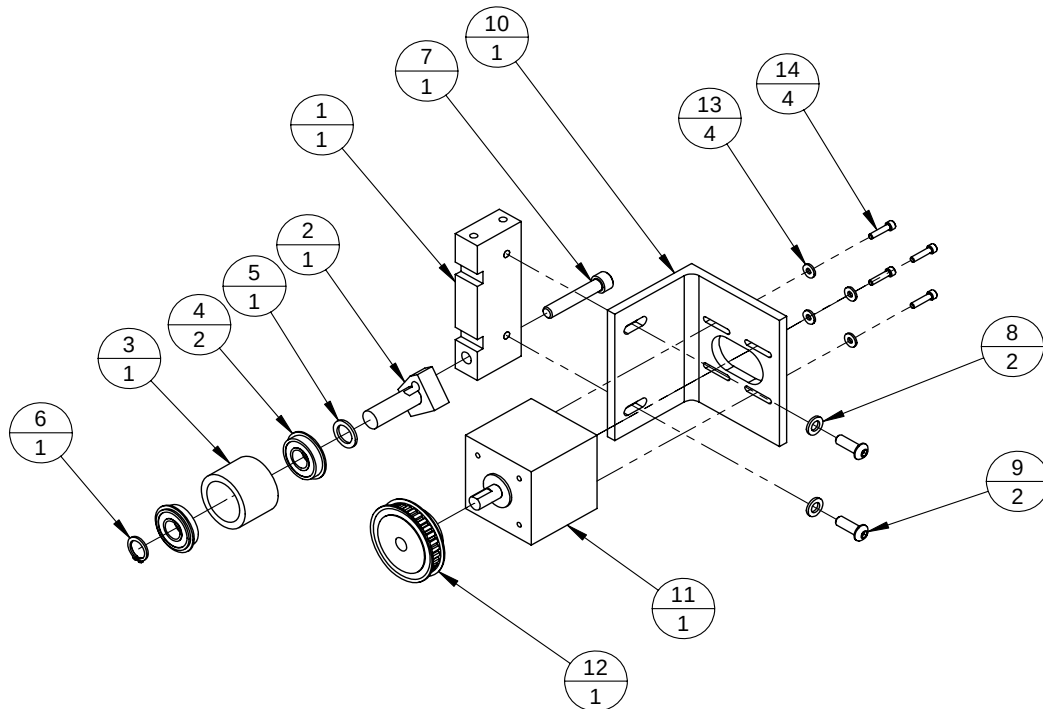

ASSY# 18020-386

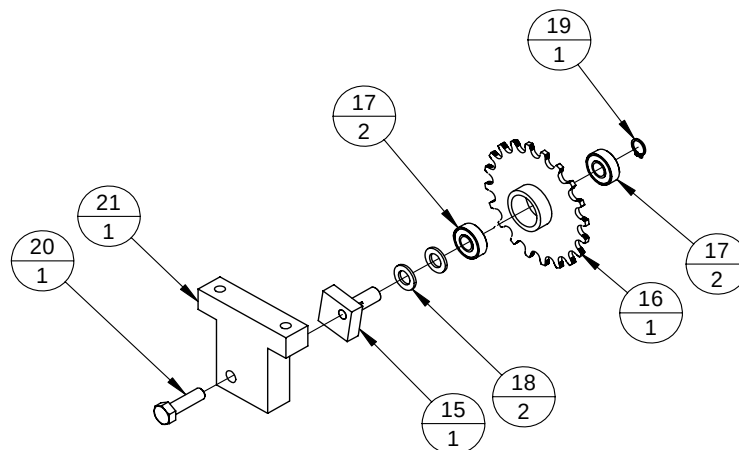


ASSY# 18020-058

**FRONT TABLE – CONVEYOR DRIVE ASSEMBLY (Fig. 1-6)
 (18020-006)**

ITEM	PART NO.	QTY.	DESCRIPTION
1	SEE FIG. 1-7	1	ASSEMBLY, CONVEYOR DRIVE SHAFT (18020-088)
2	18011-009	1	SPACER, GEAR BOX
3	99015-002	1	GEAR BOX, RIGHT ANGLE
4	99017-001	2	COUPLING, 1/2" BORE, I PC CLAMP
5	99002-014	1	PULLEY, TL24L100-SH
6	99017-012	1	BUSHING, TAPERLOCK, 1210, 3/4 BORE
7	99003-007	1	BEARING, 1/2 X 1-1/8 SEALED W/ S.R.
8	99000-012	1	BELT, TIMING, 187L100
9	99000-015	1	BELT, TIMING, 300L075
10	99034-001	1	KEY, WOODRUF, 1/8 X 3/4
11	99034-003	2	KEY, SQUARE, 1/8 X 3/4
12	-	2	BOLT, SKT HEAD, 3/8-16 X 1
13	-	2	BOLT, SKT HEAD, 1/4-20 X 1
14	-	3	BOLT, SKT HEAD, 1/4-20 X 2-3/4

PITNEY BOWES

Sure-Feed Engineering

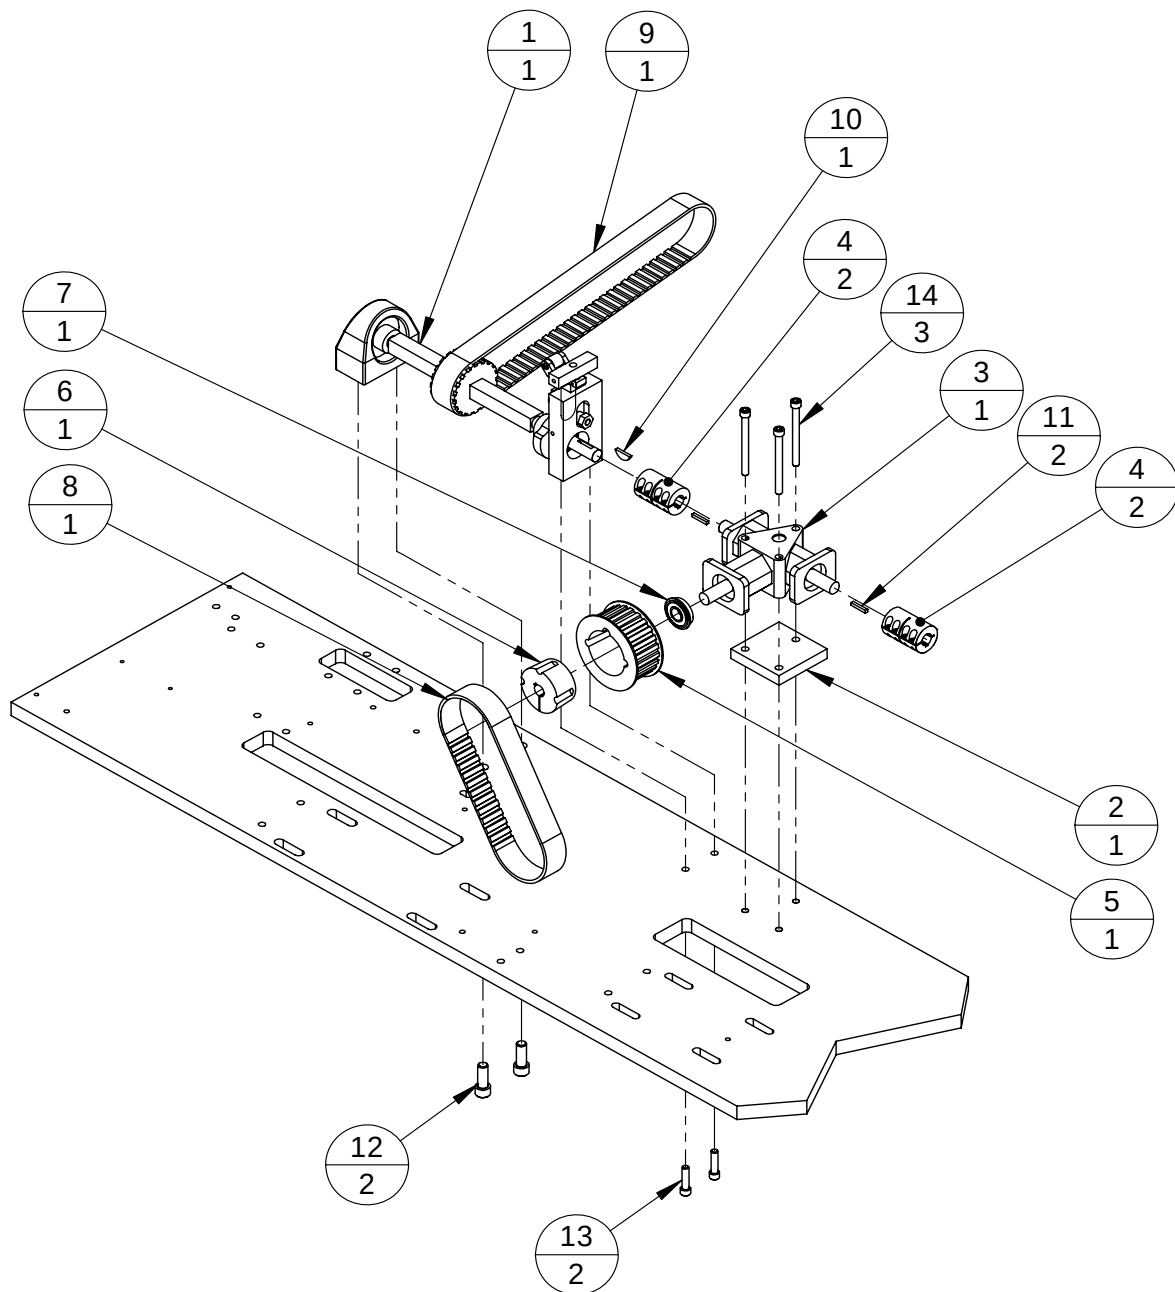


**FRONT TABLE - CONVEYOR DRIVE (Fig. 1-7)
 CONVEYOR DRIVE SHAFT ASSEMBLY (18020-088)**


ITEM	PART NO.	QTY.	DESCRIPTION
1	99003-009	1	BEARING, PILLOW BLOCK, 1/2
2	18004-052	1	SHAFT, COLLATOR DRIVE
3	18006-038	1	PULLEY, COLLATOR DRIVE – 19L
4	18016-008	1	CAM, CENTER JAW OPENER
5	18020-010	1	ASSEMBLY, CENTER JAW OPENER
5A	18007-055	1	SLIDE, CENTER JAW OPENER
5B	18007-025	1	BLOCK, CTR JAW OPENER
5C	99003-007	1	BEARING, 1/2 X 1-1/8 SEALED W/ S.R.
5D	18005-024	1	GIB, CENTER JAW OPENER
5E	18009-031	1	BRACKET, ROLLER MTG.
5F	18009-004	1	BRACKET, SPRING MTG.
5G	99006-008	1	NUT, ECCENTRIC PIN
5H	99006-014	1	PIN, ECCENTRIC
5I	99006-015	1	PIN, CENTER JAW ROLLER
5J	99019-001	1	ROLLER, CENTER JAW OPENER
5K	99003-008	1	BEARING, 3/8 X 7/8 SEALED
5L	99003-102	1	BUSHING, FL, 1/4 X 3/8 X 7/8 X 1/4
5M	99022-001	1	SNAP RING, 1/4
5N	-	4	SCREW, FLAT HEAD, #6-32 X 3/8
5O	-	1	BOLT, SKT HEAD, 1/4-20 X 1
5P	-	4	SCREW, SKT HEAD, #10-24 X 5/8
5Q	99005-002	2	SPRING, EXTENSION

PITNEY BOWES

Sure-Feed Engineering

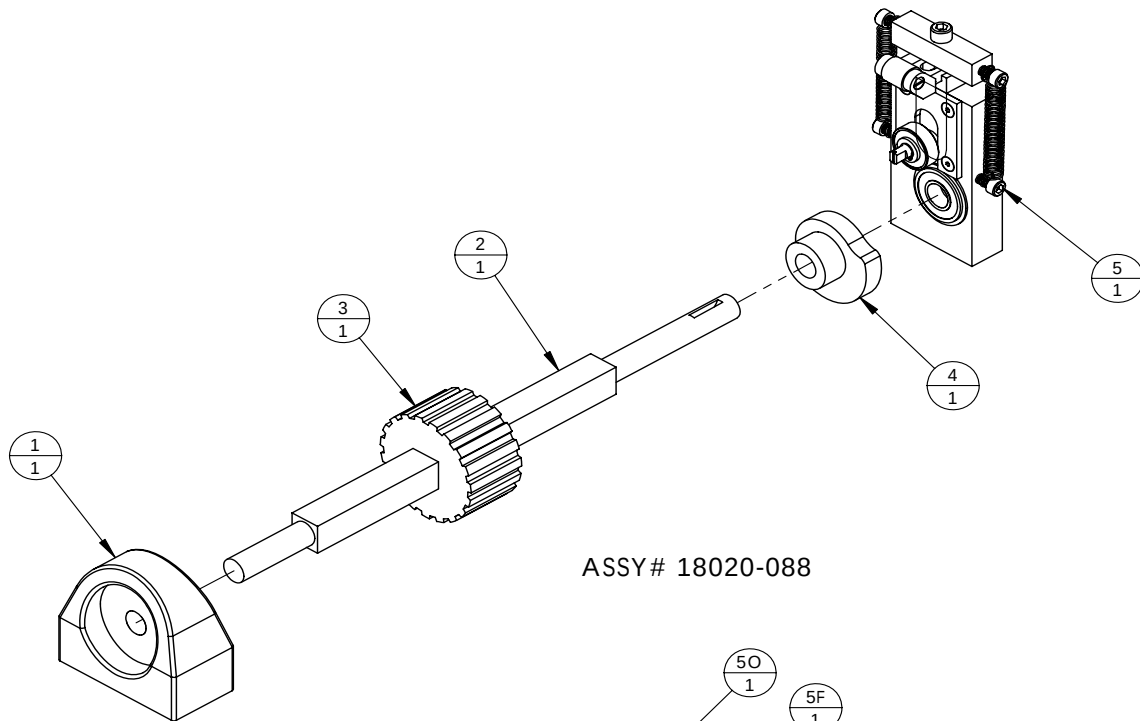

ASSY# 18020-088

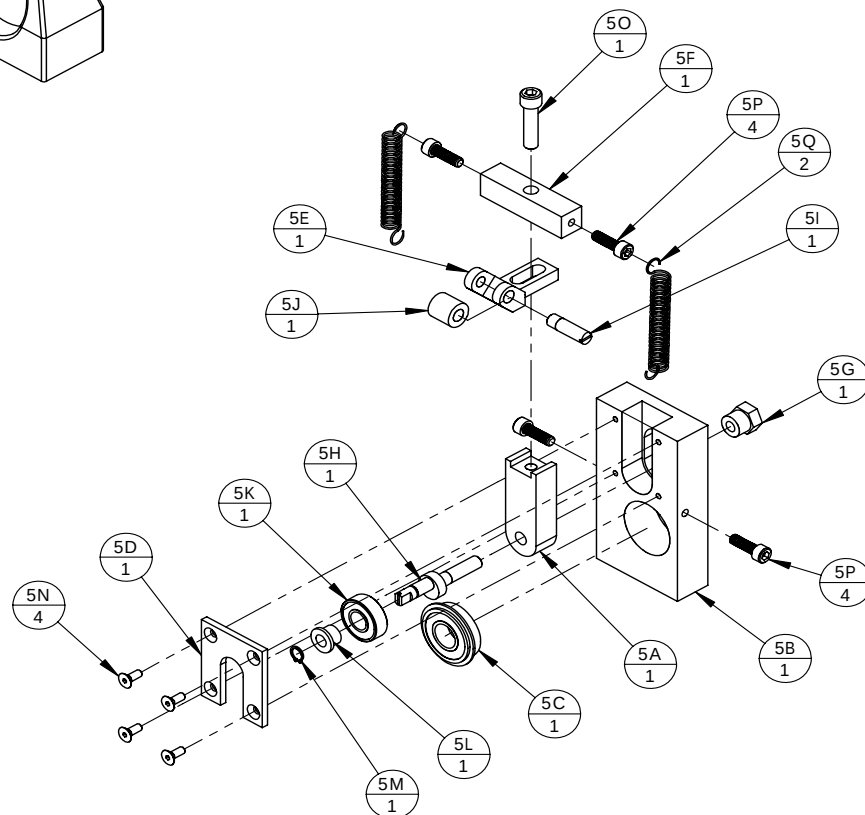


ASSY# 18020-010

FRONT TABLE – SHUTTLE DRIVE ASSEMBLY (Fig. 1-8)
(18020-268)

ITEM	PART NO.	QTY.	DESCRIPTION
1	SEE FIG. 1-9	1	ASSEMBLY, SECONDARY SHUTTLE DRIVE (18020-381)
2	SEE FIG. 1-9	1	ASSEMBLY, PRIMARY SHUTTLE DRIVE (18020-382)
3	SEE FIG. 1-10	1	ASSEMBLY, SHUTTLE CAM DRIVE (18020-383)
4	SEE FIG. 1-10	1	ASSEMBLY, TENSIONER (18020-060)
5	99000-013	1	BELT, TIMING, 240L050
6	-	2	WASHER, FLAT, 3/8
7	-	6	BOLT, SKT HEAD, 3/8-16 X 1
8	-	4	BOLT, SKT HEAD, 1/4-20 X 1
9	-	2	BOLT, SKT HEAD, 1/4-20 X 3/4

PITNEY BOWES

Sure-Feed Engineering

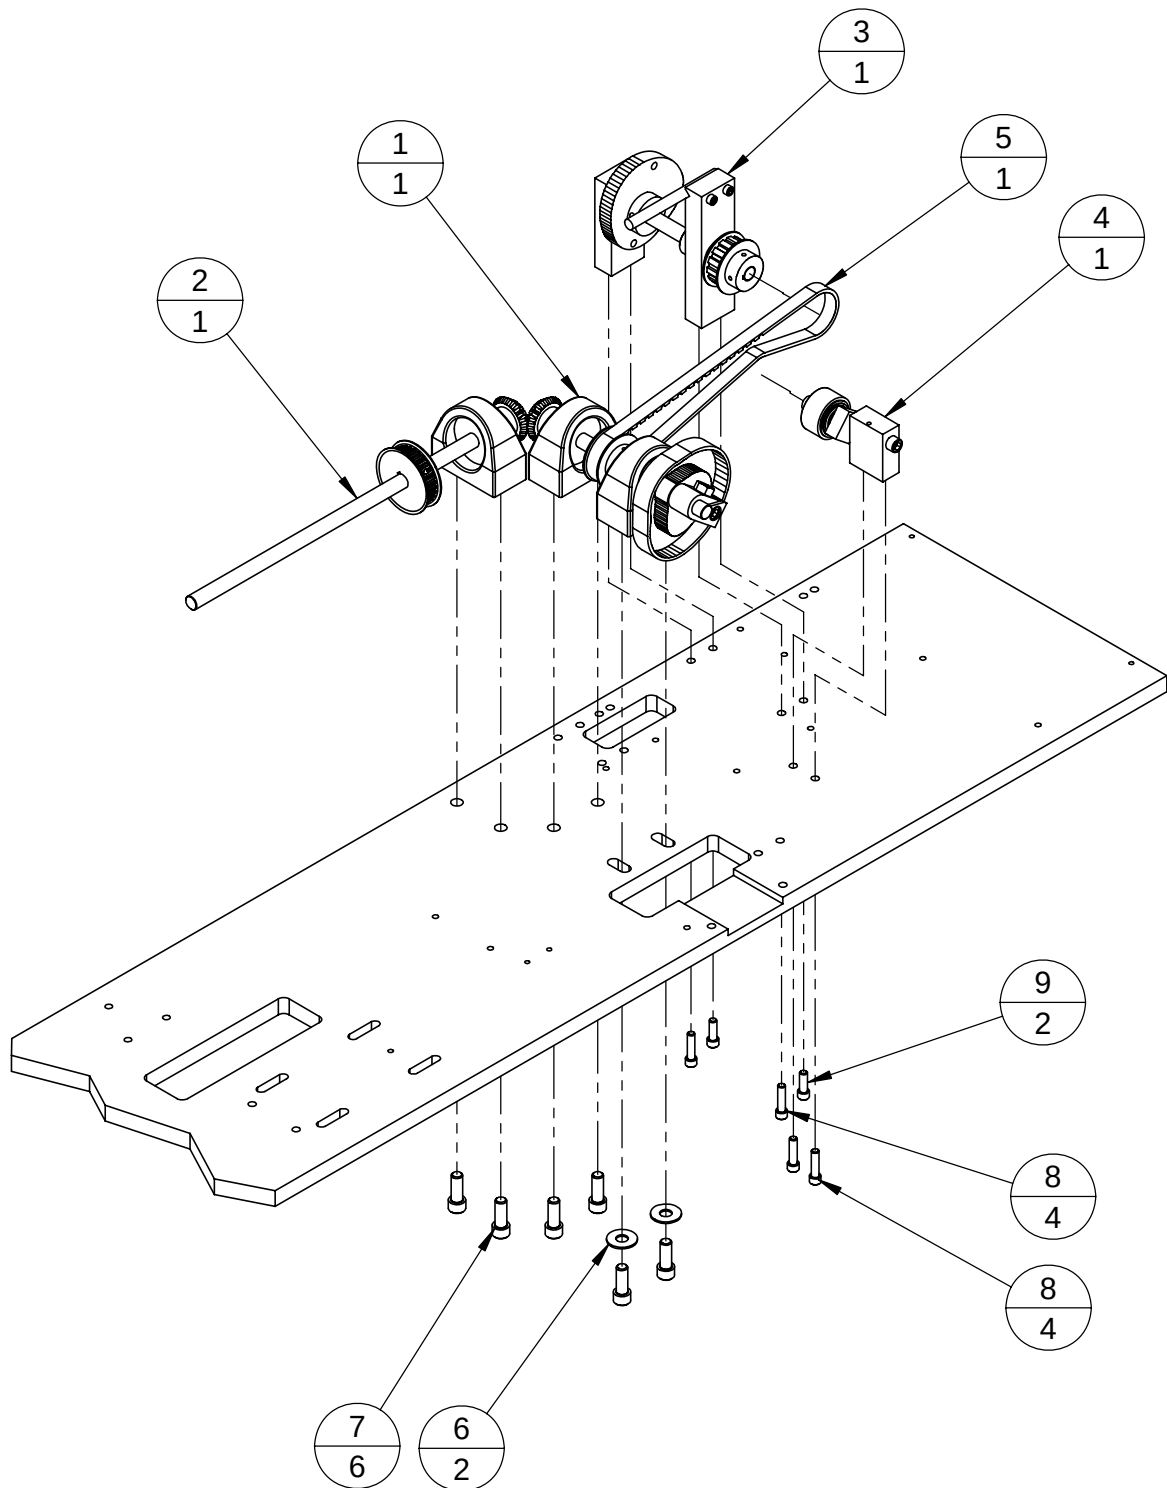


**FRONT TABLE –SHUTTLE DRIVE (Fig. 1-9)
 PRIMARY & SECONDARY DRIVE ASSEMBLIES**


ITEM	PART NO.	QTY.	DESCRIPTION
	18020-382	1	ASSEMBLY, PRIMARY SHUTTLE DRIVE
1	99003-009	1	BEARING, PILLOW BLOCK, 1/2
2	18004-061	1	SHAFT ASSY, PRIMARY SHUTTLE DRIVE
3	99002-017	1	PULLEY, TIMING, 32XL037, 1/2 BORE
	18020-381	1	ASSEMBLY, SECONDARY SHUTTLE DRIVE
4	18004-062	1	SHAFT ASSY, SECONDARY SHUTTLE DRIVE
5	99003-009	1	BEARING, PILLOW BLOCK, 1/2
6	18007-103	1	BLOCK, CLAMP, RH JAW CAM
7	18016-026	1	BOX CAM, RH JAW OPENER
8	-	1	BOLT, HEX HEAD, 3/8-16 X 3/4
9	-	1	BOLR, SKT HEAD, 5/16-18 X 1

PITNEY BOWES

Sure-Feed Engineering

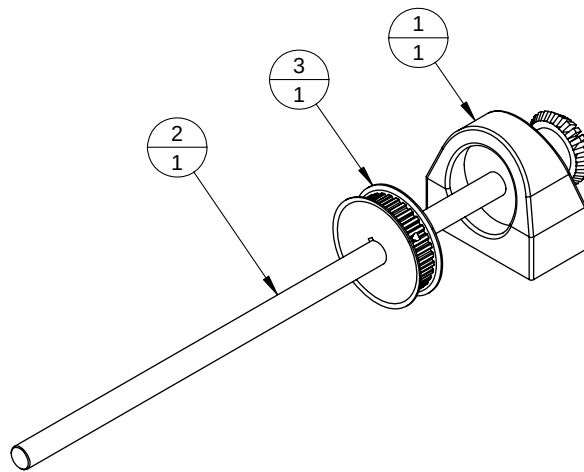

ASSY# 18020-382

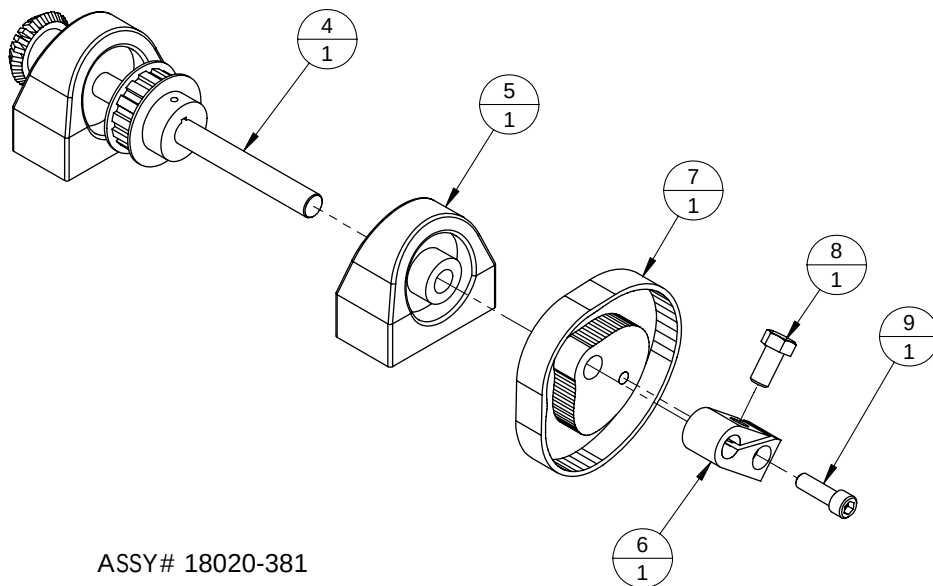


ASSY# 18020-381


**FRONT TABLE –SHUTTLE DRIVE (Fig. 1-10)
 SHUTTLE CAM DRIVE, TENSIONER ASSEMBLIES**

ITEM	PART NO.	QTY.	DESCRIPTION
	18020-383	1	ASSEMBLY, SHUTTLE CAM DRIVE
1	18007-020	1	BLOCK, SHUTTLE GUIDE SUPPORT
2	18007-021	1	BLOCK, SHUTTLE DRIVE
3	18004-019	1	SHAFT, SHUTTLE SUPPORT
4	99003-007	3	BEARING, 1/2 X 1-1/8 SEALED W/ S.R.
5	99003-018	3	WASHER, NYLON, 1/2 X 1/16
6	99017-004	1	COLLAR, 1/2 SHAFT
7	18004-063	1	SHAFT, SHUTTLE DRIVE
8	18016-014	1	CAM, SHUTTLE, 16K
9	-	2	SCREW, SKT HEAD, #10-24 X 7/8
10	99003-032	1	WASHER, NYLON, 1/2 X 1/32
	18020-060	1	ASSEMBLY, TENSIONER
11	18007-030		BLOCK, TENSIONER
12	18004-022		SHAFT, ECCENTRIC IDLER, 1/2
13	18006-011		PULLEY, FLAT IDLER, 3/4" W
14	99003-007		BEARING, 1/2 X 1-1/8 SEALED W/ S.R.
15	99003-018		WASHER, NYLON, 1/2 X 1/16
16	99022-004		SNAP RING, 1/2
17	-		BOLT, SKT HEAD, 5/16-18 X 1-3/4

PITNEY BOWES
Sure-Feed Engineering

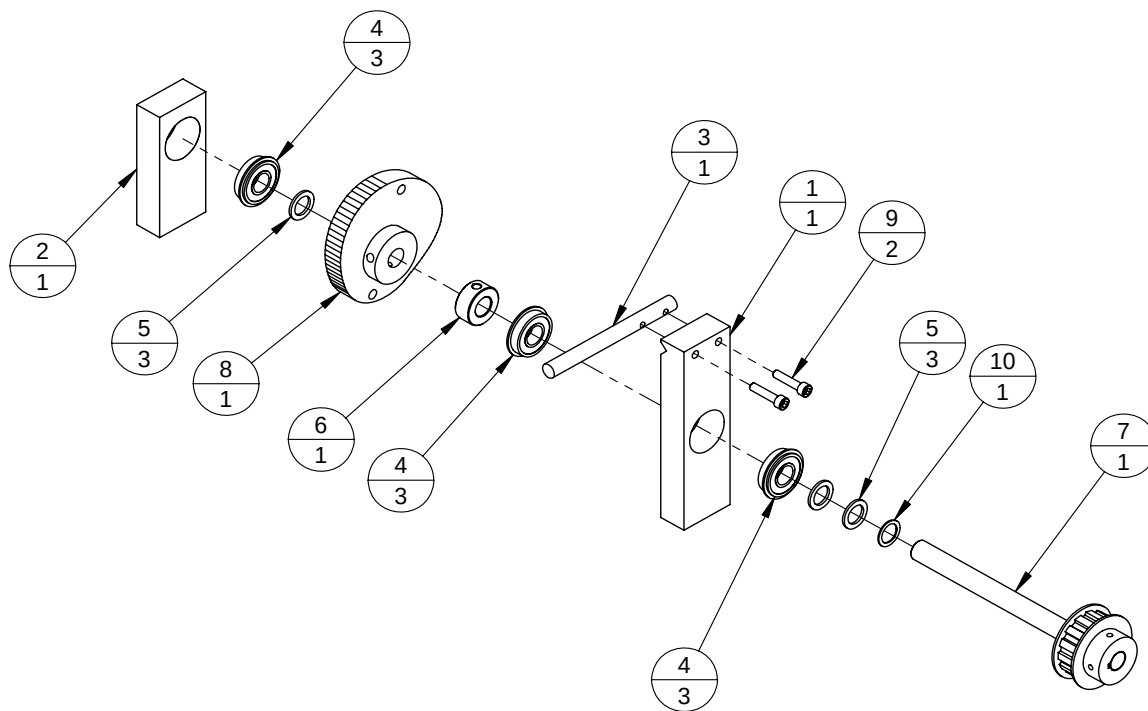

ASSY# 18020-383

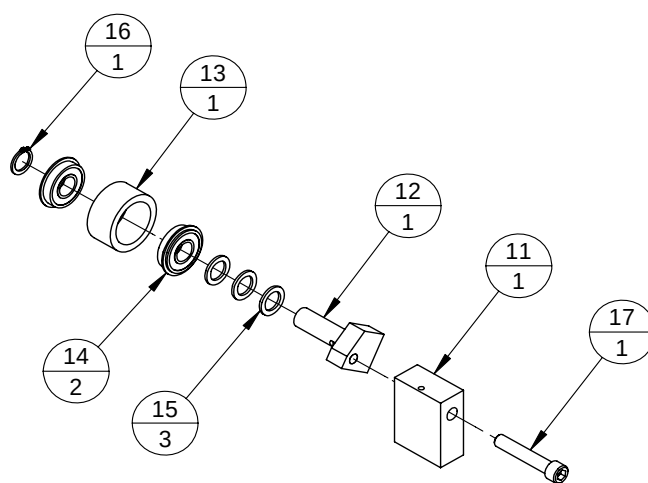


ASSY# 18020-060

**FRONT TABLE – SHUTTLE ASSEMBLY (Fig. 1-11)
 (18020-198)**

ITEM	PART NO.	QTY.	DESCRIPTION
1	SEE FIG. 1-12	1	ASSEMBLY, SHUTTLE GUIDE (18020-199)
2	SEE FIG. 1-13	1	ASSEMBLY, SHUTTLE PLATE (18020-089)
3	99003-022	4	BUSHING, FL, 3/8 X 1/2 X 3/8
4	99005-005	2	SPRING, COMPRESSION
5	99017-003	1	COLLAR, 3/8 SHAFT
6	18007-019	2	POST, SHUTTLE SUPPORT
7	18004-018	1	SHAFT, SHUTTLE GUIDE
8	-	2	WASHER, FLAT, 1/4
9	-	2	BOLT, SKT HEAD, 1/4-20 X 1
10	-	3	SCREW, BUTTON HEAD, #6-32 X 3/8
11	-	2	BOLT, SKT HEAD, 1/4-20 X 1/2
12	-	2	BOLT, SKT HEAD, 1/4-20 X 5/8

PITNEY BOWES


Sure-Feed Engineering

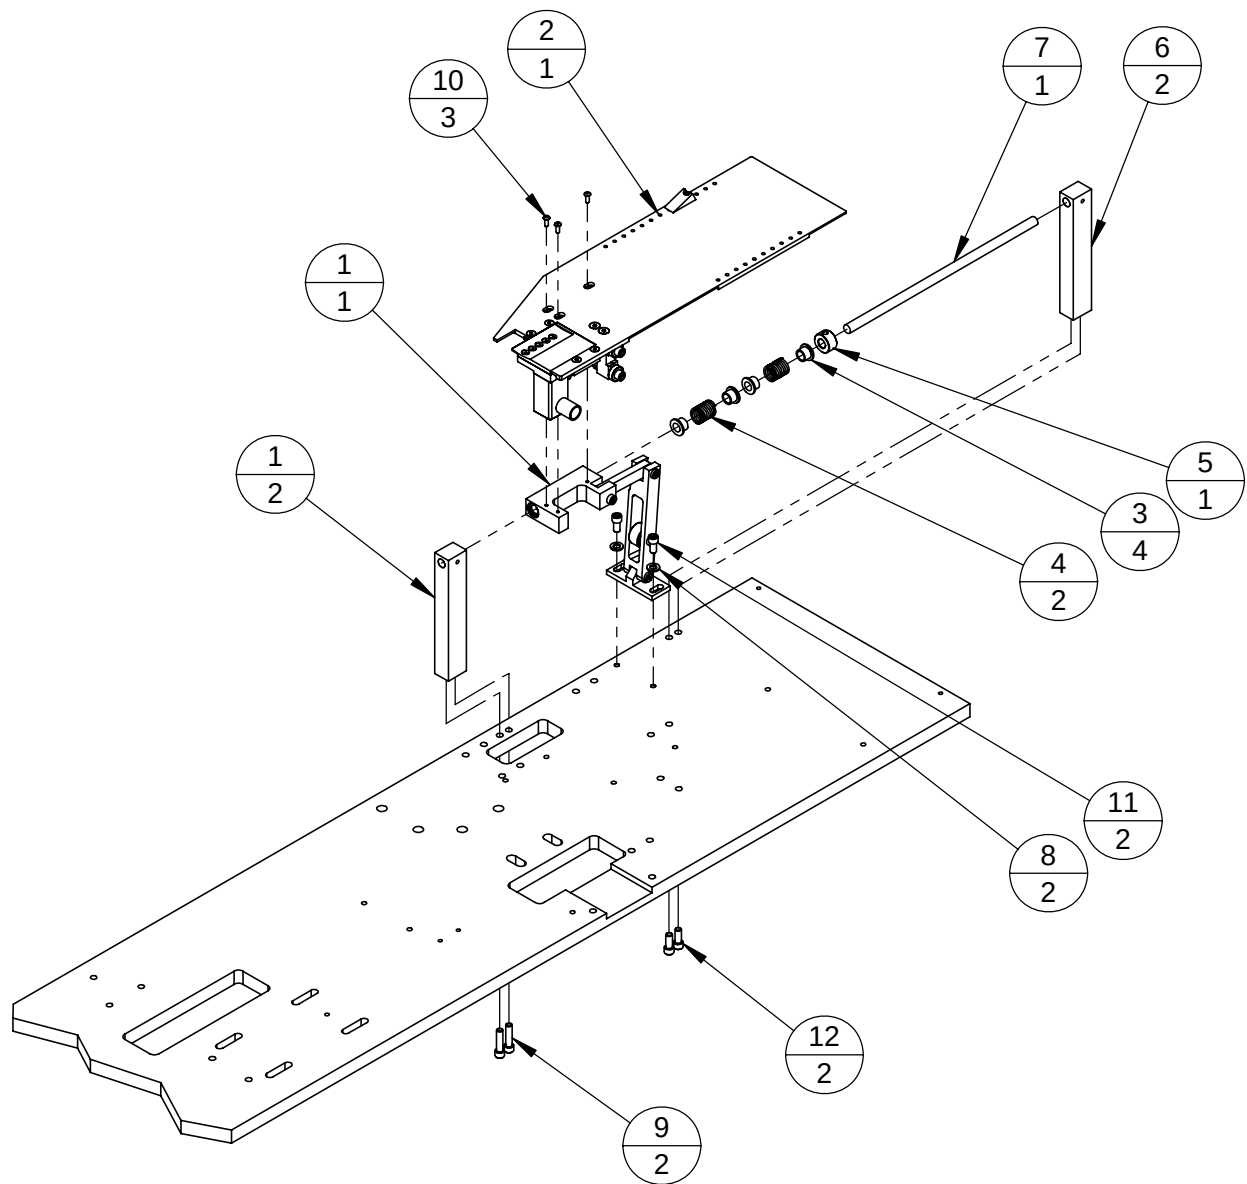

FRONT TABLE – SHUTTLE (Fig. 1-12)
SHUTTLE GUIDE ASSEMBLY (18020-199)

ITEM	PART NO.	QTY.	DESCRIPTION
1	18007-023	1	BLOCK, BEARING, SHUTTLE GUIDE
2	99003-010	2	BEARING, LINEAR, 3/8 BORE
3	99022-006	2	SNAP RING, 5/8 INTERNAL
4	18008-018	1	LINK, SHUTTLE DRIVE
5	18008-099	1	ARM, SHUTTLE DRIVE, 16K
6	99003-011	3	BUSHING, SL, 1/4 X 5/16 X 3/8
7	18007-022	1	BLOCK, PIVOT ARM MTG.
8	99003-081	1	ROLLER YOKE, 1/4 X 7/8 X .563
9	99033-002	2	SHOULDER BOLT, 1/4 X 5/8
10	99033-005	2	SHOULDER BOLT, 1/4 X 3/4

Sure-Feed Engineering

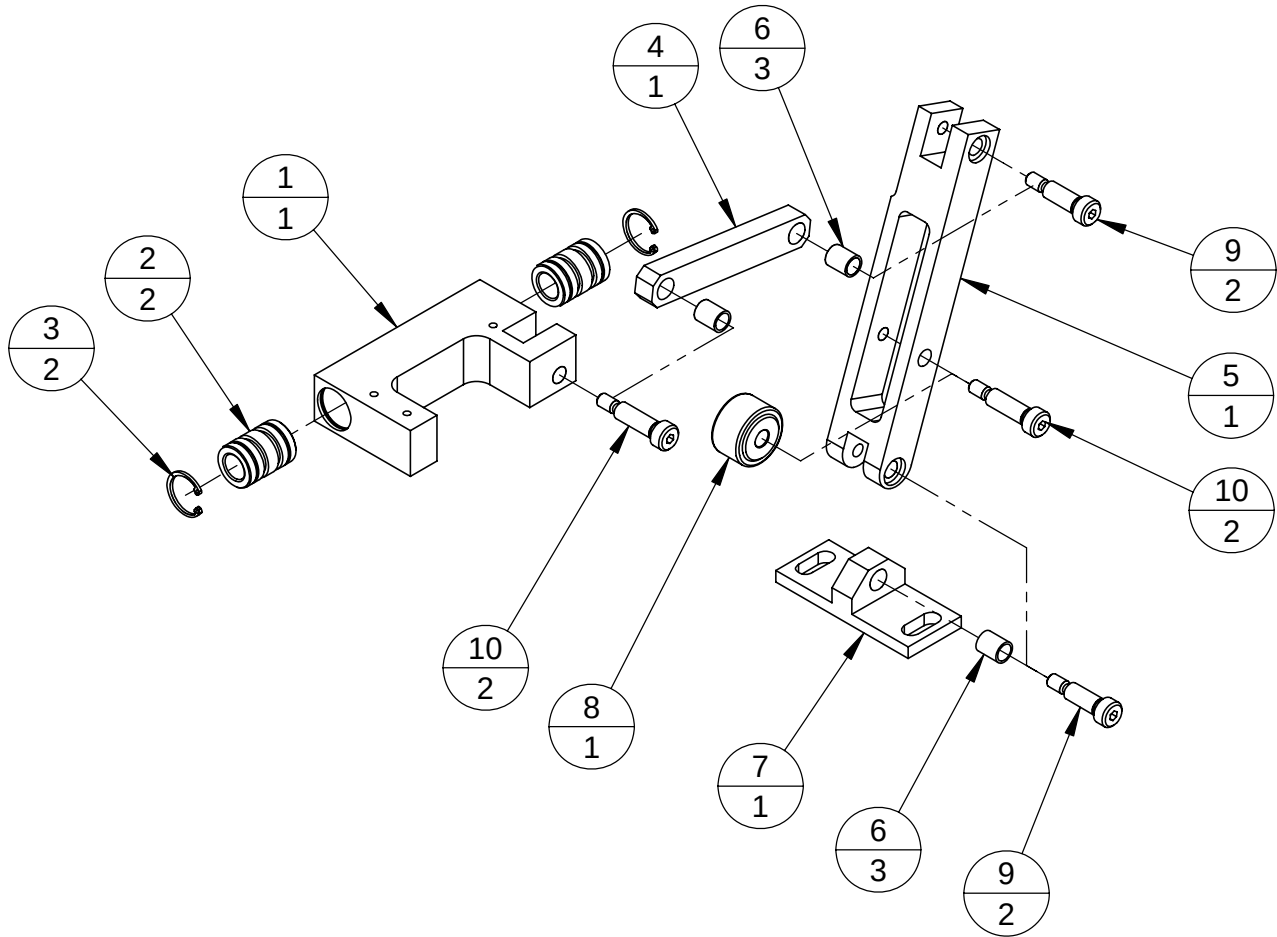


FRONT TABLE – SHUTTLE (Fig. 1-13)
SHUTTLE PLATE ASSEMBLY (18020-089)

ITEM	PART NO.	QTY.	DESCRIPTION
1	18011-029	1	PLATE, SHUTTLE
2	18007-024	1	BLOCK, CAM ROLLER
3	99036-002	2	WASHER, HARDENED, 1/4 X 3/8 X 1/16
4	99003-002	2	BEARING, 1/4 X 5/8 SEALED
5	18011-131	1	PLATE, ENVELOPE VACUUM
6	18011-048	1	PLATE, VACUUM TOP
7	18007-146	1	BLOCK, MANIFOLD
8	18007-077	1	BLOCK, VIBRATOR
9	-	1	BOLT, SKT HEAD, 1/4-20 X 5/8
10	-	1	BOLT, SKT HEAD, 1/4-20 X 1-1/8
11	-	1	WASHER, FLAT, 1/4
12	-	1	NUT, HEX, 1/4-20
13	-	2	SCREW, FLAT HEAD, #10-24 X 3/8
14	-	4	SCREW, FLAT HEAD, #8-32 X 3/8
15	-	2	SCREW, SKT HEAD, #8-32 X 1/2
16	-	1	SCREW, SKT HEAD, #8-32 X 3/8
17	-	2	SCREW, FLAT HEAD, #4-40 X 3/8

PITNEY BOWES

Sure-Feed Engineering

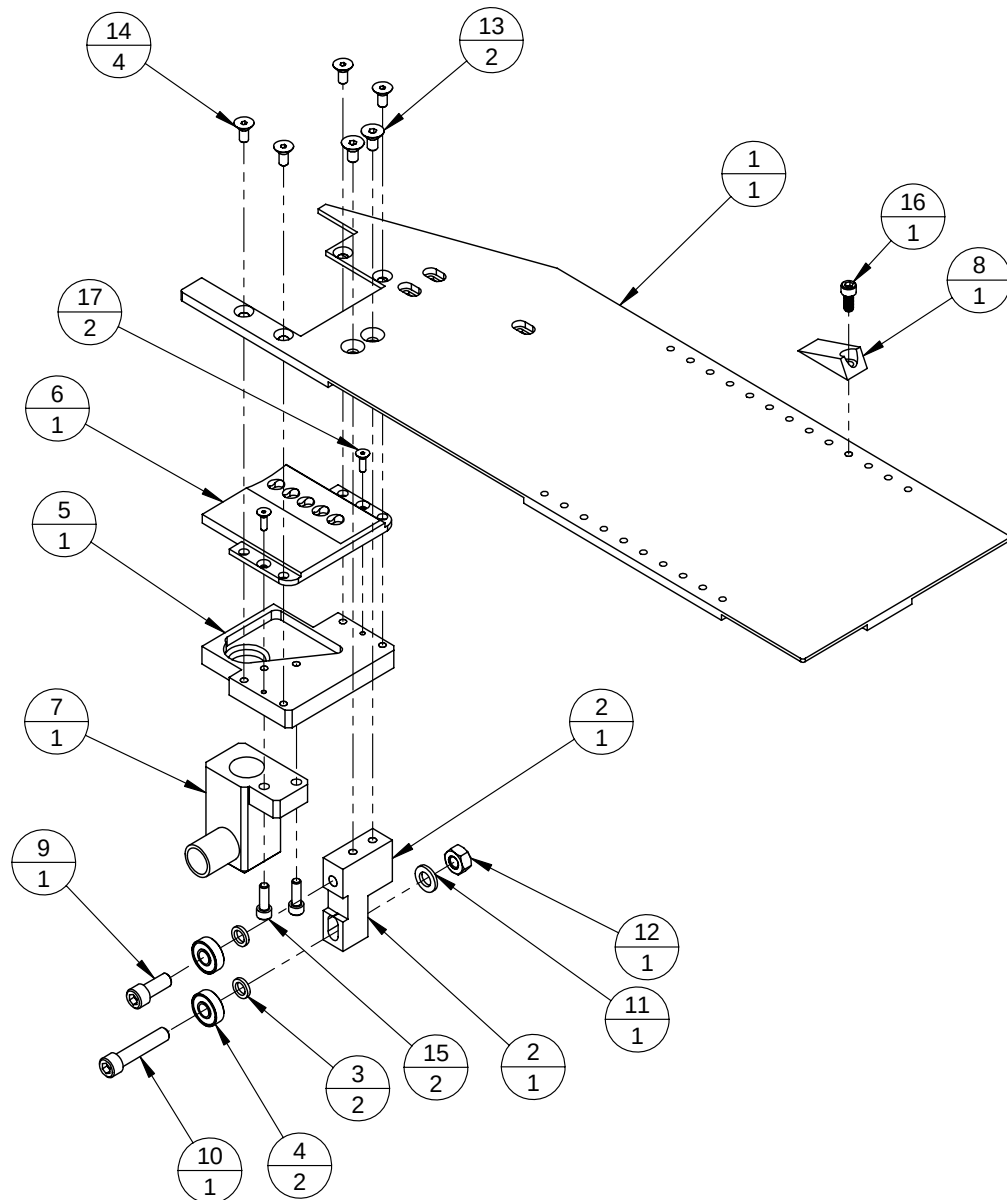


FRONT TABLE – TOP GUIDE ASSEMBLY (Fig. 1-14)
(18020-016)

ITEM	PART NO.	QTY.	DESCRIPTION
1	SEE FIG. 1-15	1	ASSEMBLY, PAPER GUIDE (18020-090)
2	SEE FIG. 1-17	1	ASSEMBLY, GATE (18020-064)
3	SEE FIG. 1-18	1	ASSEMBLY, ENVELOPE PLOW (18020-092)
4	SEE FIG. 1-19	1	ASSEMBLY, DISCHARGE ROLLER (18020-066)
5	SEE FIG. 1-19	1	ASSEMBLY, EXIT ROLLER (18020-093)
6	SEE FIG. 1-19	1	ASSEMBLY, ENVELOPE ROLLER (18020-094)
7	SEE FIG. 1-20	1	ASSEMBLY, INSERT GUIDE RAIL (W/ CANOLLI) (18020-270)
8	SEE FIG. 1-20	1	ASSEMBLY, ADJ, INSERT GUIDE RAIL (18020-269)
9	18011-035	1	PLATE, TOP
10	18012-008	5	STANDOFF, TOP PLATE
11	18011-034	1	RAIL, INSERT GUIDE
13	-	3	SCREW, SKT HEAD, #10-24 X 7/8
14	-	23	SCREW, FLAT HEAD, #10-24 X 3/8
15	-	1	SCREW, BUTTON HEAD, #10-24 X 3/8
16	-	1	SCREW, BUTTON HEAD, #8-32 X 3/8
17	-	1	SCREW, SKT HEAD, #8-32 X 3/4
18	-	3	SCREW, SKT HEAD, #10-24 X 5/8
19	-	2	BOLT, SKT HEAD, #10-24 X 5/8
20	-	2	SCREW, SKT HEAD, #10-24 X 1
21	18007-064	1	BLOCK, PE MTG @ ENV. OPEN
22	18007-061	1	BLOCK, CLOSER STRAP MTG.
23	18005-076	1	GUIDE, SPRING STEEL @ CLOSE
24	18009-016	1	PLATE, SPRING STEEL CLAMP, 1"
25	98009-001	1	SENSOR, AN7
26	-	2	SCREW, SKT HEAD, #10-24 X 1/2

PITNEY BOWES

Sure-Feed Engineering

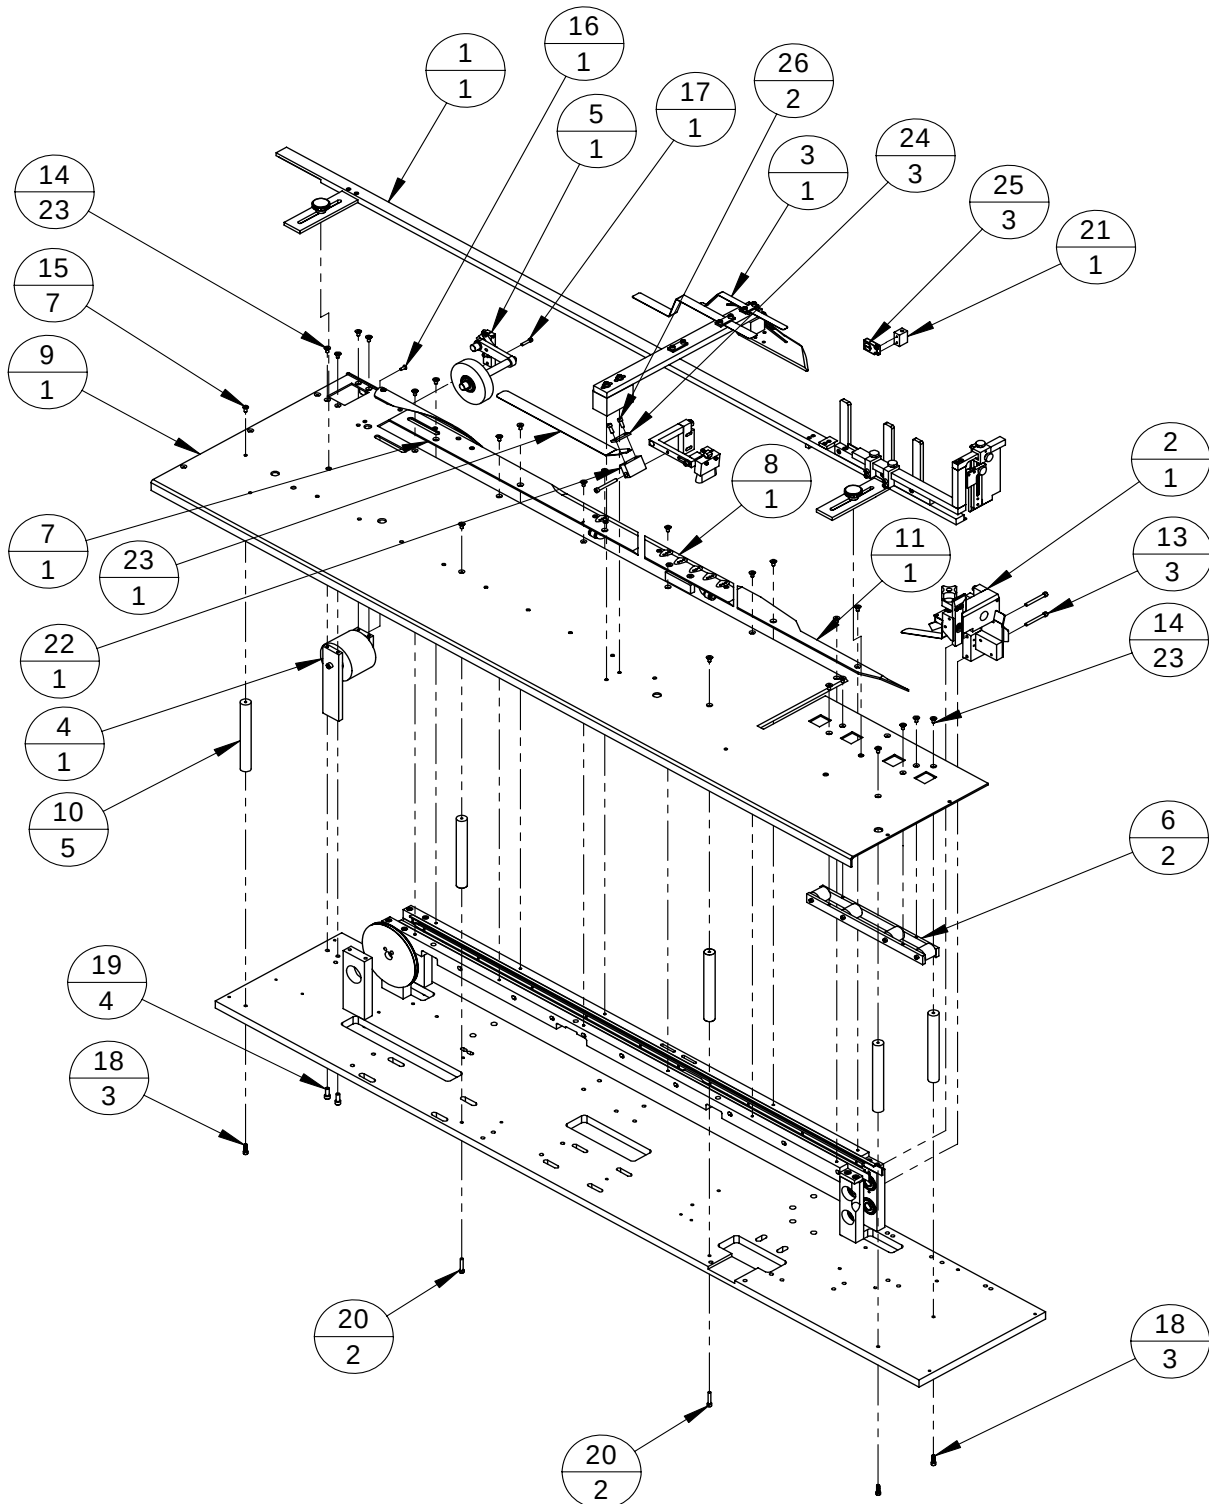


**FRONT TABLE – TOP GUIDE (Fig. 1-15)
 PAPER GUIDE ASSEMBLY (18020-090)**

ITEM	PART NO.	QTY.	DESCRIPTION
1	SEE FIG. 1-16	1	ASSEMBLY, ADJUSTABLE SIDE GUIDE (18020-387)
2	SEE FIG. 1-16	1	ASSEMBLY, ADJ. SIDE GUIDE MTG. (18020-388)
3	SEE FIG. 1-16	1	ASSEMBLY, HOPPER GUIDE (18020-389)
4	18005-040	1	RAIL, ENVELOPE GUIDE
5	18005-050	1	GUIDE, ENVELOPE CORNER, LOWER
6	18005-053	1	GUIDE, ENVELOPE CORNER, TOP
7	18008-019	1	BAR, RAIL MTG.
8	18008-026	1	BAR, RAIL MTG W/ RECESS
9	99004-004	2	KNOB, #10-24 FEMALE
10	-	4	SCREW, SKT HEAD, #6-32 X 1/4
11	-	2	SCREW, SKT HEAD, #6-32 X 3/8
12	-	2	SCREW, SKT HEAD, #6-32 X 1/2
13	-	2	SCREW, SKT HEAD, #10-24 X 1

PITNEY BOWES


Sure-Feed Engineering

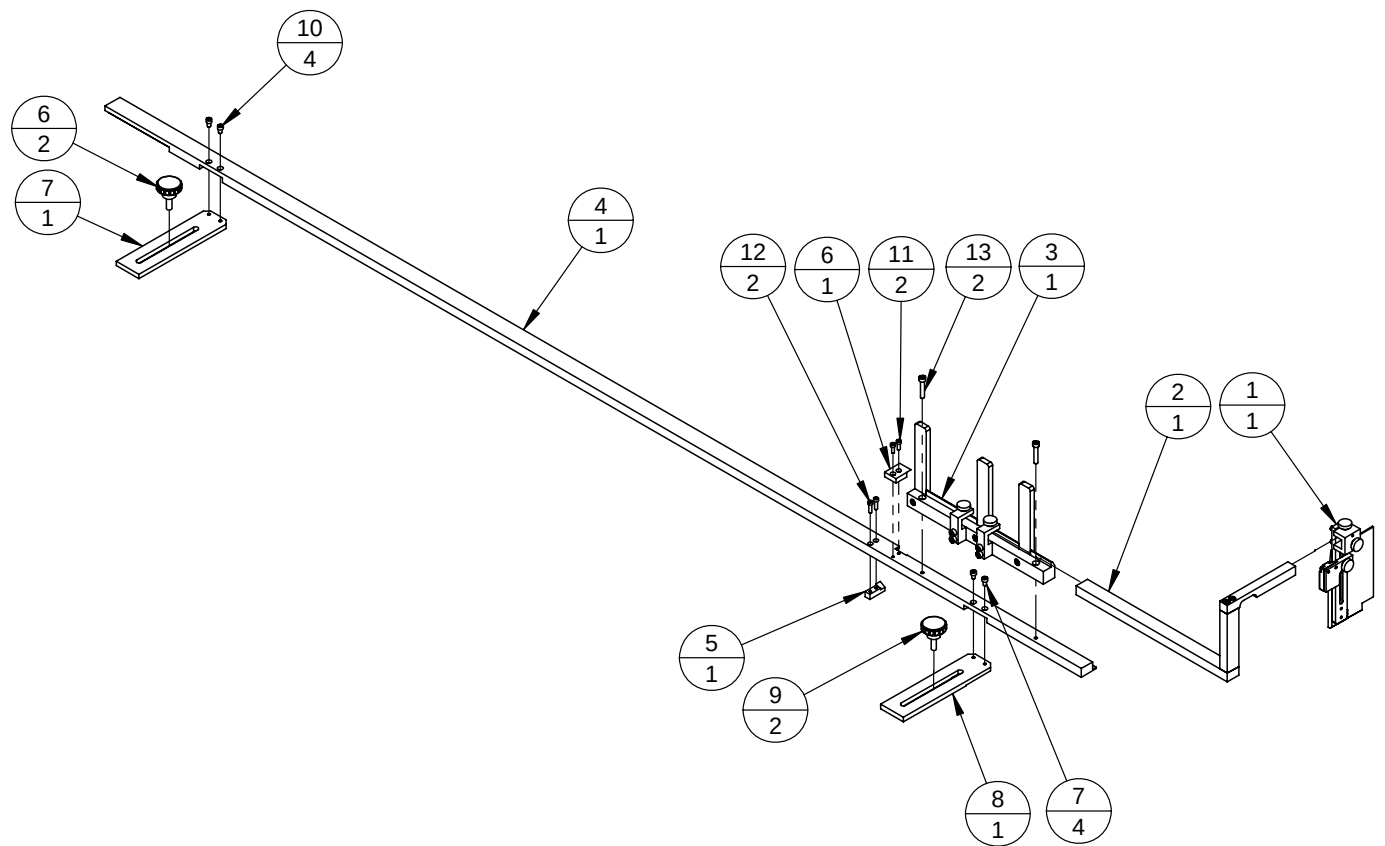


**FRONT TABLE – TOP GUIDE (Fig. 1-16)
 SIDE & HOPPER GUIDE ASSEMBLIES**

ITEM	PART NO.	QTY.	DESCRIPTION
	18020-387	1	ASSEMBLY, ADJ. SIDE GUIDE
1	18007-047	1	CLAMP, REAR GUIDE MTG.
2	18008-073	1	BAR, HOPPER GUIDE MTG.
3	18009-005	1	BRACKET, SENSOR MTG.
4	98009-001	1	SENSOR, BANNER, AN7
5	18005-087	1	GUIDE, HOPPER INFEED
6	99004-002	3	KNOB, #10 SCREW
7	-	3	SCREW, SKT HEAD, #10-24 X 3/8
8	-	2	SCREW, SKT HEAD, #4-40 X 3/8
9	-	2	SCREW, SKT HEAD, #8-32 X 1/4
10	-	4	SCREW, SKT HEAD, #6-32 X 1/2
11	-	1	HEX NUT, #10-24
	18020-389	1	ASSEMBLY, HOPPER GUIDE
12	18007-035	1	BLOCK, PAPER GUIDE MTG.
13	18005-014	3	GUIDE, ENVELOPE HOPPER
14	18007-036	2	CLAMP, REAR GUIDE ADJ.
15	99004-002	2	KNOB, #10 SCREW
16	-	2	SCREW, SKT HEAD, #10-24 X 3/8
17	-	3	SCREW, SKT HEAD, #10-24 X 1/2
18	-	4	SCRW, SKT HEAD, #10-24 X 3/4
	18020-388	1	ASSEMBLY, SIDE GUIDE MTG.
19	18008-074	1	POST, REAR GUIDE SUPPORT
20	18008-041	1	BAR, REAR GUIDE SUPPORT
21	18008-021	1	BAR, PAPER GUIDE ADJ.
22	-	4	SCRWE, SKT HEAD, #10-24 X 3/4


PITNEY BOWES
Sure-Feed Engineering

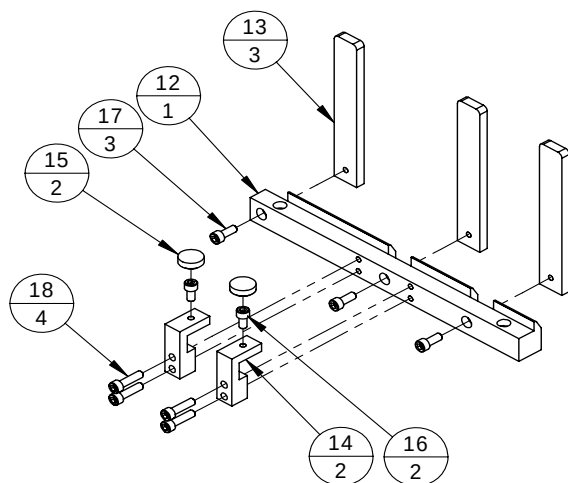

ASSY#18020-389

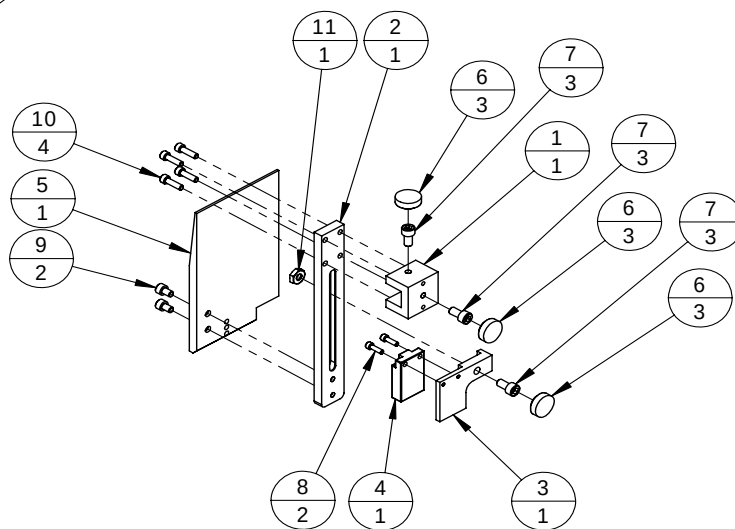

ASSY#18020-387

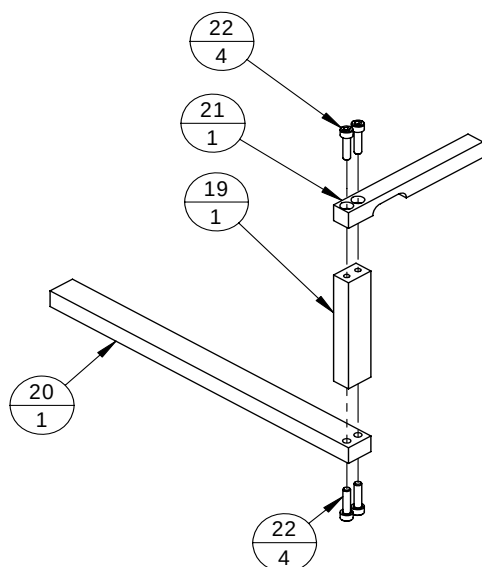


ASSY#18020-388

**FRONT TABLE – TOP GUIDE (Fig. 1-17)
 GATE ASSEMBLY (18020-064)**

ITEM	PART NO.	QTY.	DESCRIPTION
1	18008-042	1	BLOCK, GATE SUPPORT
2	18007-079	1	BLOCK, GATE MTG.
3	18007-127	1	BLOCK, LOWER GUIDE MTG.
4	18005-160	1	GUIDE, LOWER ENVELOPE
5	18005-077	1	GATE, ENVELOPE HOPPER
6	18007-045	1	BLOCK, GATE ADJ.
7	99032-004	1	STUD, #10-32 X 2-1/2
8	99005-007	1	SPRING GATE ADJ.
9	99004-005	1	KNOB, FEMALE, #10-32
10	18005-025	1	GUIDE, SPRING STEEL @ GATE
11	18005-073	1	GUIDE, ENVELOPE PRE OPEN
12	18009-046	1	BRACKET, FLAP SENSOR MTG.
13	98009-001	1	SENSOR, BANNER, AN7
14	18009-040	1	BRACKET, ENVELOPE SENSOR
15	-	2	SCREW FLAT HEAD, #8-32 X 1/2
16	-	1	SCREW, BUTTON HEAD, #10-24 X 3/8
17	-	1	SCREW, SKT HEAD, #6-32 X 3/8
18	-	4	SCREW, SKT HEAD, #6-32 X 3/8
19	-	2	SCREW, SKT HEAD, #4-40 X 1/4
20	-	4	BOLT, SKT HEAD, 1/4-20 X 1-1/4
21	-	3	SCREW, SKT HEAD, #10-24 X 3/8
22	-	2	SCREW, SKT HEAD, #4-40 X 1/2
23	98009-037	1	SENSOR, RECIEVER, THRU BEAM
24	98009-017	1	SENSOR / CABLE ASSY
25	99018-008	1	BRACKET, SENSOR MTG.

PITNEY BOWES

Sure-Feed Engineering

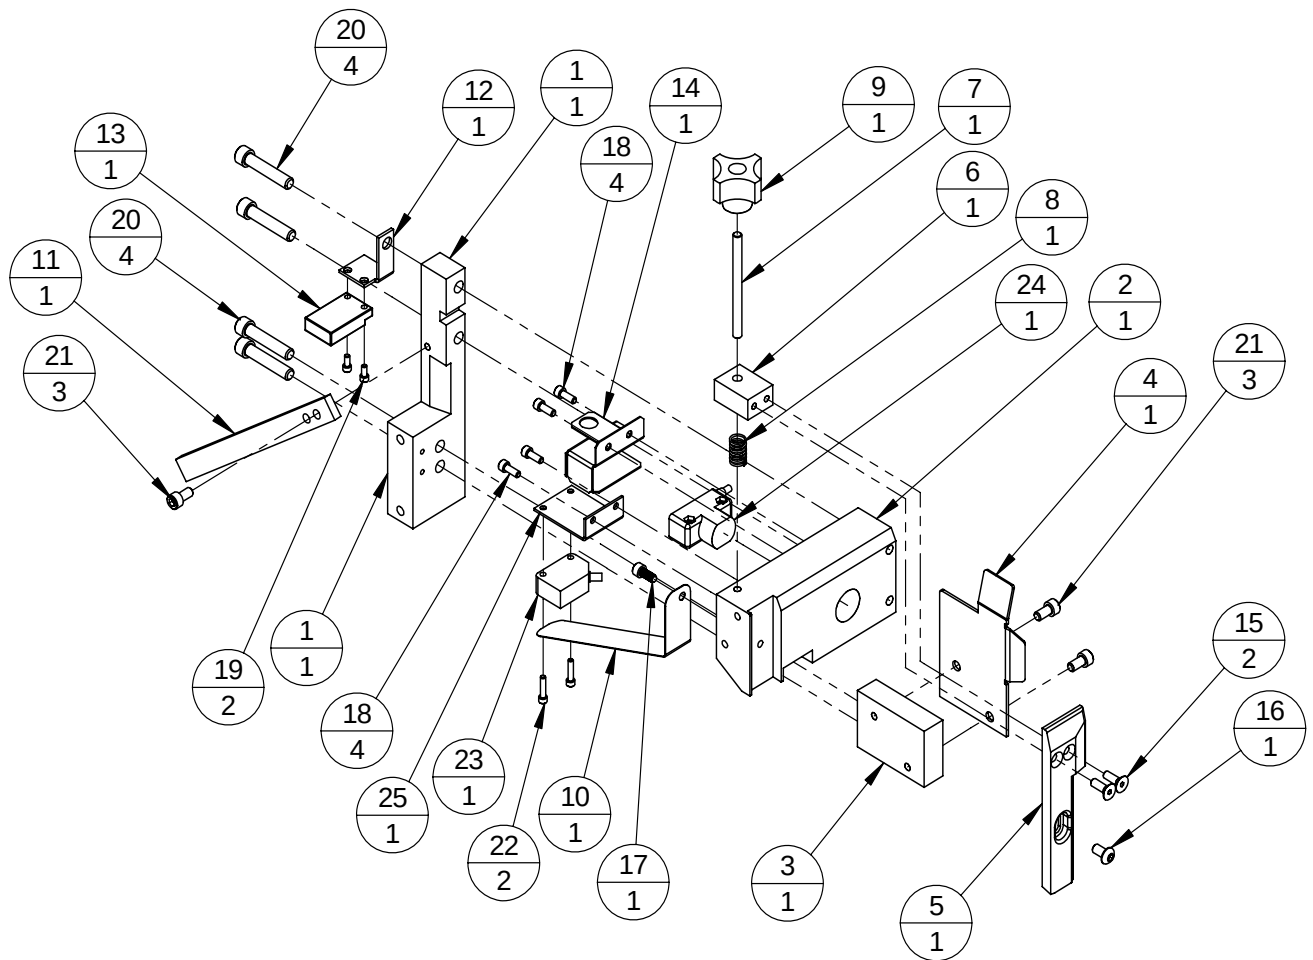


**FRONT TABLE –TOP GUIDE (Fig. 1-18)
 ENVELOPE PLOW ASSEMBLY (18020-092)**

ITEM	PART NO.	QTY.	DESCRIPTION
1	18007-041	1	BLOCK, PLOW SUPPORT
2	18008-044	1	BAR, PLOW SUPPORT
3	18007-010	1	BLOCK, PLOW MTG, FIXED
4	18005-021	1	PLOW, ENVELOPE OPENER
5	18009-015	1	PLATE, SPRING STEEL CLAMP, 7/8"
6	18009-016	1	PLATE, SPRING STEEL CLAMP, 1"
7	18005-074	1	GUIDE, SPRING STEEL @ PLOW
8	18005-075	1	GUIDE, SPRING STEEL @ INSERT
9	-	2	FLAT WASHER, #10
10	-	2	SCREW, SKT HEAD, #10-24 X 1
11	-	4	SCREW, SKT HEAD, #10-24 X 1/2
12	-	2	SCREW, SKT HEAD, #10-24 X 1-1/4
13	-	2	SCREW, FLAT HEAD, #10-24 X 1/2
14	18009-007	1	PLATE, GUIDE WIRE CLAMP
15	18005-060	1	GUIDE WIRE @ PLOW
16	-	2	SCREW, SKT HEAD, #6-32 X 3/8

PITNEY BOWES

Sure-Feed Engineering

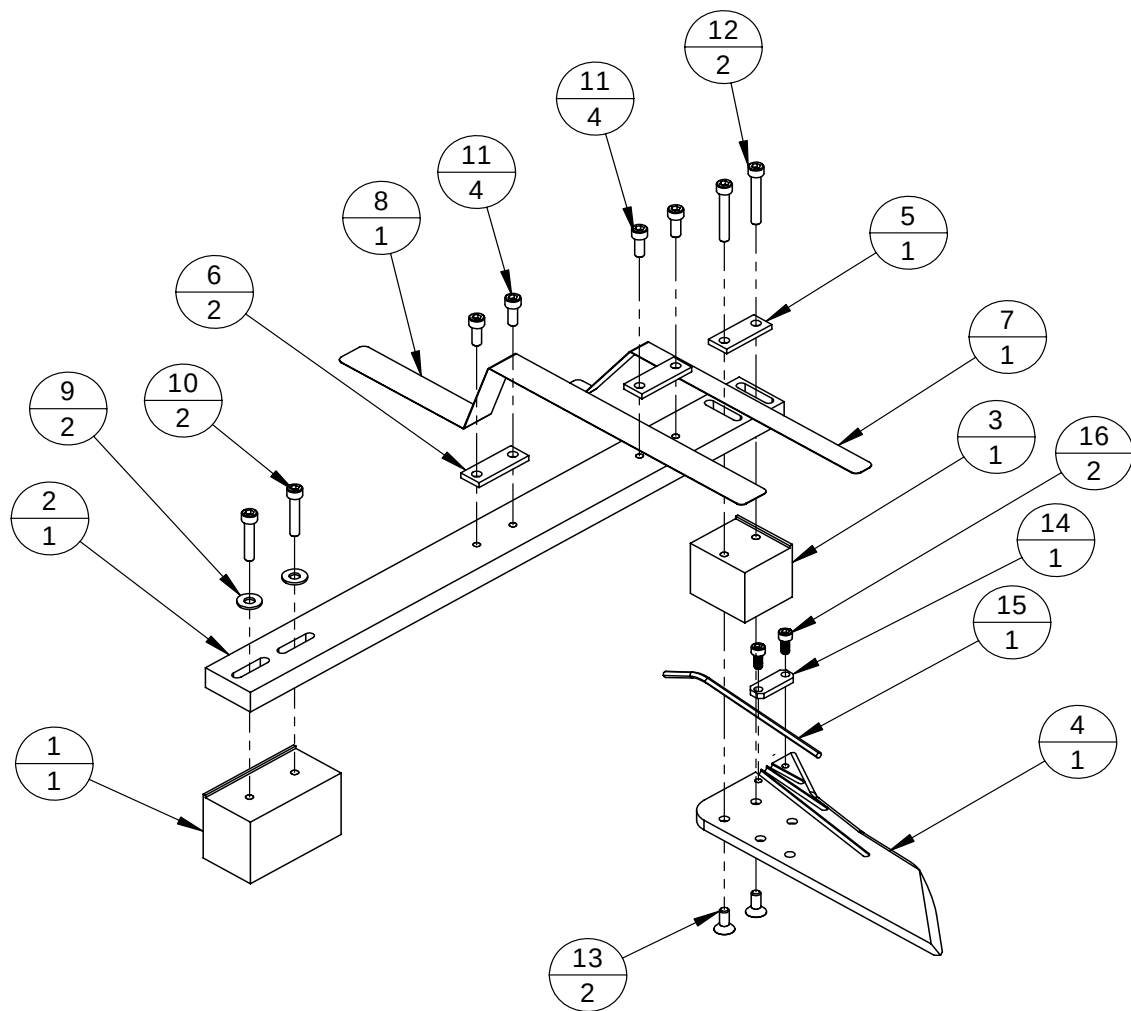


**FRONT TABLE – TOP GUIDE (Fig. 1-19)
 ROLLER ASSEMBLIES**

ITEM	PART NO.	QTY.	DESCRIPTION
	18020-093	1	ASSEMBLY, EXIT ROLLER
1	18007-087	1	BLOCK, WHEEL ADJ.
2	18004-030	1	SHAFT, IDLER
3	99003-031	1	BUSHING, 1/2 X 5/8 X 1/2
4	18007-088	1	BLOCK, WHEEL ADJ.
5	20008-002	1	BAR, EXIT ROLLER
6	99022-004	3	SNAP RING, 1/2
7	18004-059	1	SHAFT, WHEEL @ ENVELOPE CLOSE
8	20006-003	1	ROLLER, EXIT
9	99003-007	2	BEARING, 1/2 X 1-1/8 SEALED W/ S.R.
10	-	1	BOLT, SKT HEAD, 1/4-20 X 3/4
11	-	2	SCREW, SKT HEAD, #10-24 X 3/4
12	-	1	SCREW, SKT HEAD, 1/4-20 X 1
	18020-066	1	ASSEMBLY, DISCHARGE ROLLER
13	18007-032	1	BLOCK, BEARING, EXIT ROLLER SUPPORT
14	18004-023	1	SHAFT, DISCHARGE ROLLER
15	18007-033	1	BLOCK, BEARING, EXIT ROLLER MTG.
16	18006-013	1	ROLLER, ENVELOPE DISCHARGE
17	99003-007	2	BEARING, 1/2 X 1-1/8 SEALED W/ S.R.
18	99003-018	2	WASHER, NYLON, 1/2 X 1/16
19	-	1	BOLT, SKT HEAD, 1/4-20 X 3/4
20	-	1	BOLT, SKT HEAD, 1/4-20 X 1/2
	18020-094	1	ASSEMBLY, ENVELOPE ROLLER
21	18011-039	2	PLATE, ENVELOPE ROLLER MTG.
22	10012-003	4	SPACER, TONGUE
23	10006-016	4	ROLLER, TONGUE
24	-	8	SCREW, SKT HEAD, #8-32 X 1/2



PITNEY BOWES

Sure-Feed Engineering

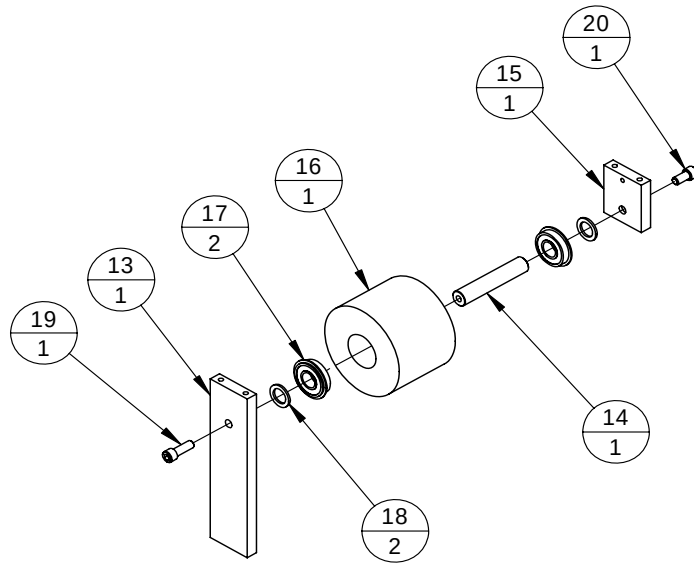

ASSY# 18020-066

ASSY# 18020-093

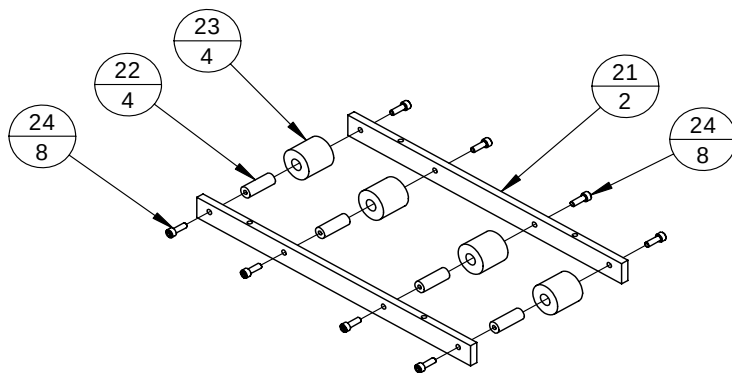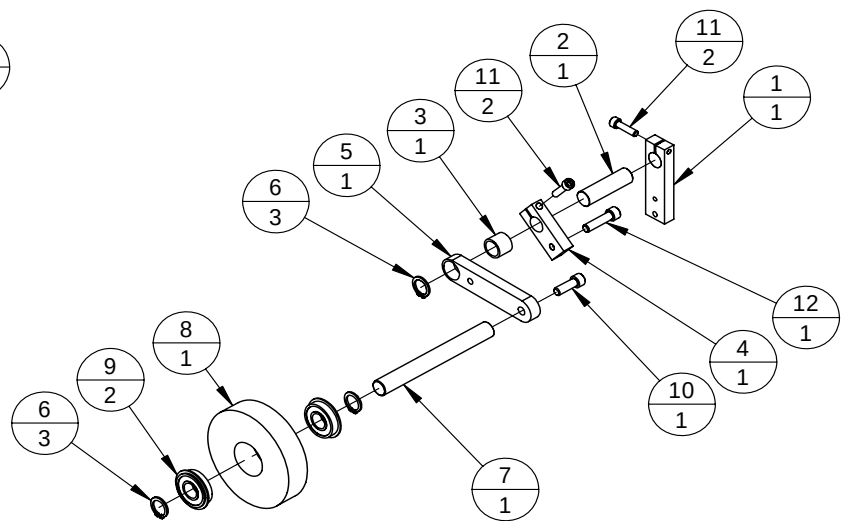


ASSY# 18020-094

**FRONT TABLE – TOP GUIDE (Fig. 1-20)
 GUIDE RAIL ASSEMBLIES**


ITEM	PART NO.	QTY.	DESCRIPTION
	18020-270	1	ASSEMBLY, INSERT GUIDE RAIL W/ CANOLLI
1	18011-032	1	RAIL, INSERTER GUIDE @ DISCHARGE
2	18007-081	1	BLOCK, MANIFOLD, FIXED
3	99028-084	1	FITTING, ELBOW, 3/8 TUBE X 1/8 NPT
4	-	4	SCREW, FLAT HEAD, #6-32 X 3/8
5	18007-052	1	BLOCK, ENVELOPE CLOSER MTG.
6	18005-179	1	CANNOLI (10X13)
7	18005-180	1	GUIDE, ENVELOPE FLATTENER
8	-	1	SCREW, BUTTON HEAD, #8-32 X 3/8
9	-	1	SCREW, BUTTON HEAD, #10-24 X 3/8
	18020-269	1	ASSEMBLY, ADJ. INSERT GUIDE RAIL
10	18011-033	1	RAIL, INSERT GUIDE (ADJ.)
11	18008-043	1	BAR, SLIDING NUT
12	18007-082	1	BLOCK, MANIFOLD
13	99028-084	1	FITTING, ELBOW, 3/8 TUBE X 1/8 NPT
14	-	2	SCREW, FLAT HEAD, #6-32 X 3/8
15	-	2	SCREW, SKT HEAD, #10-24 X 1

PITNEY BOWES

Sure-Feed Engineering

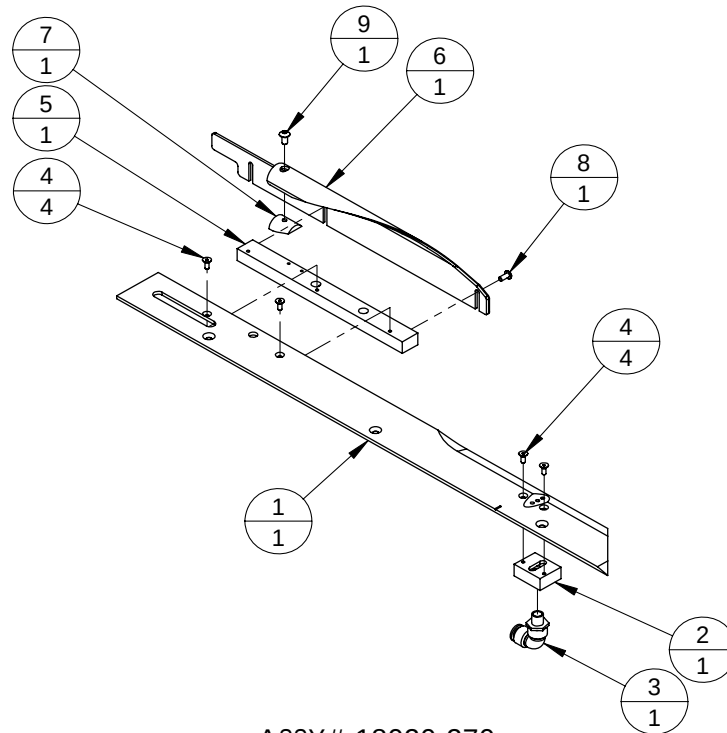

ASSY# 18020-270

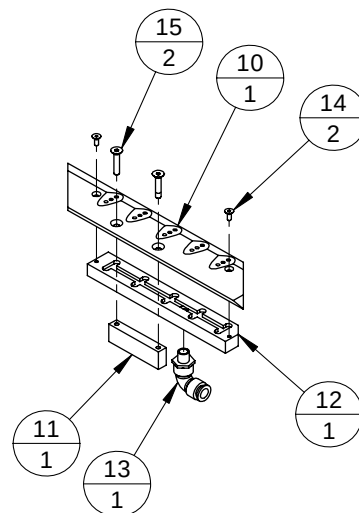


ASSY# 18020-269

**FRONT TABLE – WATER SUPPLY ASSEMBLY (Fig. 1-21)
 (18020-035)**

ITEM	PART NO.	QTY.	DESCRIPTION
1	SEE FIG. 1-22	1	ASSEMBLY, WATER SOLENOID (18020-083)
2	SEE FIG. 1-22	1	ASSEMBLY, WATER TANK (18020-084)
3	99024-001	2	U-BOLT, 4" PIPE
4	98009-019	1	SENSOR, WATER LEVEL
5	18012-019	1	SPACER, WATER SOLENOID
6	-	4	NUT, HEX, 3/8-16
7	-	2	SCREW, SKT HEAD, #8-32 X 1-1/4
8	99031-013	6 ft	HOSE, BLACK, 1/4 (NOT SHOWN)

PITNEY BOWES

Sure-Feed Engineering

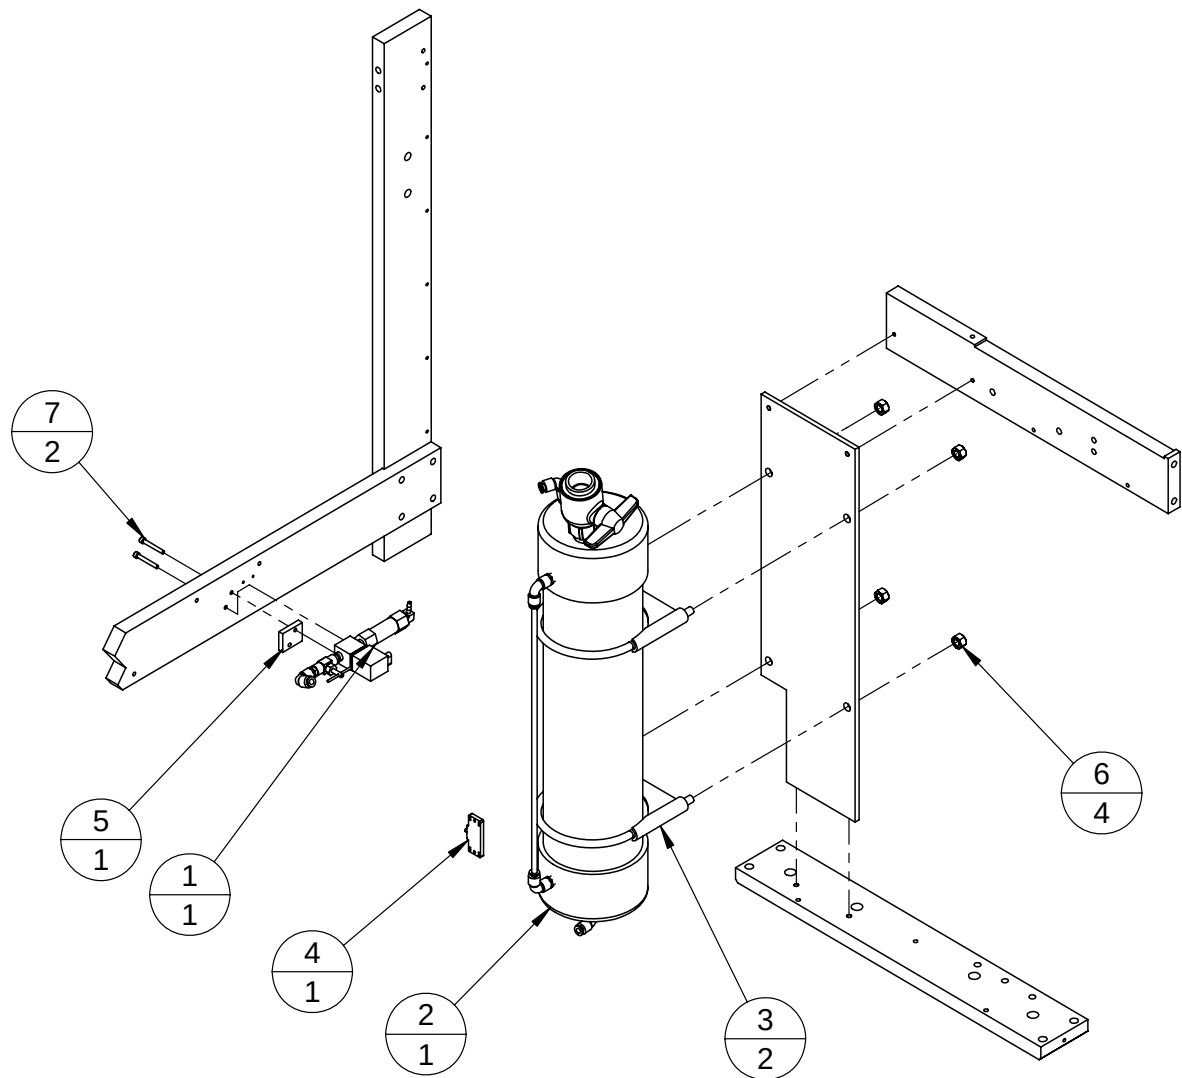


**FRONT TABLE – WATER SUPPLY (Fig. 1-22)
TANK & SOLENOID ASSEMBLIES**

ITEM	PART NO.	QTY.	DESCRIPTION
	18020-083	1	ASSEMBLY, WATER SOLENOID
1	99025-007	1	VLAVE, WATER SOLENOID, 24 VDC
2	99028-041	2	NIPPLE, CLOSE, 1/8
3	99028-044	1	VALVE, PETCOCK
4	99028-074	1	FITTING, ELBOW, 1/4 TUBE X 1/8 NPT
5	99027-003	1	STRAINER, 1/8 NPT
6	99028-043	1	BARB, ELBOW, 1/8 NPT X 1/8 TUBE
	18020-084	1	ASSEMBLY, WATER TANK
7	18019-008	1	WATER TANK
8	99028-074	4	FITTING, ELBOW, 1/4 TUBE X 1/8 NPT
9	99031-012	1	HOSE, CLEAR, 1/4
10	99028-081	1	NIPPLE, 3/4 NPT
11	99025-008	1	BALL VALVE, PVC-3/4 NPT


PITNEY BOWES

Sure-Feed Engineering

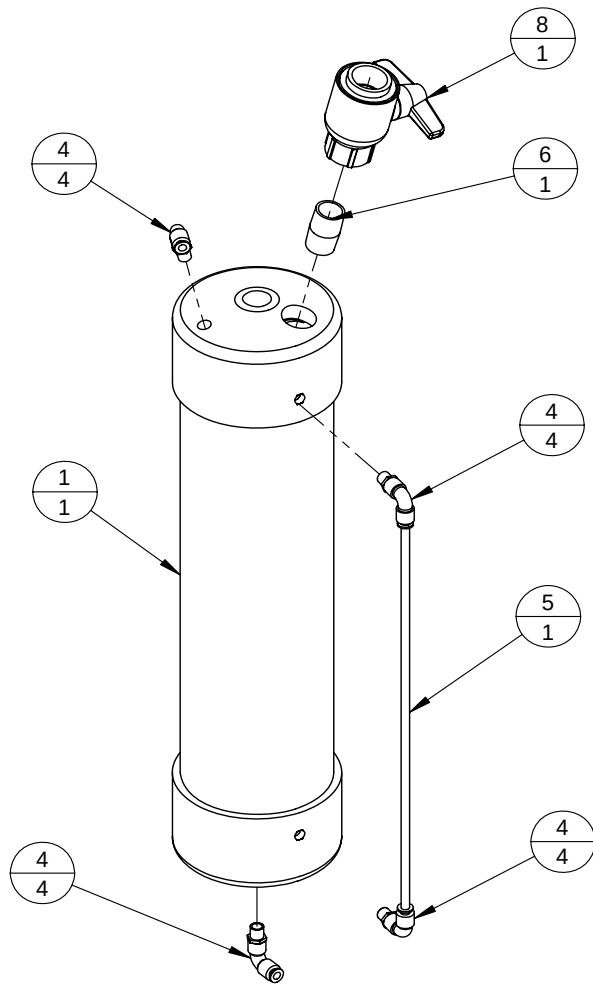

ASSY# 18020-084

ASSY# 18020-083

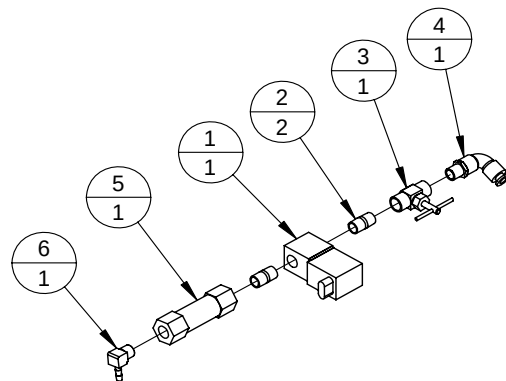


**FRONT TABLE – COVER ASSEMBLY (Fig. 1-23)
 (18020-018)**

ITEM	PART NO.	QTY.	DESCRIPTION
1	18013-007	1	COVER, END
2	18013-012	1	COVER, END (W/ HOLES)
3	18013-017	1	COVER, RH REAR
4	18013-015	1	COVER, END CAP, RH
5	18013-016	1	COVER, END CAP, LH
6	18013-021	2	DOOR, FRONT TABLE
7	18011-085	1	PLATE, SAFETY
8	18012-007	2	SPACER, FRONT TABLE
9	18008-025	1	BAR, END COVER MTG.
10	99012-001	2	HANDLE, DOOR
11	99013-001	2	LATCH, DOOR
12	98020-024	2	MAGNET, REED SWITCH
13	98000-036	4	SWITCH, REED
14	18013-013	2	HINGE, FRONT TABLE DOOR
15	-	15	SCREW, BUTTON HEAD, #10-24 X 1/2
16	-	3	SCREW, SKT HEAD, #8-32 X 3/8
17	-	3	SCREW, FLAT HEAD, #10-24 X 3/8

PITNEY BOWES

Sure-Feed Engineering

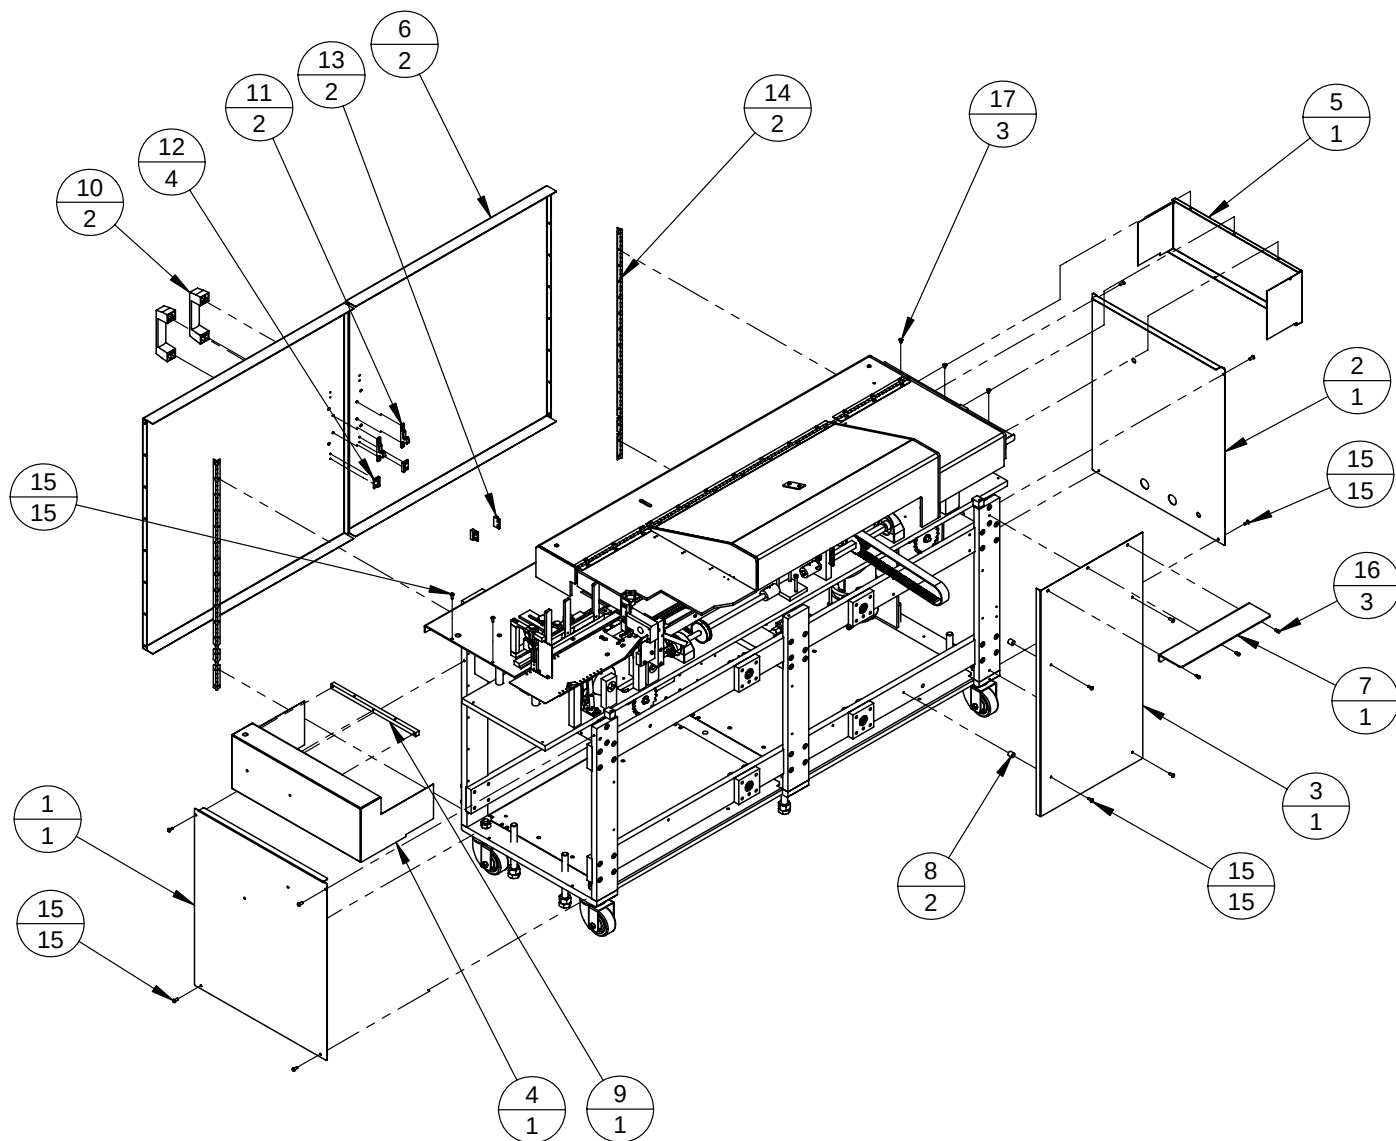


**FRONT TABLE – COVER ASSEMBLY CONTINUED (Fig. 1-24)
(18020-018)**

ITEM	PART NO.	QTY.	DESCRIPTION
1	18002-005	1	SUPPORT, MAIN COVER
2	18013-049	1	COVER, MAIN
3	18013-100	1	COVER, TOP LEFT
4	18013-114	1	COVER, TOP RIGHT
5	18013-099	1	COVER, TOP CENTER
6	18012-027	2	STANDOFF, MAIN COVER
7	18009-074	1	BAR, SENSOR MTG,
8	18009-048	1	BRACKET, GAS SHOCK, LOWER
9	18009-047	1	BRACKET, GAS SHOCK, UPPER
10	18011-087	1	PLATE, STUD
11	18013-082	2	HINGE, 10" LONG
12	18013-079	1	HINGE, 26" LONG
13	99014-007	1	GAS SPRING
14	99014-005	2	END FITTING, BALL SOCKET
15	99014-009	2	BALL STUD, 10MM
16	99018-008	3	BRACKET, SENSOR MTG.
17	98009-002	2	SENSOR, SENDER, THRU BEAM
18	98009-037	1	SENSOR, RECIEVER, THRU BEAM
19	98000-036	2	SWITCH, REED
20	98020-024	2	MAGNET, REED SWITCH
21	-	7	SCREW, SKT HEAD, #10-24 X 1/2
22	-	24	SCREW, BUTTON HEAD, #10-24 X 3/8
23	-	2	SCREW, BUTTON HEAD, #10-24 X 3/4
24	-	2	SCREW, BUTTON HEAD, #8-32 X 1/2
25	-	2	SCREW, FLAT HEAD, #6-32 X 3/8
26	-	2	SCREW, SKT HEAD, #8-32 X 1/2

PITNEY BOWES

Sure-Feed Engineering

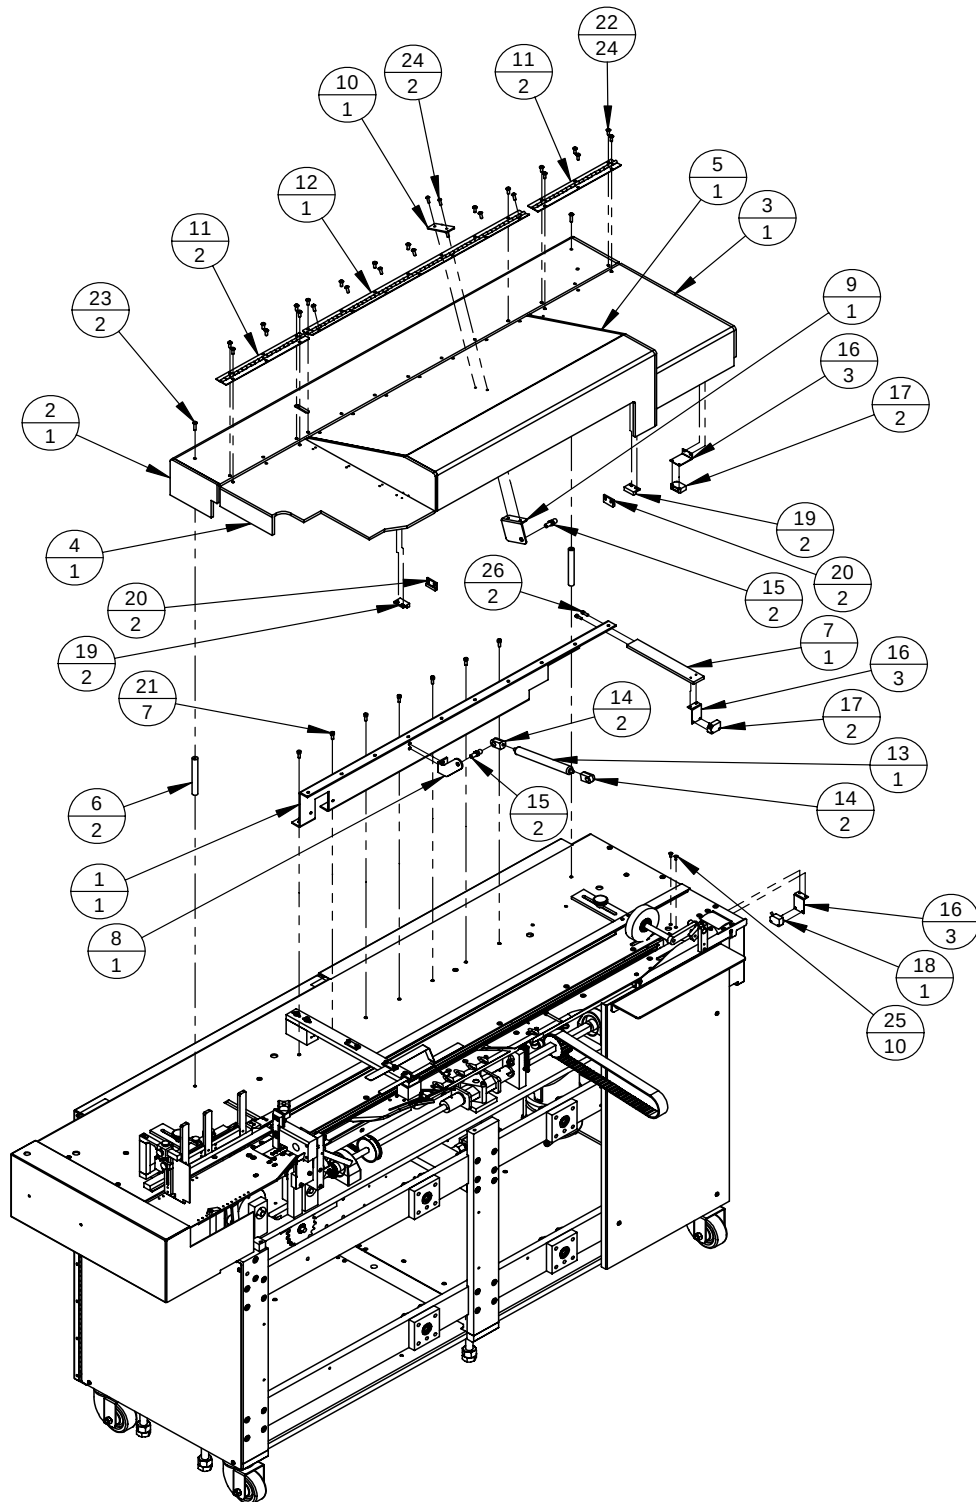


FRONT TABLE – PNEUMATICS (Fig. 1-25)

ITEM	PART NO.	QTY.	DESCRIPTION
1	SEE FIG. 1-26	1	ASSEMBLY, ENVELOPE VACUUM VALVE (18020-351)
2	SEE FIG. 1-26	1	ASSEMBLY, INSERT AIR VALVE (18020-350)
3	99031-022	1	HOSE, YELLOW, 3/4 ID
4	99031-023	1	HOSE, REINFORCED PVC, 5/8 ID
5	99031-010	4	TUBING, BLUE, 3/8 OD

PITNEY BOWES

Sure-Feed Engineering

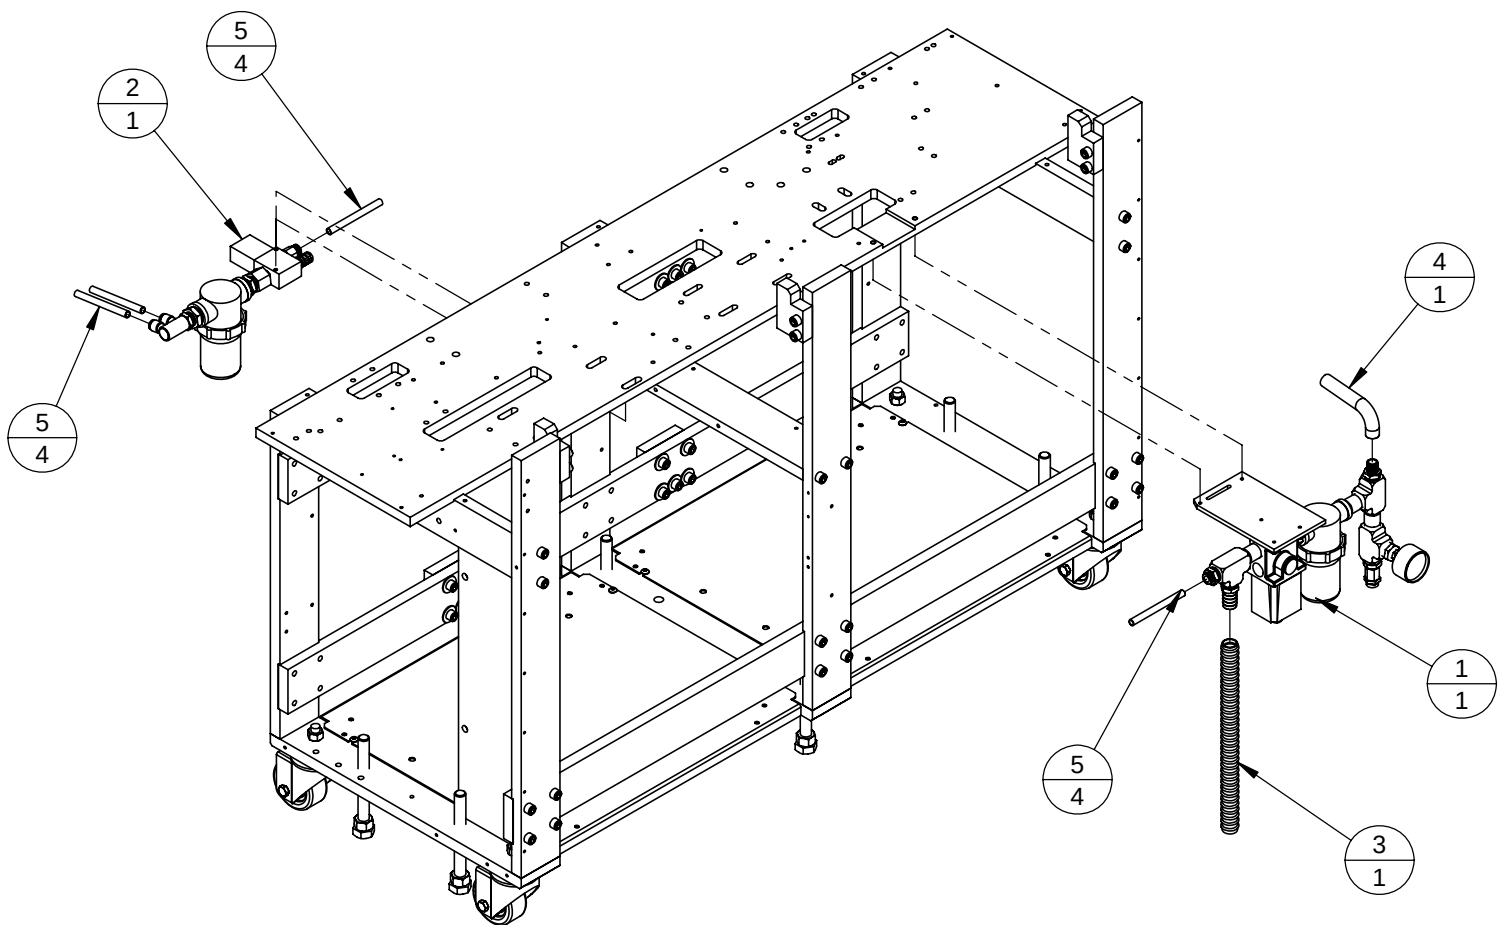


FRONT TABLE – PNEUMATICS (Fig. 1-26)
VACUUM VALVE ASSEMBLIES


ITEM	PART NO.	QTY.	DESCRIPTION
	18020-351	1	ASSEMBLY, ENVELOPE VACUUM VALVE
1	18011-099	1	PLATE, FILTER MTG.
2	99025-033	1	VALVE, SOLENOID, 1/2 NPT, 120 VAC
3	99027-001	1	FILTER, VACUUM, 1/2 NPT - FEMALE
4	99028-039	3	NIPPLE, 1/2 NPT X 2
5	99028-171	3	FITTING, BRASS TEE, 1/2 NPT
6	99028-170	1	FITTING, HOSE BARB, 1/2 NPT X 3/4 HOSE
7	99028-172	1	FITTING, MALE CONNECTOR, 1/2 NPT X 3/8 TUBE
8	99028-168	1	FITTING, REDUCING NIPPLE, 1/2 X 3/8 NPT
9	99028-177	1	FITTING, REDUCING BUSHING, 1/2 M-NPT X 3/8 F-NPT
10	99028-178	1	FITTING, REDUCING BUSHING, 1/2 M-NPT X 1/4 F-NPT
11	99028-120	1	FITTING, REDUCING BUSHING, 1/4 M-NPT X 1/8 F-NPT
12	99030-007	1	GAUGE, VACUUM, 1/8 NPT, 0-31 IN. HG
13	99025-009	1	VALVE, VACCUM RELIEF
14	99028-072	1	NIPPLE, HEX, 1/2 NPT
	18020-350	1	ASSEMBLY, INSERT VACUUM VALVE
15	99027-013	1	FILTER, VACUUM, 3/4 NPT FEMALE
16	99025-006	1	VALVE, VACUUM SOLENOID, 24 VDC
17	99028-175	1	FITTING, ADAPTOR, 1/2 F-NPT X 1/4 M-NPT
18	99028-176	1	FITTING, NIPPLE REDUCER, 3/4 X 1/2 NPT
19	99028-037	1	FITTING, REDUCING BUSHING, 3/4 M-NPT X 1/2 F-NPT
20	99028-174	1	FITTING, DOUBLE MALE ELBOW, 1/2 NPT X 3/8 TUBE
21	99028-006	1	MUFFLER, 1/4 NPT
22	99028-017	1	FITTING, MALE CONNECTOR, 1/4 NPT X 3/8 TUBE

PITNEY BOWES

Sure-Feed Engineering

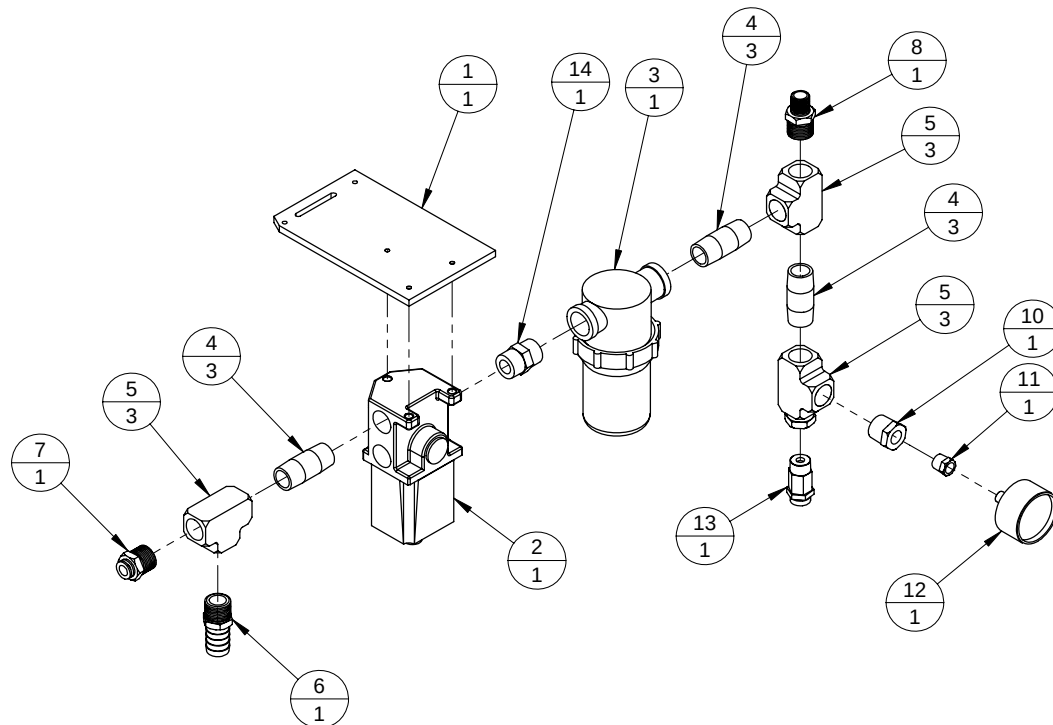


ASSY # 18020-351

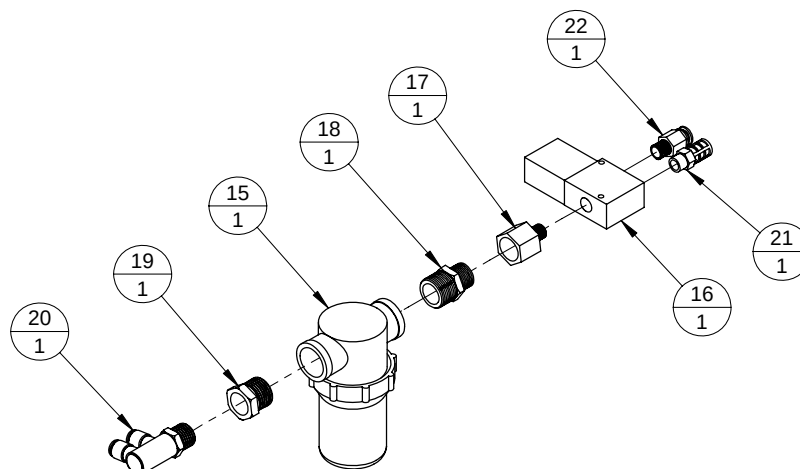

ASSY# 18020-350

COLLATOR CONVEYOR ROTARY

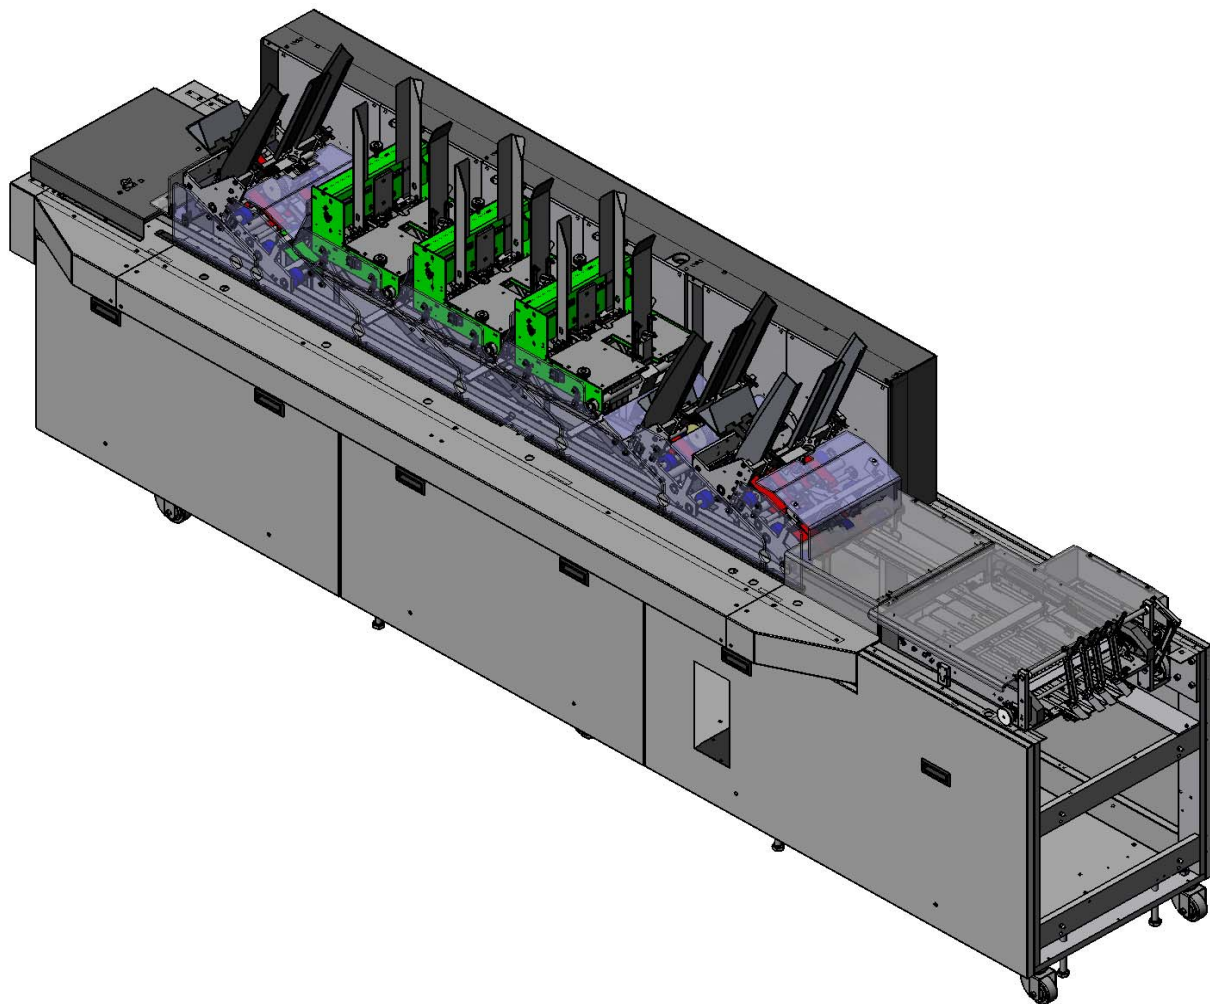

**COLLATOR – FRAME ASSEMBLY (Fig. 2-1)
(18020-371)**


ITEM	PART NO.	QTY.	DESCRIPTION
1	18020-253	1	ASSEMBLY, FRONT LEG
2	18020-254	1	ASSEMBLY, RH LEG @ PNEUMATICS
3	18020-255	1	ASSEMBLY, LH LEG
4	18020-256	1	ASSEMBLY, RH LEG
5	18020-257	1	ASSY, LH LEG @ SPLICE
6	18008-102	1	BAR, FEEDER MTG. SUPPORT, 16K
7	18011-092	1	PLATE, CLUTCH MTG, 16K, 6-ST
8	18011-065	1	PLATE, PUSHER DRIVE MTG.
9	18011-050	1	PLATE, CLUTCH MTG, FRONT
10	18001-068	1	COVER, TOP, LH FRONT
11	18001-046	1	COVER, TOP, LH REAR
12	18001-082	1	COVER, TOP, REAR JOGGING DECK
13	18001-080	1	COVER, TOP, CENTER JOGGING DECK
14	18001-081	1	COVER, TOP, FRONT JOGGING DECK
15	18001-048	1	COVER, TOP, INNER, 16K
16	18001-015	1	COVER, LOWER, RH REAR
17	18001-016	1	COVER, LOWER, LH REAR
18	18008-069	1	BAR, WIREWAY MTG, FRONT
19	18002-012	1	SUPPORT, FRONT JOGGING DECK
20	180012-013	1	SUPPORT, CENTER JOGGING DECK
21	18009-111	3	BRACKET, JOGGING DEC SUPPORT
22	99006-005	4	PIN, ALIGNMENT
23	99010-005	6	CASTOR, 1/2-13 STEM
24	18005-088	1	GUIDE, COLLATOR SIDE, RH
25	18005-167	1	GUIDE, COLLATOR SIDE, LH

**COLLATOR – FRAME ASSEMBLY (Fig. 2-1)
 (18020-371)**

ITEM	PART NO.	QTY.	DESCRIPTION
26	-	10	BOLT, HEX HEAD, 5/8-11 X 6
27	-	6	NUT, HEX, 1/2-13
28	-	10	NUT, HEX, 5/8-11
29	-	42	BOLT, SKT HEAD, 3/8-16 X 1/2
30	-	6	SCREW, SKT HEAD, #10-24 X 3/8
31	-	16	BOLT, SKT HEAD, 5/16-18 X 5/8
32	-	7	SCREW, BUTTON HEAD, #10-32 X 3/8
33	-	18	BOLT, SKT HEAD, 3/8-16 X 1-5/8
34	-	18	NUT, HEX, 3/8
35	-	5	SCRWE, SKT HEAD, #10-24 X 1/2
36	-	15	WASHER, FLAT, 1/4
37	-	15	NUT, HEX, 1/4-20

PITNEY BOWES

Sure-Feed Engineering

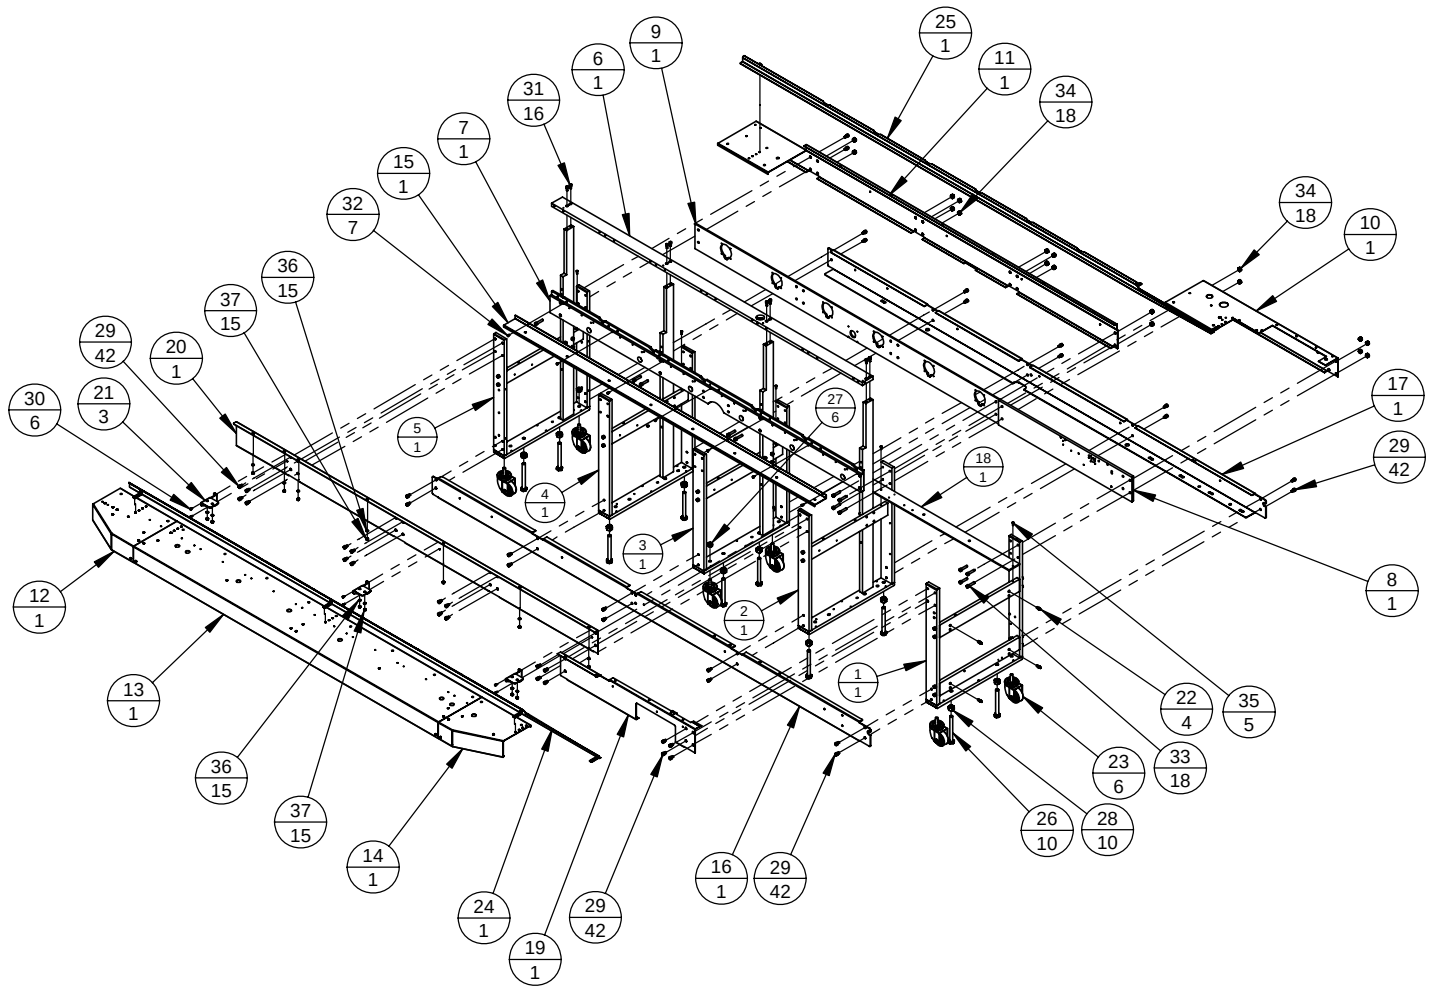


**COLLATOR – FEEDER DRIVE ASSEMBLY (Fig. 2-2)
 (18020-202)**

ITEM	PART NO.	QTY.	DESCRIPTION
1	SEE FIG. 2-4	1	ASSEMBLY, MOTOR
2	SEE FIG. 2-3	6	ASSEMBLY, CLUTCH AND TENSIONER
3	18011-050	1	PLATE, CLUTCH MTG, FRONT
4	18007-051	7	BLOCK, BEARING
5	18012-032	12	SPACER, CLUTCH BEARING BLOCK
6	18008-029	1	BAR, CLUTCH STOP
7	18007-109	6	BLOCK, CLUTCH STOP
8	99003-007	14	BEARING, 1/2 X 1-1/8, SEALED W/ S.R.
9	18009-065	6	BRACKET RECEPTACLE MTG.
10	99000-026	4	BELT, TIMING, 360L075
11	99000-025	2	BELT, TIMING, 225L050
12	16012-003	4	SPACER, CLUTCH STOP BAR
13	18011-092	1	PLATE, CLUTCH MTG, 16K
14		24	SCREW, SKT HEAD, #10-24 X 3/4
15		4	SCREW, SKT HEAD, #10-24 X 7/8
16		12	SCREW, BUTTON HEAD, #10-24 X 3/8
17		6	SCREW, FLAT HEAD, #10-32 X 3/8
18		6	SCREW, SKT HEAD, 5/16-18 X 1-1/8

PITNEY BOWES

Sure-Feed Engineering

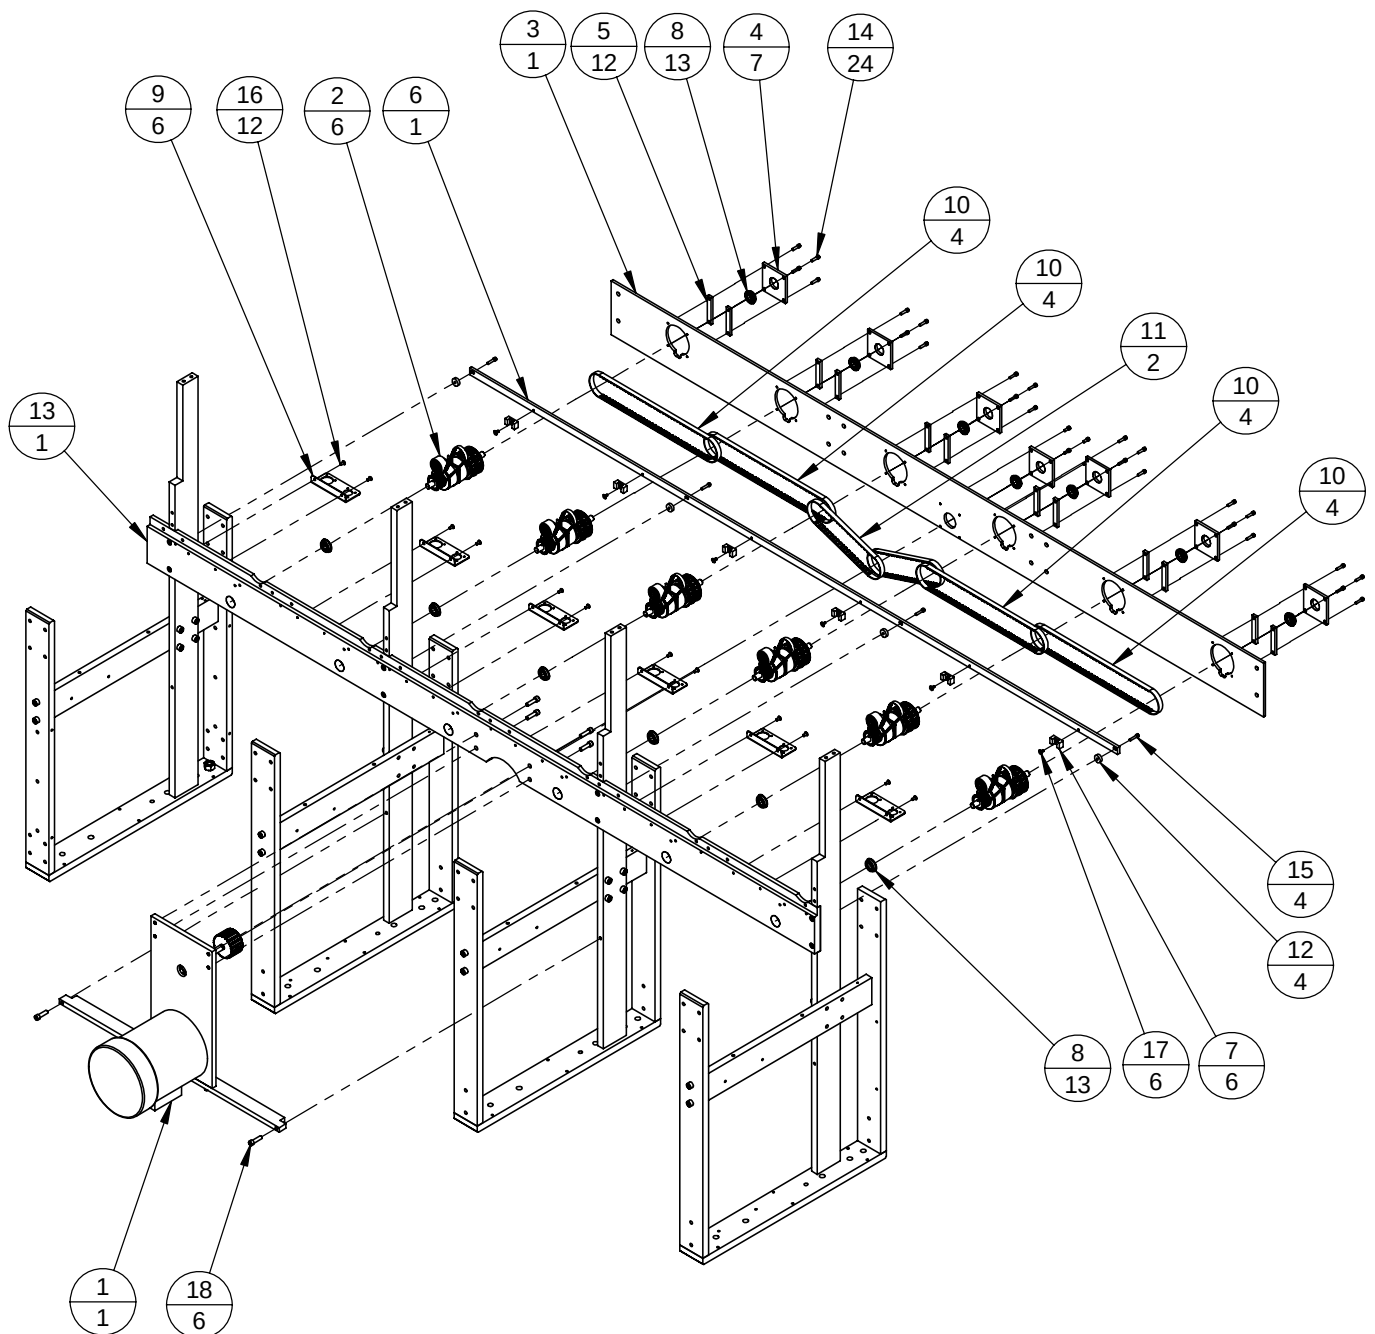


**COLLATOR – FEEDER DRIVE (Fig. 2-3)
 CLUTCH / TENSIONER ASSEMBLY**

ITEM	PART NO.	QTY.	DESCRIPTION
1	99000-027	1	BELT, TIMING, 160XL037
	18020-074	6	ASSEMBLY, CLUTCH, 24V
2	99008-006	1	CLUTCH, FEEDER, 24V
3	18006-008	1	PULLEY, DOUBLE, 20L075
4	99002-054	1	PULLEY, TIMING, 20XL037
5	18004-015	1	SHAFT, CLUTCH
6	99003-007	1	BEARING, 1/2 X 1-1/8, SEALED W/ S.R.
7	99003-018	1	WASHER, NYLON, 1/2 X 1/16
8	10006-029	1	BUSHING, CLUTCH PULLEY
9	99017-004	1	COLLAR, 1/2" SHAFT
10	99034-001	2	KEY, WOODRUF, 1/8 X 3/4
	18020-244	6	ASSEMBLY, TENSIONER
11	18006-011	1	PULLEY, FLAT IDLER, 3/4" W
12	18004-087	1	SHAFT, STUB IDLER
13	99003-007	2	BEARING, 1/2 X 1-1/8, SEALED W/ S.R.
14	99003-018	1	WASHER, NYLON, 1/2 X 1/16
15	99022-004	1	SNAP RING, 1/2
16		1	SCREW, SKT HEAD, 1/4-20 X 1-1/2

PITNEY BOWES

Sure-Feed Engineering

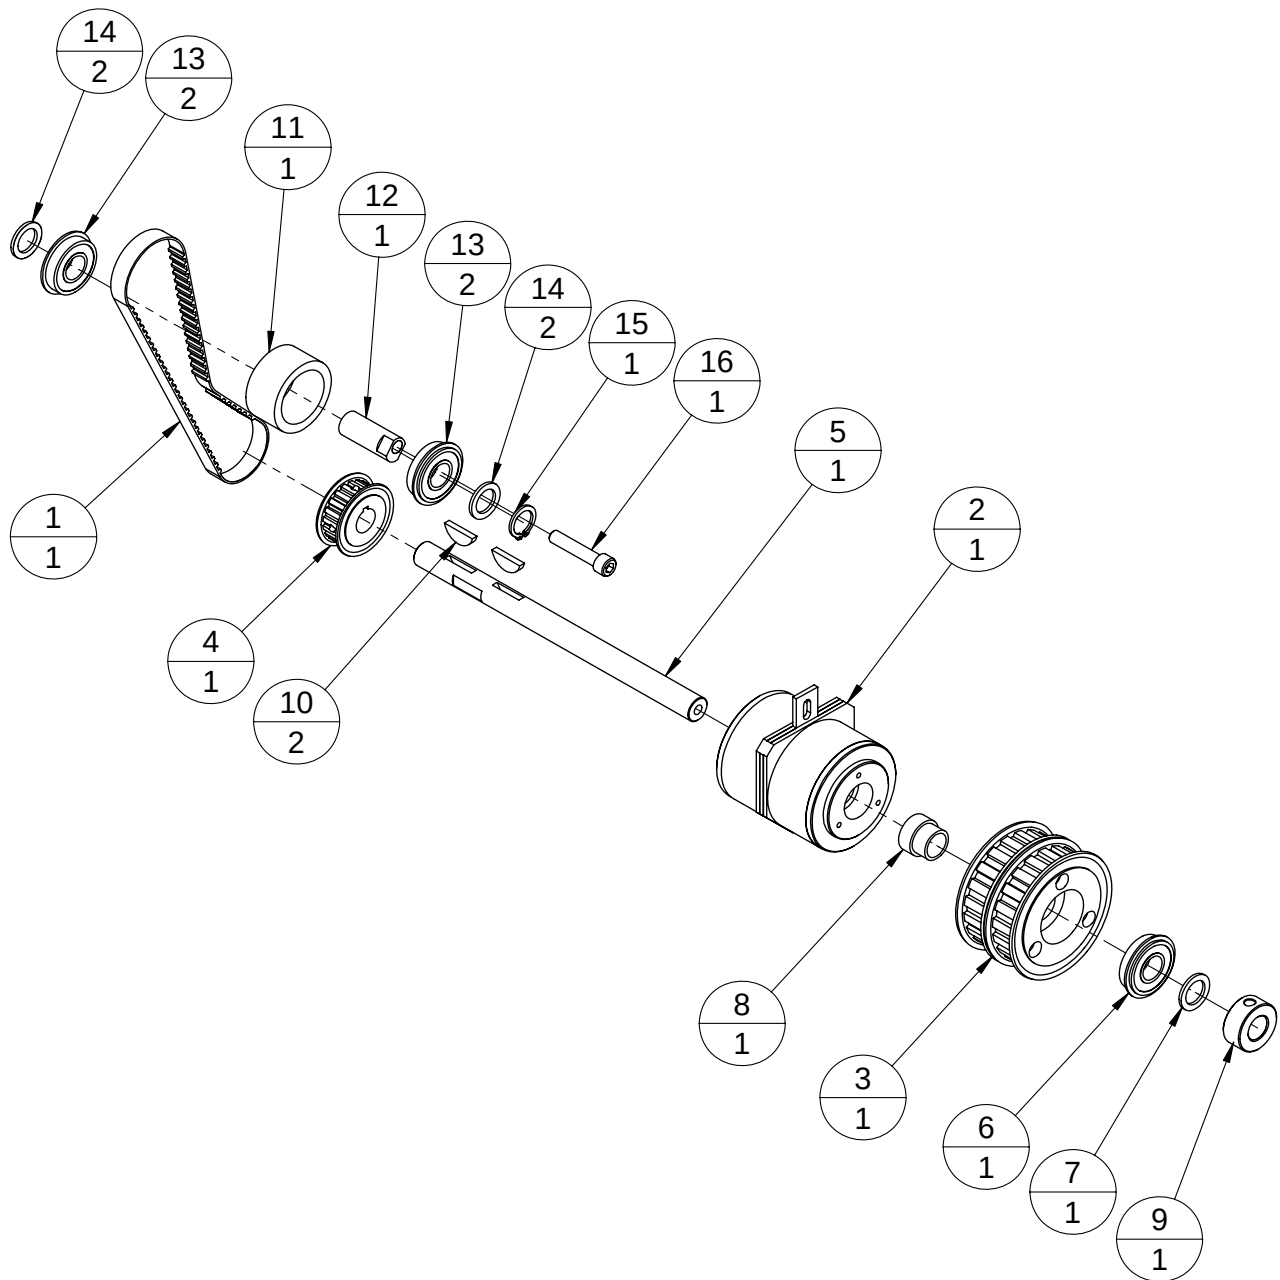


**COLLATOR – FEEDER DRIVE (Fig. 2-4)
 MOTOR ASSEMBLY**

ITEM	PART NO.	QTY.	DESCRIPTION
1	18011-003	1	PLATE, MOTOR MTG
2	18008-028	1	BAR, MOTOR MTG SUPPORT
3	99001-006	1	MOTOR, 3/4 HP, 56C
4	18004-088	1	SHAFT, INTERMEDIATE, 16K
5	99002-065	1	PULLEY, TIMING, 36L075 (1610 TAPERLOCK)
6	18006-017	1	PULLEY, DOUBLE, 20L050, 1/2B
7	99002-055	1	PULLEY, TIMING, 12L075, 5/8B
8	99017-026	1	BUSHING, TAPERLOCK, 1610, 1/2B
9	99003-007	1	BEARING, 1/2 X 1-1/8 SEALED W/ S.R.
10	99017-004	1	COLLAR, 1/2
11	99003-018	6	WASHER, NYLON, 1/2 X 1/16
12	99000-028	1	BELT, TIMING, 255L075
13		4	SCREW, SKT HEAD, 3/8-16 X 1-1/4
14		2	SCREW, SKT HEAD, 1/4-20 X 1

PITNEY BOWES

Sure-Feed Engineering

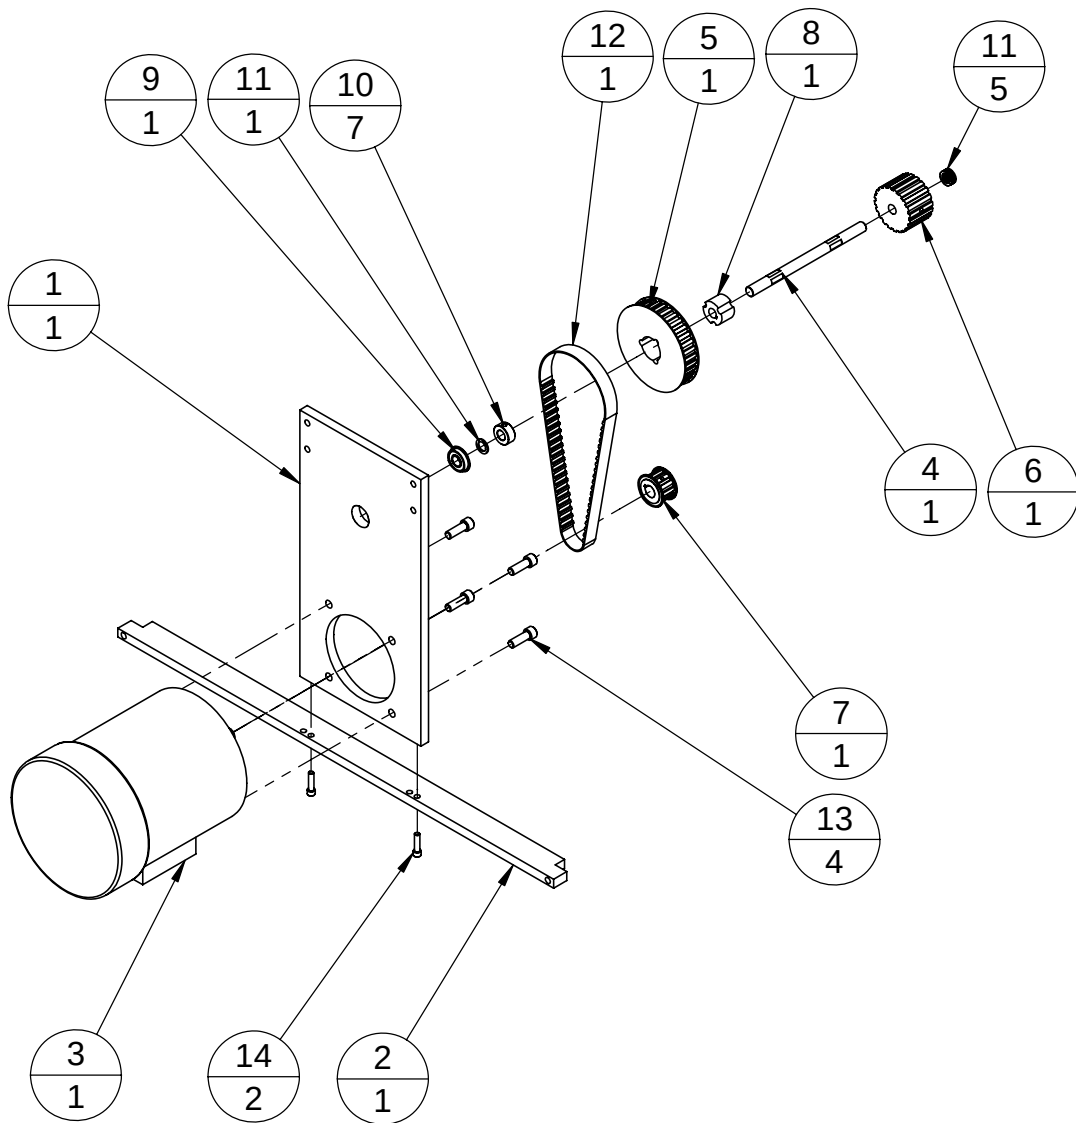


**COLLATOR – PUSHER ASSEMBLY (Fig. 2-5)
 (18020-203)**

ITEM	PART NO.	QTY.	DESCRIPTION
1	SEE FIG. 2-6	1	ASSY, PUSHER FRAME (18020-359)
2	SEE FIG. 2-10	1	ASSY, ENTERING FINGER, INNER (18020-245)
3	SEE FIG. 2-10	1	ASSY, ENTERING FINGER, OUTER (18020-246)
4	SEE FIG. 2-9	3	ASSY, FINGER DRIVE (18020-204)
5	18005-012	1	PLATE, PUSHER GUIDE EXTENSION
6	18004-090	1	SHAFT, ENTERING FINGER
7	18008-015	1	BAR, FINGER LINK
8	18008-113	1	BAR, FINGER SUPPORT, RH
9	99003-031	1	BUSHING, 1/2 X 5/8 X 1/2
10	99017-004	2	COLLAR, 1/2 SHAFT
11	99022-003	1	SNAP RING, 3/8
12	99033-016	1	SHOULDER BOLT, 3/8 X 1/2
13	99017-003	1	COLLAR, 3/8 SHAFT
14		2	FLAT WASHER, #10
15		1	HEX NUT, #10-24
16		4	SCREW, FLAT HEAD, #10-32 X 3/8
17		3	SCREW, SKT HEAD, #10-32 X 5/8
18		1	SCREW, SKT HEAD, #10-32 X 7/8

PITNEY BOWES

Sure-Feed Engineering

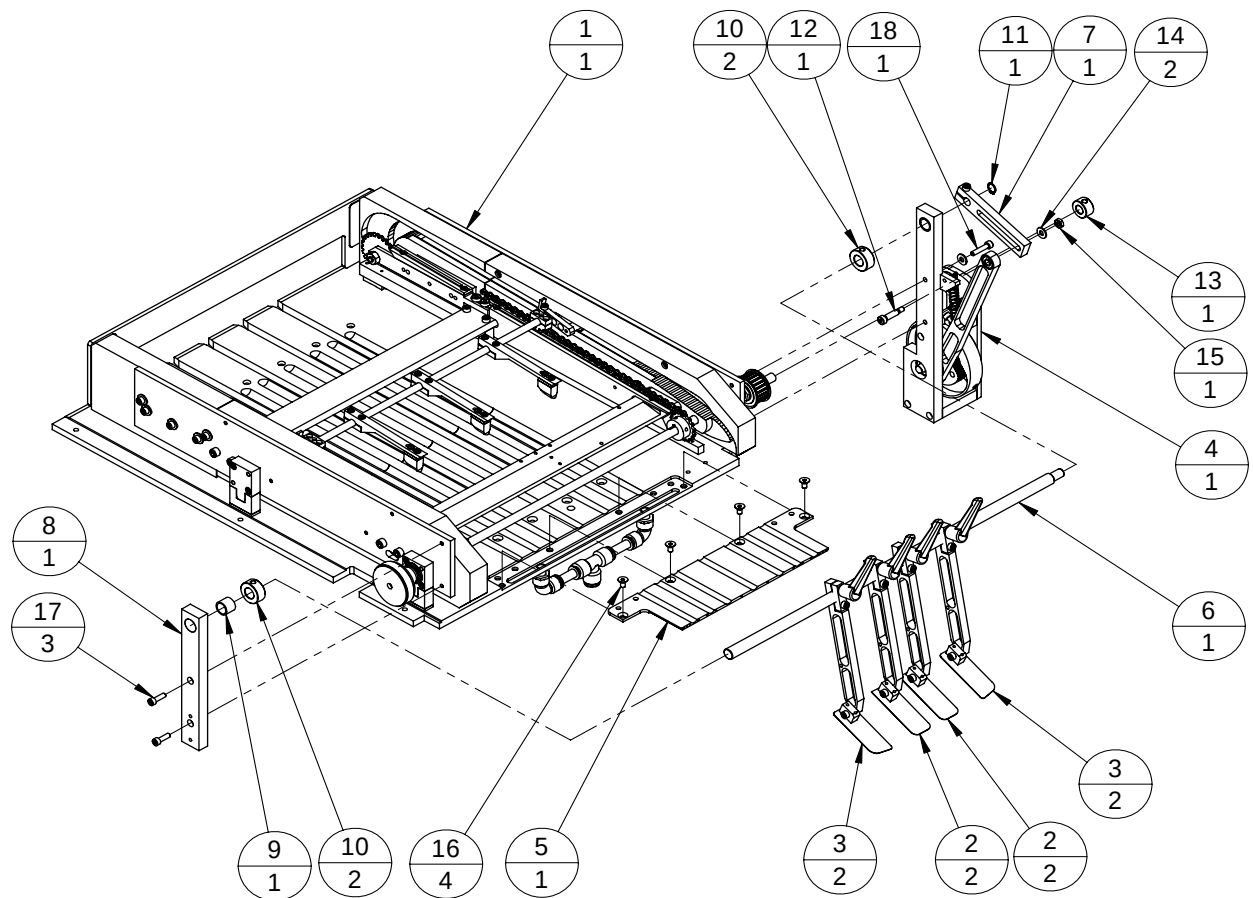

COLLATOR – PUSHER (Fig. 2-6)
PUSHER FRAME ASSEMBLY (18020-359)


ITEM	PART NO.	QTY.	DESCRIPTION
1	18005-034	1	PLATE, PUSHER GUIDE (10X13)
2	18005-093	2	GUIDE, CAM ROLLER (LOWER)
3	18003-018	1	CROSSBAR, PUSHER, FRONT (10X13)
4	18003-017	1	CROSSBAR, PUSHER, REAR
5	18005-007	2	GUIDE, PUSHER CHAIN, FRONT
6	18008-149	1	BAR, HOME SENSOR MTG.
7	18004-045	1	SHAFT, PUSHER DRIVE
8	18015-002	2	SPROCKET, DRIVE
9	18012-023	4	SPACER, PUSHER ASSY
10	18007-001	2	BLOCK, PIVOT
11	18007-002	2	BLOCK, LATCH
12	18005-041	2	GUIDE, SPRING STEEL, ANTI-FLIP
13	18013-032	1	GUARD, REAR PUSHER
14	18020-175	1	ASSY, PUSHER RESET KNOB
15	SEE FIG. 2-7	1	ASSY, PUSHER GUIDE, LH (18020-258)
16	SEE FIG. 2-7	1	ASSY, PUSHER GUIDE, RH (18020-259)
17	99003-017	2	WASHER, NYLON, 3/8 X 1/16
18	99022-003	2	SNAP RING, 3/8
19	99033-006	4	SHOULDER BOLT, 1/4 X 1/4
20		4	WASHER, FLAT, #10
21		8	SCREW, SKT HEAD, 1/4-20 X 5/8
22		12	SCREW, SKT HEAD, #10-24 X 3/4
23		2	SCREW, FLAT HEAD, #6-32 X 7/8
24		2	SCREW, FLAT HEAD, #6-32 X 3/7
25		8	SCREW, SKT HEAD, #6-32 X 5/8
26	99033-005	2	SHOULDER BOLT, 1/4 X 3/4
27	18006-079	1	PULLEY, 22-5GT-15, 3/4B
28	99017-013	1	TRANTORQUE, 3/8
29		2	SCREW, SKT HEAD, #10-24 X 5/8
30	SEE FIG. 2-8	2	ASSY, CHAIN, 16K PUSHER (18014-045)

COLLATOR – PUSHER (Fig. 2-6)
PUSHER FRAME ASSEMBLY (18020-359)

ITEM	PART NO.	QTY.	DESCRIPTION
31	SEE FIG. 2-8	1	ASSY, PUSHER ARM SHAFT (18020-247)
32	99028-084	2	FITTING, ELBOW, 3/8 T X 1/8 NPT
33	99028-086	1	FITTING, TEE, 3/8 TUBE
34	99031-010	2	TUBING, BLUE, 3/8
35	99005-008	2	SPRING PLUNGER, 1/4-20 X 3/4
36	98009-028	1	SENSOR, PROXIMITY, MINI SURFACE MTG.
37	98009-037	1	SENSOR, RECEIVER, P&F THRU BEAM

PITNEY BOWES

Sure-Feed Engineering

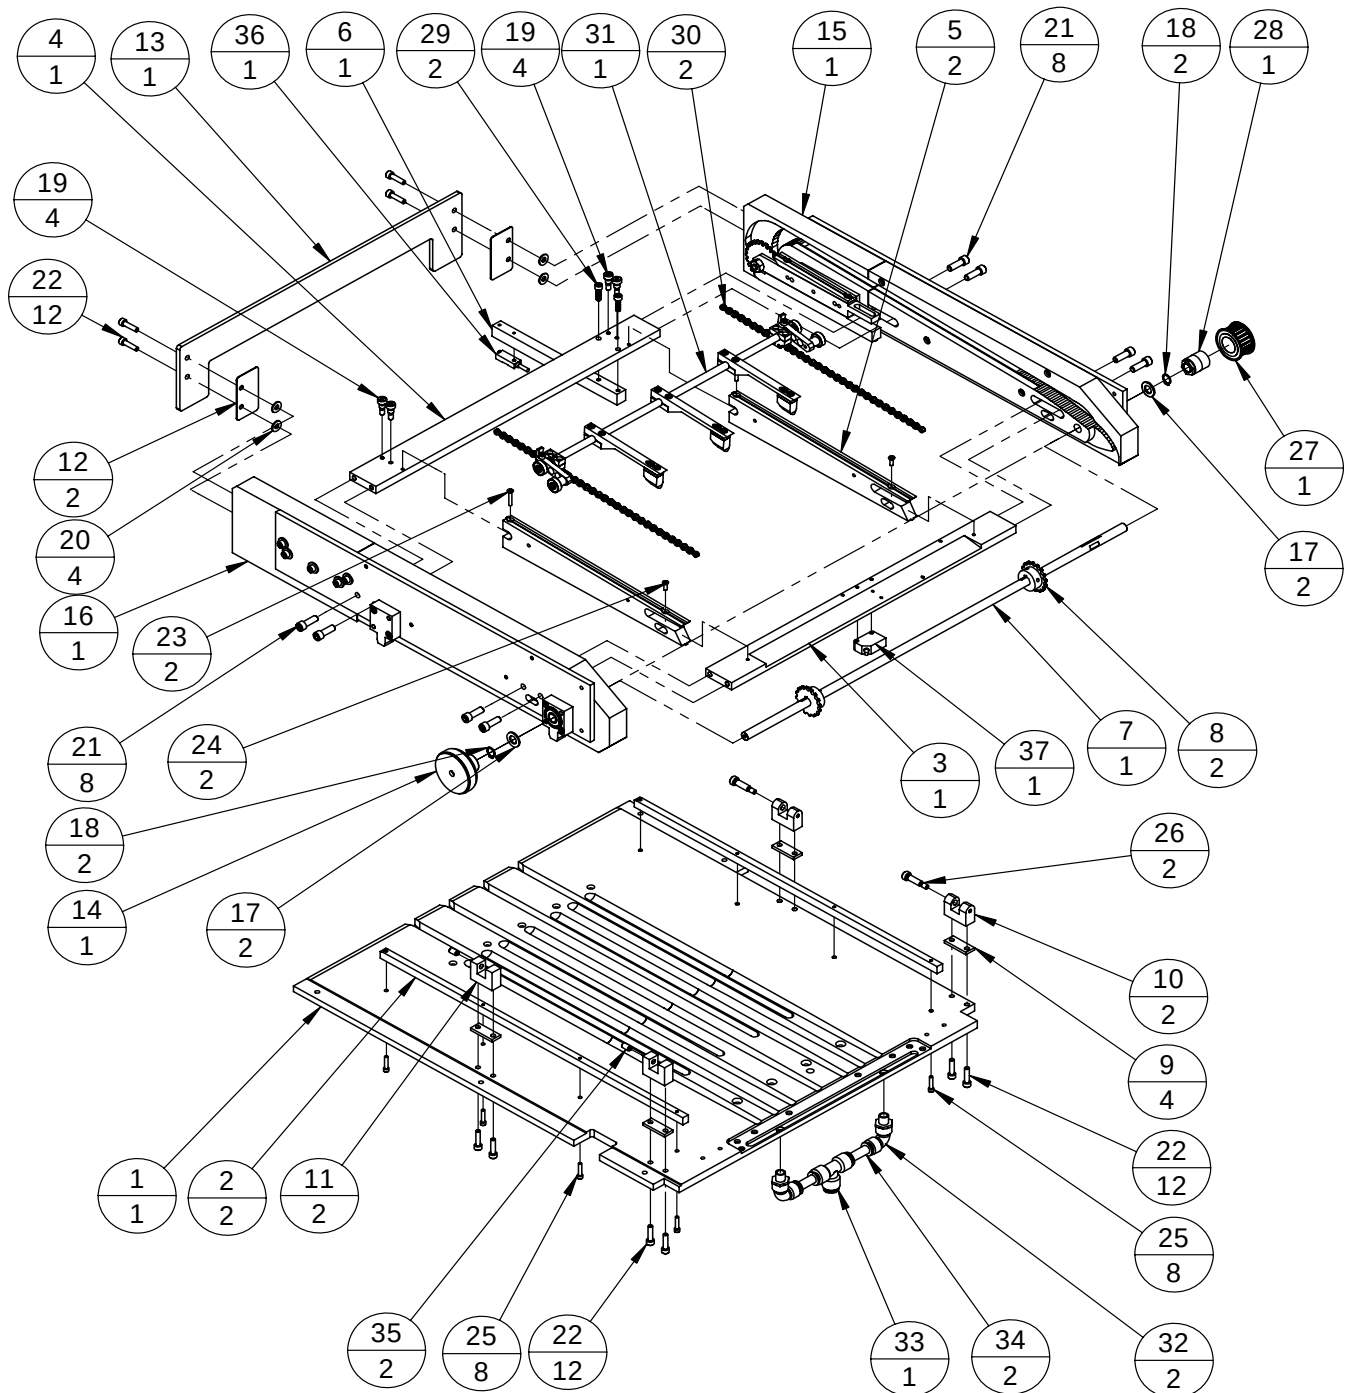


**COLLATOR – PUSHER (Fig. 2-7)
 RH (18020-259) AND LH (18020-258)
 PUSHER GUIDE ASSEMBLIES**

ITEM	PART NO.	QTY.	DESCRIPTION
1	18011-114	2	PLATE, PUSHER CAM MTG.
2	18016-001	1	CAM, PUSHER CONTROL, LH FRONT
3	18016-009	1	CAM, PUSHER CONTROL, LH REAR
4	18005-006	2	GUIDE, PUSHER CHAIN, UPPER REAR
5	18005-161	2	GUIDE, PUSHER CHAIN, LOWER REAR
6	18012-042	2	STANDOFF, PUSHER CHAIN MTG
7	18004-047	2	SHAFT, SCREW IDLER
8	18015-001	2	SPROCKET ASSY, IDLER, 25A24
9	18007-130	1	BLOCK, PIVOT (W/ BEARING), UPPER
10	18007-128	1	BLOCK, PIVOT, UPPER
11	18008-050	2	BAR, IDLER MTG, LH
12		2	NEX NUT, 1/4-20
13		8	SCREW, SKT HEAD, #10-24 X 1
14		8	SCREW, SKT HEAD, #10-24 X 1/2
15		10	WASHER, FLAT, #10
16		6	SCREW, SKT HEAD, #10-24 X 1-1/4
17		4	SCREW, FLAT HEAD, #6-32 X 3/8
18		4	SCREW, SKT HEAD, #10-24 X 5/8
19		4	SCREW, FLAT HEAD, #6-32 X 3/4
20	99003-020	2	BEARING, 3/8 X 7/8, SEALED W/ S.R.
21	18016-002	1	CAM, PUSHER CONTROL, RH FRONT
22	18016-010	1	CAM PUSHER CONTROL, RH REAR
23	18008-007	1	BAR, IDLER MTG, RH
24	18007-131	1	BLOCK, LATCH (W/ BEARING), UPPER
25	18007-129	1	BLOCK, LATCH, UPPER
26	99005-005	2	SPRING, COMPRESION (NOT SHOWN)

PITNEY BOWES

Sure-Feed Engineering

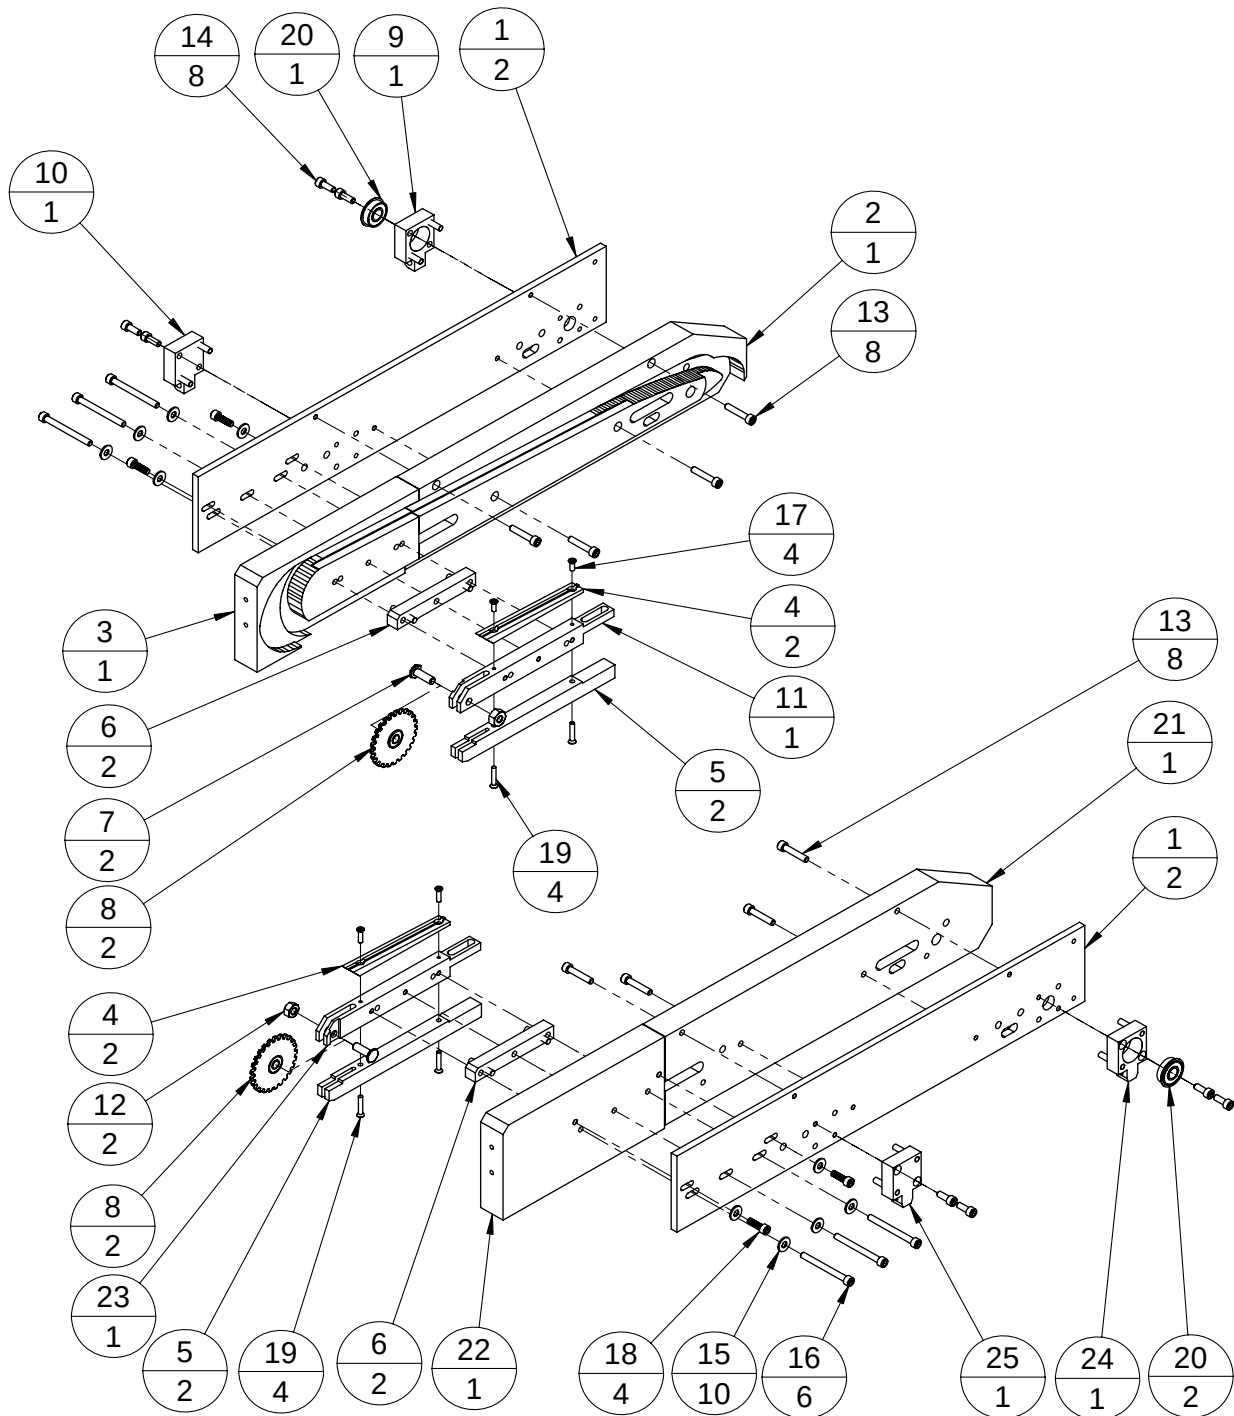


COLLATOR – PUSHER (Fig. 2-8)
PUSHER ARM SHAFT / CHAIN ASSEMBLY

ITEM	PART NO.	QTY.	DESCRIPTION
	18020-247	1	ASSEMBLY, PUSHER ARM SHAFT
1	18020-050	3	ASSEMBLY, PUSHER ARM
1A	18008-009	1	BAR, PUSHER ARM
1B	18008-053	1	CLAMP, PUSHER ARM
1C	18007-015	1	BLOCK, PUSHER
1D	18012-022	1	SPACER, PUSHER BLOCK
1E		2	SCREW, SKT HEAD, #8-32 X 1/2
1F		1	SCREW, PAN HEAD, #6-32 X 5/8
2	18004-044	1	SHAFT, PUSHER
3	18008-010	2	BAR, PUSHER LINK
4	18006-004	2	SPACER, BEARING
5	99003-002	4	BEARING, 1/4 X 5/8 SEALED
6	99003-014	10	WASHER, NYLON, 5.16 X 1/32
7		2	SCREW, FLAT HEAD, #8-32 X 1/2
8		2	SCREW, FLAT HEAD, #8-32 X 7/8
9		2	SCREW, SKT HEAD, #8-32 X 3/8
10	18014-045	2	CHAIN ASSY, 16K PUSHER
10A	18014-025	2	ASSY, PUSHER CHAIN BLOCK
10B	18014-024	4	ASSY, PUSHER CHAIN BLOCK (W/ OFFSET LINK)
	18014-021	2	CHAIN, #25, 5-1/4" LONG (NOT SHOWN)
	18014-046	2	CHAIN, #25, 8-1/4" LONG (NOT SHOWN)
	18014-047	2	CHAIN, #25, 1-3/4" LONG (NOT SHOWN)
	99020-006	12	MASTER LINK, #25 CHAIN (NOT SHOWN)

PITNEY BOWES

Sure-Feed Engineering

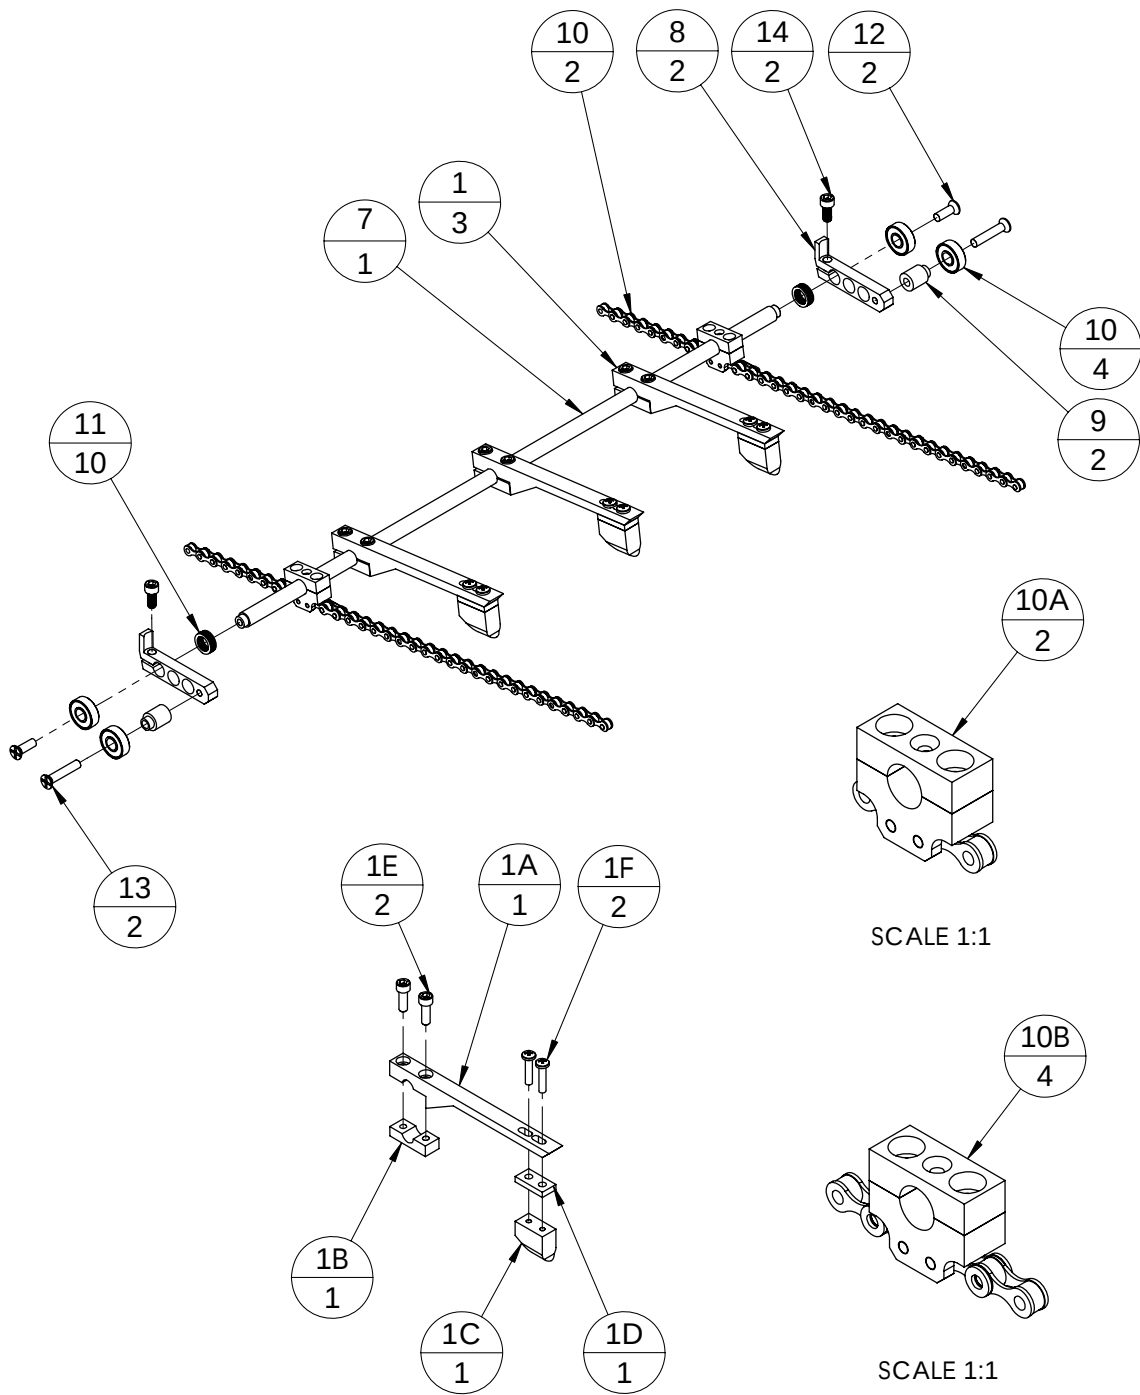


ASSY# 18020-050

**COLLATOR – PUSHER (Fig. 2-9)
 FINGER DRIVE SHAFT ASSEMBLY
 (18020-204)**

ITEM	PART NO.	QTY.	DESCRIPTION
1	18008-114	1	BAR, FINGER SUPPORT, LH
2	18007-134	1	BLOCK, BEARING MTG, FINGER DRIVE
3	18008-005	1	BAR, LOWER SPACER
4	18008-096	1	BAR, CONNECTING LINK, ENTERING FINGERS
5	18008-097	1	BAR, UPPER SPACER
6	18016-013	1	BOX CAM, ENTERING FINGER
7	18006-027	1	ROLLER YOKE GUIDE
8	18004-009	1	SHAFT, FINGER DRIVE
9	99003-055	1	CAM FOLLOWER, 3/4 DIAM.
10	99003-008	1	BEARING, 3/8 X 7/8, SEALED
11	99003-020	3	BEARING, 3/8 X 7/8, SEALED W/ S.R
12	18006-010	1	WASHER, THRUST
13	99003-016	1	WASHER, NYLON, 1/2 X 1/32
14	99002-020	1	PULLEY, 30XL037, 3/8 B W/ KEYWAY
15		1	HEX NUT, #10-24
16	99003-002	2	BEARING, 1/4 X 5/8 SEALED
17	99003-031	1	BUSHING, 1/2 X 5/8 X 1/2
18	18009-013	1	BRACKET, SPRING MTG.
19	99006-016	1	PIN, SPRING, #10-32 X 3/8
20		5	SCREW, SKT HEAD, #10-24 X 1/2
21	99005-009	1	SPRING, EXTENSION
22		3	SCREW, SKT HEAD, #10-24 X 5/8
23	99000-018	1	BELT, TIMING, 176XL037

PITNEY BOWES

Sure-Feed Engineering

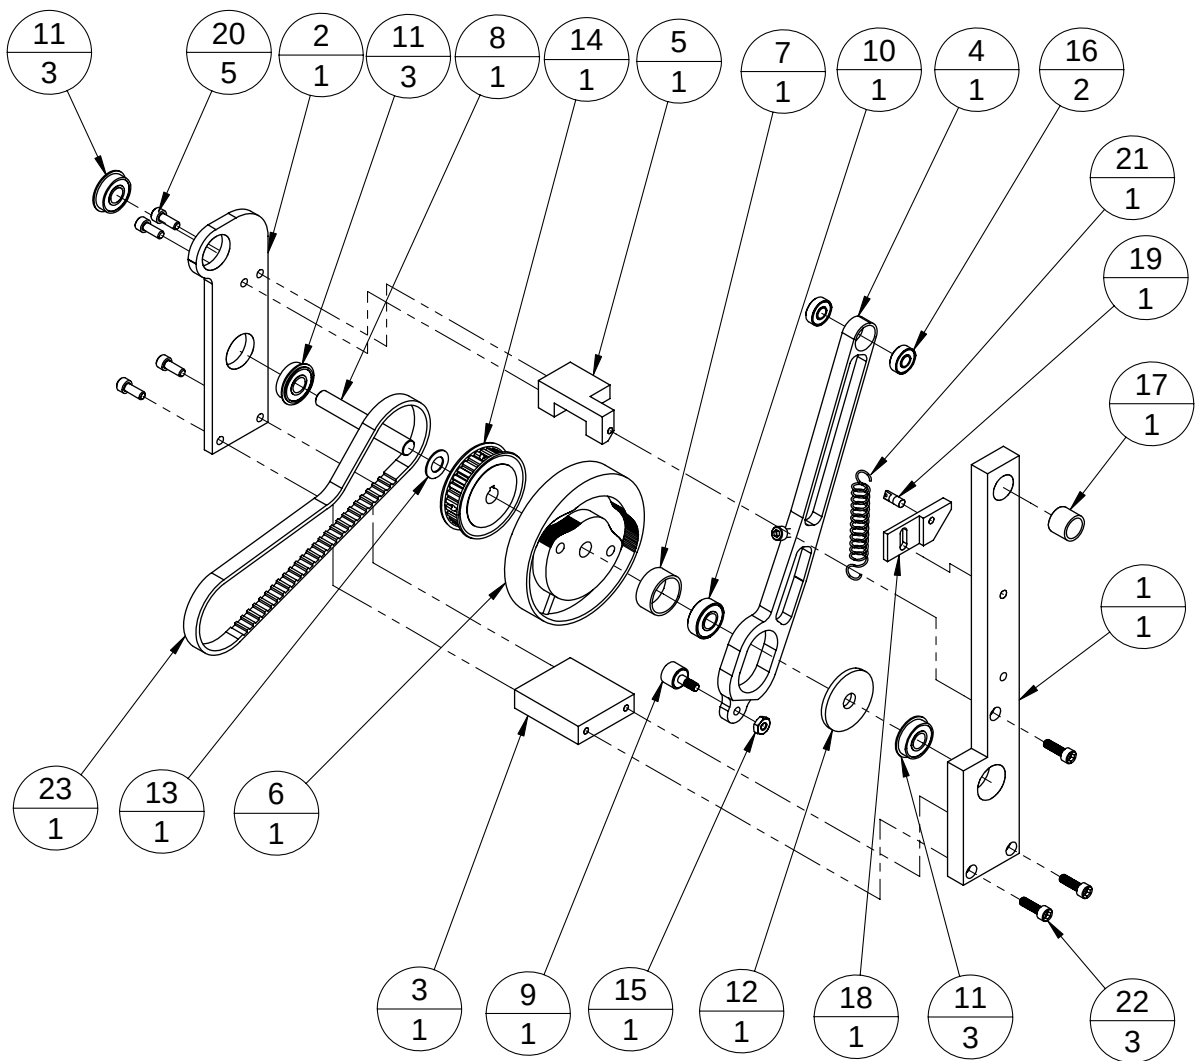


**COLLATOR – PUSHER (Fig. 2-10)
ENTERING FINGER ASSEMBLIES**

ITEM	PART NO.	QTY.	DESCRIPTION
1	18008-111	1	BAR, FINGER ARM
2	18008-112	1	BLOCK, CLAMP, FINGER ARM
3	18007-018	1	BLOCK, ENTERING FINGER MTG.
4	18011-046	1	PLATE, FINGER SUPPORT
5	18005-008	1	GUIDE, ENTERING FINGER INNER (IN # 18020-245)
6	99004-003	1	HANDLE, RATCH
7		1	SCREW, SKT HEAD, #10-24 X 5/8
8		2	SCREW, PAN HEAD, #6-32 X 3/8
9		1	SCREW, SKT HEAD, #10-24 X 5/8
10	18005-090	1	GUIDE, ENTERING FINGER, OUTER (IN # 18020-246)

PITNEY BOWES

Sure-Feed Engineering

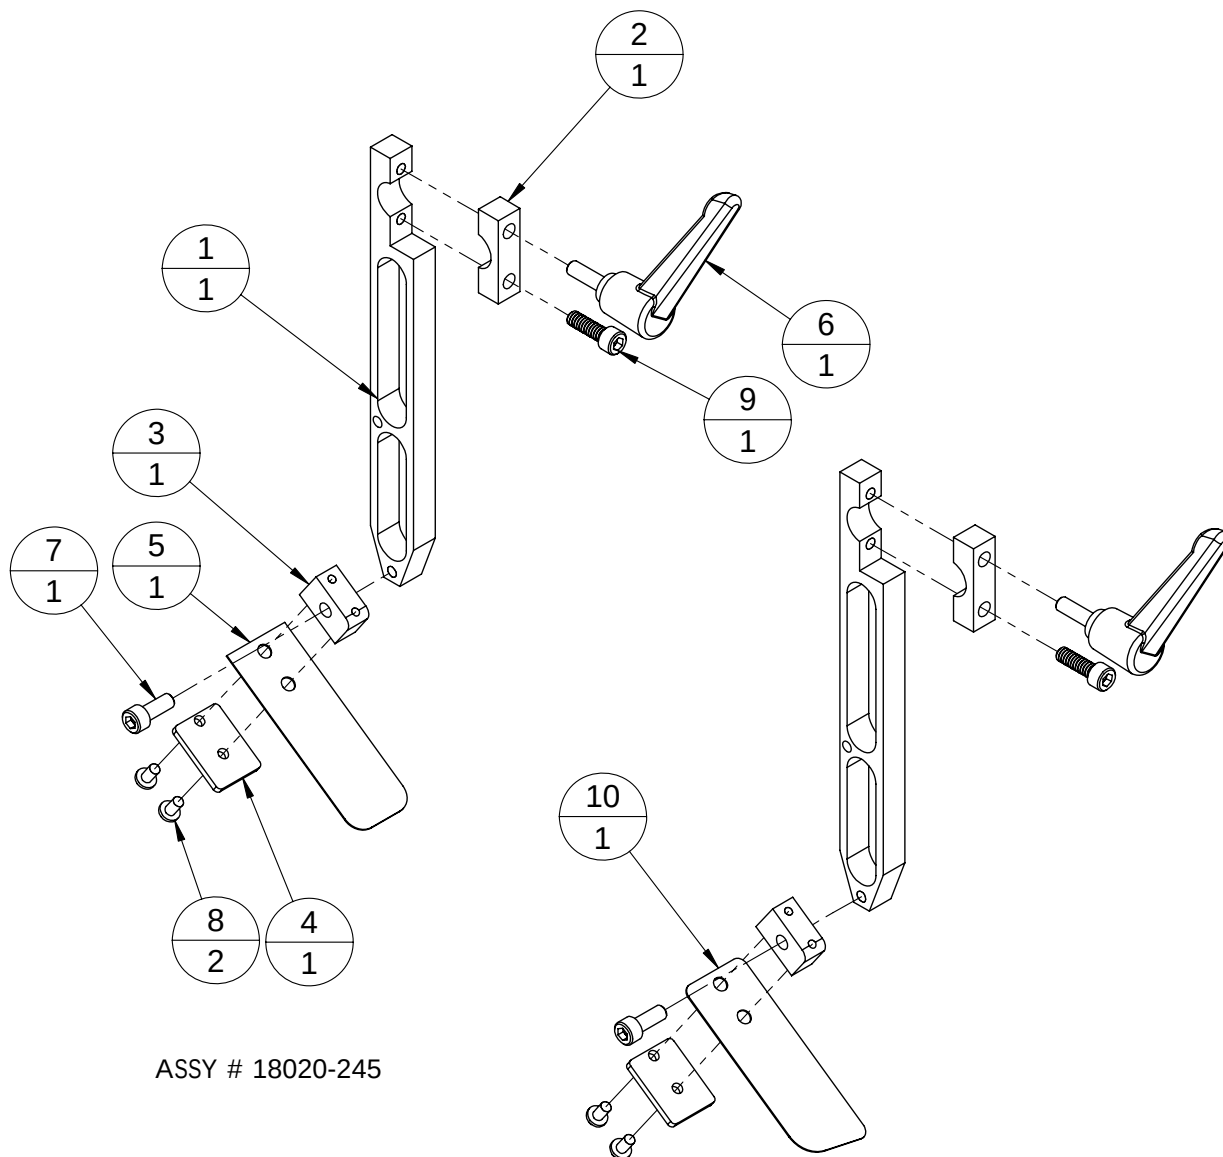

ASSY # 18020-245

ASSY# 18020-246


COLLATOR – PUSHER DRIVE ASSEMBLY (Fig. 2-11)
(18020-373)

ITEM	PART NO.	QTY.	DESCRIPTION
1	18007-120	2	BLOCK, BEARING
2	18011-103	2	PLATE, NUT
3	18011-135	1	PLATE, MOTOR MTG, PUSHER SERVO
4	18007-152	1	BLOCK, TENSIONER MTG @ MOTOR
5	18007-153	1	BLOCK, TENSIONER MTG @ PUSHER
6	99003-007	2	BEARING, 1/2 X 1-1/8 SEALED W/ S.R.
7	18006-079	1	PULLEY, TIMING, 22-5GT-15, 3/4"B
8	18006-080	1	PULLEY, TIMING, 22-5GT-15, 1/2"B, W/ 1/8 KEYWAY
9	18006-081	1	PULLEY, TIMING, 27-5GT-15, 1/2"B, W/ 1/8 KEYWAY
10	18006-082	1	PULLEY, TIMING, 20-5GT-15, 14MM B, W/ 5MM KY
11	98013-078	1	MOTOR, SERVO, 400W
12	18004-089	1	SHAFT, PUSHER DRIVE
13	99003-032	2	WASHER, NYLON, 1/2 X 1/32
14	99017-004	1	COLLAR, 1/2 SHAFT
15	99019-007	2	ROLLER ASSY, SPRING LOADED TENSIONER
16 *	99000-318	1	BELT, TIMING, 650-5GT-15
17 *	99000-317	1	BELT, TIMING, 500-5GT-15
18		4	SCREW, SKT HEAD, #10-24 X 3/4
19		4	SCREW, SLT HEAD, #10-24 X 1/2
20		6	SCREW, SKT HEAD, #10-24 X 3/8
21		1	BOLT, HEX HEAD, 3/8-16 X 1-1/8
22		2	NUT, HEX, 5/8-11
23		1	SCREW, SKT HEAD, 3/8-16 X 7/8
24		4	SCREW, SKT HEAD, #10-24 X 5/8
25	18020-102	1	ASSEMBLY, ECCENTRIC IDLER (W/ FLAT PULLEY)
	18004-050	1	SHAFT, ECCENTRIC IDLER, 3/8 X 3-1/4
	10006-012	1	PULLEY, FLAT IDLER, 15/16 OD X 1" W
	99003-008	2	BEARING, 3/8 X 7/8 SELAED
	99022-003	2	SNAP RING, 3/8

For FlowMaster inserter manufactured between 2003 and 2005
16* 99000-146, Belt Timing 260XL037 and 17* 99000-145, Belt Timing 192XL037

PITNEY BOWES

Sure-Feed Engineering

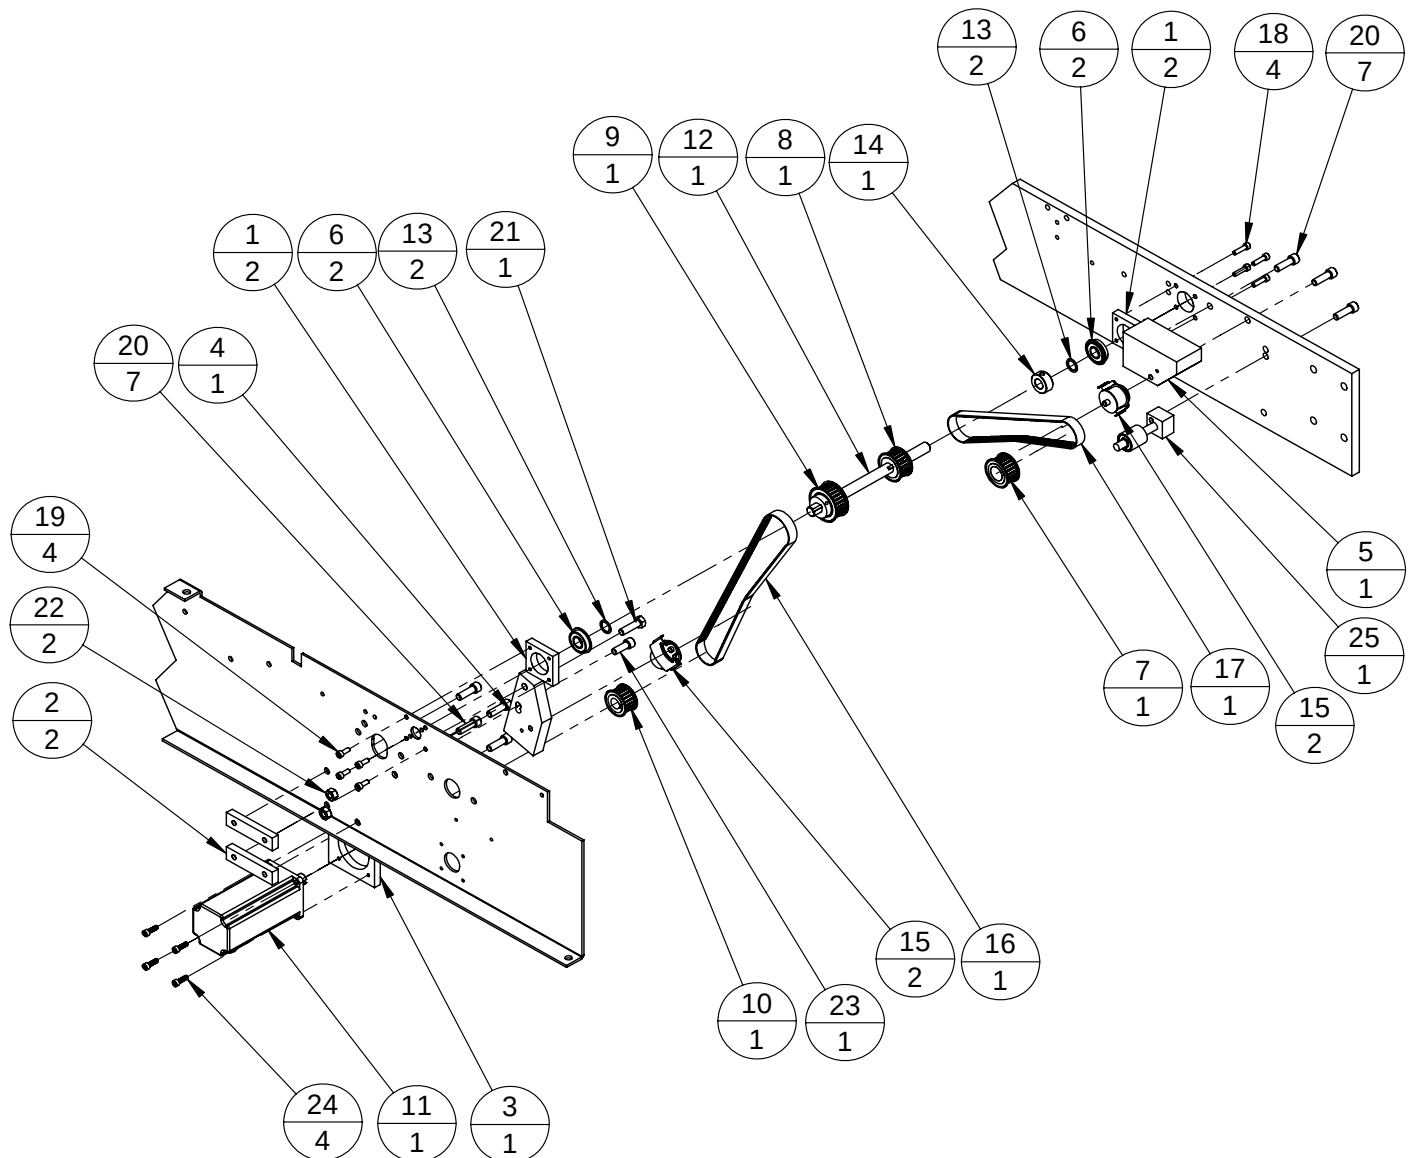


COLLATOR – FEEDERS / PUSHER (Fig. 2-12)
PUSHER DRAG STRAP ASSEMBLY (18020-210)

ITEM	PART NO.	QTY.	DESCRIPTION
1	18011-100	1	PLATE, FILLER
2	18008-030	1	BAR, DRAG STRAP MTG.
3	18007-060	1	BLOCK, DRAG STRAP MTG.
4	18009-016	5	PLATE, SPRING STEEL CLAMP
5	18014-011	5	DRAG STRAP, PUSHER
6	-	1	BOLT, SKT HEAD, 3/16-18 X 1
7	-	1	BOLR, SKT HEAD, 1/4-20 X 5/8
8	-	10	SCREW, SKT HEAD, #10-24 X 1/2

PITNEY BOWES

Sure-Feed Engineering

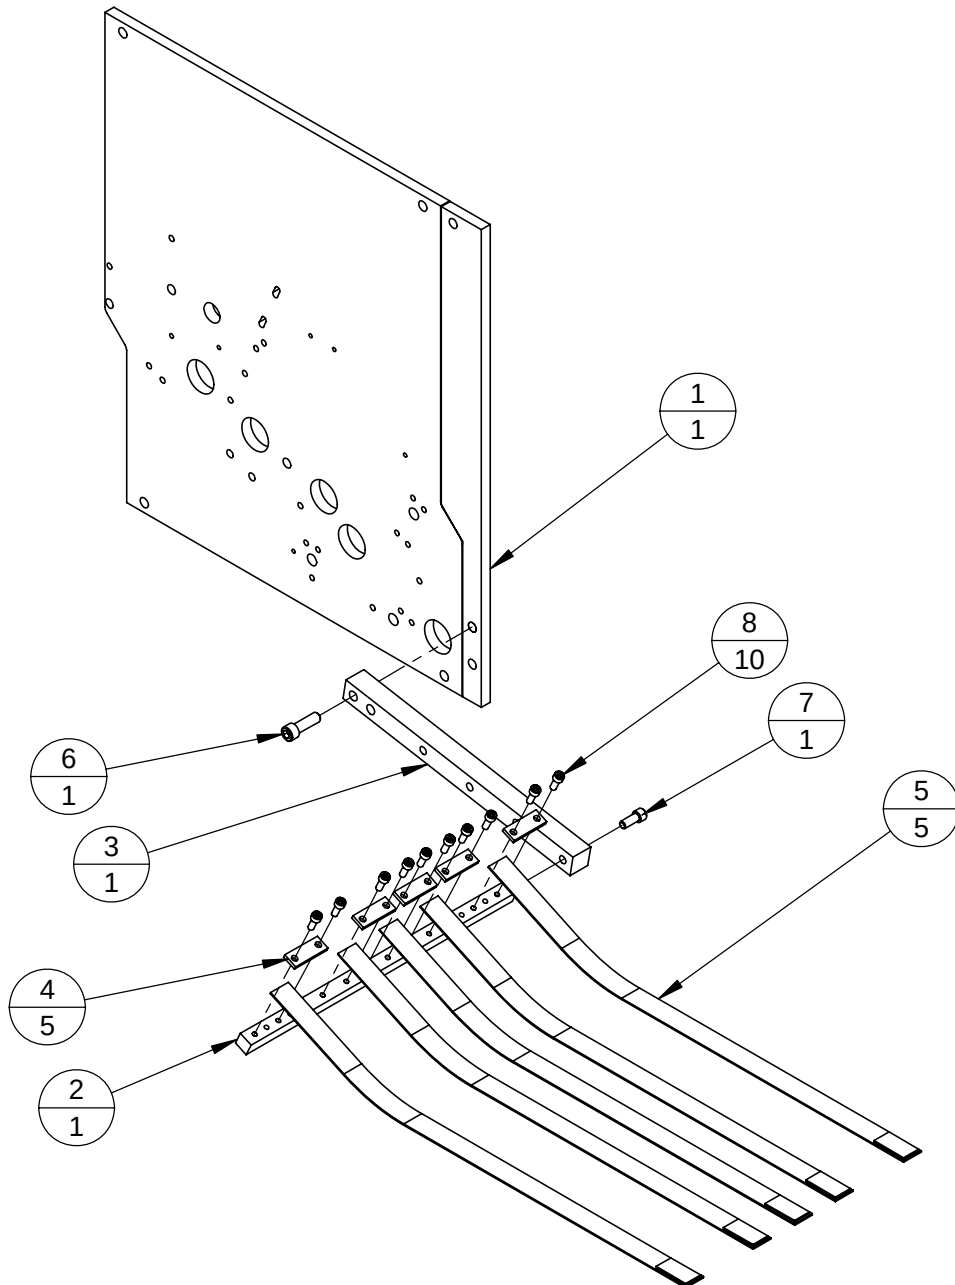


**COLLATOR – CONVEYOR ASSEMBLY (Fig. 2-13)
 (18020-374)**

ITEM	PART NO.	QTY.	DESCRIPTION
1	SEE FIG. 2-14	1	ASSEMBLY, SERVO MOTOR
2	SEE FIG. 2-15	1	ASSEMBLY, DRIVE SHAFTS
3	SEE FIG. 2-16	1	ASSEMBLY, CONVEYOR BELT TRACK
4	18000-006	1	SIDEFRAME, LH, CONVEYOR
5	18000-005	1	SIDEFRAME, RH, CONVEYOR
6		4	BOLT, SKT HEAD, 3/8-16 X 5/8
7		24	BOLT, SKT HEAD, 1/4-20 X 1/2

PITNEY BOWES


Sure-Feed Engineering

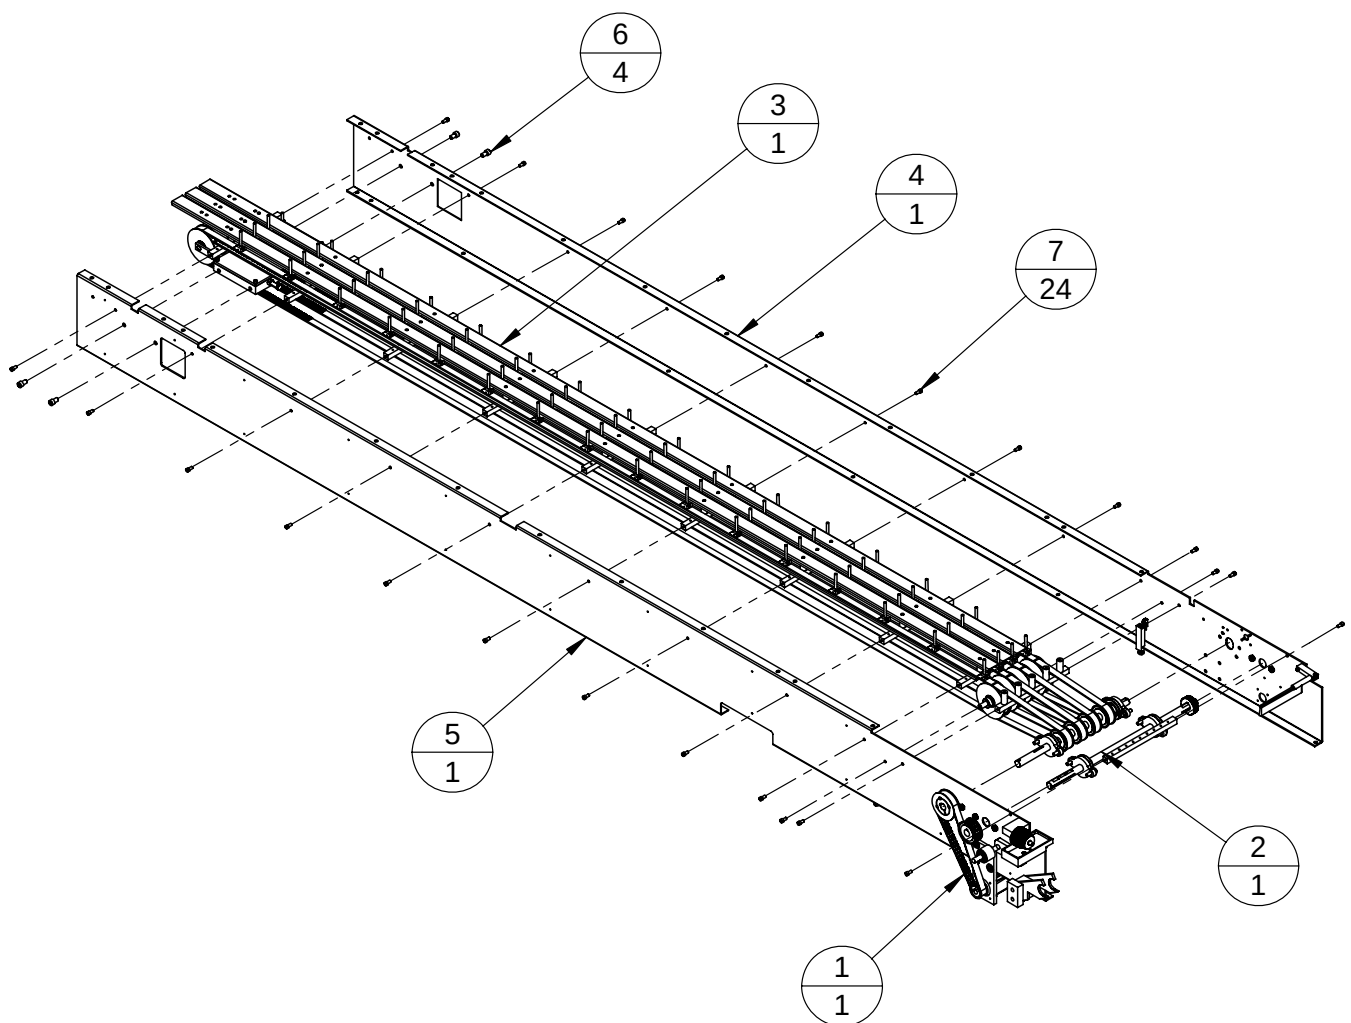

COLLATOR – CONVEYOR (Fig. 2-14)
SERVO MOTOR ASSEMBLY

ITEM	PART NO.	QTY.	DESCRIPTION
1	SEE FIG. 2-17	1	ASSEMBLY, TENSIONER (18020-098)
2	SEE FIG. 2-17	1	ASSEMBLY, ROLLER BRUSH (18020-100)
3	18011-112	1	PLATE, SERVO MOTOR MTG, 16K
4	18011-103	2	NUT PLATE, SERVO MTG, 16K
5	18011-025	1	NUT PLATE, TENSIONER
6	18007-050	1	BLOCK, PULLEY GUIDE YOKE MTG.
7	18012-012	1	SPACER, PULLEY GUIDE YOKE
8	18007-070	2	BLOCK, PULLEY GUIDE YOKE
9	18019-004	1	DRIP PAN
10	98013-078	1	MOTOR, SERVO, 400W
11	99002-043	1	PULLEY, TIMING, TL24L075 (1210)
12	18006-025	1	PULLEY, TIMING, 19L075, 3/4B W/ KEYWAY
13	18006-058	1	PULLEY, TIMING, 12L075, 14MM BORE
14	99017-016	1	BUSHING, TAPERLOCK, 1210, 2/4 BORE
15	99000-147	1	BELT, TIMING, 255L075 (STEEL REINFORCED)
16	99028-008	1	PLUG, FLUSH, 1/8 NPT
17	99028-090	1	FITTING, MALE CONNECTOR, 1/8 NPT X 3/8 HOSE
18	99033-011	1	SHOULDER BOLT, 3/8 X 3/4
19		1	BOLT, SKT HEAD, 5/16-18 X 1
20		2	BOLT, SKT HEAD, 1/4-20 X 1/2
21		2	SCREW, SKT HEAD, #10-24 X 1/2
22		4	BOLT, BUTTON HEAD, 5/16-18 X 3/4
23		4	SCREW, SKT HEAD, #10-24 X 1/2
24		5	WASHER, FLAT, 5/16

Sure-Feed Engineering

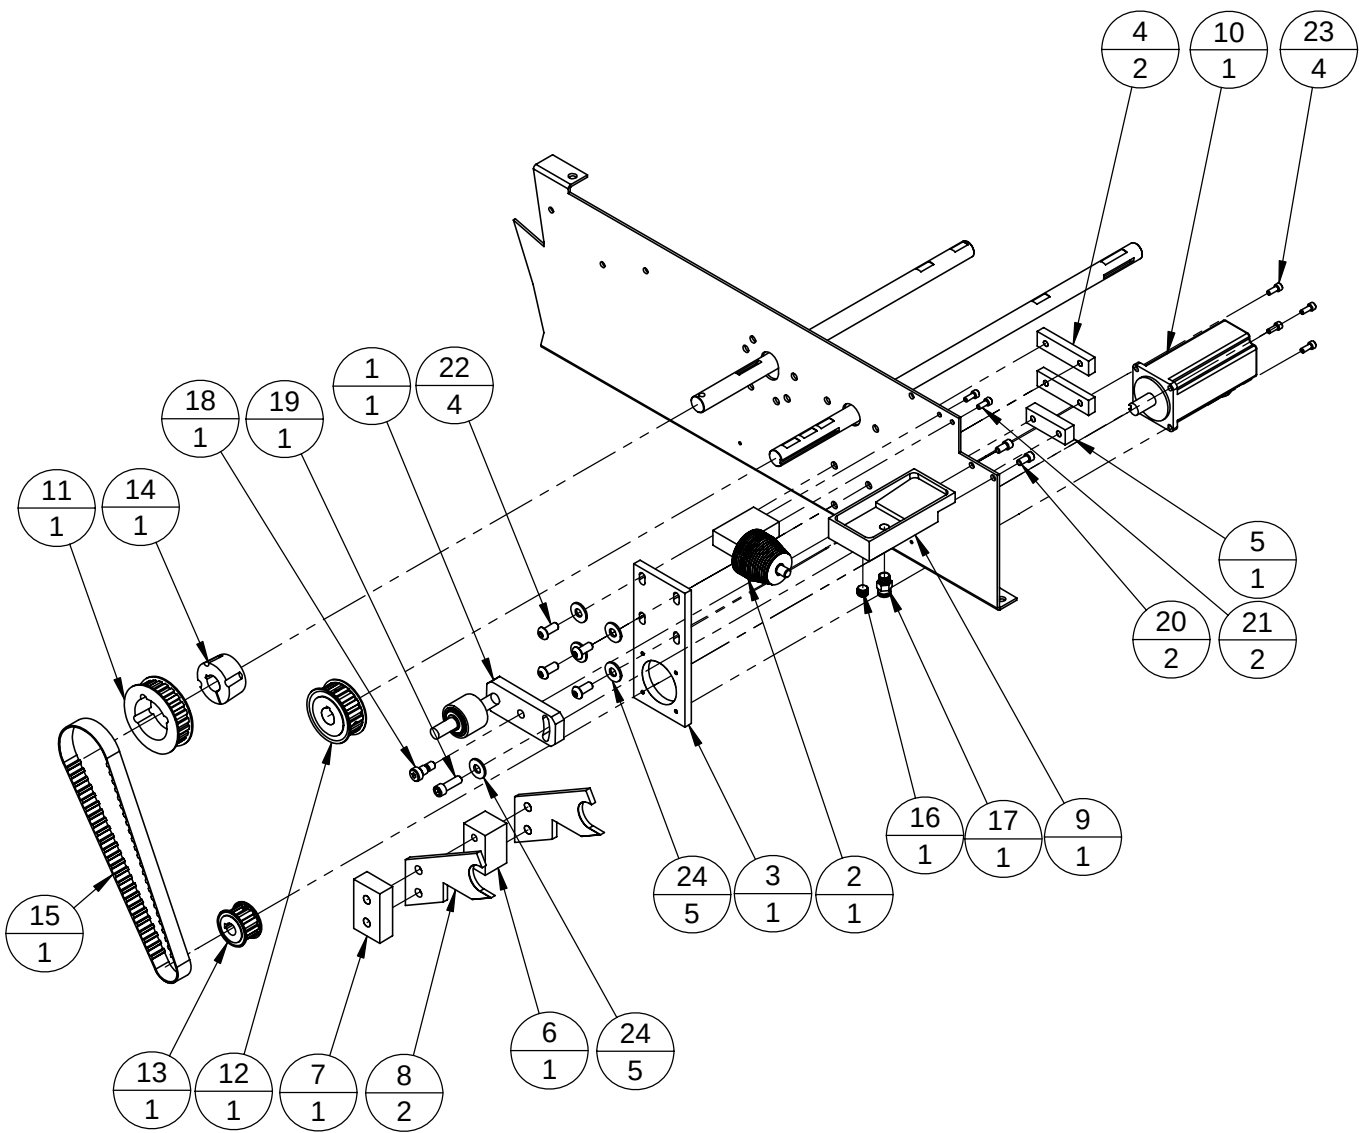


**COLLATOR – CONVEYOR (Fig. 2-15)
 DRIVE SHAFT ASSEMBLIES**

ITEM	PART NO.	QTY.	DESCRIPTION
1	SEE FIG. 2-17	1	ASSEMBLY, BRUSH STRIP (18020-081)
2	18003-009	2	CROSS BAR, 10"
3	18009-072	2	BRACKET, HOMING SENSOR MTG.
4	18006-039	4	PULLEY, COLLATOR DRIVE, 19L075 (3/4 BORE)
5	99002-049	1	PULLEY, TIMING, 30XL037, 3/4 BORE
6	18004-048	1	SHAFT, COLLATOR DRIVE
7	18004-042	1	SHAFT, COLLATOR DRIVE (1 TO 1)
8	99003-019	4	BEARING, 2 BOLT FLG
9	99004-002	2	KNOB, #10 SCREW
10		8	BOLT, HEX HEAD, 5/16-18 X 7/8
11		1	SCREW, SKT HEAD, #10-24 X 7/8
12		4	BOLT, SKT HEAD, 1/4-20 X 1/2
13		2	SCREW, SKT HEAD, #10-24 X 5/8
14		8	NUT, HEX, 5/16-18
15	98009-029	1	SENSOR, MINI PHOTO THRU BEAM (BLACK CABLE)
16	98009-040	1	SENSOR, MINI PHOTO THRU BEAM (GREY CABLE)

PITNEY BOWES

Sure-Feed Engineering

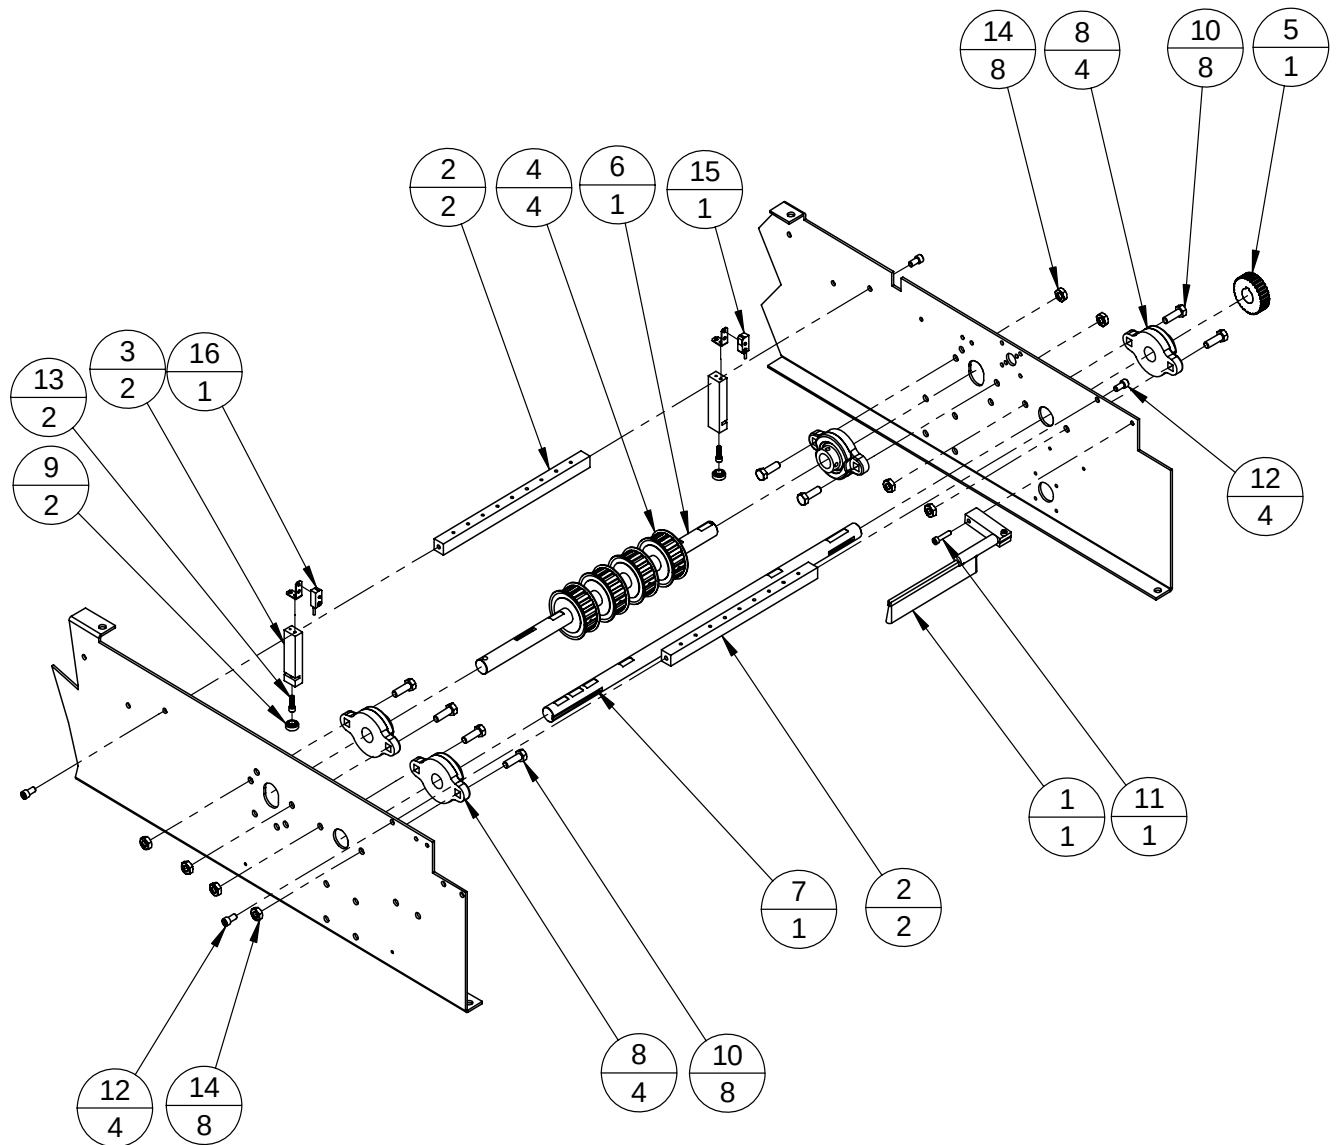


**COLLATOR – CONVEYOR (Fig. 2-16)
 CONVEYOR BELT TRACK ASSEMBLY**

ITEM	PART NO.	QTY.	DESCRIPTION
1	SEE FIG. 2-18	1	ASSEMBLY, FRONT IDLER PULLEY (18020-097)
2	SEE FIG. 2-18	1	ASSY, REAR IDLER PULLEY (18020-078)
3	18005-140	3	GUIDE, PAPER SLIDE, STEEL
4	18008-067	4	BAR, BELT SUPPORT
5	18012-001	32	STANDOFF, PAPER GUIDE
6	18003-009	10	CROSS BAR, 10"
7	18014-027	4	BELT, COLLATOR (10X13 XLE)
8		4	BOLT, HEX, 3/8-16 X 3
9		4	NUT, HEX, 3/8-16
10		32	SCREW, SKT HEAD, #6-32 X 1
11		27	SCREW, FLAT HEAD, #6-32 X 1/2

PITNEY BOWES

Sure-Feed Engineering

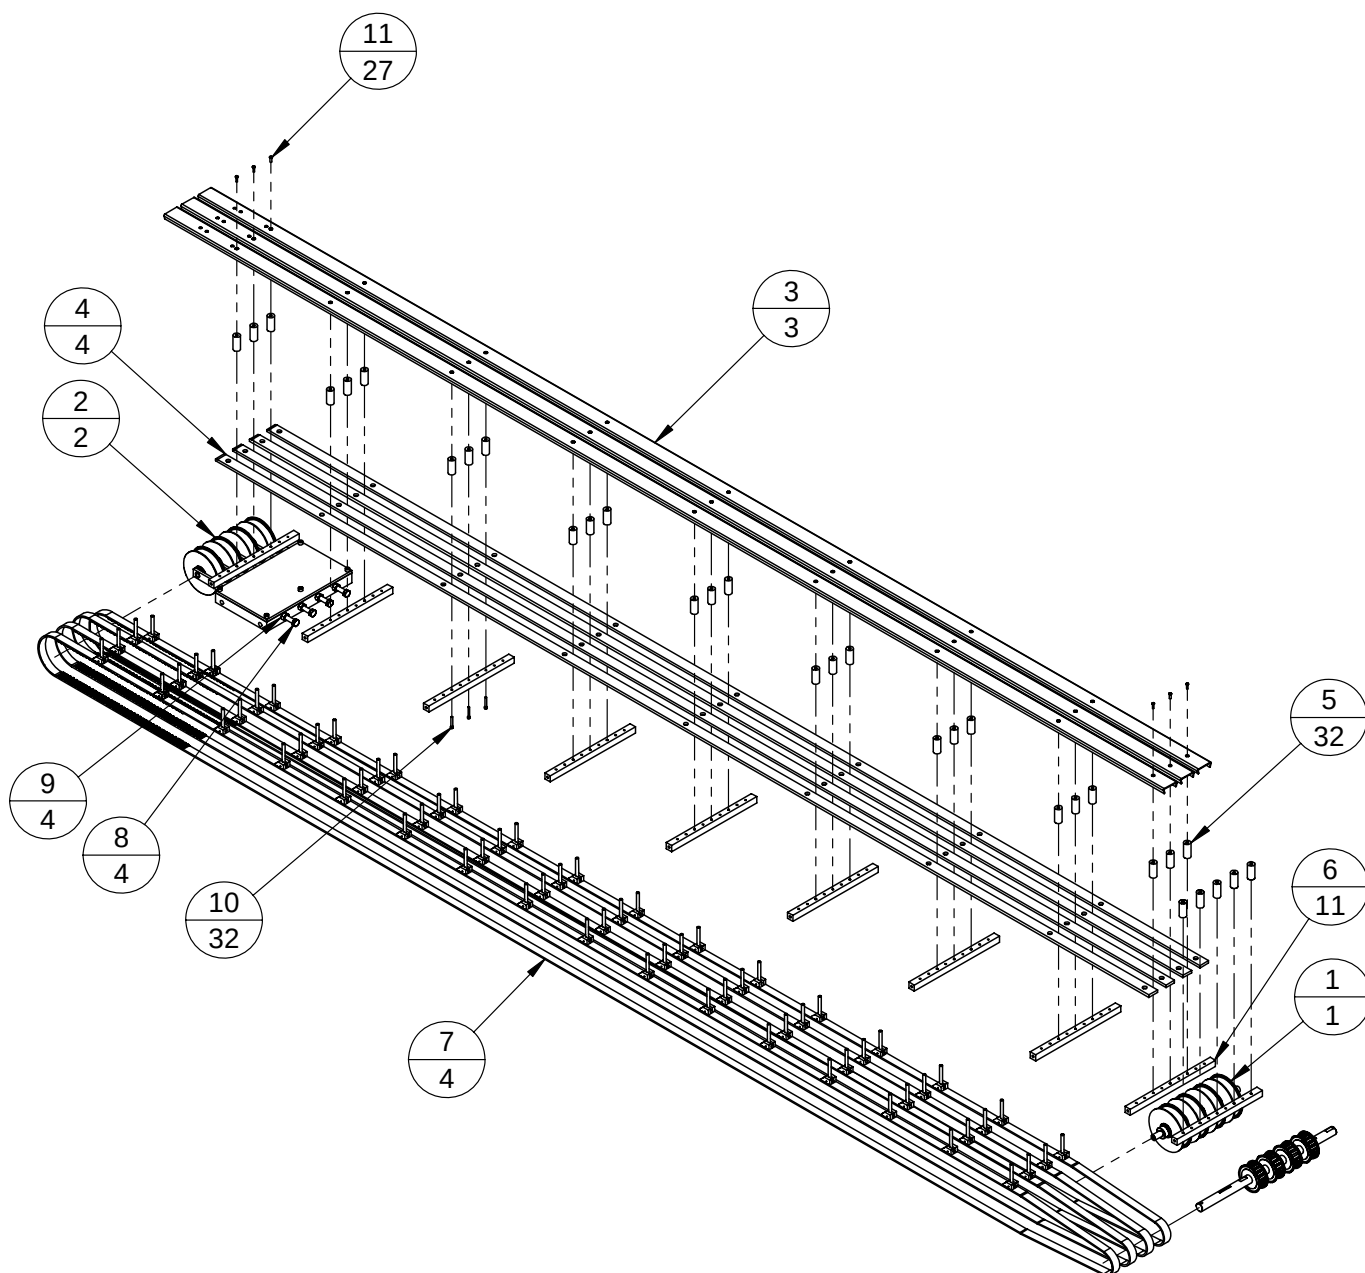


COLLATOR – CONVEYOR (Fig. 2-17)
TENSIONER, ROLLER BRUSH & BRUSH STRIP ASSEMBLIES


ITEM	PART NO.	QTY.	DESCRIPTION
	18020-098	1	ASSEMBLY, TENSIONER
1	18007-072	1	BLOCK, TENSIONER
2	18004-051	1	SHAFT, STUB IDLER, 4-1/2"
3	18006-012	1	ROLLER, FLAT IDLER, 1-1/2 OD X 1-1/8 ID
4	99003-007	2	BEARING, 1/2 X 1-1/8, SEALED W/ S.R
5	99022-004	2	SNAP RING, 1/2
	18020-081	1	ASSEMBLY, BRUSH STRIP
6	18007-080	1	BLOCK, LOWER BRUSH MTG.
7	18009-023	1	BRACKET, BRUSH CLAMP
8	99023-001	1	BRUSH STRIP, 6" X 1" X .003
9		1	SCREW, SKT HEAD, #8-32 X 1/2
10		2	SET SCREW, #6-32 X 1/4
	18020-100	1	ASSEMBLY, ROLLER BRUSH
11	18007-071	1	BLOCK, ROLLER BRUSH MTG.
12	18006-019	1	ROLLER, BRUSH
13	18004-032	1	SHAFT, ROLLER BRUSH MTG.
14	99003-017	4	WASHER, NYLON, 3/8 X 1/16
15	99022-007	1	SNAP RING, 3/8 SST

PITNEY BOWES


Sure-Feed Engineering

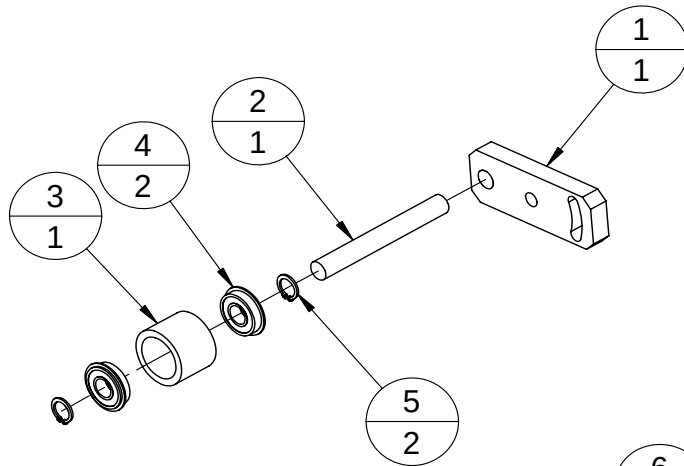

ASSY# 18020-098

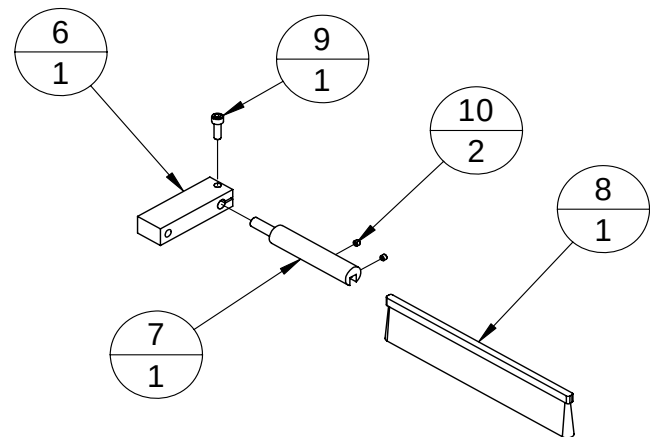

ASSY# 18020-081

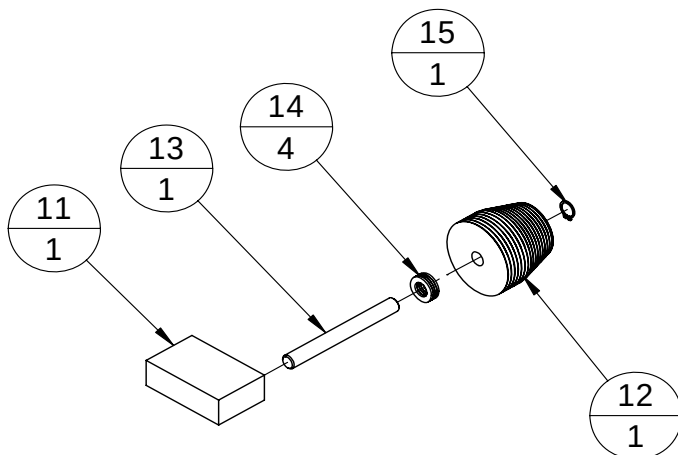


ASSY# 18020-100

**COLLATOR – CONVEYOR (Fig. 2-18)
 IDLER SHAFT ASSEMBLIES (FRONT, REAR)**


ITEM	PART NO.	QTY.	DESCRIPTION
	18020-097	1	ASSEMBLY, FRONT IDLER
1	18004-013	1	SHAFT, IDLER
2	18006-005	4	PULLEY, IDLER
3	99003-007	8	BEARING, 1/2 X 1-1/8 SEALED W/ S.R.
4	99003-038	3	BUSHING, SLEEVE, 1/2 X 5/8 X 3/4
5	99003-018	2	WASHER, NYLON, 1/2 X 1/16
6	99017-004	2	COLLAR, 1/2 SHAFT
	18020-078	1	ASSEMBLY, REAR IDLER
7	18007-014	1	BLOCK, IDLER ADJ
8	18011-006	1	PLATE, IDLER BLOCK
9	18008-008	1	BAR, IDLER MTG.
10	18004-002	1	SHAFT, IDLER
11	18006-005	1	PULLEY, IDLER
12	99003-007	2	BEARING, 1/2 X 1-1/8 SEALED W/ S.R.
13	99036-004	2	SHIM, 1/2 X 3/4 X .020
14	-	5	BOLT, SKT HEAD, 1/4-20 X 1/2

PITNEY BOWES

Sure-Feed Engineering

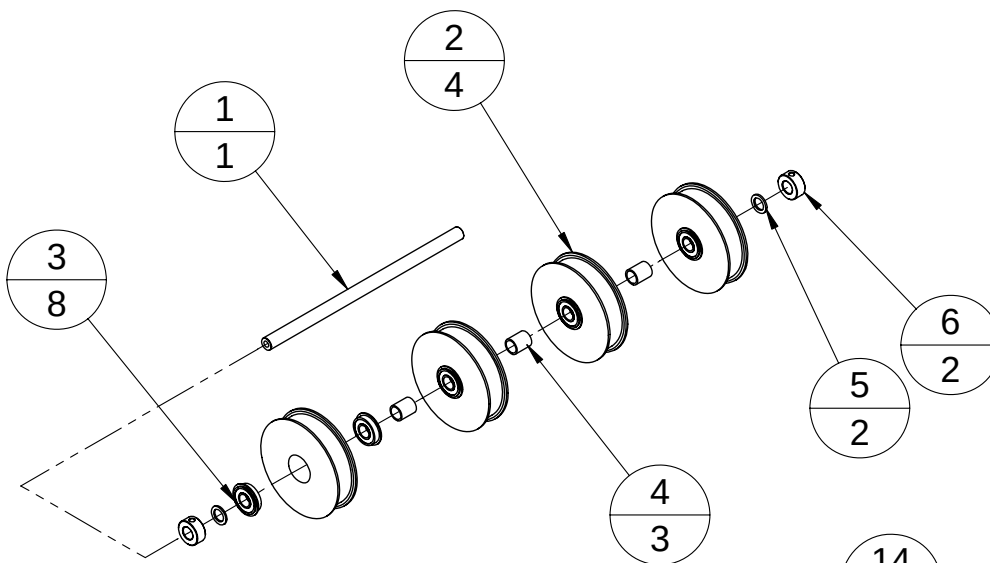

ASSY# 18020-097

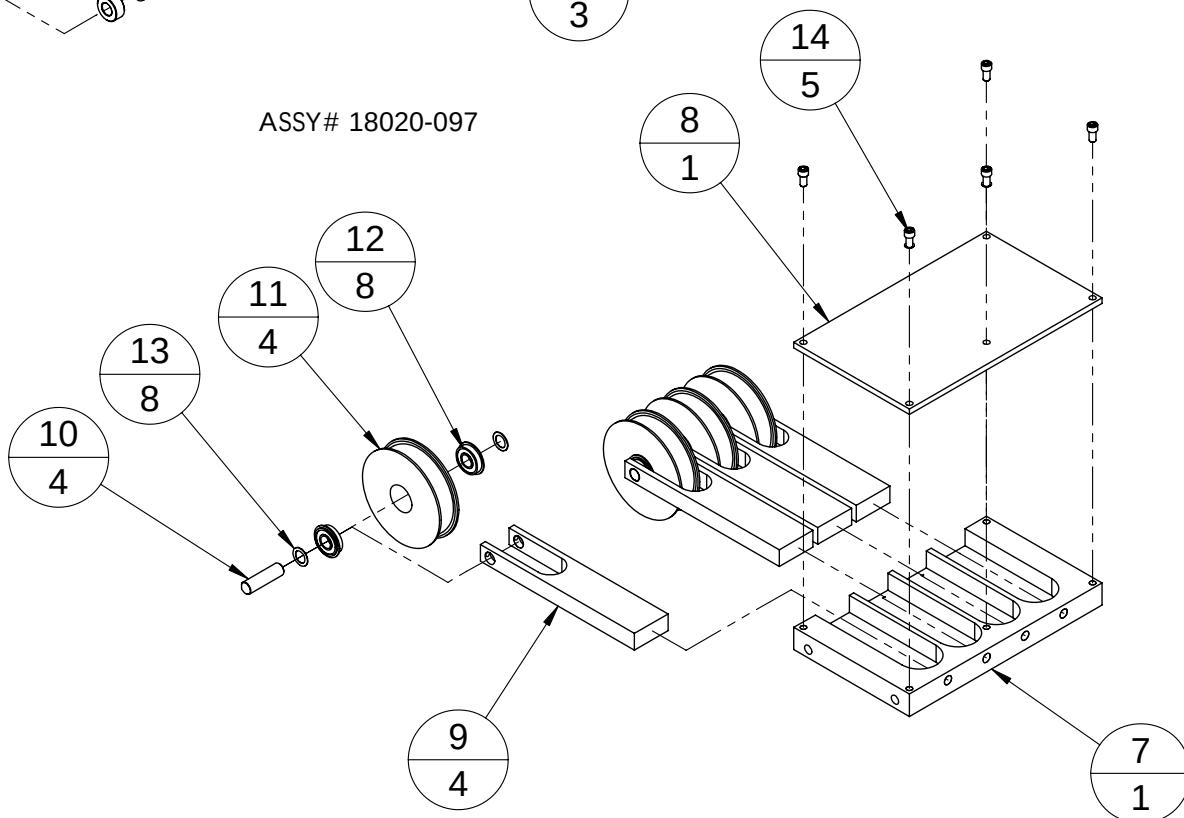


ASSY#18020-078

COLLATOR – COVERS (Fig. 2-19)
(18020-372)

ITEM	PART NO.	QTY.	DESCRIPTION
1	18007-043	2	BLOCK, END COVER MTG.
2	18013-003	1	COVER, REAR COLLATOR
3	18012-021	2	STANDOFF, SIDE GUIDE ADJ.
4	99004-019	2	KNOB, #10-24 MALE
5	18013-026	1	COVER, REAR TRACK
6	18013-159	6	COVER, REAR, FEEDER DRIVE
7	18013-160	1	COVER, SIDE, UPSTREAM, FEEDER DRIVE
8	18013-161	1	COVER, SIDE, DOWNSTREAM, FEEDER DRIVE
9	18013-163	1	COVER, TOP, FEEDER DRIVE (6-ST)
10	18013-180	1	COVER, REAR FEEDER (10X13)
11	18009-077	1	BRACKET, TRACK JAM SENSOR
12	-	52	SCREW, BUTTON HEAD, #10-24 X 1/2
13	98000-036	1	SWITCH, REED
14	98009-002	1	SENSOR, SENDER, THRU BEAM

PITNEY BOWES

Sure-Feed Engineering

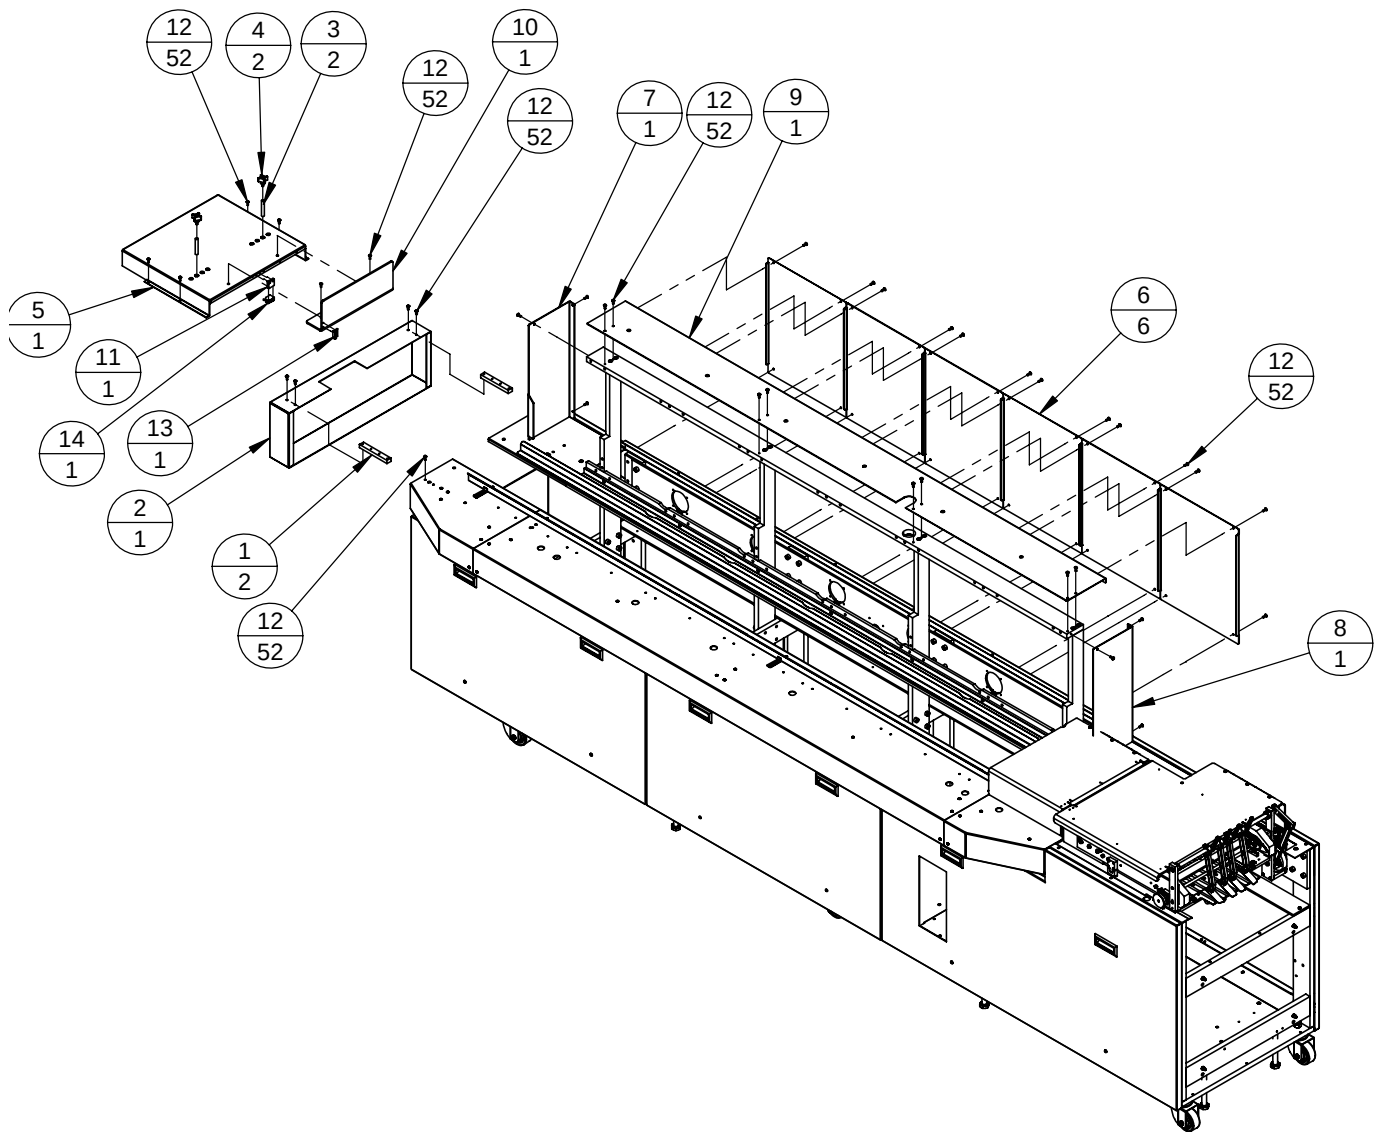


COLLATOR – COVERS (Fig. 2-20)
(18020-372)

ITEM	PART NO.	QTY.	DESCRIPTION
1	18013-187	1	COVER, LOWER SIDE, RH FRONT
2	18013-044	2	COVER, LOWER SIDE
3	18013-230	1	COVER, LOWER SIDE, POWER ENTRY
4	18013-231	2	COVER, LOWER SIDE REAR, JOG DECK
5	18013-071	1	COVER, FLOOR - PNEUMATIC
6	18013-166	1	COVER, FLOOR, P.E. MTG.
7	18013-070	1	COVER, FLOOR, FEEDER MOTOR
8	18013-167	1	COVER, FLOOR, ELECTRICAL ENCL MTG.
9	99039-079	12	STANDOFF, HEX, #10-32
10	18013-066	1	COVER, REAR COLLATOR (10X13)
11	18002-006	1	MOUNT, PUSHER COVER
12	18002-008	1	MOUNT, REAR PUSHER COVER
13	18013-051	1	COVER, PUSHER
14	18013-101	1	COVER, REAR PUSHER
15	18013-104	2	HINGE, CONTINUOUS, 9" LONG
16	18009-044	1	BRACKET, POWER ENTRY MODULE MTG.
17	18008-045	1	BRACKET, INVERTER ENCL MTG.
18	-	12	SCREW, BUTTON HEAD, #10-24 X 1/2
19	-	12	SCREW, BUTTON HEAD, #10-32 X 1/2
20	98000-036	1	REED SWITCH
21	98020-024	1	MAGNET, REED SWITCH
22	18007-042	12	BLOCK, SIDE COVER MTG.
23	99012-002	12	HANDLE, POCKET PULL
24	-	6	SCREW, SKT HEAD, #10-24 X 1/2
25	18009-112	6	BRACKET, COVER SUPPORT

PITNEY BOWES

Sure-Feed Engineering

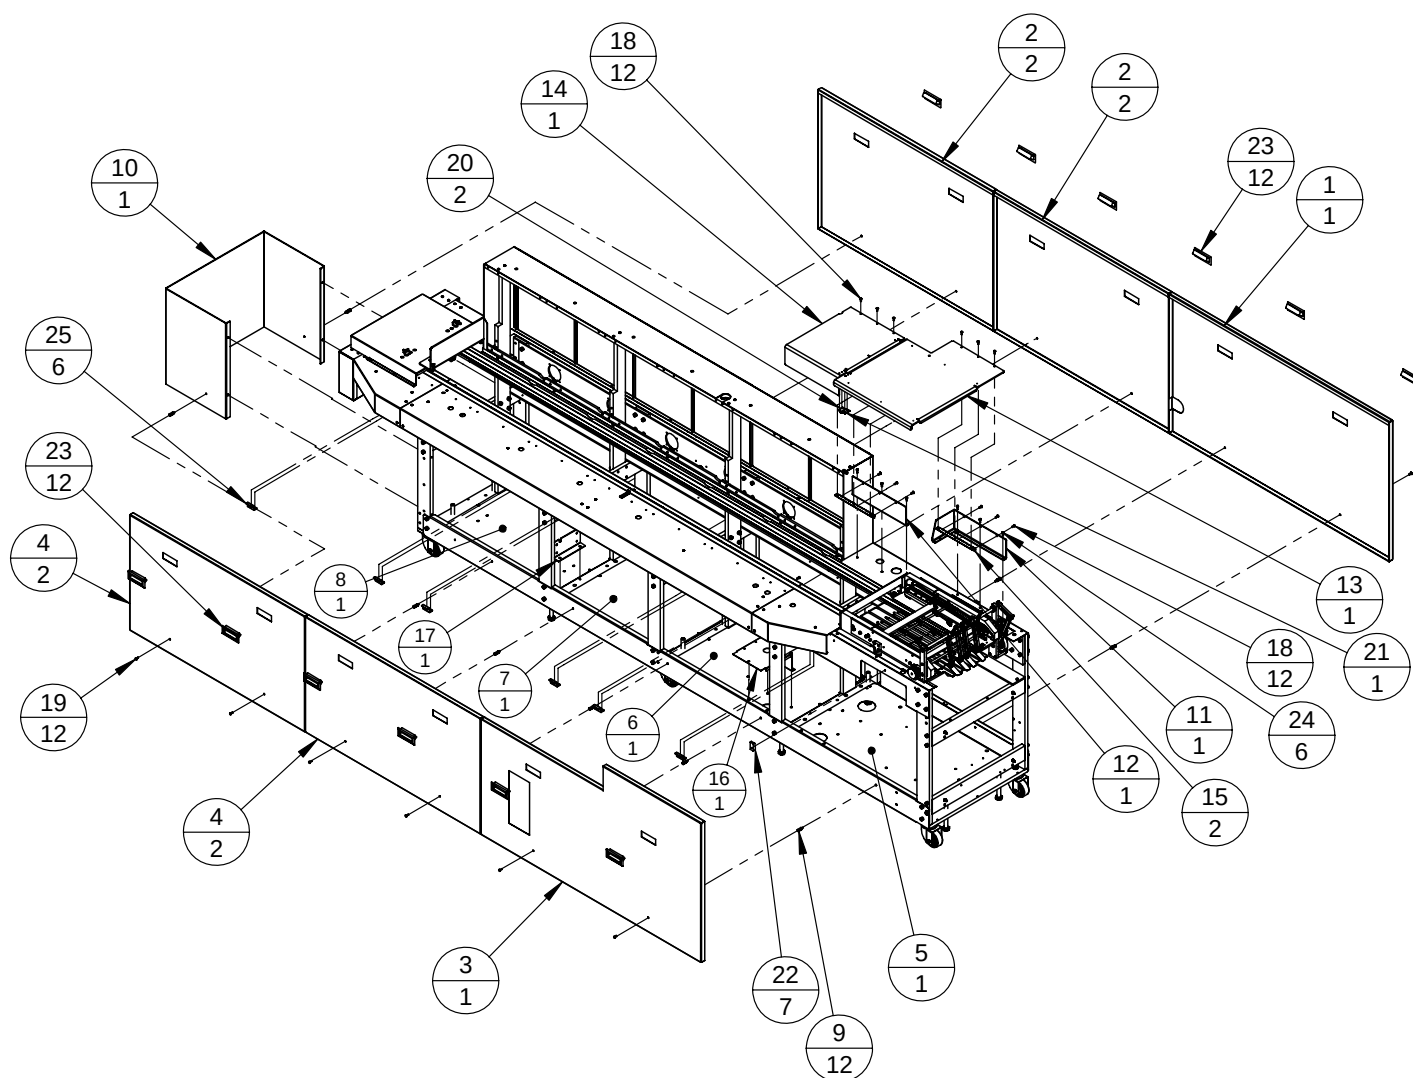


COLLATOR – FRONT LEXAN FEEDER COVERS (Fig. 2-21)

ITEM	PART NO.	QTY.	DESCRIPTION
1	18013-121	3	HINGE, SHORT, 5"
2	18009-052	13	BRACKET, MAGNETIC LATCH
3	98020-024	7	MAGNET, REED SWITCH
4	18013-120	5	HINGE, STD, 14"
5	18013-150	2	COVER, FRONT, FEEDER ENCLOSURE
6	18013-151	1	COVER, FRONT, UPSTREAM, FEEDER ENCLOSURE
7	18013-225	3	COVER, FRONT, ROTARY FEEDER ENCLOSURE
8	18013-149	1	COVER, FRONT, DOWNSTREAM, FEEDER ENCLOSURE
9	-	26	SCREW, BUTTON HEAD, #10-24 X 3/8
10	-	14	SCREW, BUTTON HEAD, #4-40 X 5/16

PITNEY BOWES

Sure-Feed Engineering

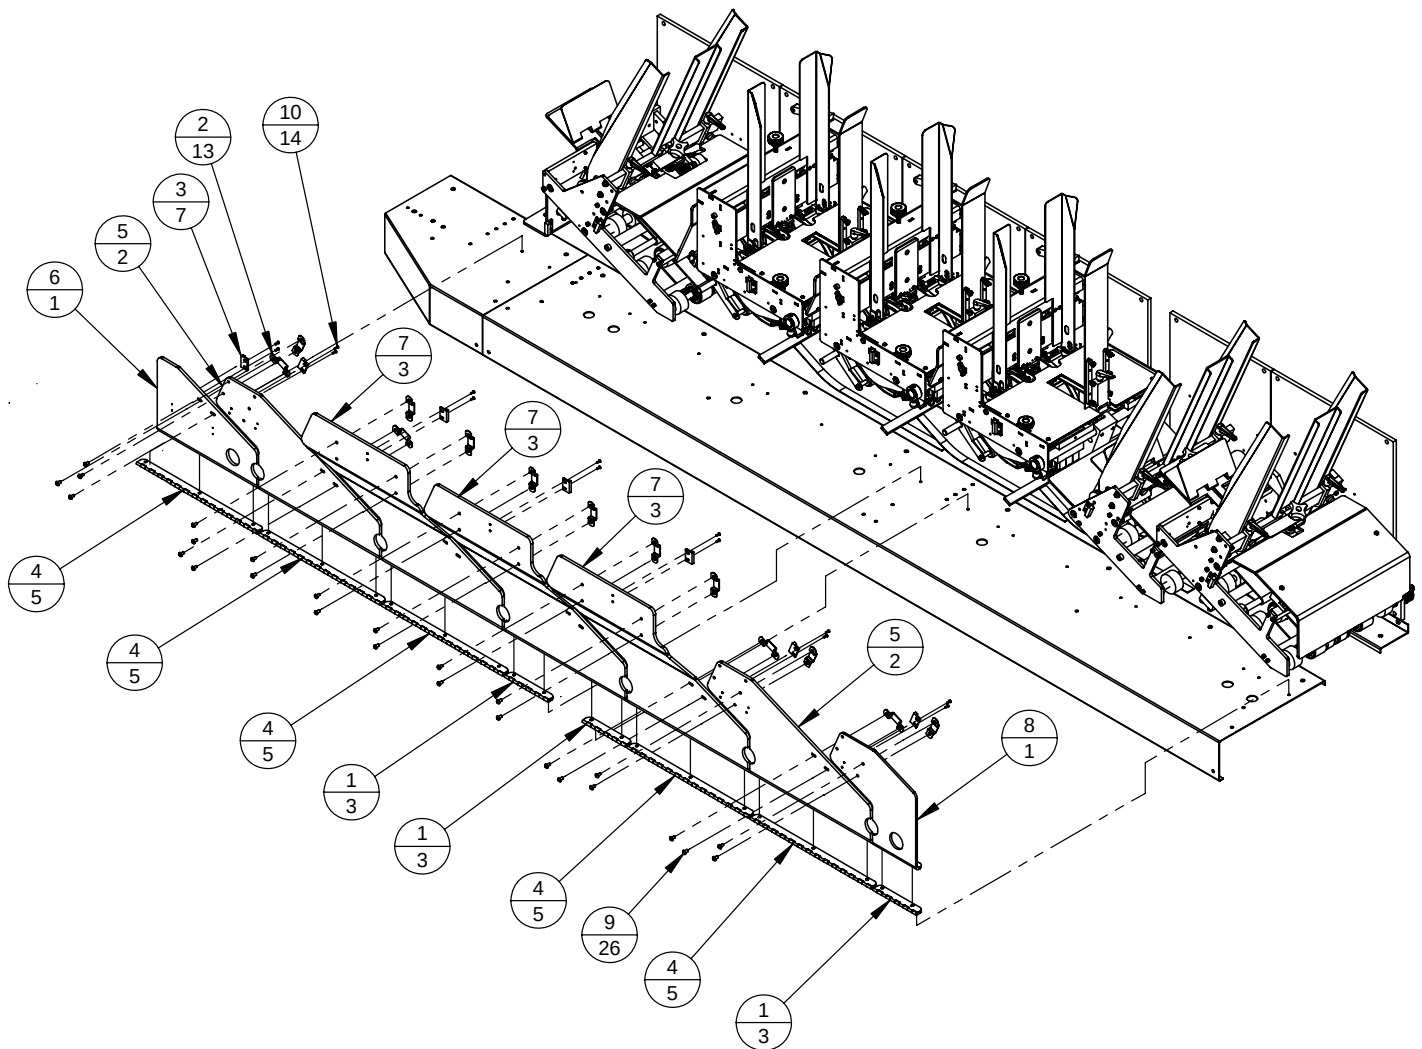


COLLATOR – LEXAN FEEDER COVERS (Fig. 2-22)
10X13 @ POSITION #1 & 10X13 @ ROTARY

ITEM	PART NO.	QTY.	DESCRIPTION
1	18007-122	2	BLOCK, FEEDER COVER MTG (10X13)
2	18013-121	2	HINGE, SHORT, 5"
3	18009-052	1	BRACKET, MAGNETIC LATCH
4	98020-024	1	MAGNET, REED SWITCH
5	18013-226	1	COVER, REAR, ROTARY FEEDER
6	18013-228	1	COVER, TOP, 10X13 FRICTION FEEDER @ ROTARY
	18013-237	1	COVER, TOP, 10X13 THIN MAT'L FEEDER @ ROTARY
7	18013-180	1	COVER, REAR FEEDER (10X13)
8	98000-036	1	REED SWITCH
9	-	12	SCREW, BUTTON HEAD, #10-24 X 3/8
10	-	4	SCREW, BUTTON HEAD, #4-40 X 5/16
11	-	2	SCREW, SKT HEAD, #10-32 X 1/2
12	-	2	SCREW, BUTTON HEAD, #10-24 X 1/2
13	-	8	HEX NUT, #10-24

PITNEY BOWES

Sure-Feed Engineering

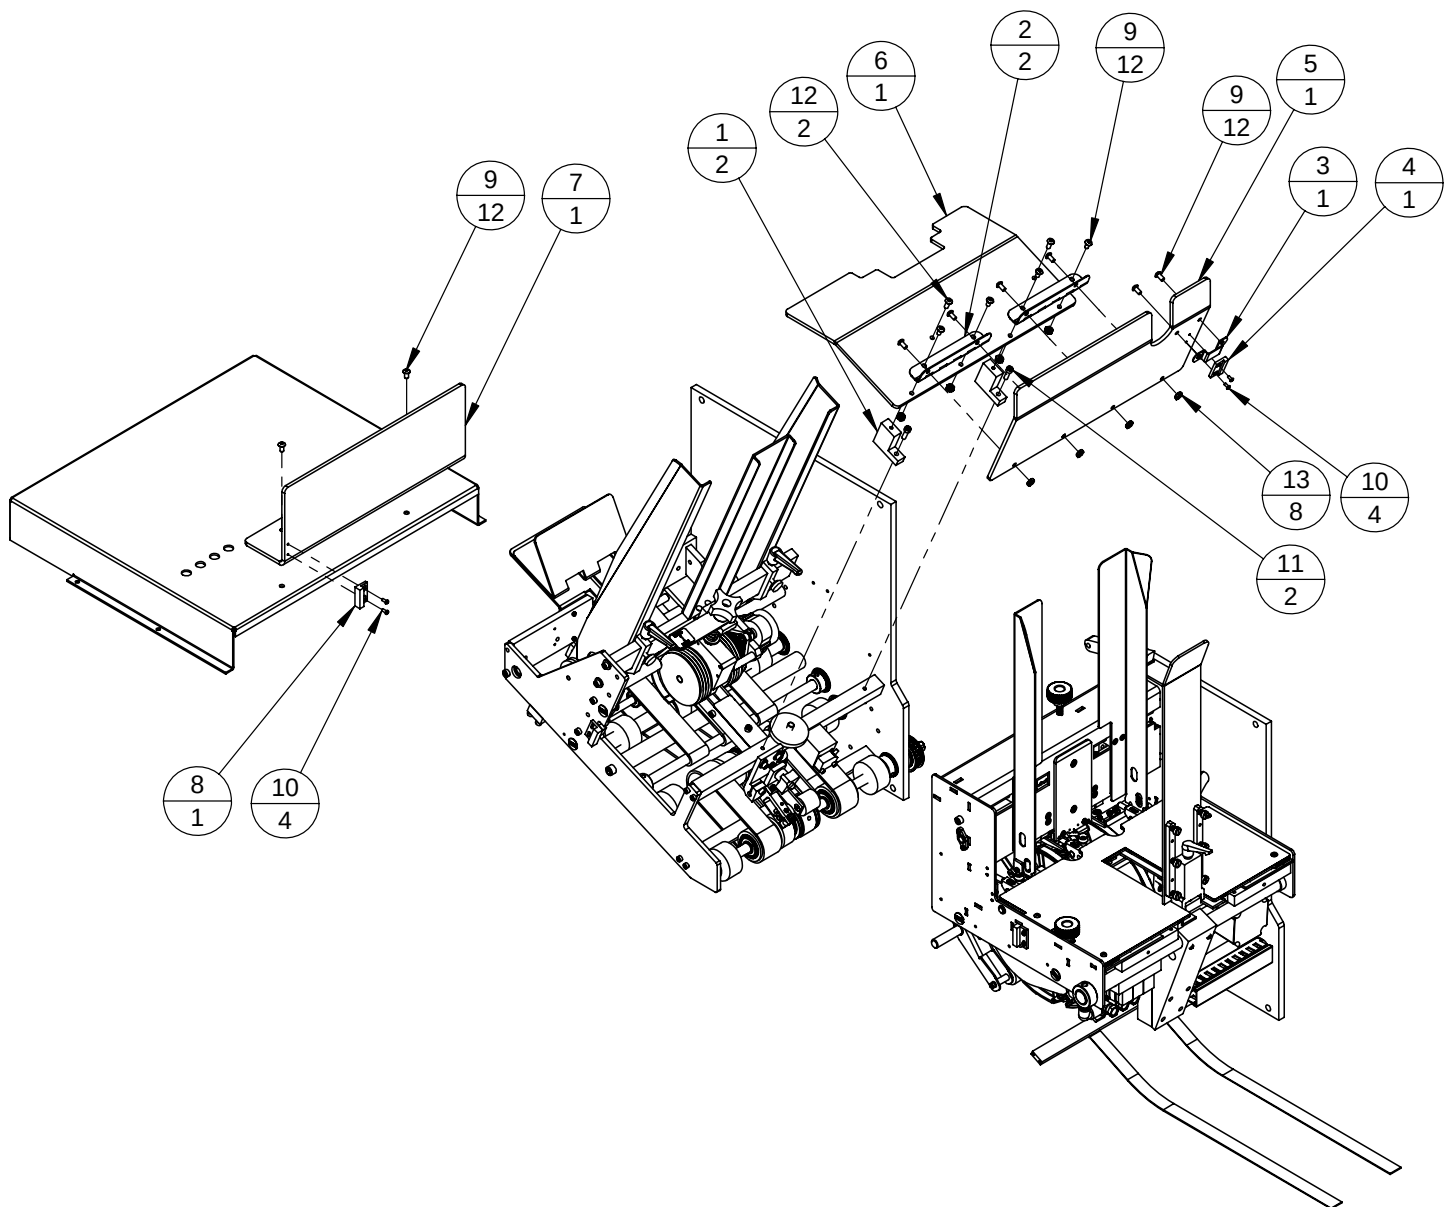


COLLATOR – LEXAN FEEDER COVERS (Fig. 2-23)
ROTARY @ POSITION #1 & BETWEEN ROTARYS

ITEM	PART NO.	QTY.	DESCRIPTION
1	18013-121	4	HINGE, SMALL, 5"
2	18013-233	1	COVER, BETWEEN ROTARYS
3	18013-229	1	COVER, REAR, ROTARY @ POSITION #6
4	18009-052	2	BRACKET, MAGNETIC CATCH
5	98020-024	2	MAGNET, REED SWITCH
6	-	18	SCREW, BUTTON HEAD, #10-24 X 3/8
7	-	4	SCREW, BUTTON HEAD, #4-40 X 5/16
8	-	8	HEX NUT, #10-24 (NOT SHOWN, @ ITEM #6)

PITNEY BOWES

Sure-Feed Engineering

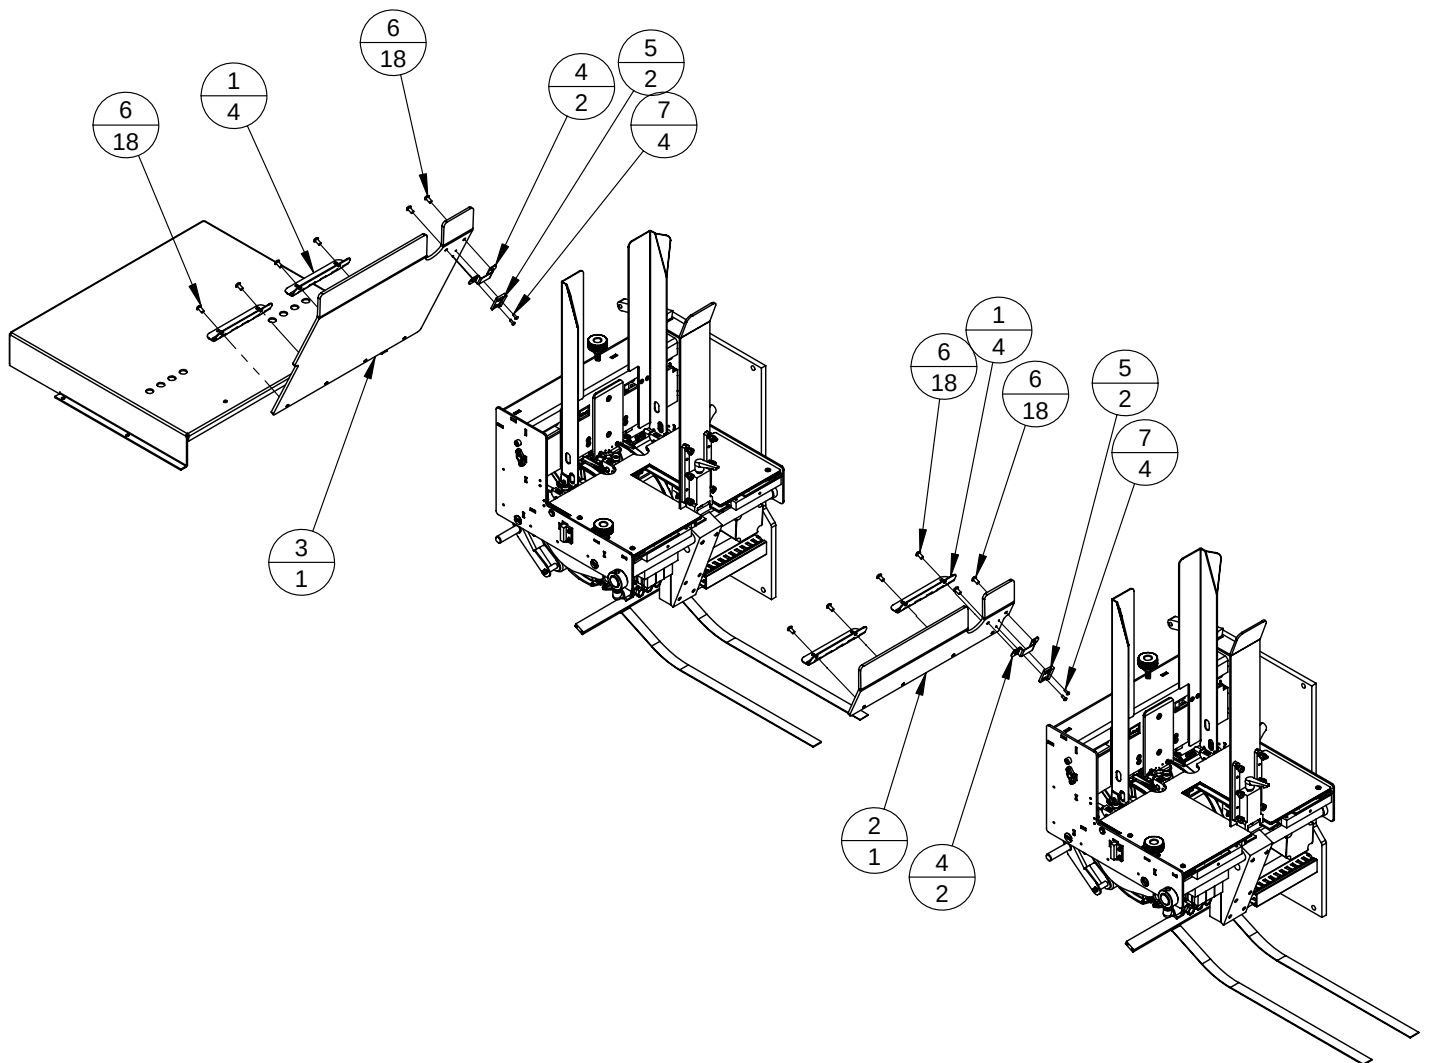


**COLLATOR – LEXAN FEEDER COVERS (Fig. 2-24)
 6X9 IN FRONT OF ROTARY, 10X13 IN POSITION #6**

ITEM	PART NO.	QTY.	DESCRIPTION
1	18013-239	1	COVER, TOP (DOWNSTREAM), 10X13 THIN MAT'L
	18013-157	1	COVER, TOP (DOWNSTRM), 10X13 FRICTION FEEDER
2	18007-122	2	BLOCK, FEEDER COVER MTG (10X13)
3	18013-238	1	COVER, TOP, 6X9 @ 10X13
4	18013-232	1	COVER, BETWEEN ROTARY AND 6X9
5	-	4	SCREW, BUTTON HEAD, #10-24 X 1/2
6	-	4	SCREW, SKT HEAD, #10-32 X 1/2

PITNEY BOWES

Sure-Feed Engineering

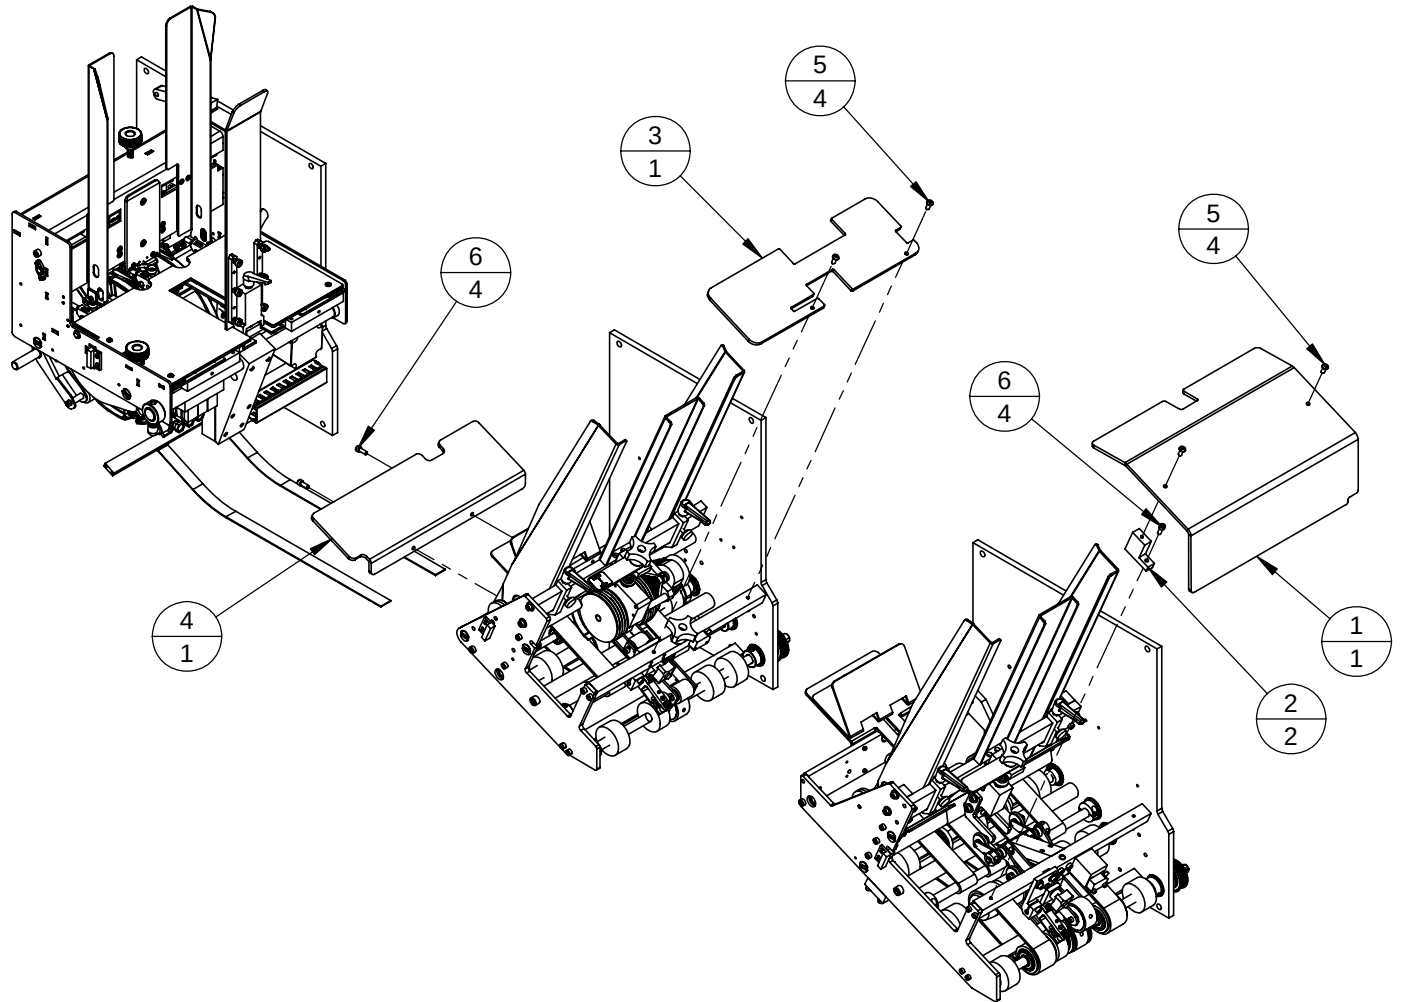


COLLATOR – LEXAN FEEDER COVERS (Fig. 2-25)
10X13 FRICTION AND THIN MAT'L FEEDERS

ITEM	PART NO.	QTY.	DESCRIPTION
1	18020-367	2	ASSEMBLY, FEEDER, 10X13 FRICTION
2	18020-376	1	ASSEMBLY, FEEDER, 10X13 THIN MAT'L
3	18013-158	2	COVER, TOP, 10X13 FRICTION FEEDER
4	18013-218	1	COVER, TOP, 10X13 THIN MAT'L FEEDER
5	18007-122	4	BLOCK, FEEDER COVER MTG (10X13)
6	-	4	SCREW, BUTTON HEAD, #10-24 X 1/2
7	-	4	SCREW, SKT HEAD, #10-32 X 1/2
8	-	3	SCREW, SKT HEAD, 1/4-20 X 1/2

PITNEY BOWES

Sure-Feed Engineering

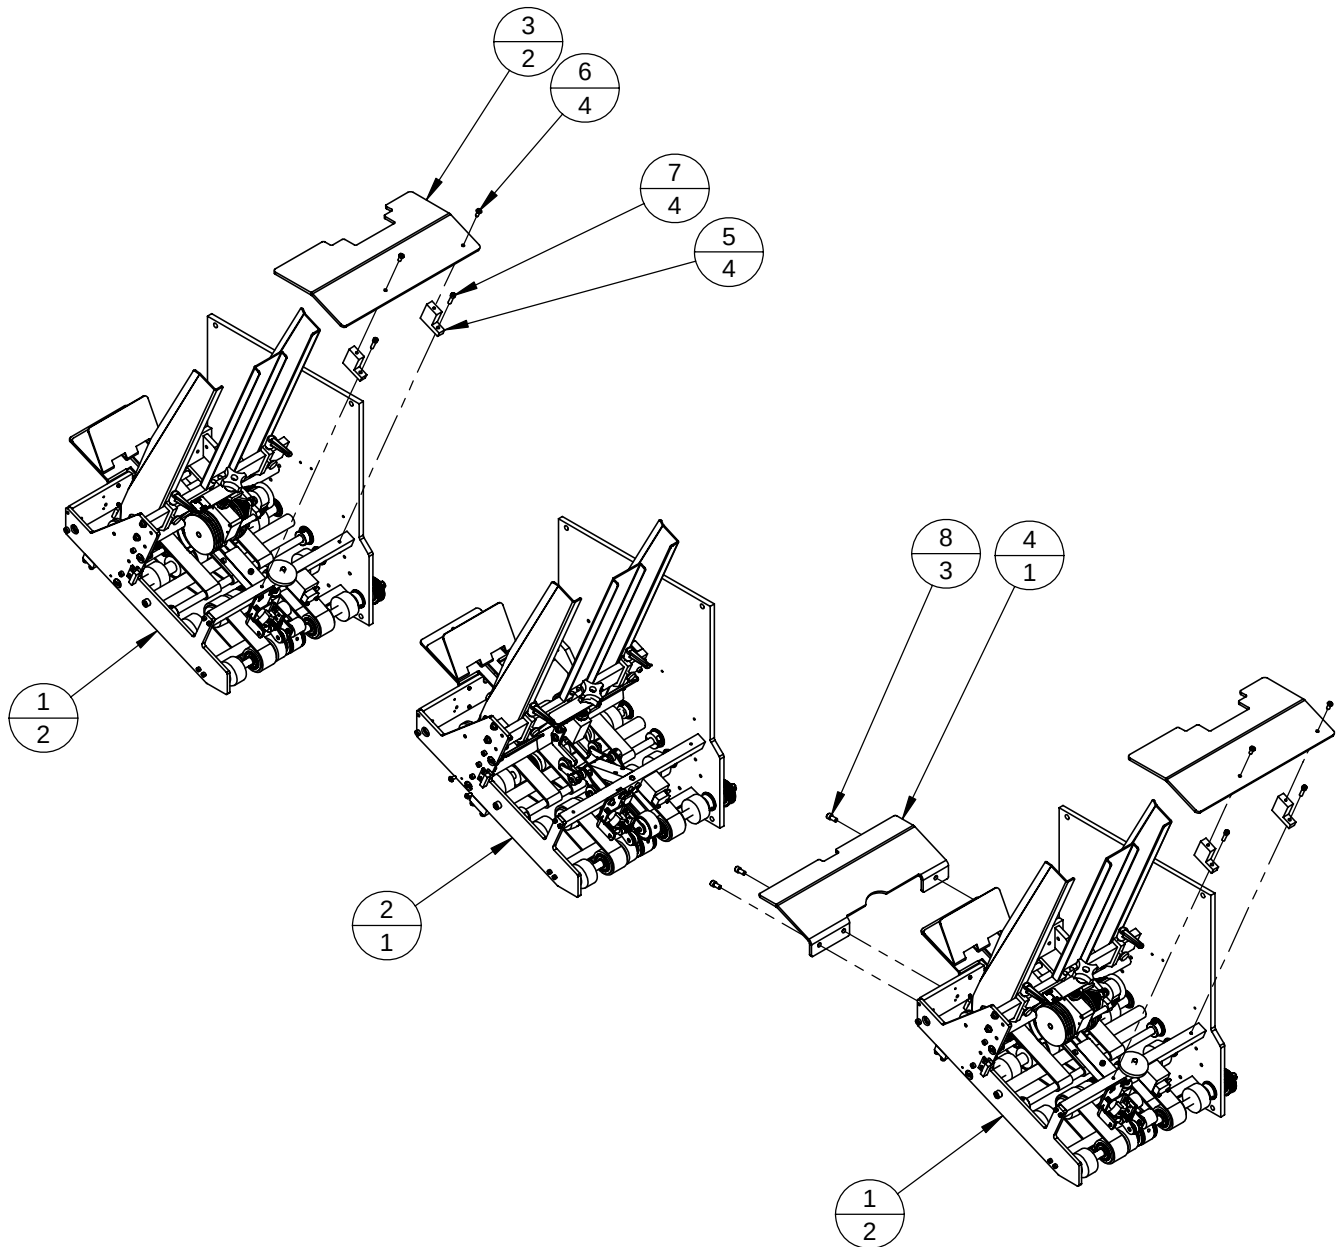


COLLATOR – LEXAN FEEDER COVERS (Fig. 2-26)
6X9 FEEDER @ ROTARY FEEDER

ITEM	PART NO.	QTY.	DESCRIPTION
1	18013-227	1	COVER, TOP, 6X9 FRICTION FEEDER @ ROTARY
	18013-236	1	COVER, TOP, 6X9 THIN MAT'L FEEDER @ ROTARY
2	18013-226	1	COVER, REAR, ROTARY FEEDER
3	18007-124	2	BLOCK, FEEDER COVER MTG (6X9)
4	18013-121	2	HINGE, SHORT, 5"
5	18009-052	1	BRACKET, MAGNETIC LATCH
6	98020-024	1	MAGNET, REED SWITCH
7	-	2	SCREW, SKT HEAD, #10-32 X 3/4
8	-	8	SCREW, BUTTON HEAD, #10-24 X 3/8
9	-	2	SCREW, BUTTON HEAD, #10-24 X 1/2

PITNEY BOWES

Sure-Feed Engineering

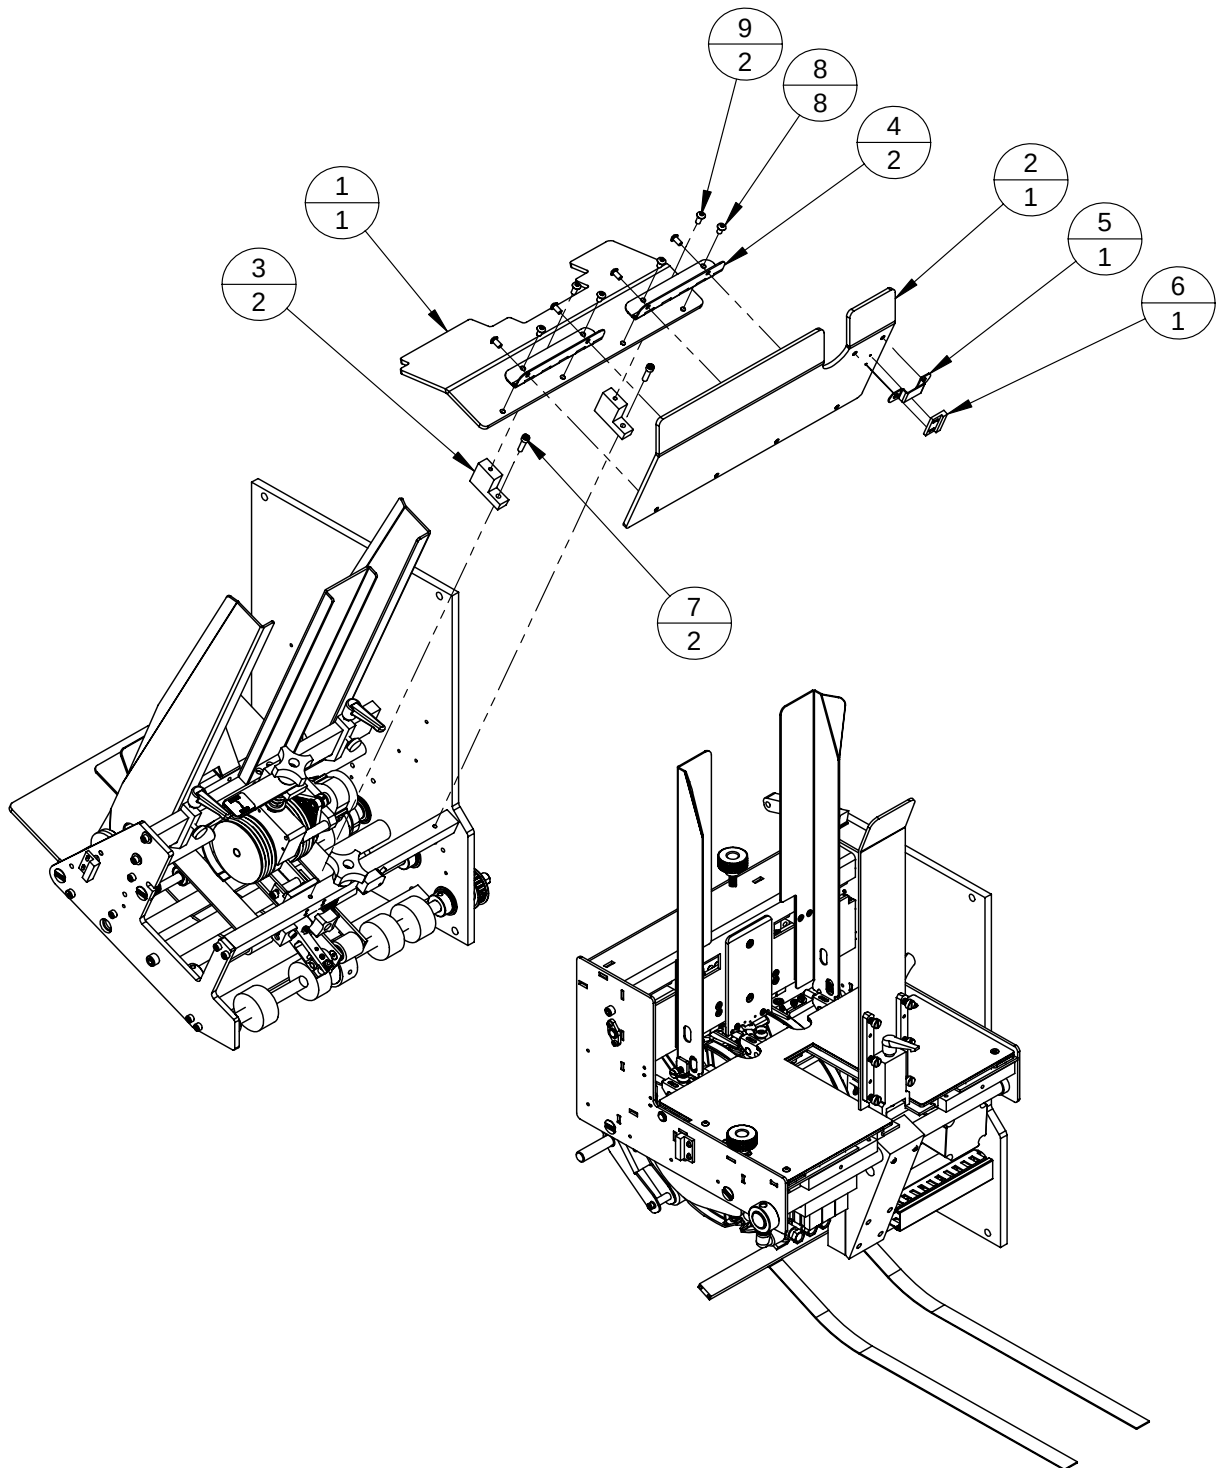


**COLLATOR – WATER BRUSH ASSEMBLY (Fig. 2-27)
 (18020-085)**

ITEM	PART NO.	QTY.	DESCRIPTION
1	18007-053	1	BLOCK, BRUSH MTG.
2	18009-008	1	BRACKET, BRUSH MTG.
3	18007-067	1	BLOCK, BRUSH PIVOT
4	18019-005	1	BRUSH, WATER
5	99028-038	1	FITTING, HOSE BAR ELBOW, 1/4 T X 1/16 NPT
6	-	1	SCREW, SKT HEAD, 1/4-20 X 2-1/2
7	-	1	SCREW, SKT HEAD, #10-24 X 3/4
8	-	2	SCREW, SKT HEAD, #6-32 X 3/4
9	-	1	FLAT WASHER, #10
10	-	1	NUT, HEX, 1/4-20
11	99031-005	4'	TUBING, CLEAR, 1/8 ID X 1/4 OD (NOT SHOWN)

PITNEY BOWES

Sure-Feed Engineering

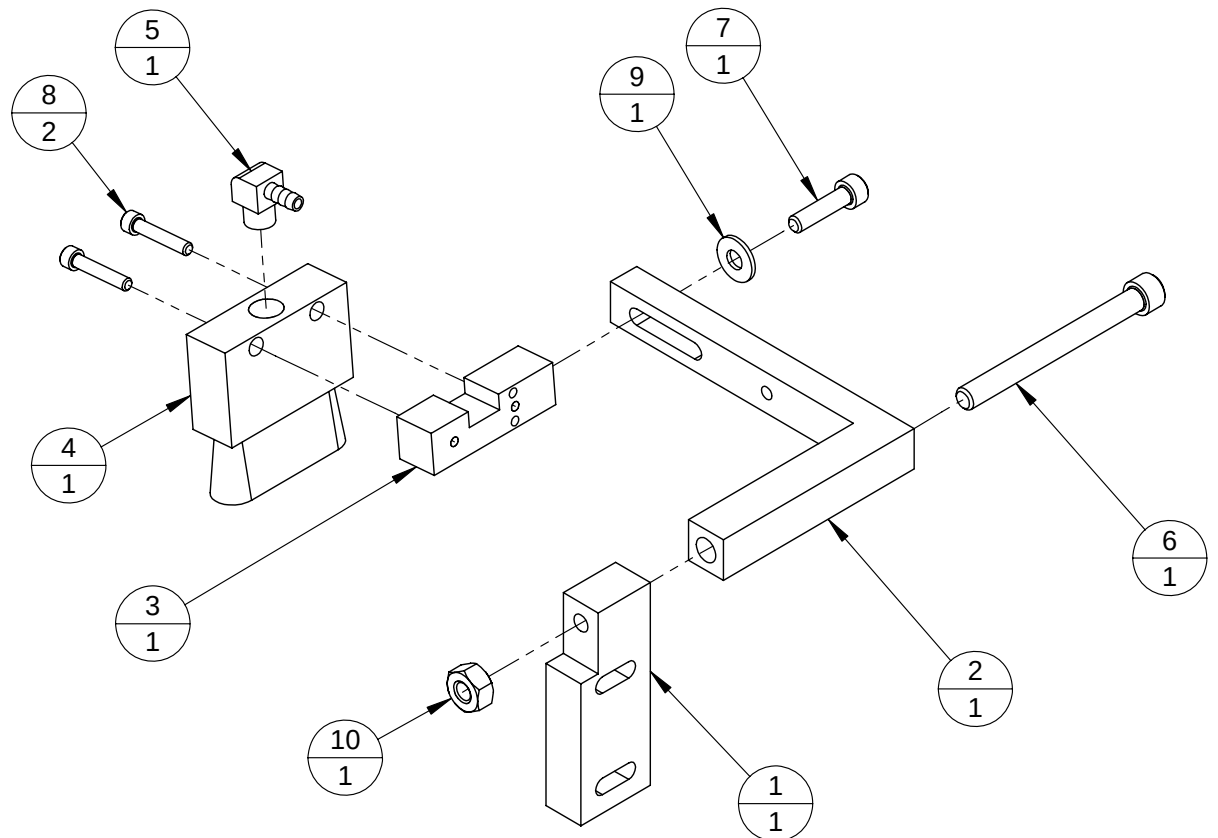


**COLLATOR – ROTARY VACUUM ASSEMBLY (Fig. 2-28)
 (18020-368)**

ITEM	PART NO.	QTY.	DESCRIPTION
1	99028-176	1	FITTING, NIPPLE REDUCER, 3/4 NPT – 1/2 NPT
2	99028-171	1	FITTING, BRASS TEE, 1/2 NPT
3	99028-170	2	FITTING, HOSE BARB, 1/2 NPT X 3/4 HOSE
4	99029-016	1	PUMP, VACUUM, 1.2 HP
5	99028-196	6	FITTING, REDUCING TEE, 1/2 NPT 3/4 HOSE
6	99028-197	6	FITTING, MALE CONNECTOR, 1/2 NPT X M10 TUBE
7	99031-022	5	HOSE, 3/4" ID (12.56" LONG)
8	99031-022	1	HOSE, 3/4" ID (125" LONG)
9	99028-198	3	FITTING, PLUG, M10 TUBE (FOR NON ROTARY FEEDERS)
10	99031-022	1	HOSE, 3/4" ID (32" LONG)

PITNEY BOWES

Sure-Feed Engineering

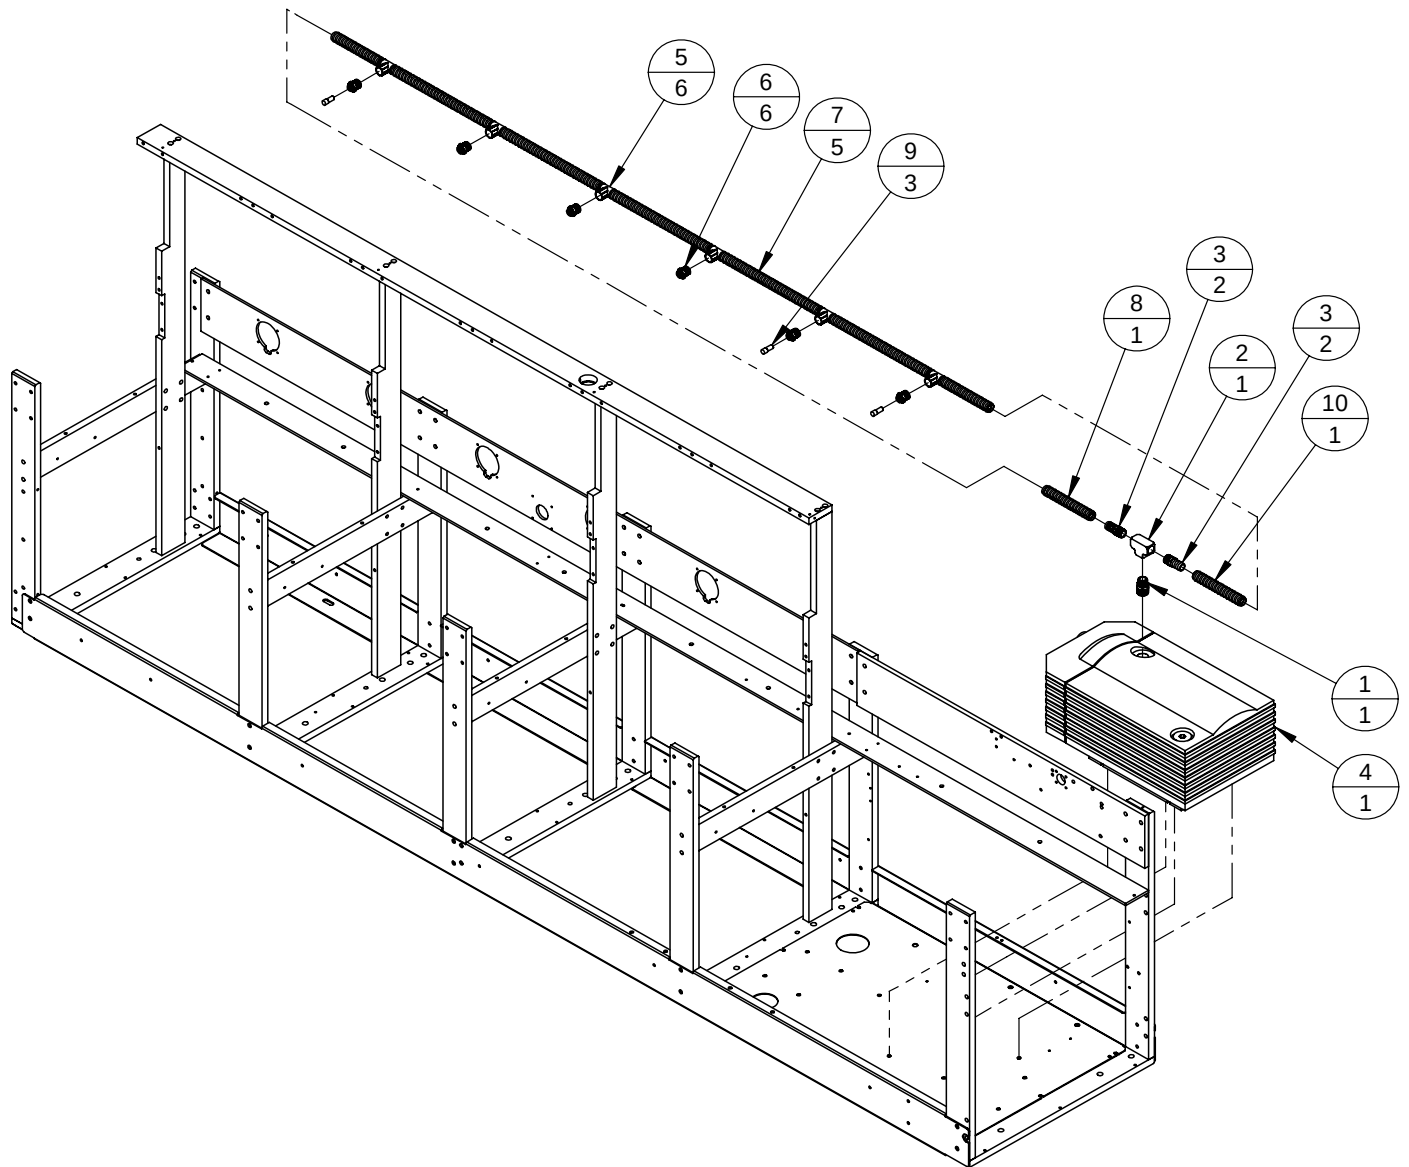


**COLLATOR – ROTARY AIR JET ASSEMBLY (Fig. 2-29)
(18020-369)**

ITEM	PART NO.	QTY.	DESCRIPTION
1	99028-200	5	FITTING, TEE, M10 TUBE
2	99028-201	1	FITTING, ELBOW, M10 TUBE
3	99028-202	6	FITTING, REDUCER, M10 TO M6
4	99028-203	3	FITTING, PLUG, M6 TUBE
5	99031-028	5	TUBING, CLEAR, M10 (13.25" LONG)
6	99031-028	2	TUBING, CLEAR, M10 (25" LONG)
7	-		SCREW, PAN HEAD, #6-32 X 3/8
8	18020-398	1	ASSEMBLY, PNEUMATICS
8A	99025-010	1	VALVE, 24 VDC SOLENIOD, BASE MTG, 3/8 NPT PORTS
8B	99028-071	1	FITTING, NEX NIPPLE, 3/8 NPT
8C	99028-069	1	FITTING, MUFFLER, 3/8 NPT
8D	99028-001	1	COUPLING, QUICK DISCONNECT, 1/4 X 3/8 NPT
8E	99028-004	1	ELBOW, BRASS STREET, 90 DEG., 3/8 NPT
8F	99026-008	1	REGULATOR / FILTER
8G	99028-199	1	FITTING, MALE CONNECTOR, 3/8 NPT X M10 TUBE

PITNEY BOWES

Sure-Feed Engineering

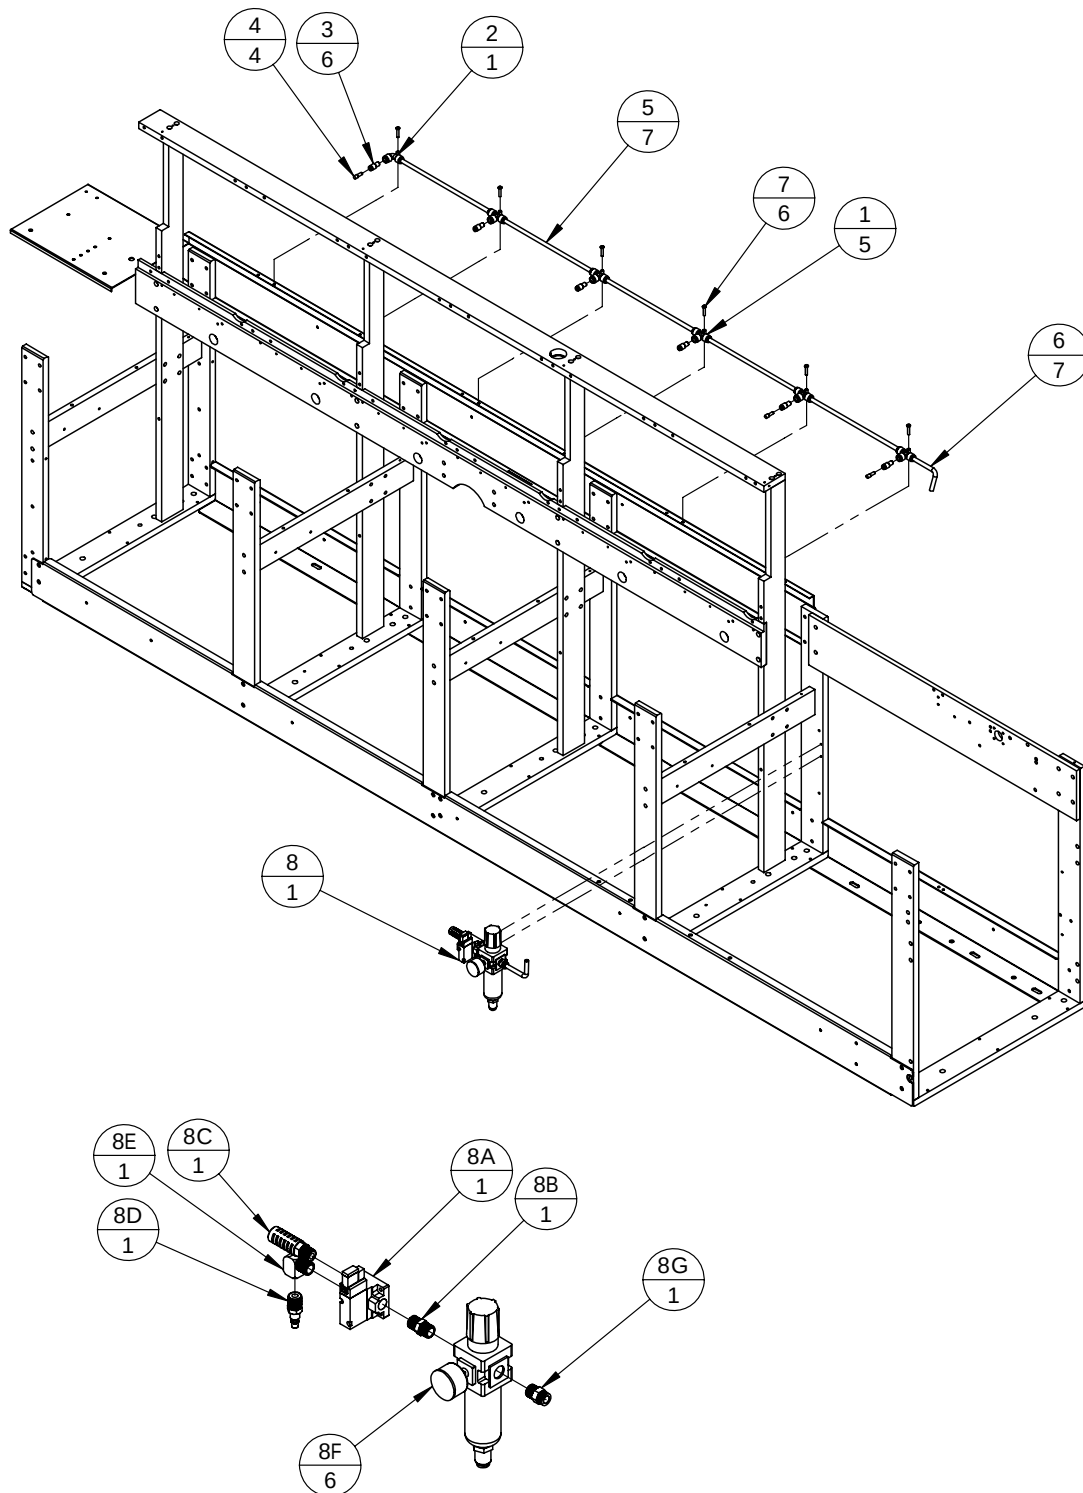


COLLATOR – PNEUMATICS ASSEMBLY (Fig. 2-30)

ITEM	PART NO.	QTY.	DESCRIPTION
1	SEE FIG. 2-31	1	ASSEMBLY, INSERT AIR VALVE (18020-347)
2	SEE FIG. 2-31	1	ASSY, WATER PRESSURE REGULATOR (18020-349)
3	SEE FIG. 2-32	1	ASSY, INSERT AIT FLOW CONTROL (18020-348)
4	99031-015	2	HOSE, GREY, 3/4" ID
5	99031-022	1	HOSE, YELLOW, 3/4" ID
6	99031-010	5	TUBING, BLUE, 3/8" OD
7	99031-013	1	TUBING, BLACK, 1/4" OD

PITNEY BOWES

Sure-Feed Engineering

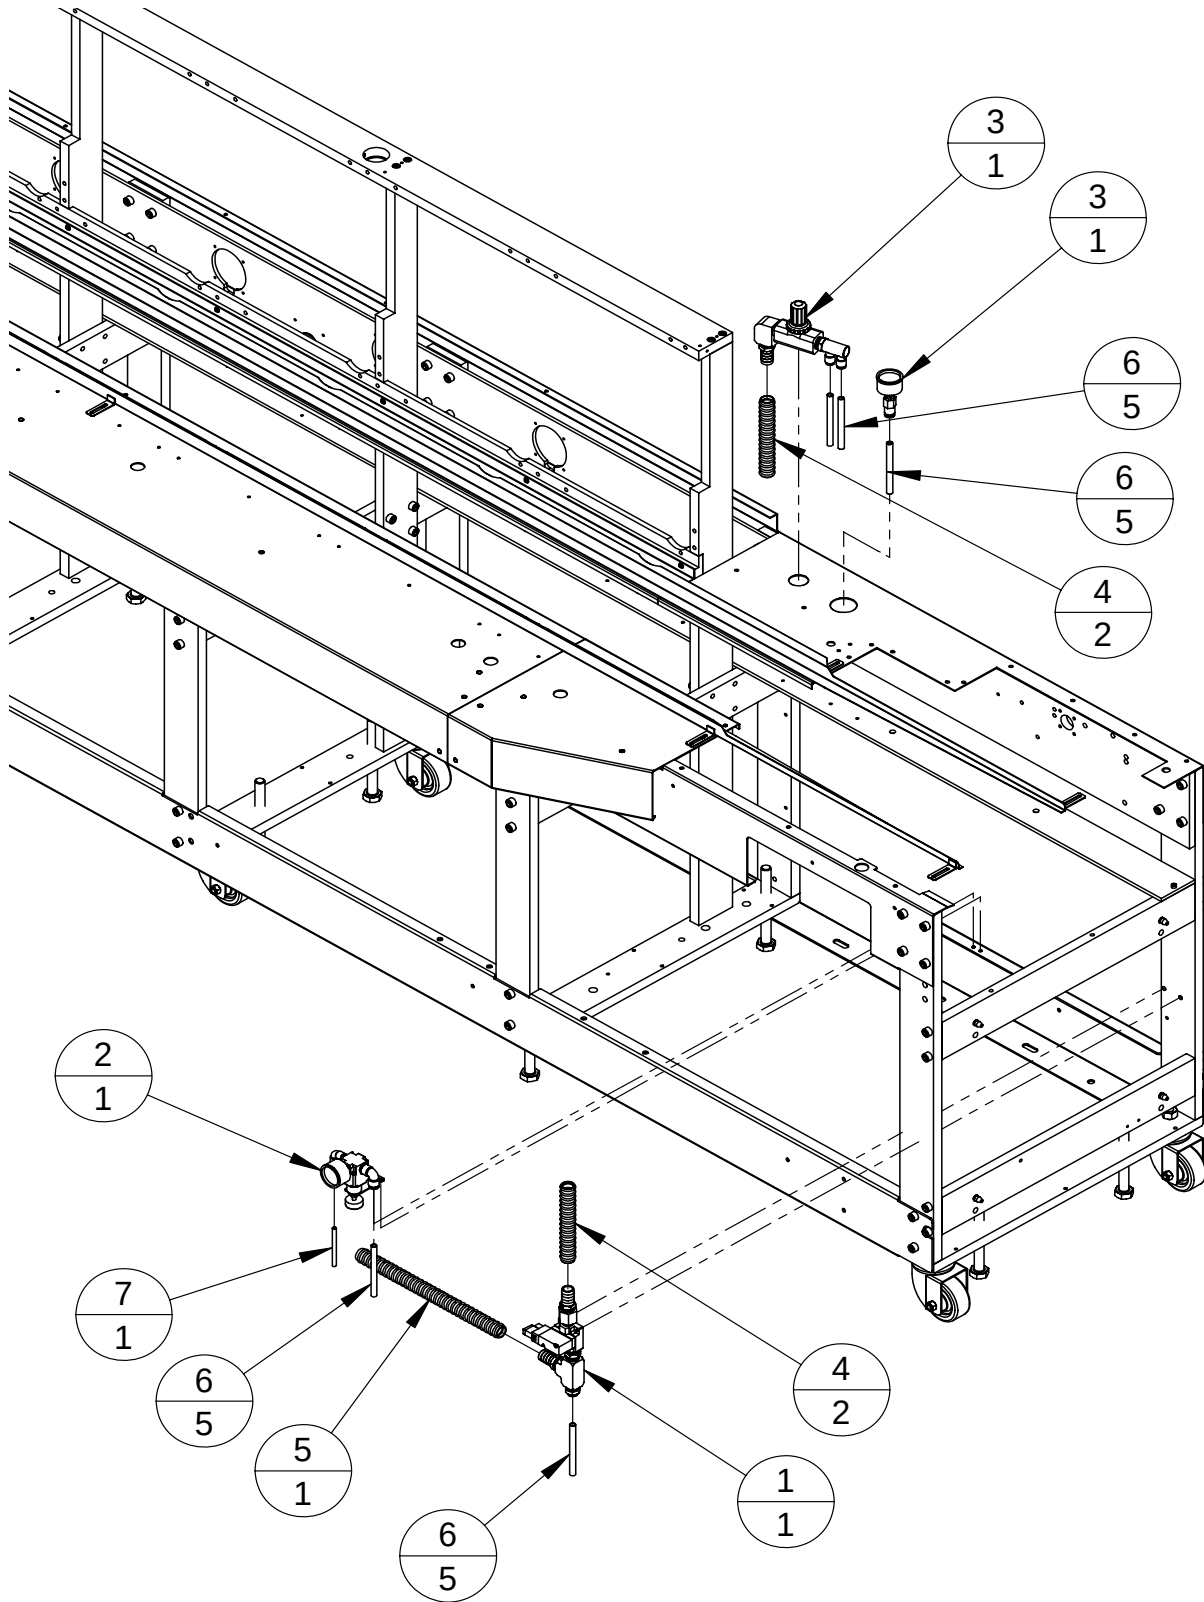



COLLATOR – PNEUMATICS (Fig. 2-31)
VALVE AND REGULATOR ASSEMBLIES

ITEM	PART NO.	QTY.	DESCRIPTION
	18020-347		ASSEMBLY, INSERT AIR VALVE
1	99025-010	1	VALVE, 24 VDC SOLENOID, BASE MTG, 3/8 NPT PORTS
2	99028-168	1	FITTING, REDUCING NIPPLE, 1/2 X 3/8 NPT
3	99028-169	1	FITTING, ADAPTOR, 1/2 F-NPT X 3/8 M-NPT
4	99028-172	1	FITTING, MALE CONNECTOR, 1/2 NPT X 3/8 TUBE
5	99028-170	2	FITTING, HOSE BARB, 1/2 NPT X 3/4 HOSE
6	99028-171	1	FITTING, BRASS TEE, 1/2 NPT
	18020-349	1	ASSEMBLY, WATER PRESSURE, REGULATOR
7	99026-021	1	REGULATOR, 1/8 NPT
8	99028-074	1	FITTING, ELBOW, 1/8 NPT X 1/4 TUBE
9	99030-001	1	GAUGE, 1/8 NPT, 0-15 PSI
10	99028-022	1	FITTING, ELBOW, 1/8 NPT X 3/8 TUBE
11	18011-134	1	PLATE, WATER REGULATOR MTG.

PITNEY BOWES

Sure-Feed Engineering

ASSY# 18020-347

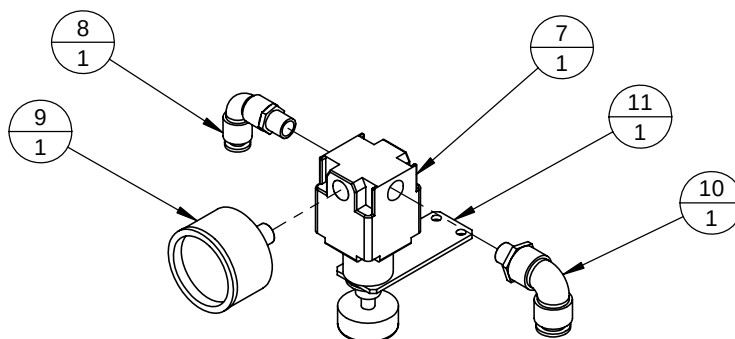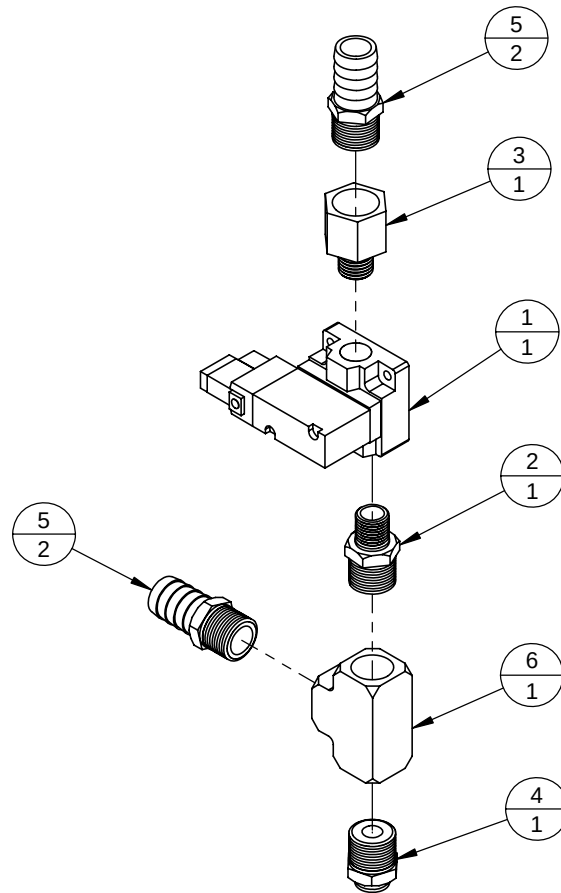


ASSY# 18020-349

COLLATOR – PNEUMATICS (Fig. 2-32)
INSERT AIR FLOW CONTROL ASSEMBLY (18020-348)

ITEM	PART NO.	QTY.	DESCRIPTION
1	99025-034	1	VALVE, FLOW CONTROL
2	99025-035	1	NUT, PANEL MOUNT
3	99030-006	1	GAUGE, 1/8 NPT, 0-30 PSI
4	99028-173	1	FITTING, FEMALE CONNECTOR, 1/4 NPT X 3/8 TUBE
5	99028-174	1	FITTING, DOUBLE MALE ELBOW, 1/2 NPT X 3/8 TUBE
6	99028-005	1	ELBOW, BRASS STREET, 90 DEG, 1/2 NNPT
7	99028-170	1	FITTING, HOSE BARB, 1/2 NPT X 3/4 HOSE
8	99028-120		FITTING, REDUCER, 1/4 M-NPT X 1/8 F-NPT

PITNEY BOWES

Sure-Feed Engineering

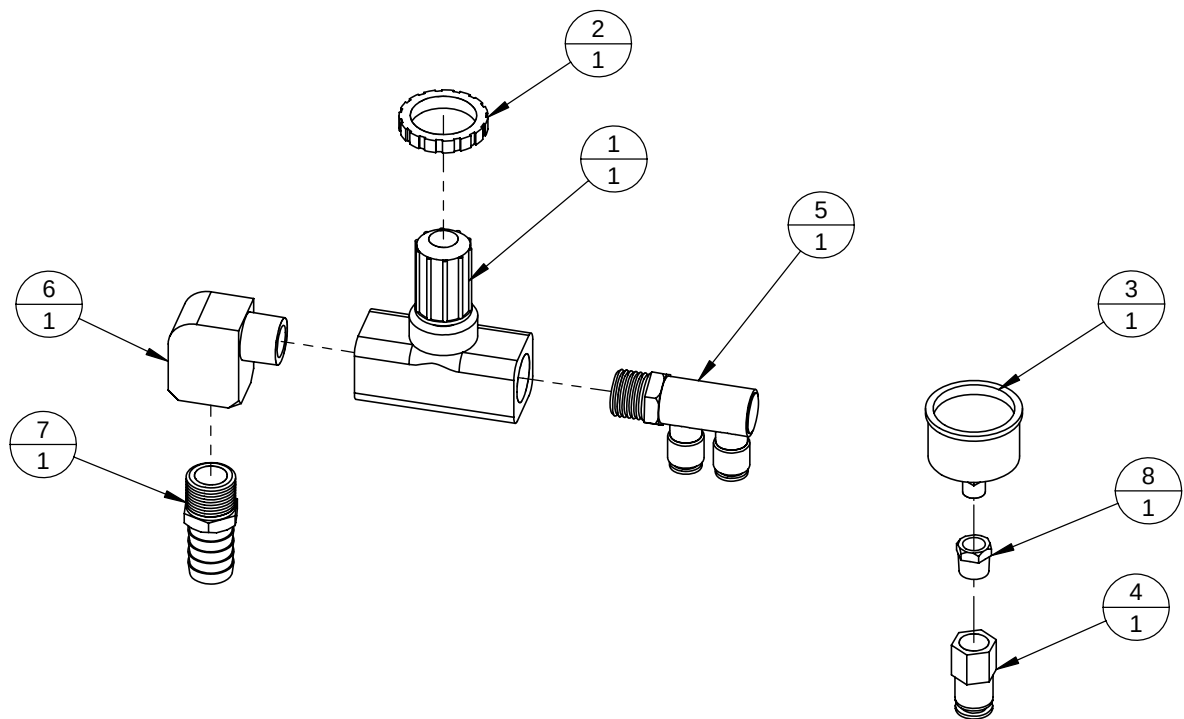


**COLLATOR – TOUCH SCREEN ASSEMBLY (Fig. 2-33)
 (18021-096)**

ITEM	PART NO.	QTY.	DESCRIPTION
1	18019-023	1	POST, ENCLOSURE SUPPORT
2	18011-020	1	PLATE, STIFFENER
3	18011-021	1	BACK PLATE, TOUCHSCREEN ENCLOSURE
4	18013-001	1	ENCLOSURE, TOUCH SCREEN
5	18019-002	1	NUT, TOUCH SCREEN ENCLOSURE MTG.
6	18019-001	1	COLLAR, 2-PIECE CLAMP, 1-5/8" ID
7	99005-014	1	WASHER, SPRING, 45.5 MM
8	98013-085	1	TOUCH SCREEN, GT1575
9	98004-026	1	FUSE HOLDER, PANAL MTG.
	98004-017	1	FUSE, 1A, SLOW BLOW, 5 X 20MM
10	-	4	SCREW, BUTTON HEAD, 1/4-20 X 5/16
11	-	4	SCREW, BUTTON HEAD, #6-32 X 1/4
12	98013-086	1	INTERFACE, Q BUS
13	98013-087	1	CABLE, COMMUNICATION
14	18021-102	1	ASSEMBLY, POWER CABLE, TOUCH SCREEN

PITNEY BOWES

Sure-Feed Engineering


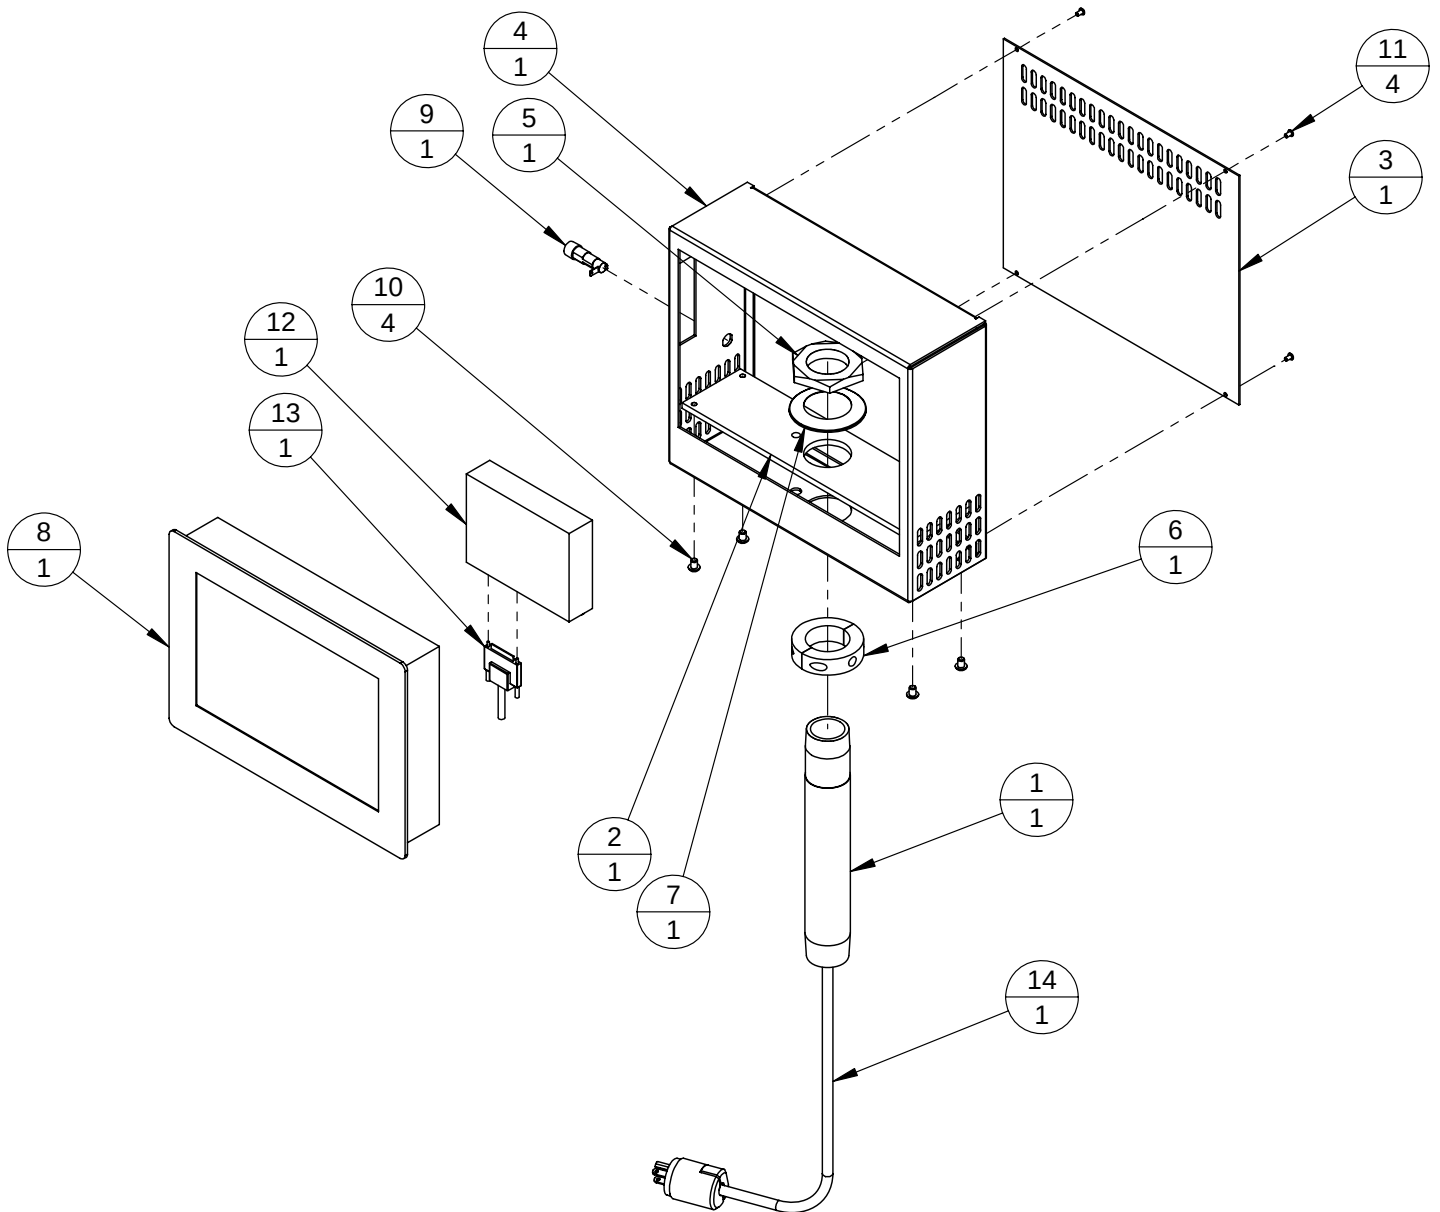


**COLLATOR – ELECTRICAL (Fig. 2-34)
 SWITCH PLATE CABLE ASSEMBLIES**

ITEM	PART NO.	QTY.	DESCRIPTION
	18021-089	1	ASSEMBLY, SWITCH PLATE CABLE, FRONT
1	18002-012	1	SUPPORT, FRONT JOG DECK
2	98000-032	1	SWITCH, PUSH BUTTON, BLUE, ROUND
3	98000-027	1	SWITCH CLIP ASSY
4	98000-028	1	CONTACT BLOCK, 1 X N.O.
5	98016-024	1	CONNECTOR, MALE, 2-POS. (.093)
	98016-057	2	TERMINAL, PIN (.093)
	18021-090	1	ASSY, SWITCH PLATE CABLE, FRONT JOG DECK
6	18001-081	1	COVER, TOP, FRONT JOG DECK
7	98000-035	1	SWITCH, PUSH BUTTON, BLACK, ROUND
8	98000-017	1	CONTACT BLOCK ASSY, 1 X CLIP, 1 X NO, 1 X NC
9	98016-016	1	RECEPTICAL, FREE HANGING, AMP, 13-9 MALE
	98016-114	6	TERMINAL, PIN
10	98016-008	1	BACKSHELL, PLASTIC, SIZE #13
11	98016-023	1	CONNECTOR, FEMALE, 2-POS. (.093)
	98016-056	2	TERMINAL, SOCKET (.093)

PITNEY BOWES

Sure-Feed Engineering

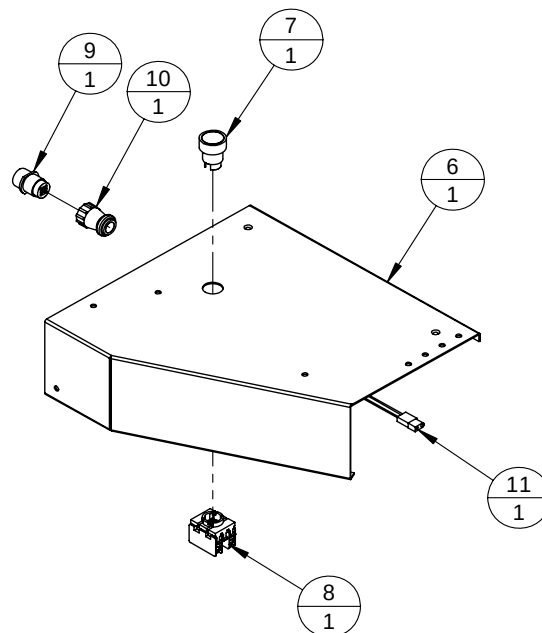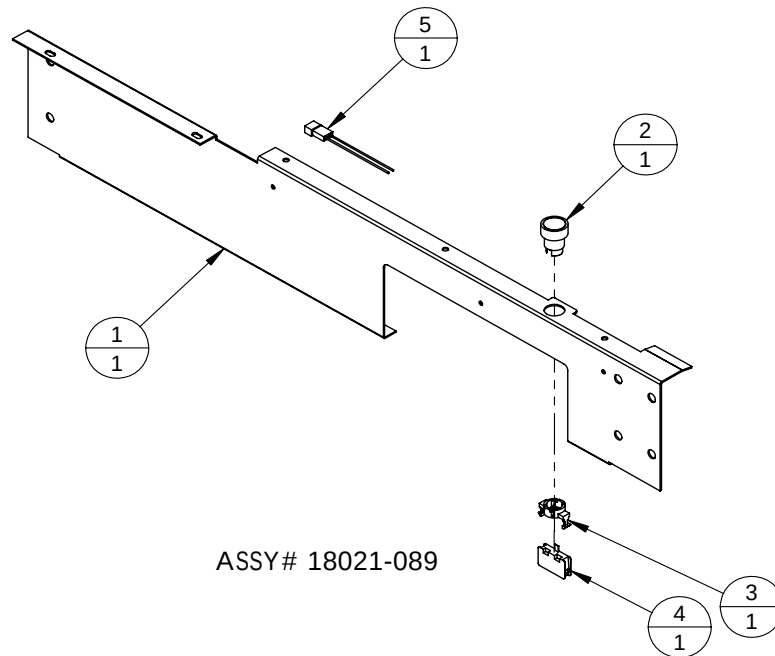


COLLATOR – ELECTRICAL (Fig. 2-35)
SWITCH PLATE CABLE ASSEMBLY (18021-091)

ITEM	PART NO.	QTY.	DESCRIPTION
1	18001-080	1	COVER, TOP CENTER, JOG DECK
2	98000-030	2	SWITCH, PUSH BUTTON, GREEN, ROUND
3	98000-031	2	SWITCH, PUSH BUTTON, YELLOW, ROUND
4	98000-032	2	SWITCH, PUSH BUTTON, BLUE, ROUND
5	98000-035	1	SWITCH, PUSH BUTTON, BLACK, ROUND
6	98000-027	6	SWITCH CLIP ASSY
7	98000-017	1	CONTACT BLOCK ASSY, 1 X CLIP, 1 X NO, 1 X NC
8	98000-028	6	CONTACT BLOCK, 1 X N.O.
9	98016-007	1	PLUG, AMP, 13-9 FEMALE
	98016-117	6	TERMINAL, SOCKET
10	98016-016	1	RECEPTICAL, FREE HANGING, AMP, 13-9 MALE
	98016-114	6	TERMINAL, PIN
11	98016-008	2	BACKSHELL, PLASTIC, SIZE #13


PITNEY BOWES

Sure-Feed Engineering

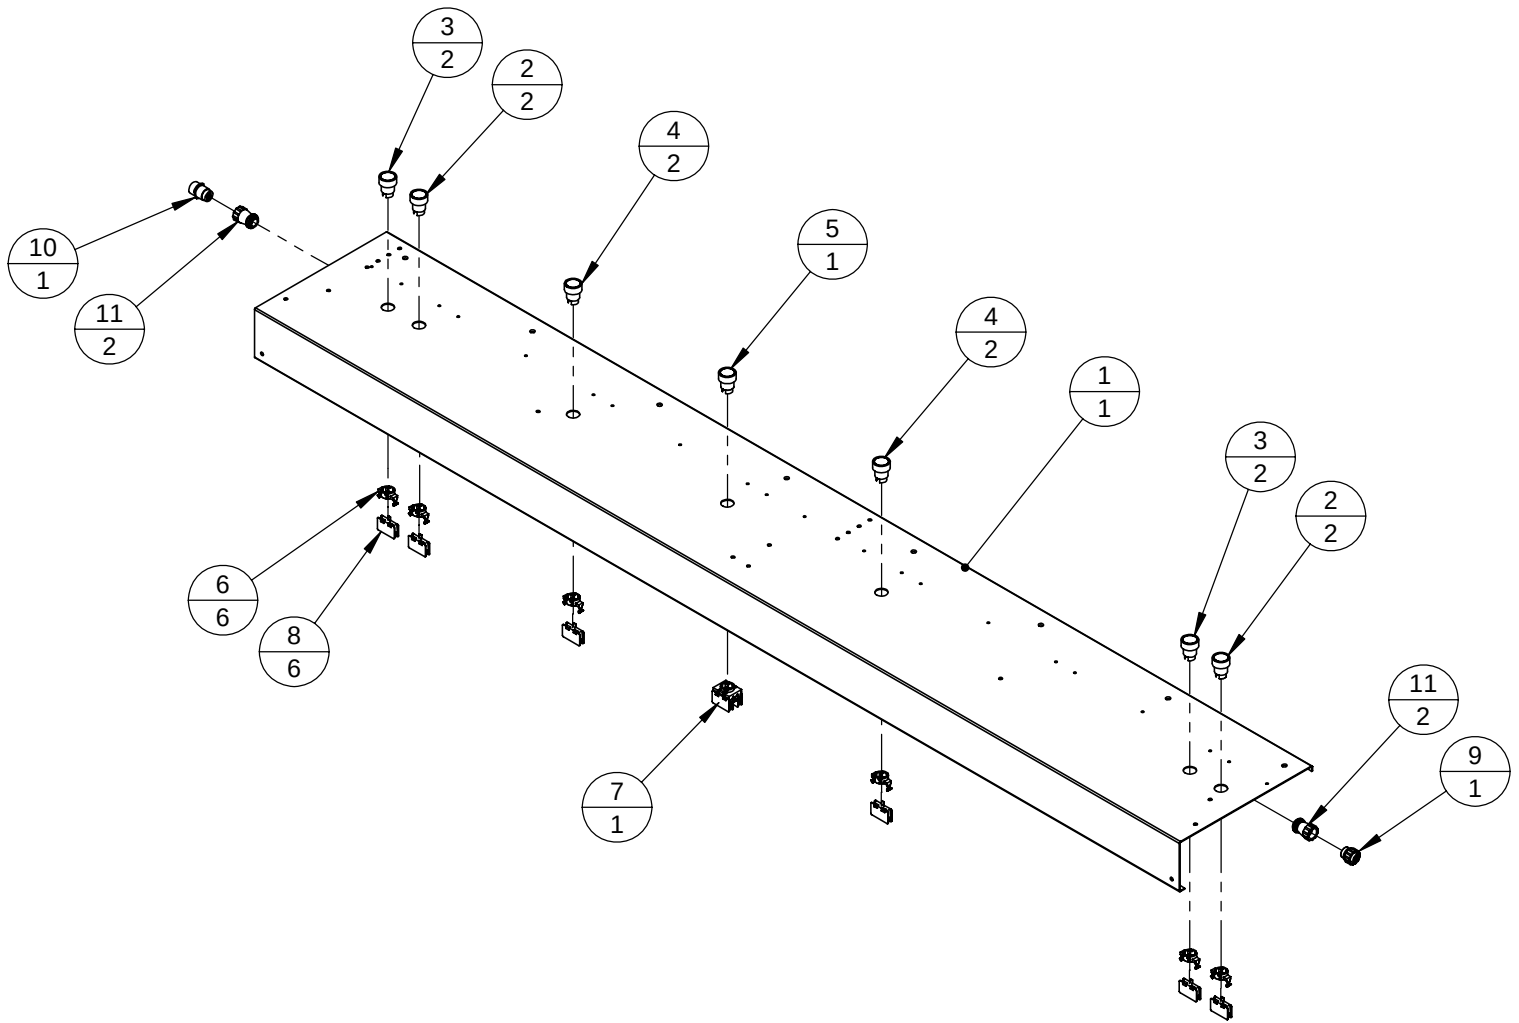

PITNEY BOWES
Sure-Feed Engineering

FRICTION FEEDER 10X13

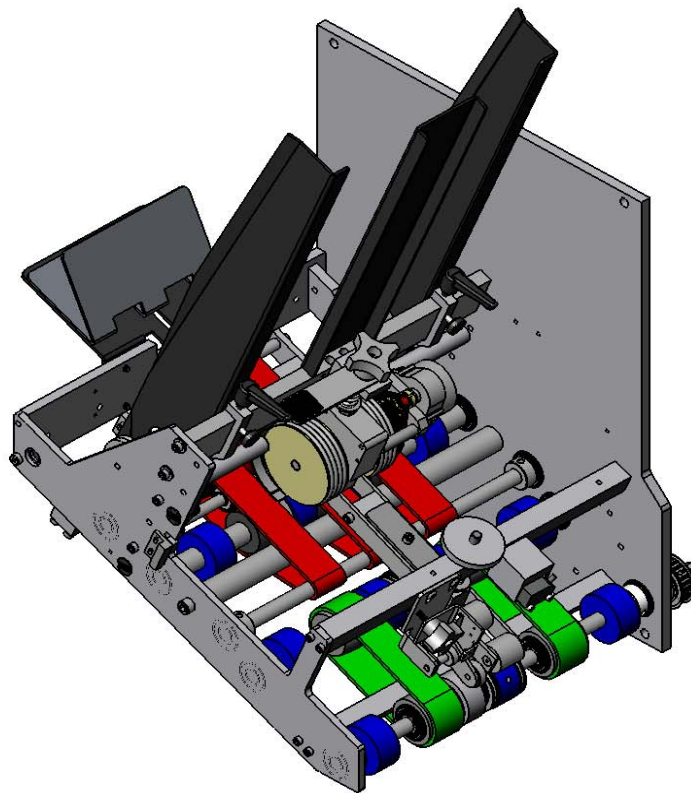

**FRICITION FEEDER ASSEMBLY (Fig. 3-1)
(18020-367)**


ITEM	PART NO.	QTY.	DESCRIPTION
1	SEE FIG. 3-2	1	ASSEMBLIES, FEEDER SHAFTS
2	SEE FIG. 3-6	1	ASSEMBLY, PAPER HOPPER (18020-260)
3	SEE FIG. 3-5	1	ASSEMBLY, SEPERATOR (18020-069)
4	SEE FIG. 3-6	1	ASSEMBLY, TONGUE (18020-095)
5	SEE FIG. 3-2	1	ASSEMBLY, FEEDER TIMING
6	SEE FIG. 3-7	1	ASSEMBLY, DOUBLE DETECT (18020-068)
7	18011-095	1	PLATE, FEEDER MTG.
8	10000-018	1	SIDEFAME, COLLATOR FEEDER
9	18008-013	1	BAR, SENSOR / DRAG STRAP MTG.
10	18008-012	1	BAR, DOUBLE DETECT MTG.
11	10008-020	1	BAR, ELEVATOR BELT SUPPORT
12	10008-019	1	BAR, BACK SUPPORT
13	18008-123	1	BAR, CAM FOLLOWER SUPPORT
14	10005-024	1	SUPPORT, PAPER SLIDE
15	10005-104	1	GUIDE, PAPER, REAR WEDGE
16	10007-003	1	NUT, PAPER SLIDE
17	10007-004	1	WASHER, PAPER SLIDE
18	99004-002	1	KNOB, #10 SCREW
19	99006-020	1	ROLL PIN, 5/32 X 3/4
20	99006-031	2	PIN, SPRING CLIP, GROOVED
21	99003-002	1	BEARING, 1/4 X 5/8 SEALED
22	99004-007	1	KNOB, 1/4-20 FEMALE
23	99032-002	1	STUD, THREADED, 1/4-20 X 3
24	18009-024	1	BRACKET, UPPER SENSOR MTG.
25	98009-037	1	SENSOR, SENDER, THRU BEAM
26	98009-002	1	SENSOR, RECIEVER, THRU BEAM
27	18011-075	1	PLATE, ADAPTOR, LOWER SENSOR

**FRICTION FEEDER ASSEMBLY (Fig. 3-1)
 (18020-367)**

ITEM	PART NO.	QTY.	DESCRIPTION
28	99003-007	10	BEARING, 1/2 X 1-1/8 SEALED W/ S.R.
29	99036-003	5	SHIM, BEARING, 3/4 X 1-1/8 X .006
30	18008-093	2	BAR, SAFETY
31	98019-066	1	REFLECTOR
32	98009-051	1	SENSOR, P&F, RETRO REFLECTIVE
33	99039-062	2	MAGNETIC CATCH
34	98000-036	1	REED SWITCH
35	99033-006	1	SHOULDER BOLT, 1/4 X 1/4
36	99033-004	1	SHOULDER BOLT, 1/4 X 3/8
37	99003-073	1	BUSHING, SLEEVE, 1/4 X 5/16 X 3/8
38	99003-034	1	WASHER, NYLON, 1/2 X 1/16
39	-	1	BOLT, SKT HEAD, 5/16-18 X 5/8
40	-	4	SCREW, SKT HEAD, #8-32 X 5/8
41	-	15	SCREW, SKT HEAD, #10-24 X 5/8
42	-	4	FLAT WASHER, #10
43	-	1	SCREW, BUTTON HEAD, 1/4-20 X 1/2
44	-	2	SCREW, SKT HEAD, #10-24 X 1/2
45	-	4	SCREW, SKT HEAD, #8-32 X 5/8
46	-	2	SCREW, SKT HEAD, #10-24 X 3/4
47	-	2	SCREW, SKT HEAD, #6-32 X 1-1/8
48	-	2	SCREW, SKT HEAD, #6-32 X 5/8
49	-	2	SCREW, FLAT HEAD, #6-32 X 3/8
50	-	2	SCREW, BUTTON HEAD, #10-24 X 1/2
51	-	2	HEX NUT, 1/2-40
52	99005-012	1	SPRING, EXTENSION (NOT SHOWN) (ATTACHES TO ITEM #20)

PITNEY BOWES

Sure-Feed Engineering

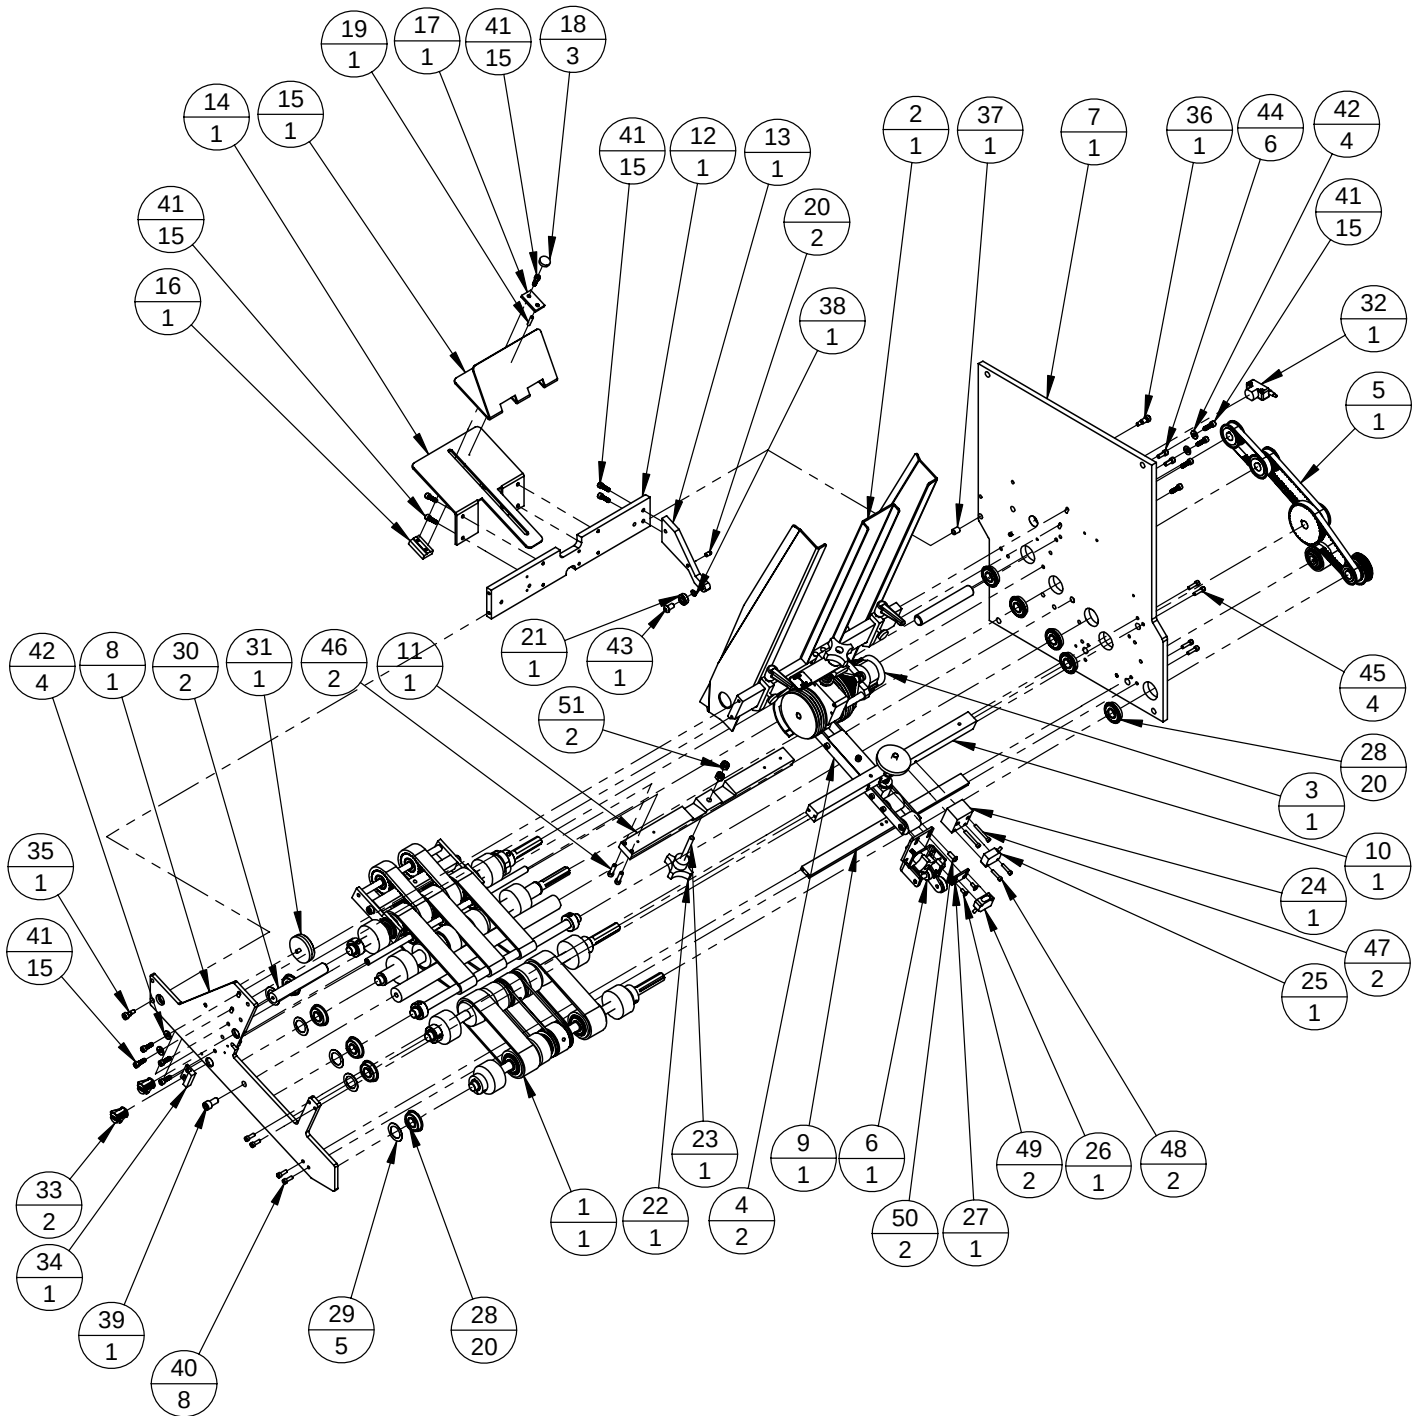


FRICITION FEEDER (Fig. 3-2)
FEEDER SHAFT / TIMING ASSEMBLIES

ITEM	PART NO.	QTY.	DESCRIPTION
1	SEE FIG. 3-3	1	ASSEMBLY, ELEVATOR SHAFT (18020-286)
2	SEE FIG. 3-3	1	ASSEMBLY, IDLER SUPPORT SHAFT (18020-107)
3	SEE FIG. 3-4	1	ASSEMBLY, DOUBLE DETECT SHAFT (18020-110)
4	SEE FIG. 3-4	1	ASSEMBLY, ACCELERATOR SHAFT (18020-111)
5	SEE FIG. 3-4	1	ASSEMBLY, MAIN DRIVE (NIP) (18020-278)
6	18004-003	1	SHAFT, MAIN SUPPORT
7	18004-007	1	SHAFT, FRONT
8	99000-042	2	BELT, RED GUM, ACCELERATOR
9	18014-007	2	O-RING, ACCELERATOR
10	99002-031	1	PULLEY, TIMING, 24XL037, 1/2B
	-	2	SET SCREW, #10-24 X 1/4
11	99002-054	4	PULLEY, TIMING, 20XL037, 1/2B
	-	8	SET SCREW, #10-24 X 1/4
12	99002-032	1	PULLEY, TIMING, 16XL037, 1/2B
	-	2	SET SCREW, #8-32 X 1/8
13	99002-016	1	PULLEY, TIMING, 40XL037, 1/2B NO FLANGES
	-	2	SET SCREW, #10-24 X 3/8
14	99000-033	1	BELT, TIMING, 130XL037
15	99000-001	1	BELT, TIMNG, 90XL037
16	SEE FIG. 3-7	1	ASSEMBLY, TENSIONER (18020-153)
17	99000-032	1	BELT, TIMNG, 138XL037
18	99017-004	2	COLLAR, 1/2 SHAFT
19	99003-032	2	WASHER, NYLON, 1/2 X 1/32

PITNEY BOWES

Sure-Feed Engineering

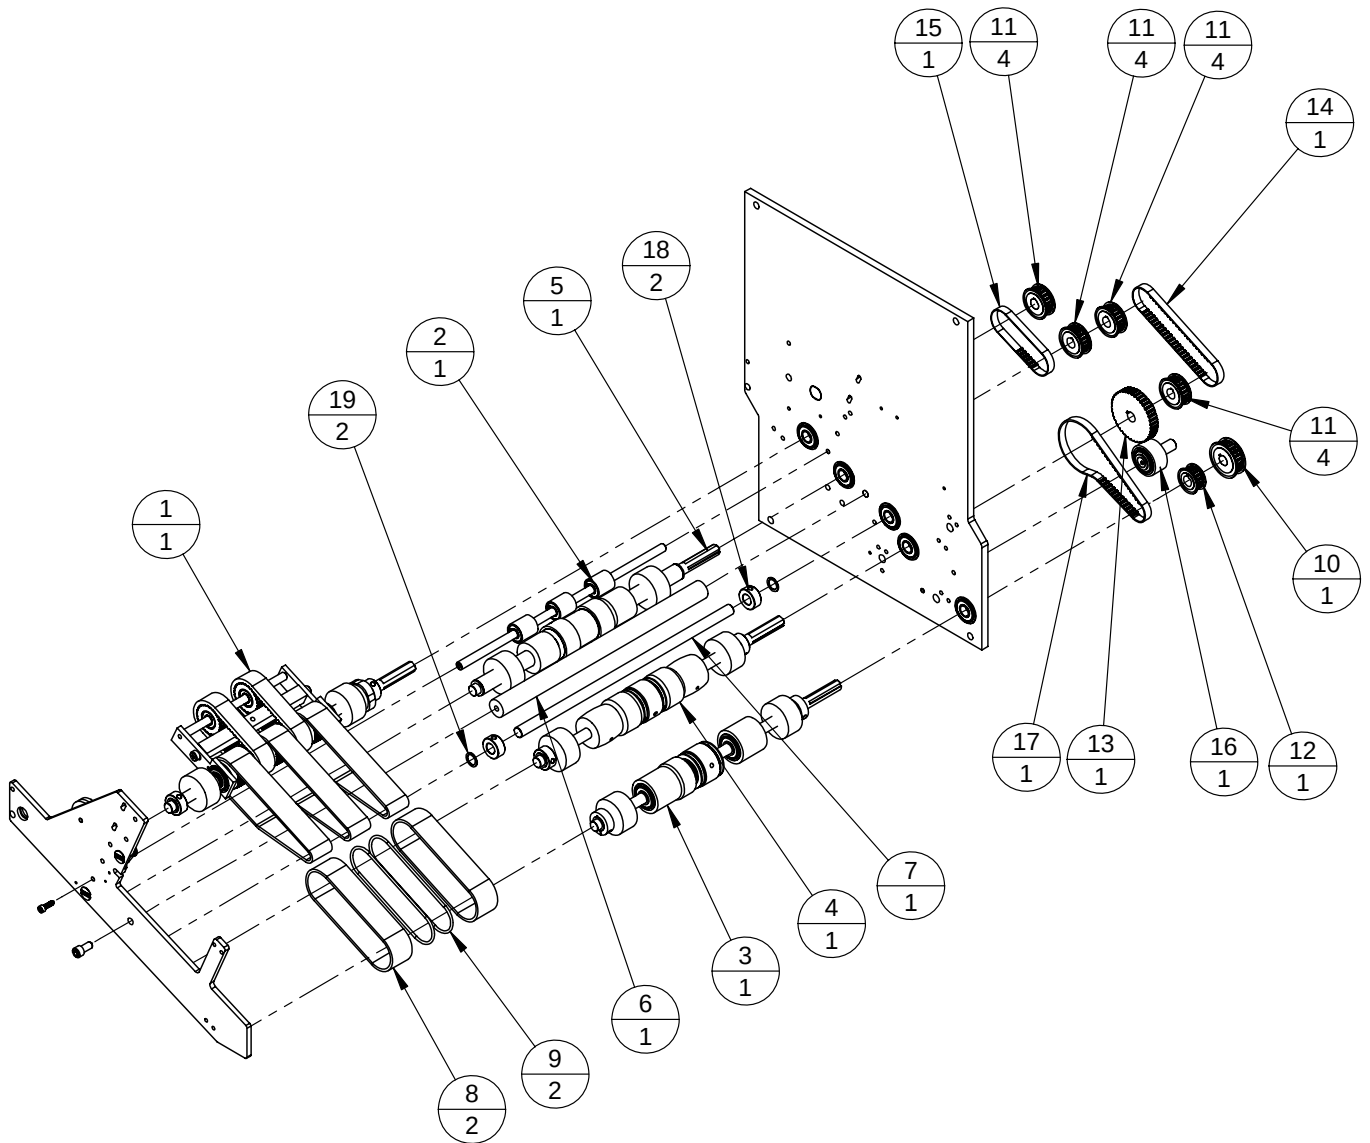


**FRICITION FEEDER (Fig. 3-3)
ELEVATOR / IDLER SUPPORT SHAFT ASSEMBLIES**

ITEM	PART NO.	QTY.	DESCRIPTION
	18020-286	1	ASSEMBLY, ELEVATOR SHAFT
1	18004-058	1	SHAFT, ELEVATOR BELT DRIVE
2	10004-057	1	SHAFT, IDLER
3	10008-018	1	BAR, ELEVATOR ADJ.
4	10007-013	2	BLOCK, ELEVATOR SUPPORT
5	10006-018	3	PULLEY, CROWNED
	-	6	SET SCREW, #10-32 X 1/4
6	10006-007	2	ROLLER, FEEDER, 1/2 BORE
7	10006-021	2	PULLEY, ELEVATOR DRIVE
	-	4	SET SCREW, #10-32 X 1/4
8	10006-022	2	PULLEY, ELEVATOR IDLER
9	99003-007	2	BEARING, 1/2 X 1-1/8 SEALED W/ S.R.
10	99003-018	2	WASHER, NYLON, 1/2 X 1/16
11	99003-008	4	BEARING, 3/8 X 7/8 SEALED
12	99022-003	4	SNAP RING, 3/8
13	99022-004	2	SNAP RING, 1/2
14	99033-008	2	SHOULDER BOLT, 5/16 X 1/4
15	18016-015	1	CAM, VIBRATING BACKSTOP
16	99000-005	2	BELT, ELEVATOR (RED)
17	99000-004	3	BELT, RED GUM
18	99003-032	2	WASHER, NYLON, 1/2 X 1/32
19	99017-004	2	COLLAR, 1/2 SHAFT
20	-	2	SCREW, SKT HEAD, #10-32 X 5/8
	18020-107	1	ASSEMBLY, IDLER SUPPORT SHAFT
21	18004-004	1	SHAFT, IDLER SUPPORT
22	10006-012	3	ROLLER, IDLER
23	99003-008	6	BEARING, 3/8 X 7/8 SEALED
24	99022-004	6	SNAP RING, 3/8

PITNEY BOWES

Sure-Feed Engineering

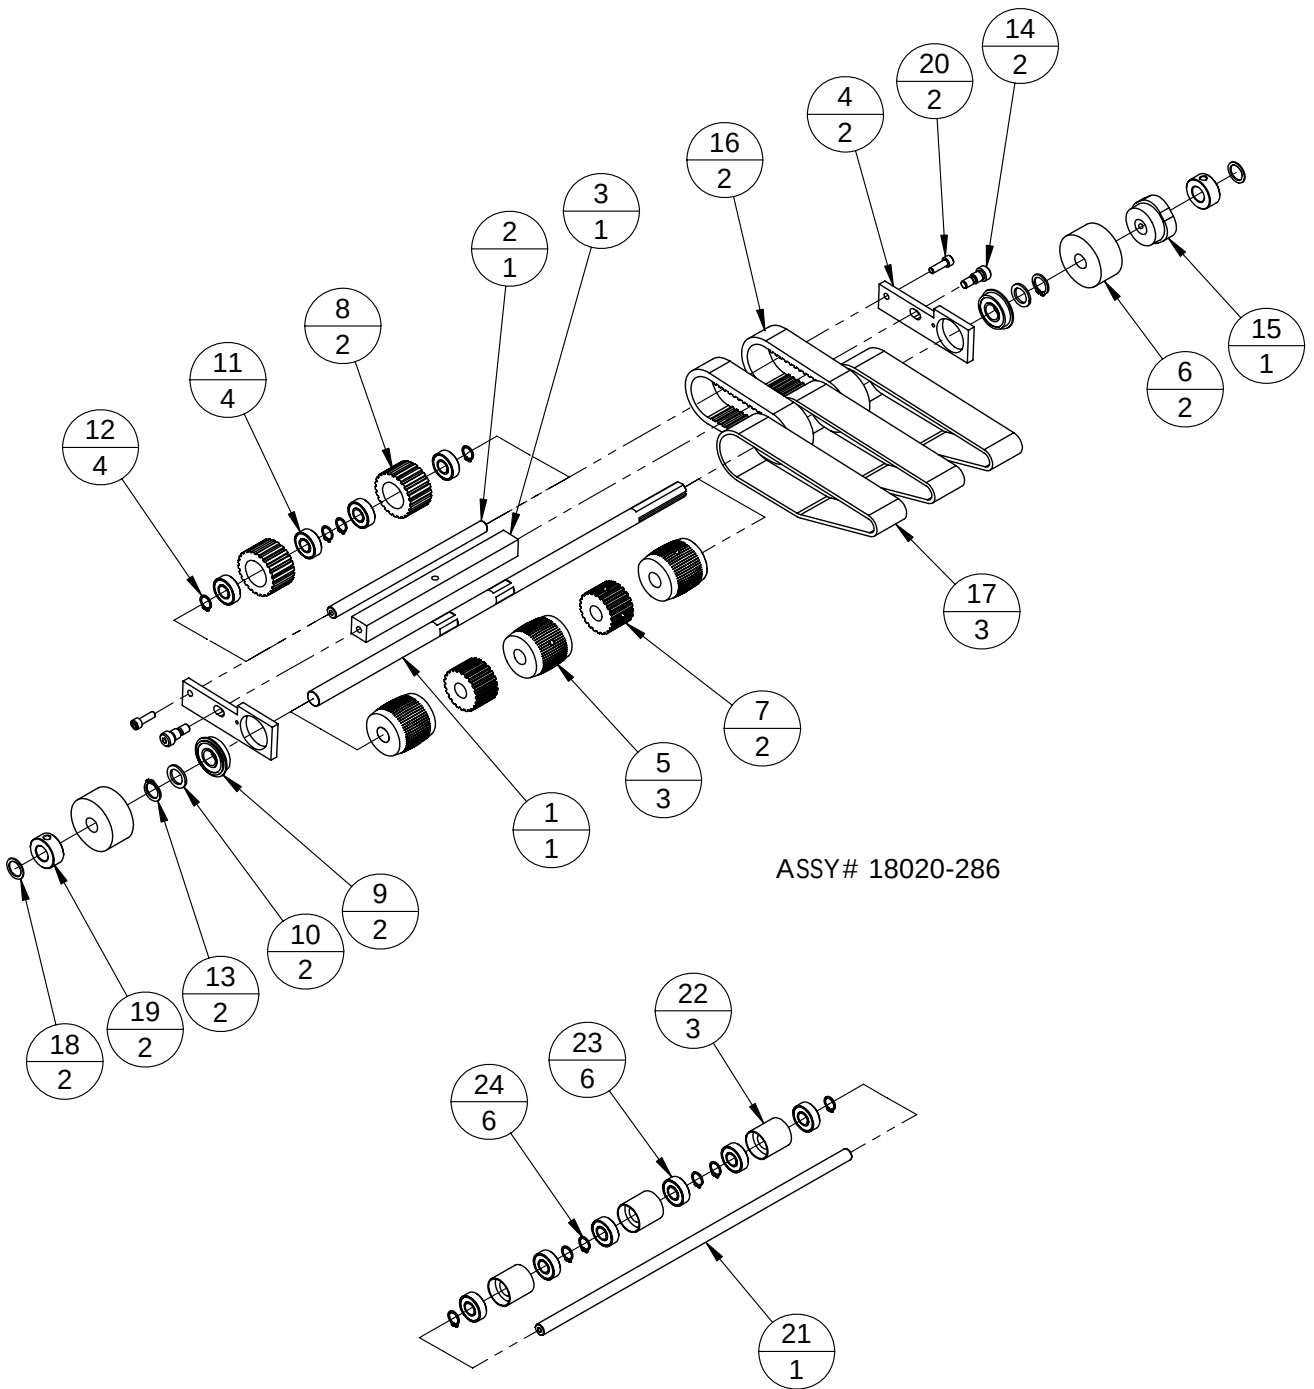


FRICITION FEEDER (Fig. 3-4)
NIP / DBL DETECT / ACCELERATOR SHAFT ASSEMBLIES

ITEM	PART NO.	QTY.	DESCRIPTION
	18020-278	1	ASSEMBLY, MAIN DRIVE (NIP) SHAFT
1	18004-091	1	SHAFT, MAIN DRIVE (NIP)
2	10006-069	2	ROLLER, FEEDER, 3/4 BORE
3	10006-070	2	ROLLER, NIP, 3/4 BORE
	-	4	SET SCREW, #10-32 X 1/4
4	10006-071	3	PULLEY, MATE, 3/4 BORE
	-	6	SET SCREW, #10-32 X 1/4
5	99003-018	2	WASHER, NYLON, 1/2 X 1/16
	18020-110	1	ASSEMBLY, DOUBLE DETECT SHAFT
6	18004-064	1	SHAFT, DOUBLE DETECT
7	10006-013	1	ROLLER, NIP
	-	2	SET SCREW, #10-32 X 1/4
8	10006-007	2	ROLLER, FEEDER, 1/2 BORE
9	10006-032	2	PULLEY, IDLER
10	10006-030	2	PULLEY, O-RING IDLER
11	99003-007	6	BEARING, 1/2 X 1-1/8 SEALED W/ S.R.
12	99017-028	2	COLLAR, ONE PIECE SPLIT – 1/2B
13	99022-004	5	SNAP RING, 1/2
14	99003-032	3	WASHER, NYLON, 1/2 X 1/32
15	99003-018	2	WASHER, NYLON, 1/2 X 1/16
	18020-111	1	ASSEMBLY, ACCELERATOR DRIVE
16	18004-006	1	SHAFT, MAIN
17	10006-007	4	ROLLER, FEEDER, 1/2 BORE
18	10006-031	2	PULLEY, ACCELERATOR DRIVE
	-	4	SET SCREW, # 10-32 X 1/4
19	10006-004	2	PULLEY, O-RING DRIVE
	-	4	SET SCREW, #8-32 X 1/4
20	10006-013	1	ROLLER, NIP
	-	2	SET SCREW, #10-32 X 1/4
21	99003-032	4	WASHER, NYLON, 1/2 X 1/32
22	99017-004	2	COLLAR, 1/2 SHAFT

PITNEY BOWES

Sure-Feed Engineering

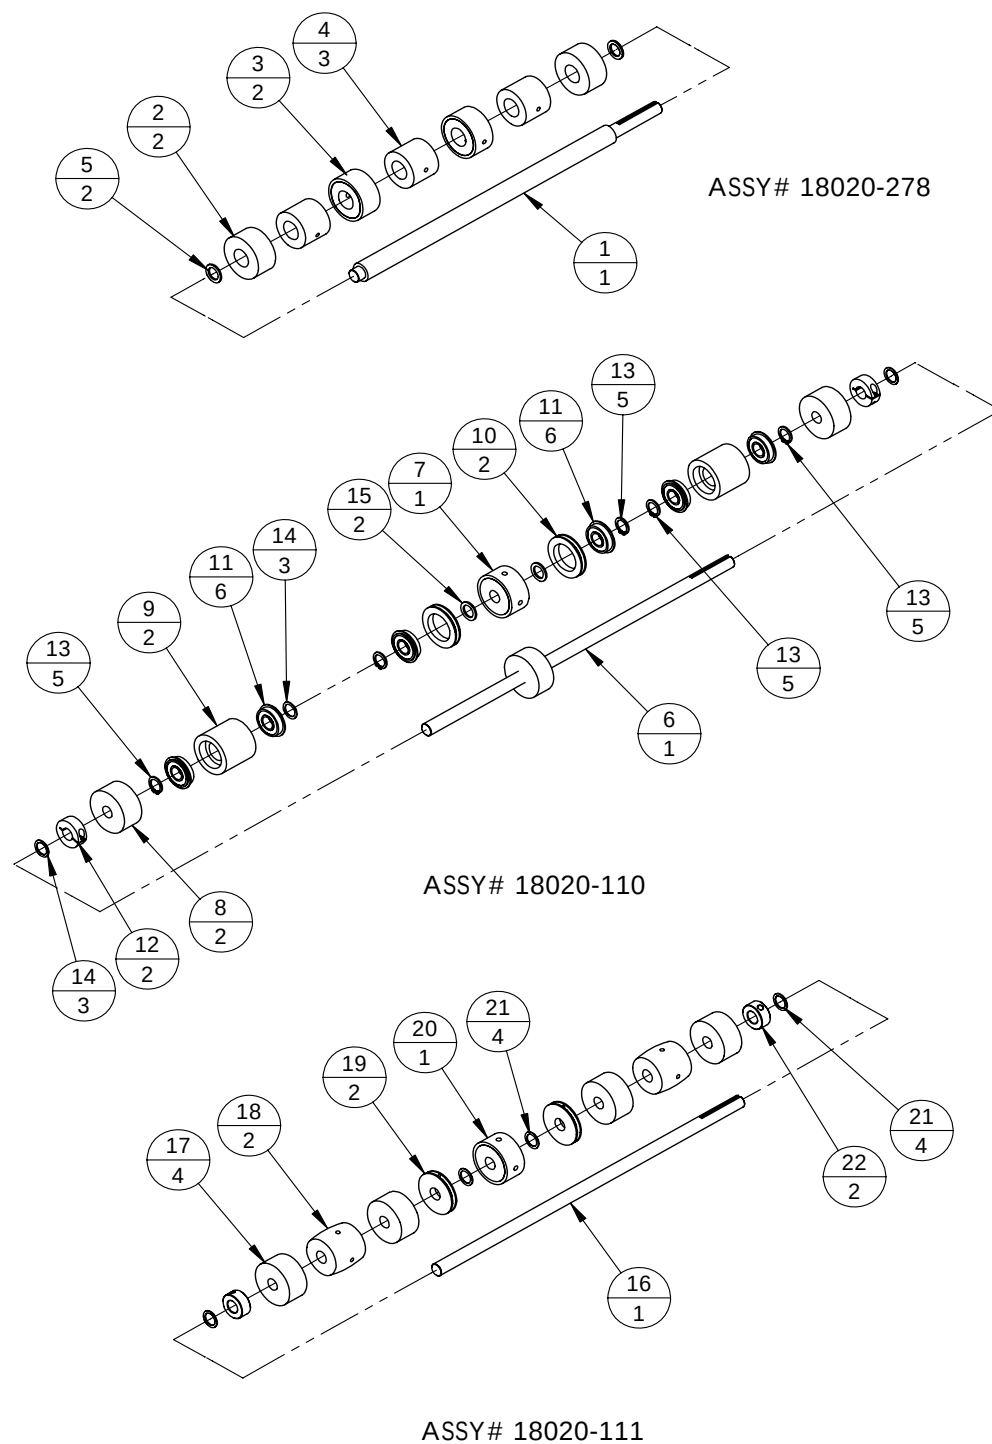


**FRICTION FEEDER (Fig. 3-5)
SEPERATOR ASSEMBLY (18020-069)**

ITEM	PART NO.	QTY.	DESCRIPTION
1	99001-018	1	MOTOR, SEPERATOR, 24VAC
2	99002-002	1	PULLEY, TIMING, 16MXL025, 3/16 B
	-	2	SET SCREW, #6-32 X 1/4
3	99002-001	1	PULLEY, TIMING, 100MXL025, 3/8 B
	-	2	SET SCREW, #10-24 X 1/2
4	10011-001	1	PLATE, SEPERATOR MOTOR MTG.
5	99003-001	3	BEARING, SEALED, 3/8 X 7/8
6	10006-001	2	WHEEL, SEPERATOR, 3" DIAM
	-	4	SET SCREW, #10-32 X 3/8
7	10004-028	1	STUD, SEPERATOR ADJ.
8	99004-001	1	KNOB, 5/16-24 FEMALE
9	99006-002	2	PIN, DOWEL, 5/16 X 3
10	99000-006	1	BELT, TIMING, 115MXL025
11	99005-045	1	SPRING, SEPERATOR
12	-	2	SCREW, FLAT HEAD, #6-32 X 3/8
13	99003-015	1	WASHER, NYLON, 5/16 X 1/16
14	-	1	HEX NUT, 5/16-24
15	10008-024	1	BAR, SEPERATOR RELEASE
16	18017-008	1	LABEL, SEPERATOR ADJ.
17	10007-001	1	BLOCK, SEPERATOR
18	10012-002	2	STANDOFF, SEPERATOR MOTOR
19	10004-001	1	SHAFT, SEPERATOR
20	99003-017	4	WASHER, NYLON, 3/8 X 1/16
21	99003-016	2	WASHER, NYLON, 1/2 X 1/32
22	-	2	WASHER, FLAT, 5/16
23	10007-010	1	BLOCK, SEPERATOR ADJ.
24	-	2	SCREW, SKT HEAD, #6-32 X 2-1/2
25	10005-003	1	SHROUD, SEPERATOR
26	99006-001	1	PIN, DOWEL, 3/8 X 1-1/4
27	10014-002	8	O-RING, SEPERATOR, 3"

PITNEY BOWES

Sure-Feed Engineering


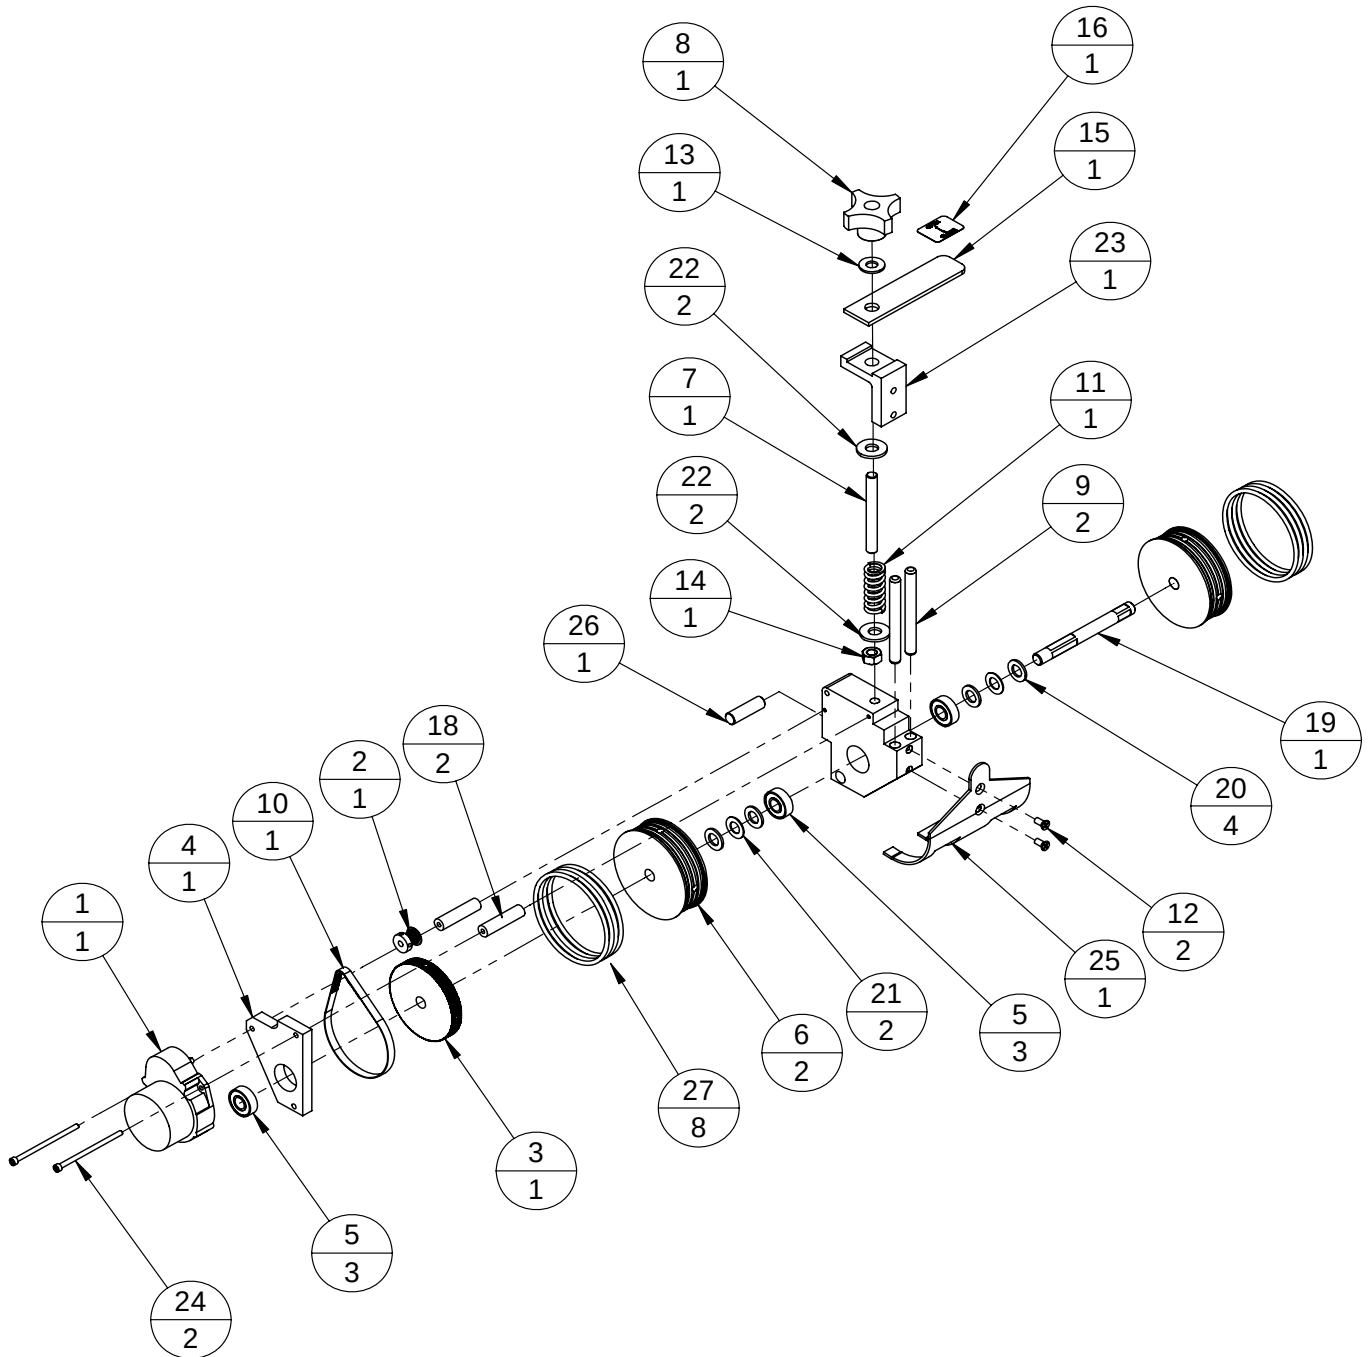


**FRICTION FEEDER (Fig. 3-6)
 PAPER HOPPER / TONGUE ASSEMBLIES**

ITEM	PART NO.	QTY.	DESCRIPTION
	18020-095	1	ASSEMBLY, TONGUE (10X13)
1	18007-090	1	BLOCK, BALL RACK (10X13)
2	10007-012	1	BLOCK, TONGUE ADJ.
3	10012-003	3	SPACER, TONGUE
4	10006-016	2	ROLLER TONGUE
5	10008-021	2	BAR, TONGUE SUPPORT
6	99037-001	2	BALL CHROME STEEL, 3/4" DAIM
7	-	4	SCREW, SKT HEAD, #10-24 X 1/2
8	-	4	SCREW, SKT HEAD, #8-32 X 1/2
9	-	2	SCREW, FLAT HEAD, #8-32 X 1/2
10	10013-041	1	COVER, BALL RACK
11	-	1	SCREW, SKT HEAD, #10-24 X 3/8
12	-	1	HEX NUT, 5/16-24
13	-	2	FLAT WASHER, 5/16
14	10004-055	1	STUD, TONGUE ADJ.
15	99005-006	1	SPRING, COMPRESSION
16	10006-028	1	DISK, TONGUE ADJ.
	18020-260	1	ASSEMBLY, FEEDER HOPPER
17	18003-010	1	CROSSBAR, SEPERATOR
18	10009-046	2	BRACKET, SIDE GUIDE MTG.
19	10005-009	1	SIDE GUIDE, RH
20	10005-008	1	SIDE GUIDE, LH
21	10005-002	1	GUIDE FRONT PAPER
22	99004-003	2	HANDLE, RATCHET, #10-24 X 5/8
23	99004-002	2	KNOB, #10 SCREW
24	-	2	SCREW, SKT HEAD, #10-32 X 1/2
25	-	4	SCREW, FLAT HEAD, #6-32 X 1/2
26	-	4	SCREW, FLAT HEAD, #10-24 X 3/8

PITNEY BOWES

Sure-Feed Engineering

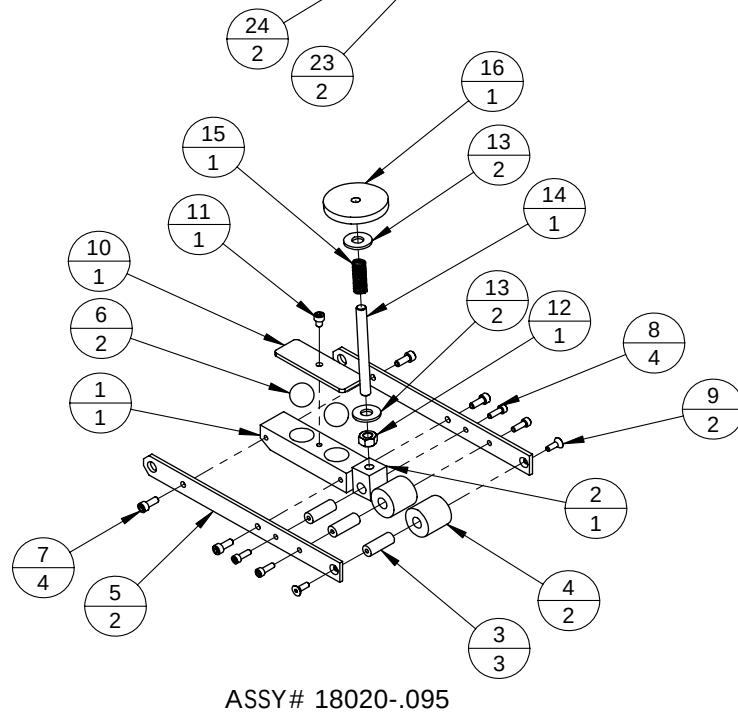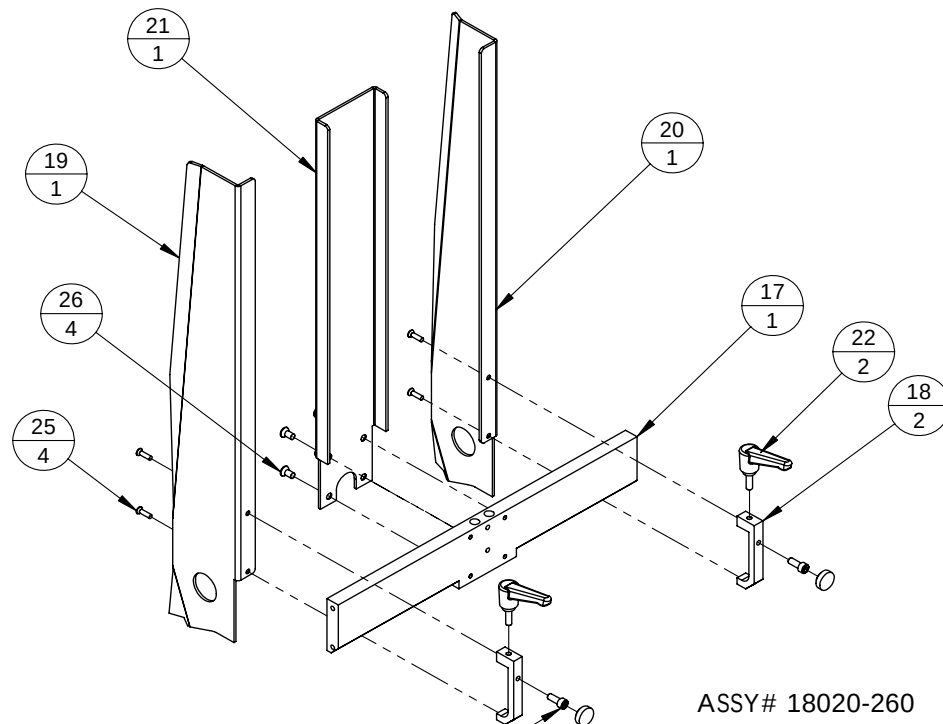


**FRICITION FEEDER (Fig. 3-7)
DOUBLE DETECT / TENSIONER ASSEMBLIES**


ITEM	PART NO.	QTY.	DESCRIPTION
	18020-068	1	ASSEMBLY, DOUBLE DETECT
1	18009-001	1	BRACKET, DBL DETECT MTG.
2	10009-013	1	BRACKET, PIVOT, TUNING FORK
3	10004-052	1	SHAFT, DBL DETECT PIVOT
4	10009-012	1	BRACKET, TUNING FORK
5	10004-053	1	SHAFT, DBL DETECT
6	99032-003	1	STUD, #10-32 X 1-1/2
7	99004-005	1	KNOB, FEMALE, #10-32
8	99005-007	1	SPRING, GATE ADJ.
9	99003-002	2	BEARING, 1/4 X 5/8 SEALED
10	99003-001	1	BEARING, 3/8 X 7/8 SEALED
11	99003-005	1	BUSHING, SLEEVE, 1/4 X 3/8 X 5/16
12	99022-001	2	SNAP RING, ¼
13	98009-004	1	SENSOR, DBL DETECT SWITCH
14	-	1	NUT, HEX, #10-32
15	-	1	FLAT WASHER, #10
16	-	2	SCREW, SKT HEAD, #8-32 X 1/2
17	-	1	SCREW, SKT HEAD, #10-24 X 5/8
18	-	1	NUT, HEX, #6-32
19	-	1	SCREW, SET, #6-32 X 7/8
20	-	1	SCREW, BUTTON HEAD, #4-40 X 1/2
	18020-153	1	ASSEMBLY, TENSIONER
21	18004-031	1	SHAFT, STUB IDLER
22	18006-011	1	PULLEY, FLAT IDLER, 1-1/2" OD X 3/4" W
23	99003-007	2	BEARING, 1/2 X 1-1/8 SEALED W/ S.R.
24	99003-018	1	WASHER, NYLON, 1/2 X 1/16
25	99022-004	1	SNAP RING, 1/2

PITNEY BOWES

Sure-Feed Engineering

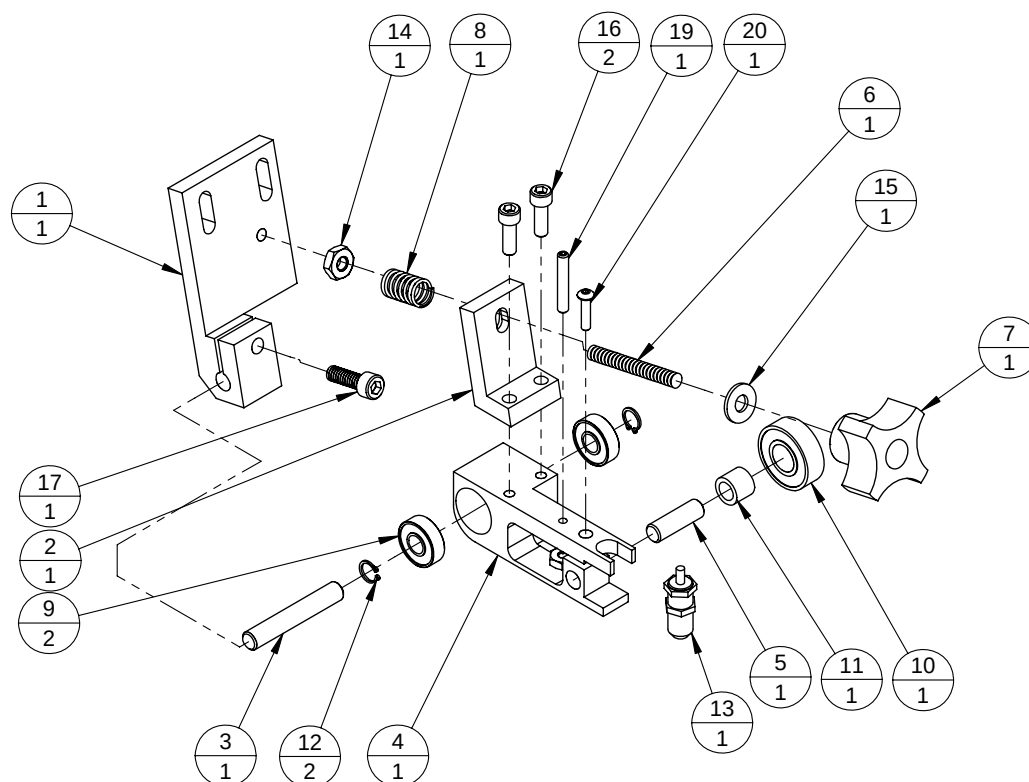

ASSY# 18020-068

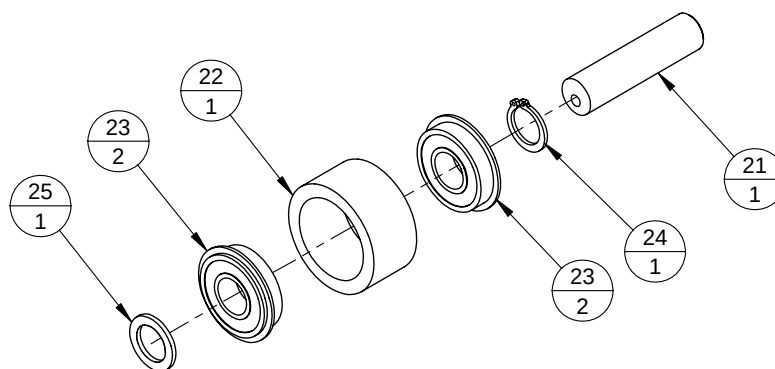


ASSY# 18020-153

FRICITION FEEDER (Fig. 3-8)
FEEDER DRAG STRAP ASSEMBLY (18020-073)

ITEM	PART NO.	QTY.	DESCRIPTION
1	18009-014	1	BRACKET, DRAG STRAP MTG.
2	18009-029	1	BRACKET, DRAG STRAP PIVOT
3	18014-010	1	DRAG STRAP, FEEDER
4	-	2	SCREW, SKT HEAD, #10-24 X 1/2
5	-	2	SCREW, PAN HEAD, #6-32 X 1/4
6	99004-002	1	KNB, #10 SCREW

PITNEY BOWES

Sure-Feed Engineering

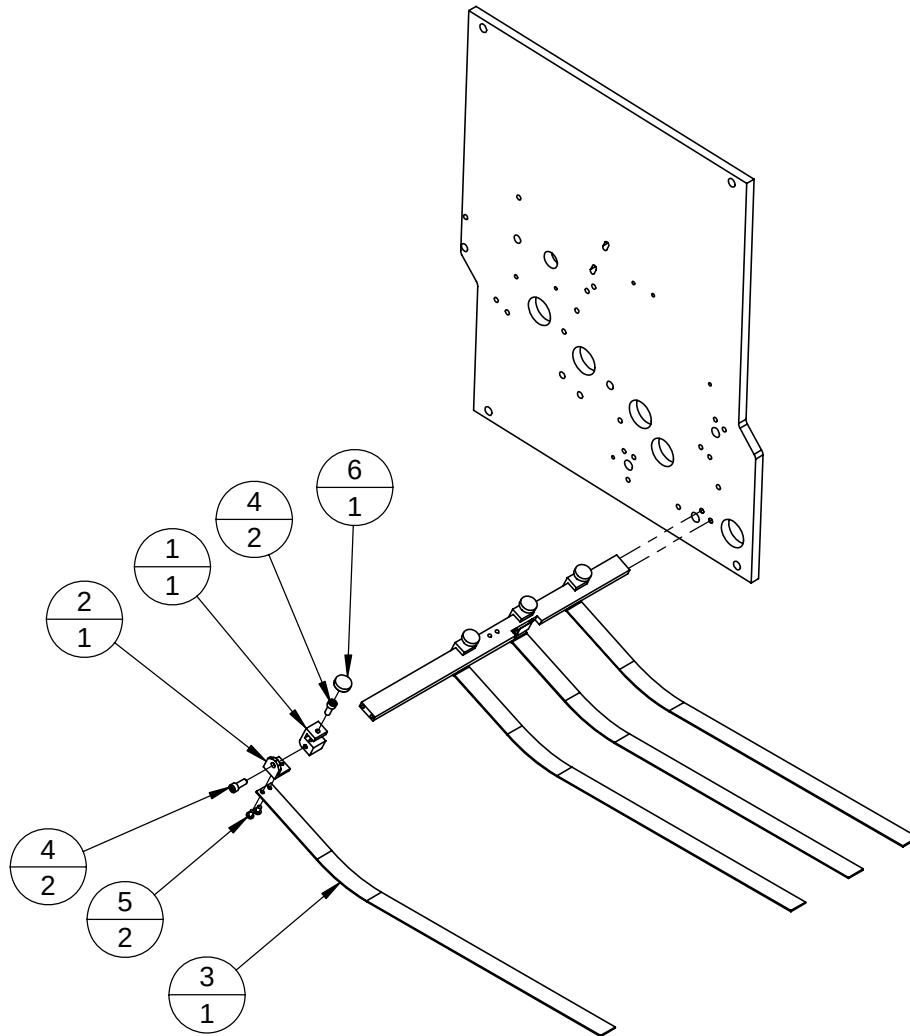


FRICTION FEEDER – ELECTRICAL (Fig. 3-9)
REAR FEEDER PLATE ASSEMBLY (18021-105)

ITEM	PART NO.	QTY.	DESCRIPTION
1	18021-087	1	ASSEMBLY, PLUG
2	98001-022	4"	DIN RAIL, PHOENIX
3	98001-010	12	TERMINAL BLOCK, SPRING, ENTRELEC
4	98001-014	2	TERMINAL BLOCK, END STOP, ENTRELEC
5	98001-026	1	CIRCUIT DIVIDER
6	98020-029	1	CAPACITOR, 60HZ
7	98012-004	10"	DUCT, 1" X 1" WIREWAY W/ COVER
8	98009-051	1	SENSOR, RETRO REFLECTIVE


PITNEY BOWES

Sure-Feed Engineering

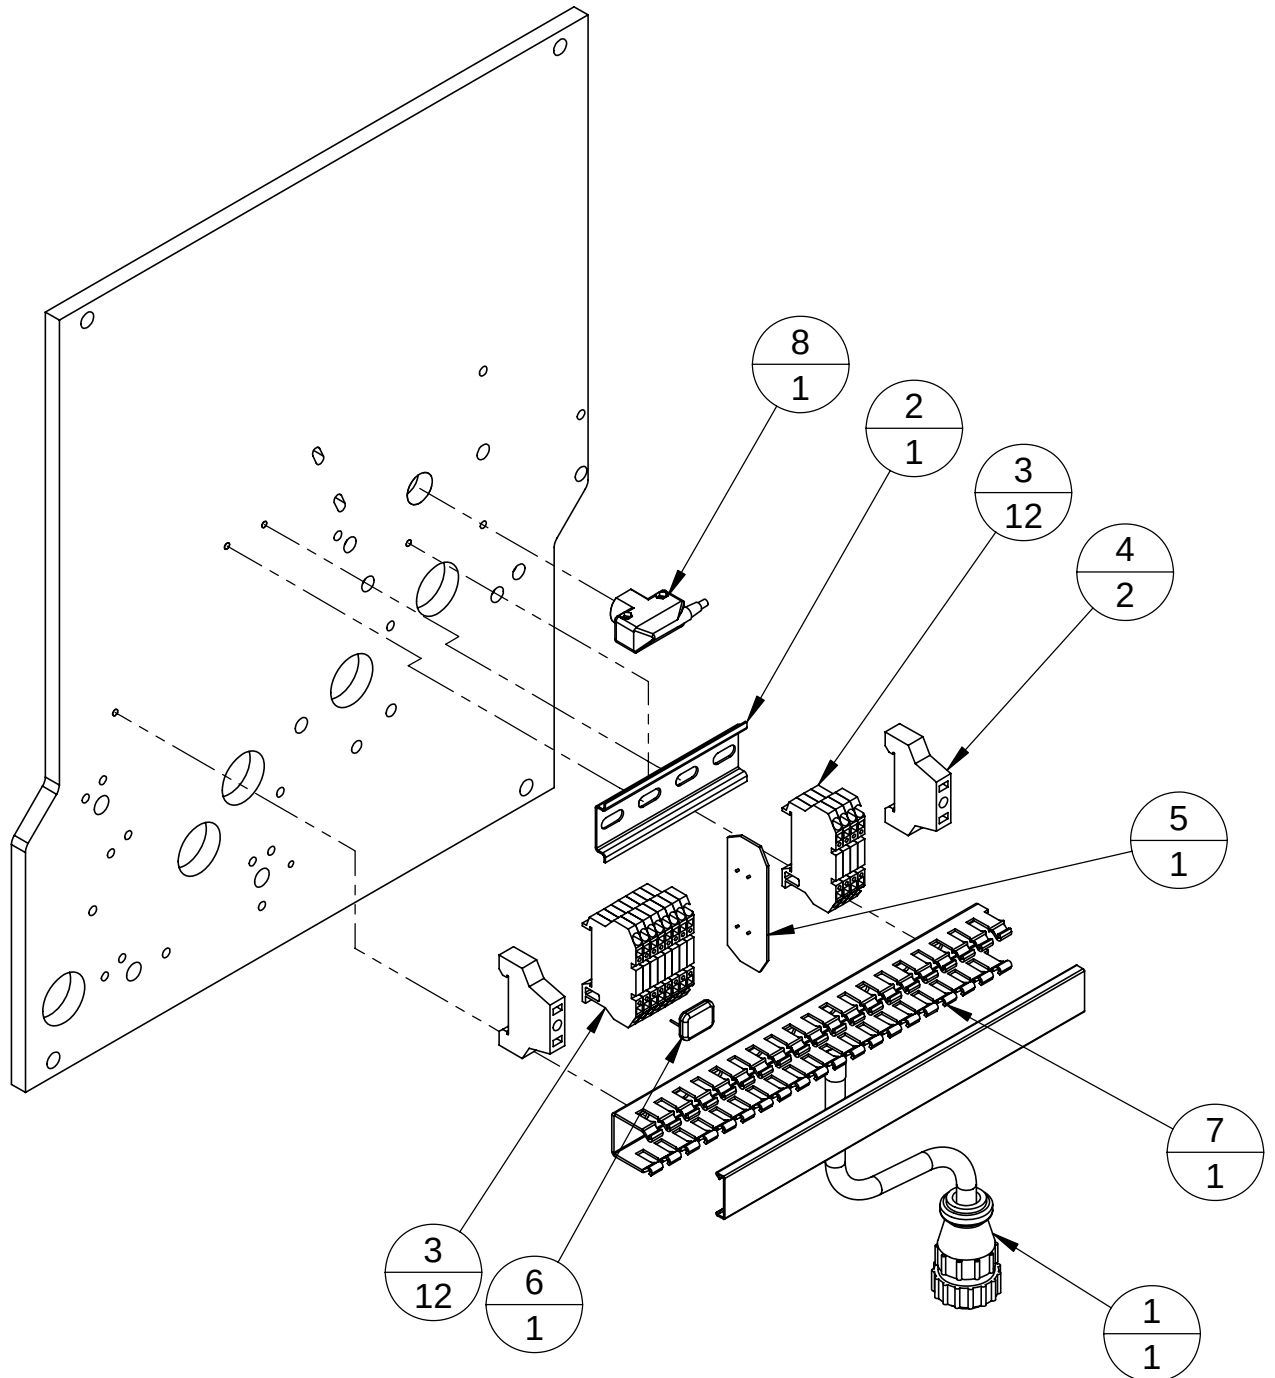

PITNEY BOWES
Sure-Feed Engineering

FRICTION FEEDER ***6X9***

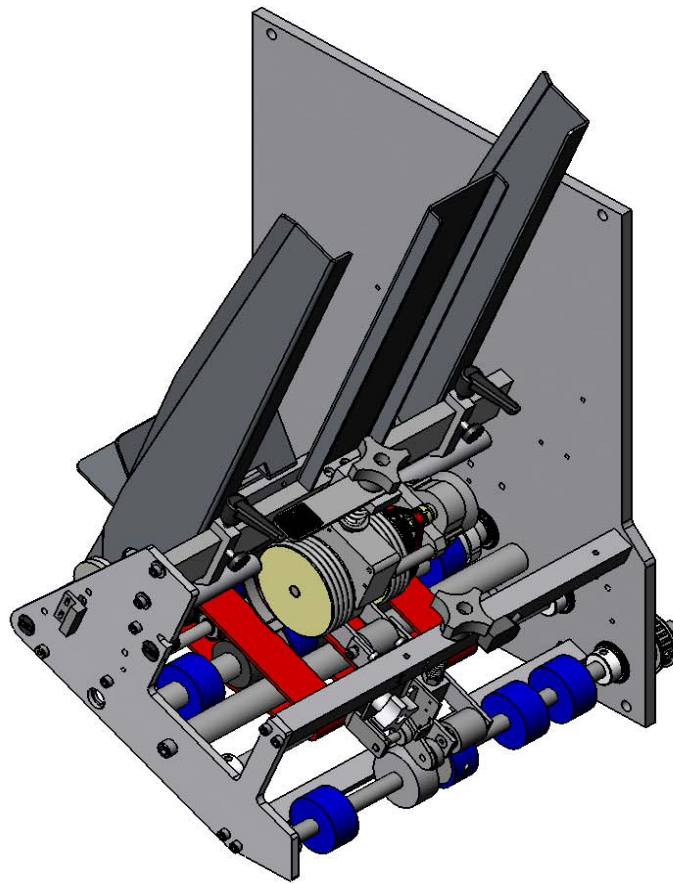

**FRICITION FEEDER ASSEMBLY (Fig. 4-1)
(18020-366)**


ITEM	PART NO.	QTY.	DESCRIPTION
1	SEE FIG. 4-2	1	ASSEMBLIES, FEEDER SHAFTS
2	SEE FIG. 4-6	1	ASSEMBLY, PAPER HOPPER (18020-260)
3	SEE FIG. 4-5	1	ASSEMBLY, SEPERATOR (18020-069)
4	SEE FIG. 4-6	1	ASSEMBLY, TONGUE (18020-070)
5	SEE FIG. 4-2	1	ASSEMBLY, FEEDER TIMING
6	SEE FIG. 4-7	1	ASSEMBLY, DOUBLE DETECT (18020-068)
7	18011-143	1	PLATE, FEEDER MTG. (6X9, ROTARY)
8	10000-017	1	SIDEFRAME, COLLATOR FEEDER (6X9)
9	18008-013	1	BAR, SENSOR / DRAG STRAP MTG.
10	18008-012	1	BAR, DOUBLE DETECT MTG.
11	18003-011	1	BAR, BACK SUPPORT (6X9)
12	18008-124	1	BAR, CAM FOLLOWER SUPPORT (6X9)
13	10005-005	1	SUPPORT, PAPER SLIDE (6X9)
14	10005-104	1	GUIDE, PAPER, REAR WEDGE
15	10007-003	1	NUT, PAPER SLIDE
16	10007-004	1	WASHER, PAPER SLIDE
17	99004-002	1	KNOB, #10 SCREW
18	99006-020	1	ROLL PIN, 5/32 X 3/4
19	99006-031	1	PIN, SPRING CLIP, GROOVED
20	99003-002	1	BEARING, 1/4 X 5/8 SEALED
21	98009-037	1	SENSOR, SENDER, THRU BEAM
22	98009-002	1	SENSOR, RECIEVER, THRU BEAM
23	18011-075	1	PLATE, ADAPTOR, LOWER SENSOR
24	99003-007	8	BEARING, 1/2 X 1-1/8 SEALED W/ S.R.
25	99036-003	4	SHIM, BEARING, 3/4 X 1-1/8 X .006
26	18008-093	2	BAR, SAFETY
27	98019-066	1	REFLECTOR

**FRICITION FEEDER ASSEMBLY (Fig. 4-1)
(18020-366)**

ITEM	PART NO.	QTY.	DESCRIPTION
28	99039-062	2	MAGNETIC CATCH
29	98000-036	1	REED SWITCH
30	99033-006	1	SHOULDER BOLT, 1/4 X 1/4
31	99033-004	1	SHOULDER BOLT, 1/4 X 3/8
32	99003-073	1	BUSHING, SLEEVE, 1/4 X 5/16 X 3/8
33	99003-072	1	BUSHING, SLEEVE, 1/4 X 5/16 X 1/4
34	99003-034	1	WASHER, NYLON, 1/2 X 1/16
35	99017-004	2	COLLAR, 1/2" SHAFT
36	99003-032	2	WASHER, NYLON, 1/2 X 1/32
37	98009-051	1	SENSOR, P&F, RETRO REFLECTIVE
38	-	1	BOLT, SKT HEAD, 5/16-18 X 5/8
39	-	10	SCREW, SKT HEAD, #10-32 X 5/8
40	-	6	FLAT WASHER, #10
41	-	8	SCREW, SKT HEAD, #8-32 X 5/8
42	-	1	BOLT, BUTTON HEAD, 5/16-18 X 5/8
43	-	1	BOLT, BUTTON HEAD, 1/4-20 X 1/2
44	-	2	SCREW, SKT HEAD, #10-32 X 1/2
45	-	1	SCREW, SKT HEAD, #10-24 X 5/8
46	-	4	SCREW, SKT HEAD, #10-32 X 3/8
47	99005-012	1	SPRING, EXTENSION (NOT SHOWN) (ATTACHES TO ITEM #19)

PITNEY BOWES

Sure-Feed Engineering

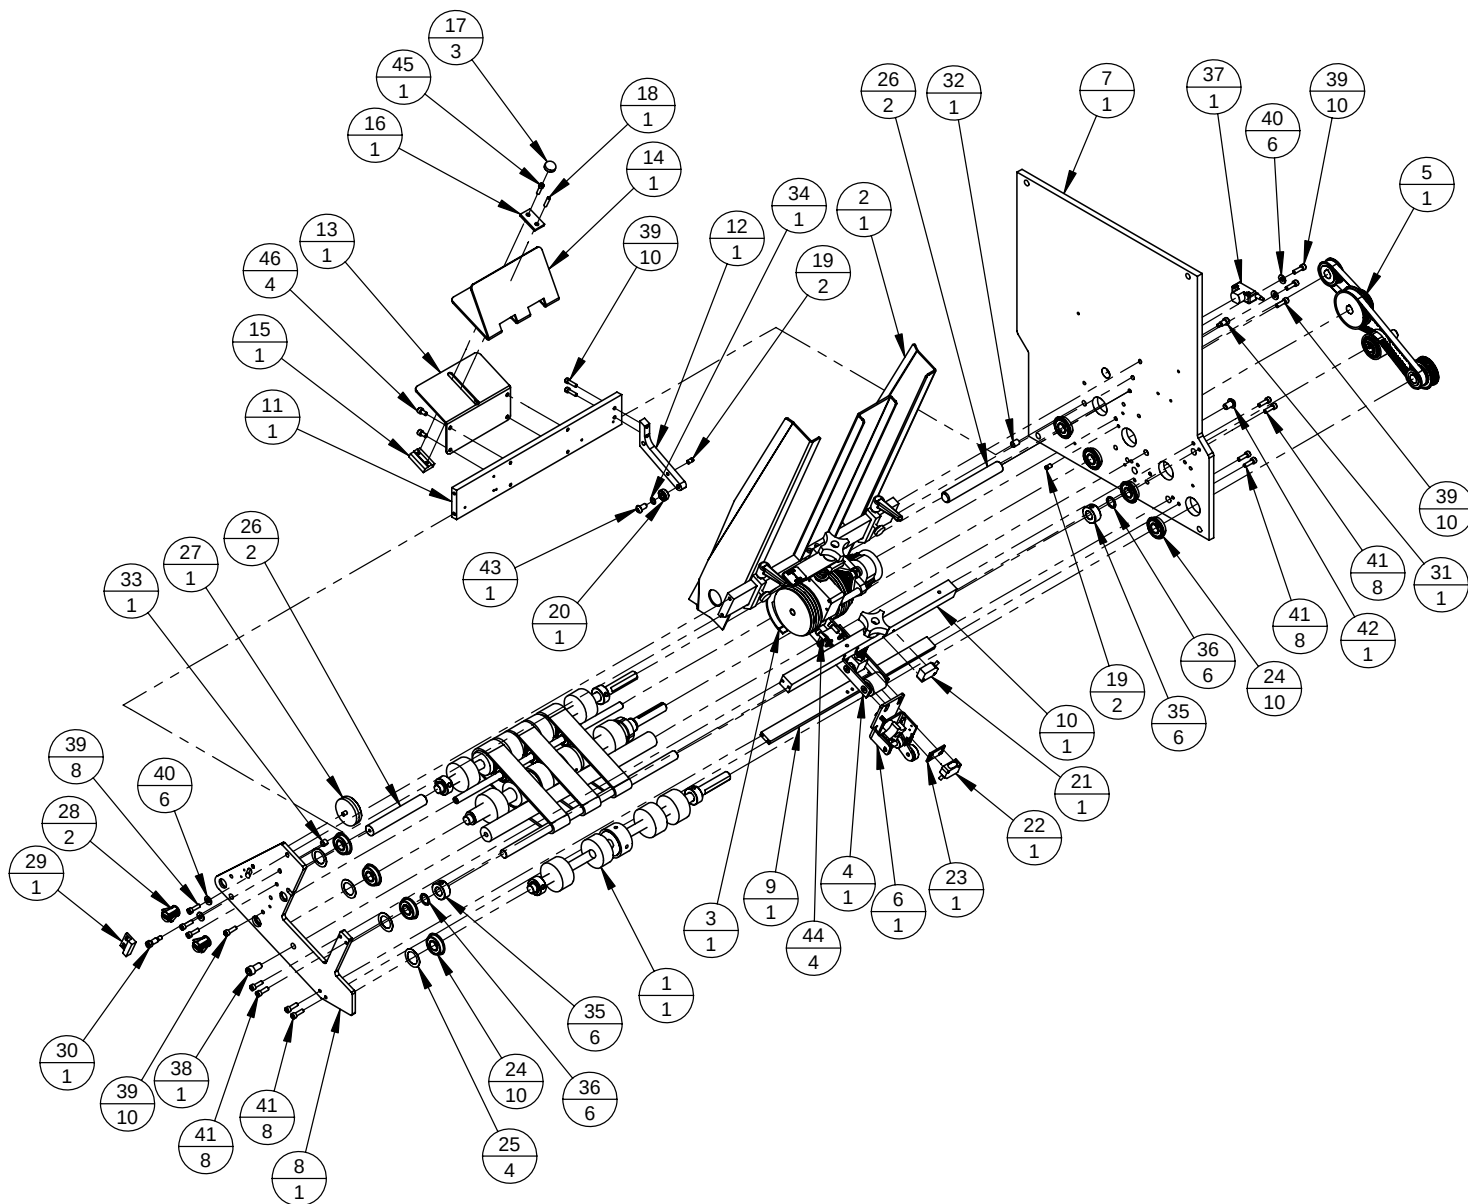


FRICITION FEEDER (Fig. 4-2)
FEEDER SHAFT / TIMING ASSEMBLIES

ITEM	PART NO.	QTY.	DESCRIPTION
1	SEE FIG. 4-3	1	ASSEMBLY, CROWN DRIVE SHAFT (18020-109)
2	SEE FIG. 4-3	1	ASSEMBLY, IDLER SUPPORT SHAFT (18020-107)
3	SEE FIG. 4-4	1	ASSEMBLY, DOUBLE DETECT SHAFT (18020-106)
4	SEE FIG. 4-4	1	ASSEMBLY, NIP SHAFT (18020-279)
5	SEE FIG. 4-7	1	ASSEMBLY, TENSIONER (18020-153)
6	18004-003	1	SHAFT, MAIN SUPPORT
7	99000-004	3	BELT, RED GUM
8	18004-007	1	SHAFT, FRONT
9	99000-001	1	BELT, TIMNG, 90XL037
10	99000-027	1	BELT, TIMING, 160XL037
11	99002-032	1	PULLEY, TIMING, 16XL037, 1/2B W/ KEYWAY
	-	2	SET SCREW, #8-32 X 1/8
12	99002-031	1	PULLEY, TIMING, 24XL037, 1/2B W/ KEYWAY
	-	2	SET SCREW, #10-32 X 1/4
13	99002-017	1	PULLEY, TIMING, 32XL037, 1/2 B W/ KEYWAY
	-	2	SET SCREW, #10-32 X 3/8
14	99002-054	2	PULLEY, TIMING, 20XL037, 1/2B
	-	4	SET SCREW, #10-32 X 1/4

PITNEY BOWES

Sure-Feed Engineering


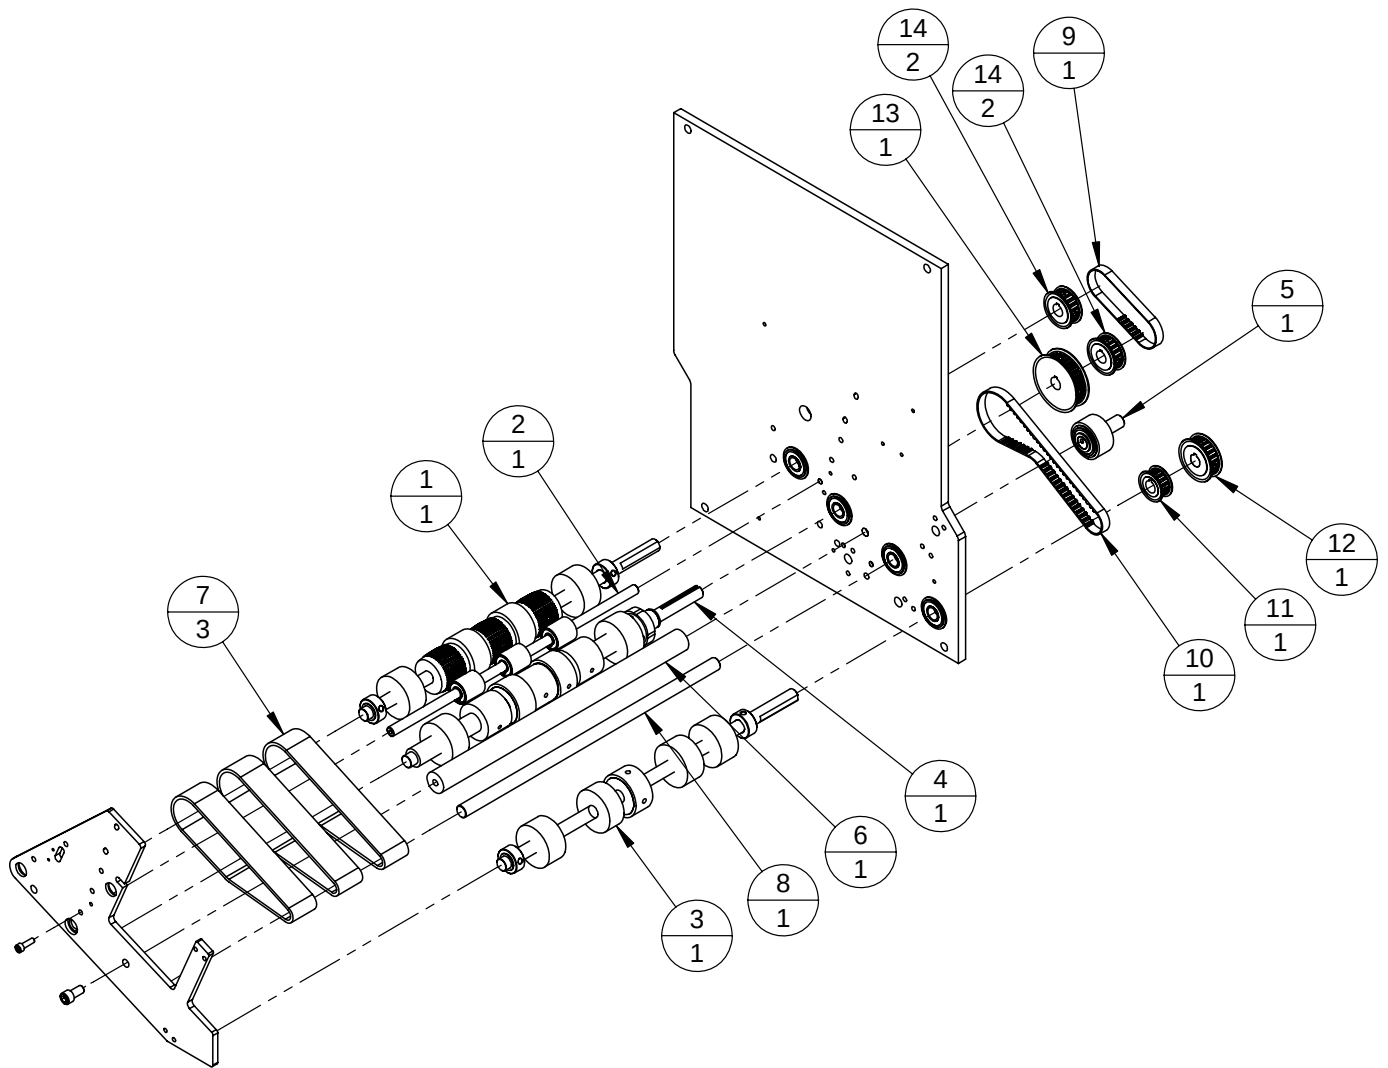


FRICITION FEEDER (Fig. 4-3)
CROWN DRIVE / IDLER SUPPORT SHAFT ASSEMBLIES

ITEM	PART NO.	QTY.	DESCRIPTION
	18020-109	1	ASSEMBLY, CROWNED DRIVE SHAFT
1	18004-058	1	SHAFT, ELEVATOR BELT DRIVE
2	10006-018	3	PULLEY, CROWNED DRIVE
	-	6	SET SCREW, #10-32 X 1/4
3	10006-007	4	ROLLER, FEEDER, 1/2 B
4	99003-032	2	WASHER, NYLON, 1/2 X 1/32
5	99017-004	2	COLLAR, 1/2" SHAFT
6	99003-018	2	WASHER, NYLON, 1/2 X 1/16
	18020-107	1	ASSEMBLY, IDLER SUPPORT SHAFT
7	18004-004	1	SHAFT, IDLER SUPPORT
8	10006-012	3	ROLLER, IDLER
9	99003-008	6	BEARING, 3/8 X 7/8 SEALED
10	99022-004	6	SNAP RING, 3/8

PITNEY BOWES

Sure-Feed Engineering

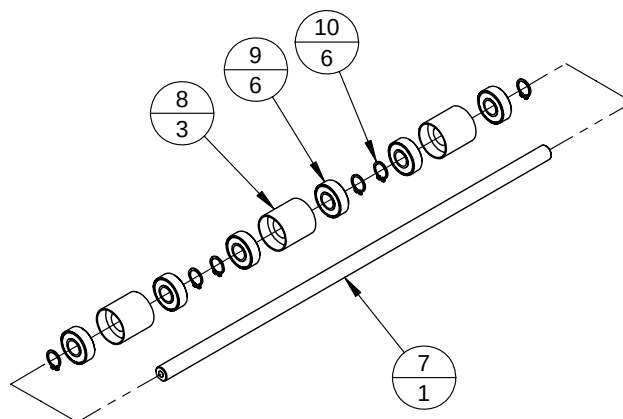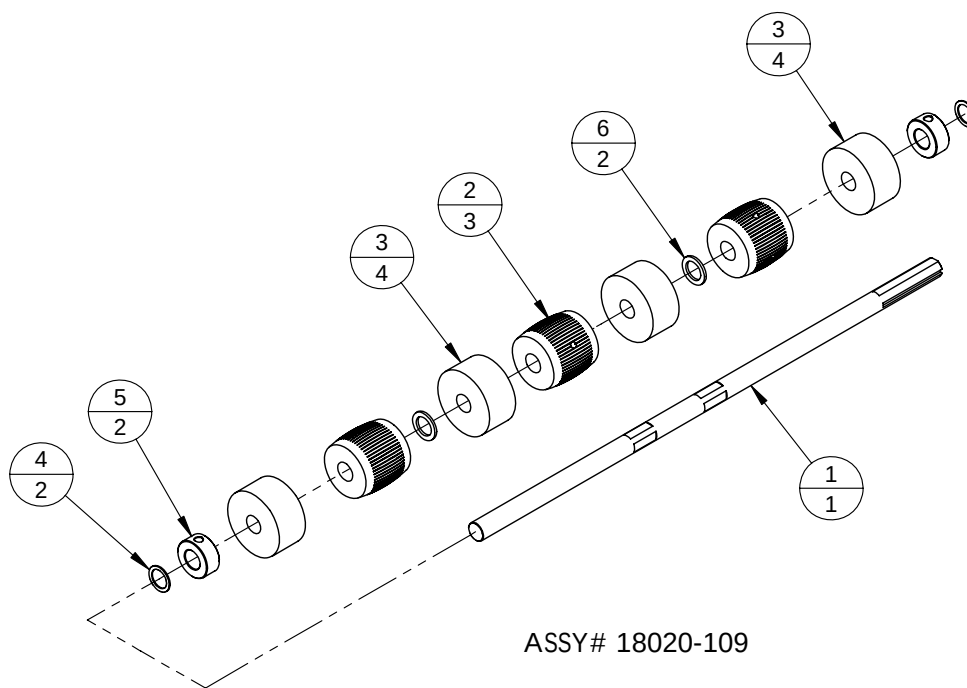


FRICITION FEEDERS (Fig. 4-4)
NIP & DBL DETECT SHAFT ASSEMBLIES


ITEM	PART NO.	QTY.	DESCRIPTION
	18020-279	1	ASSEMBLY, NIP SHAFT
1	18004-091	1	SHAFT, MAIN DRIVE (NIP)
2	10006-069	2	ROLLER, FEEDER, 3/4" B
3	10006-070	2	ROLLER, NIP, 3/4" B
	-	4	SET SCREW, #10-32 X 1/4
4	10006-071	3	PULLEY, MATE, 3/4" B
	-	6	SET SCREW, #10-32 X 1/4
5	99003-018	2	WASHER, NYLON, 1/2 X 1/16
6	18016-016	1	CAM, VIBRATING PAPER SLIDE
	18020-106	1	ASSEMBLY, DOUBLE DETECT SHAFT
7	18004-064	1	SHAFT, DBL DETECT
8	10006-007	3	ROLLER, FEEDER, 1/2" B
9	10006-013	1	ROLLER, NIP, 1/2" B
	-	2	SET SCREW, #10-32 X 1/4
10	99017-013	2	COLLAR, 1/2" SHAFT
11	99003-032	2	WASHER, NYLON, 1/2 X 1/32

PITNEY BOWES

Sure-Feed Engineering

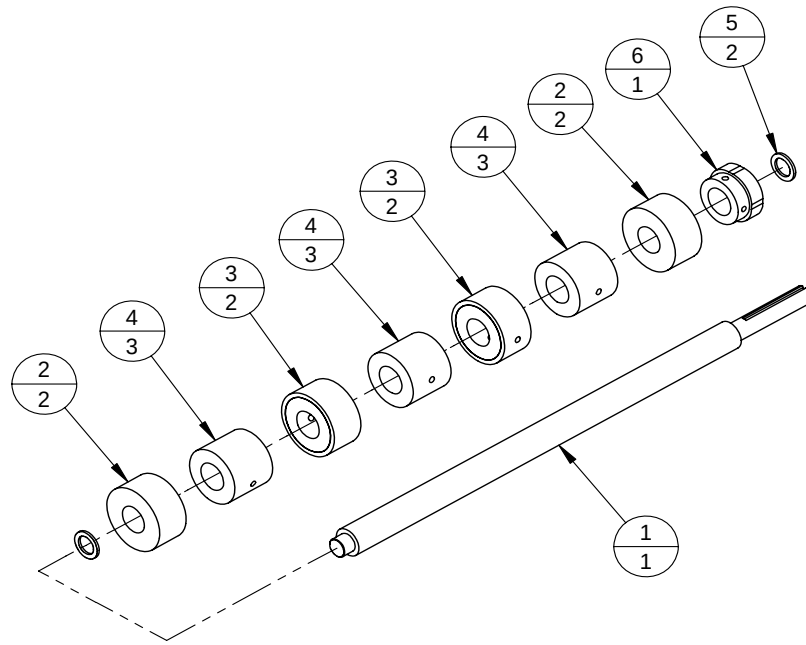

ASSY# 18020-279

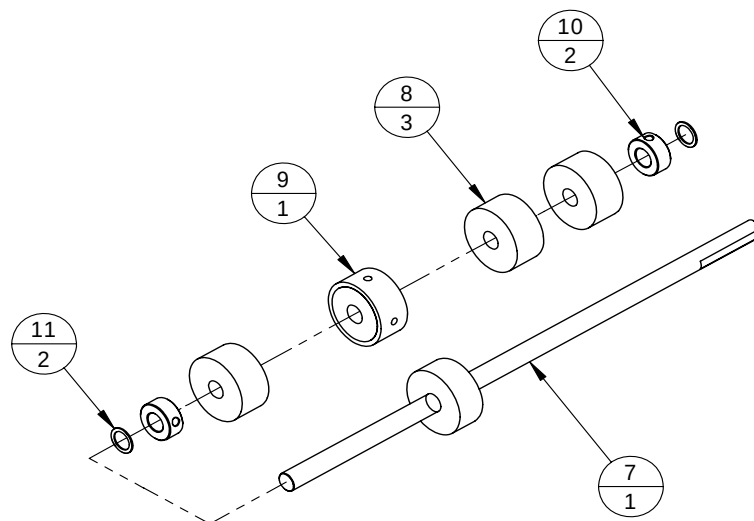


ASSY# 18020-106

**FRICTION FEEDER (Fig. 4-5)
SEPERATOR ASSEMBLY (18020-069)**

ITEM	PART NO.	QTY.	DESCRIPTION
1	99001-018	1	MOTOR, SEPERATOR, 24VAC
2	99002-002	1	PULLEY, TIMING, 16MXL025, 3/16 B
	-	2	SET SCREW, #6-32 X 1/4
3	99002-001	1	PULLEY, TIMING, 100MXL025, 3/8 B
	-	2	SET SCREW, #10-24 X 1/2
4	10011-001	1	PLATE, SEPERATOR MOTOR MTG.
5	99003-001	3	BEARING, SEALED, 3/8 X 7/8
6	10006-001	2	WHEEL, SEPERATOR, 3" DIAM
	-	2	SET SCREW, #10-24 X 3/8
7	10004-028	1	STUD, SEPERATOR ADJ.
8	99004-001	1	KNOB, 5/16-24 FEMALE
9	99006-002	2	PIN, DOWEL, 5/16 X 3
10	99000-006	1	BELT, TIMING, 115MXL025
11	99005-045	1	SPRING, SEPERATOR
12	-	2	SCREW, FLAT HEAD, #6-32 X 3/8
13	99003-015	1	WASHER, NYLON, 5/16 X 1/16
14	-	1	HEX NUT, 5/16-24
15	10008-024	1	BAR, SEPERATOR RELEASE
16	18017-008	1	LABEL, SEPERATOR ADJ.
17	10007-001	1	BLOCK, SEPERATOR
18	10012-002	2	STANDOFF, SEPERATOR MOTOR
19	10004-001	1	SHAFT, SEPERATOR
20	99003-017	4	WASHER, NYLON, 3/8 X 1/16
21	99003-016	2	WASHER, NYLON, 1/2 X 1/32
22	-	2	WASHER, FLAT, 5/16
23	10007-010	1	BLOCK, SEPERATOR ADJ.
24	-	2	SCREW, SKT HEAD, #6-32 X 2-1/2
25	10005-003	1	SHROUD, SEPERATOR
26	99006-001	1	PIN, DOWEL, 3/8 X 1-1/4
27	10014-002	8	O-RING, SEPERATOR, 3"

PITNEY BOWES

Sure-Feed Engineering

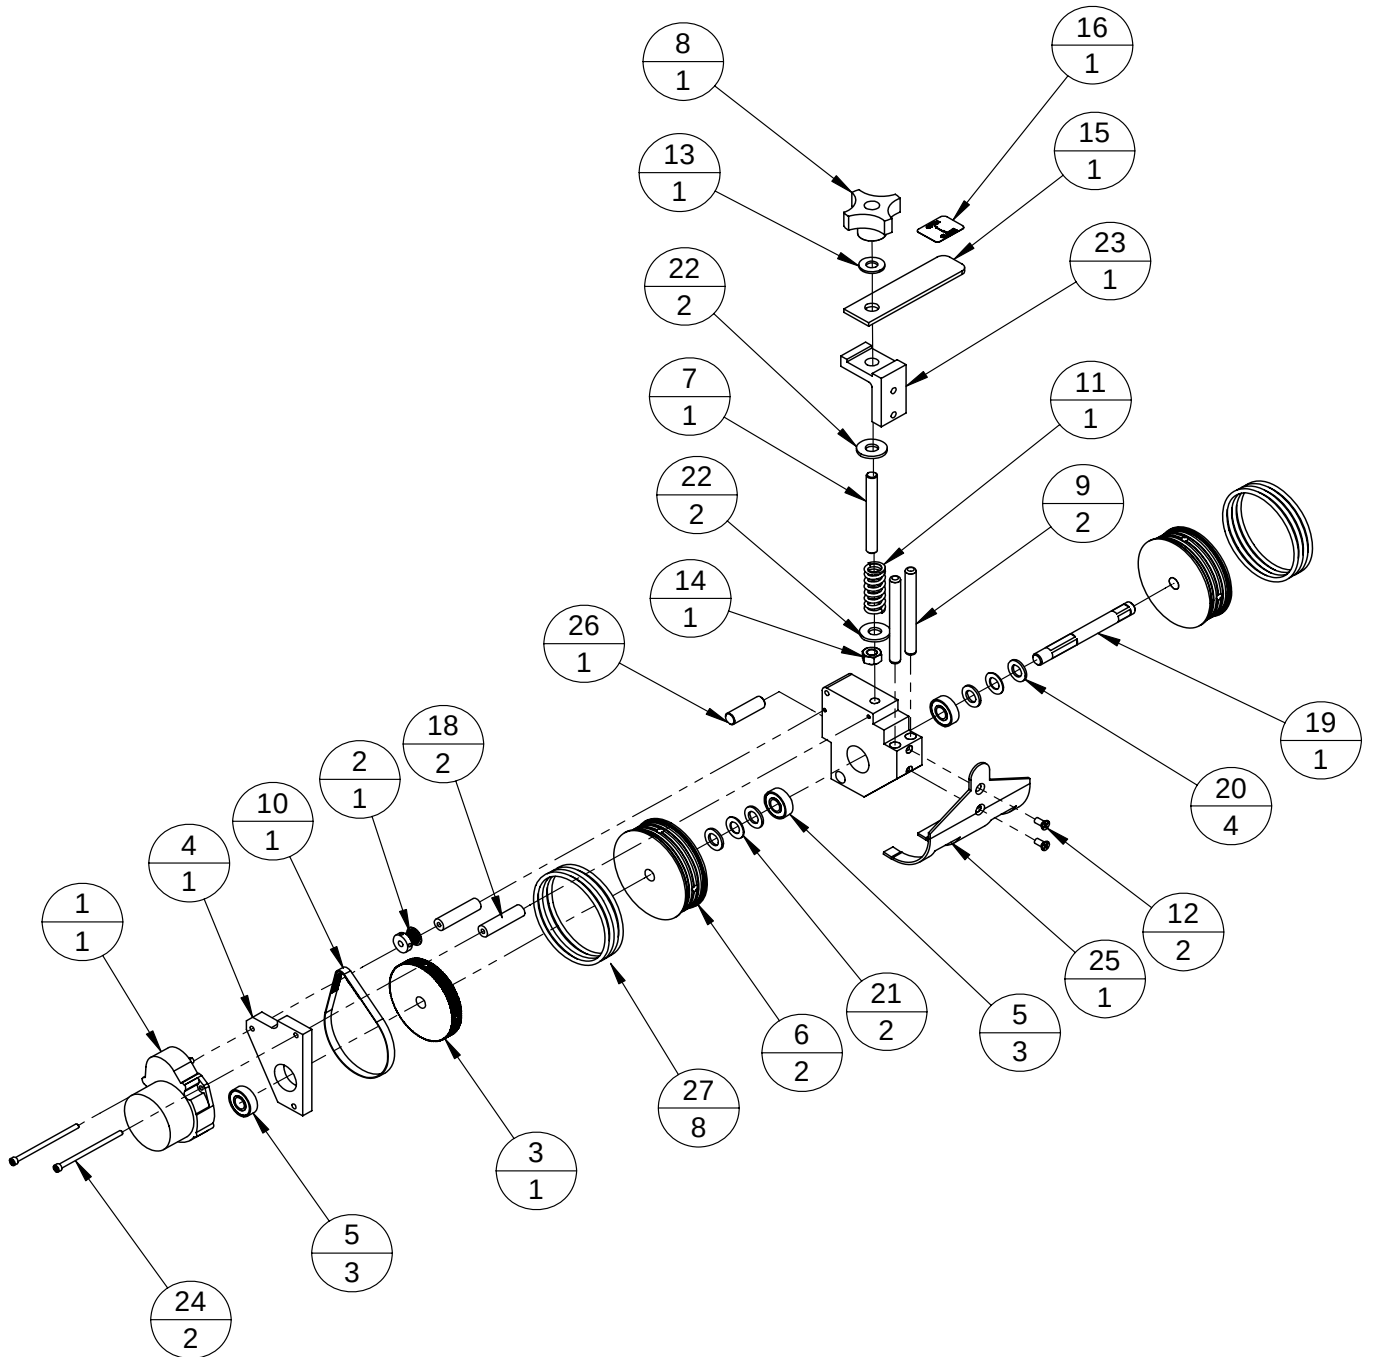


**FRICITION FEEDER (Fig. 4-6)
 PAPER HOPPER / TONGUE ASSEMBLIES**


ITEM	PART NO.	QTY.	DESCRIPTION
	18020-070	1	ASSEMBLY, TONGUE (6X9)
1	10008-015	2	PLATE, TONGUE, REAR
2	10008-016	1	PLATE, TONGUE, RH FRONT
3	10008-017	1	PLATE, TONGUE, LH FRONT
4	10012-003	2	SPACER, TONGUE
5	10004-054	2	SHAFT, TONGUE
6	10006-016	3	ROLLER, TONGUE
7	10007-012	1	BLOCK, TONGUE ADJ.
8	10004-055	1	STUD, TONGUE ADJ.
9	99004-001	1	KNOB, 5/16-24 FEMALE
10	99003-015	1	WASHER, NYLON, 5/16 X 1/16
11	99003-017	4	WASHER, NYLON, 3/8 X 1/16
12	99022-003	2	SNAP RING, 3/8
13	99005-006	1	SPRING, SEPERATOR ADJ.
14	-	1	NUT HEX, 5/16-24
15	-	4	SCREW, SKT HEAD, #10-24 X 1/2
16	-	4	SCREW, FLAT HEAD, #10-24 X 1/2
	18020-260	1	ASSEMBLY, FEEDER HOPPER
17	18003-010	1	CROSSBAR, SEPERATOR
18	10009-046	2	BRACKET, SIDE GUIDE MTG.
19	10005-009	1	SIDE GUIDE, RH
20	10005-008	1	SIDE GUIDE, LH
21	10005-002	1	GUIDE FRONT PAPER
22	99004-003	2	HANDLE, RATCHET, #10-24 X 5/8
23	99004-002	2	KNOB, #10 SCREW
24	-	2	SCREW, SKT HEAD, #10-32 X 1/2
25	-	4	SCREW, FLAT HEAD, #6-32 X 1/2
26	-	4	SCREW, FLAT HEAD, #10-24 X 3/8

PITNEY BOWES

Sure-Feed Engineering

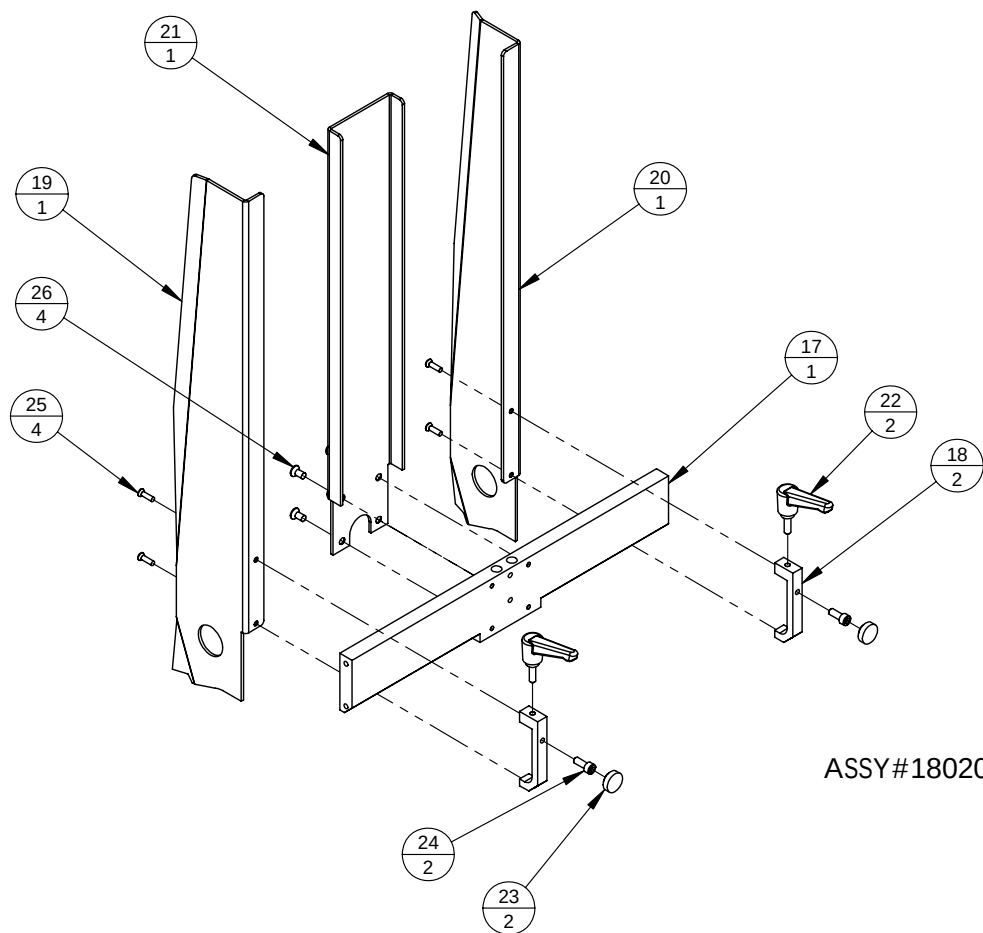

ASSY#18020-260

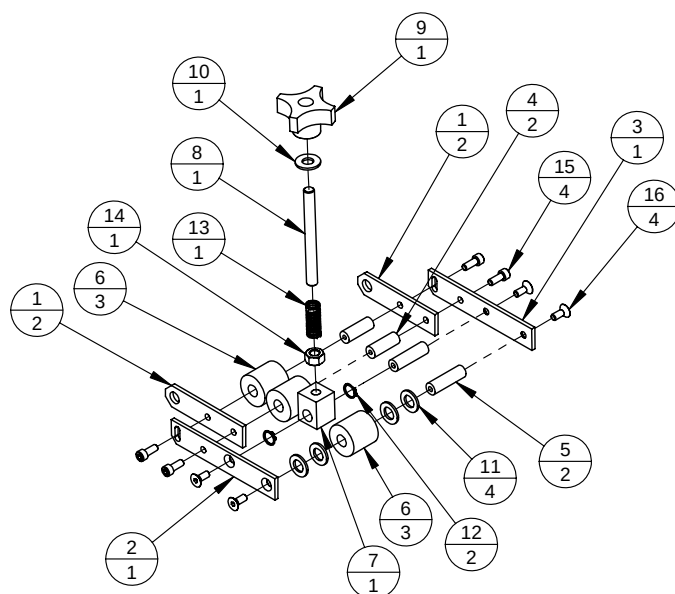


ASSY#18020-070

**FRICITION FEEDER (Fig. 4-7)
DOUBLE DETECT / TENSIONER ASSEMBLIES**


ITEM	PART NO.	QTY.	DESCRIPTION
	18020-068	1	ASSEMBLY, DOUBLE DETECT
1	18009-001	1	BRACKET, DBL DETECT MTG.
2	10009-013	1	BRACKET, PIVOT, TUNING FORK
3	10004-052	1	SHAFT, DBL DETECT PIVOT
4	10009-012	1	BRACKET, TUNING FORK
5	10004-053	1	SHAFT, DBL DETECT
6	99032-003	1	STUD, #10-32 X 1-1/2
7	99004-005	1	KNOB, FEMALE, #10-32
8	99005-007	1	SPRING, GATE ADJ.
9	99003-002	2	BEARING, 1/4 X 5/8 SEALED
10	99003-001	1	BEARING, 3/8 X 7/8 SEALED
11	99003-005	1	BUSHING, SLEEVE, 1/4 X 3/8 X 5/16
12	99022-001	2	SNAP RING, ¼
13	98009-004	1	SENSOR, DBL DETECT SWITCH
14	-	1	NUT, HEX, #10-32
15	-	1	FLAT WASHER, #10
16	-	2	SCREW, SKT HEAD, #8-32 X 1/2
17	-	1	SCREW, SKT HEAD, #10-24 X 5/8
18	-	1	NUT, HEX, #6-32
19	-	1	SCREW, SET, #6-32 X 7/8
20	-	1	SCREW, BUTTON HEAD, #4-40 X 1/2
	18020-153	1	ASSEMBLY, TENSIONER
21	18004-031	1	SHAFT, STUB IDLER
22	18006-011	1	PULLEY, FLAT IDLER, 1-1/2" OD X 3/4" W
23	99003-007	2	BEARING, 1/2 X 1-1/8 SEALED W/ S.R.
24	99003-018	1	WASHER, NYLON, 1/2 X 1/16
25	99022-004	1	SNAP RING, 1/2

PITNEY BOWES

Sure-Feed Engineering

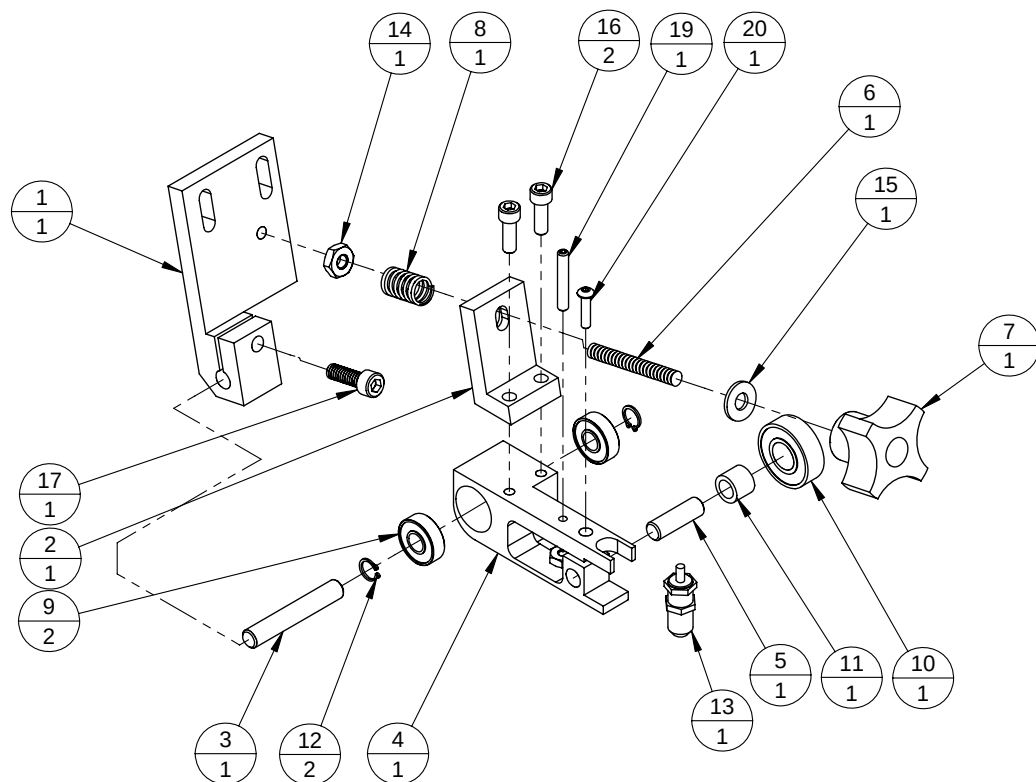

ASSY# 18020-068

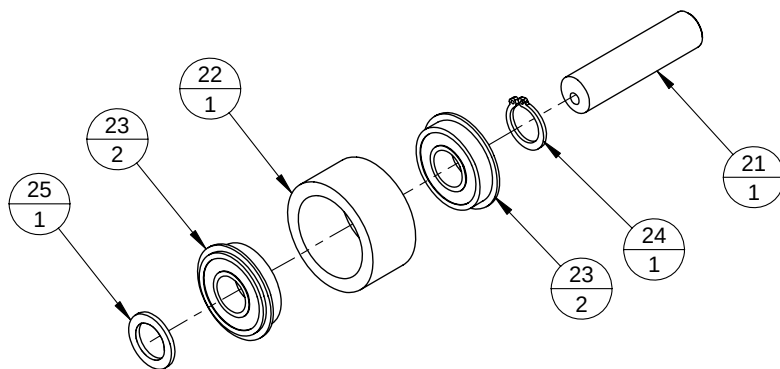


ASSY# 18020-153

FRICTION FEEDER (Fig. 4-8)
FEEDER DRAG STRAP ASSEMBLY (18020-073)

ITEM	PART NO.	QTY.	DESCRIPTION
1	18009-014	1	BRACKET, DRAG STRAP MTG.
2	18009-029	1	BRACKET, DRAG STRAP PIVOT
3	18014-010	1	DRAG STRAP, FEEDER
4	-	2	SCREW, SKT HEAD, #10-24 X 1/2
5	-	2	SCREW, PAN HEAD, #6-32 X 1/4
6	99004-002	1	KNB, #10 SCREW

PITNEY BOWES

Sure-Feed Engineering

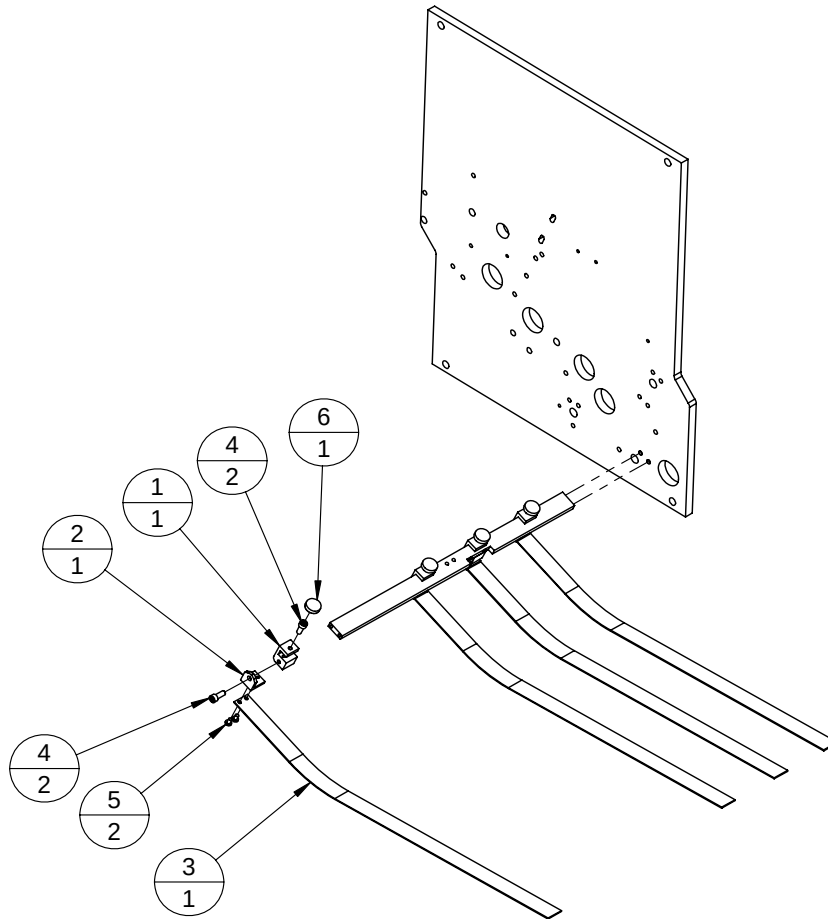


**FRICITION FEEDER – ELECTRICAL (Fig. 4-9)
 REAR FEEDER PLATE ASSEMBLY (18021-105)**

ITEM	PART NO.	QTY.	DESCRIPTION
1	18021-087	1	ASSEMBLY, PLUG
2	98001-022	4"	DIN RAIL, PHOENIX
3	98001-010	12	TERMINAL BLOCK, SPRING, ENTRELEC
4	98001-014	2	TERMINAL BLOCK, END STOP, ENTRELEC
5	98001-026	1	CIRCUIT DIVIDER
6	98020-029	1	CAPACITOR, 60HZ
7	98012-004	10"	DUCT, 1" X 1" WIREWAY W/ COVER
8	98009-051	1	SENSOR, RETRO REFLECTIVE


PITNEY BOWES

Sure-Feed Engineering

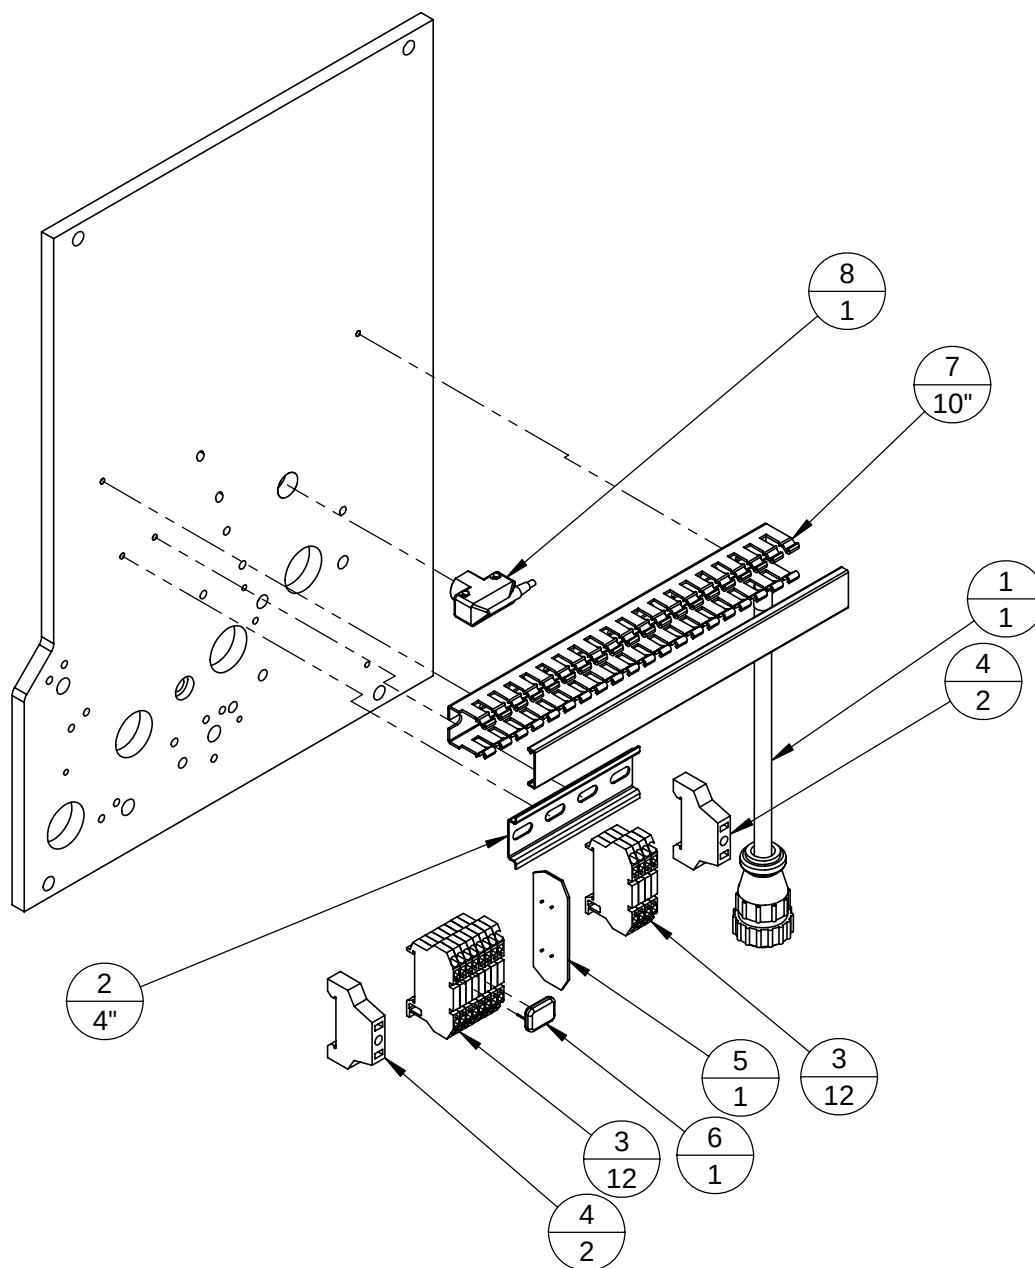

PITNEY BOWES
Sure-Feed Engineering

THIN MATERIAL FEEDER 10X13

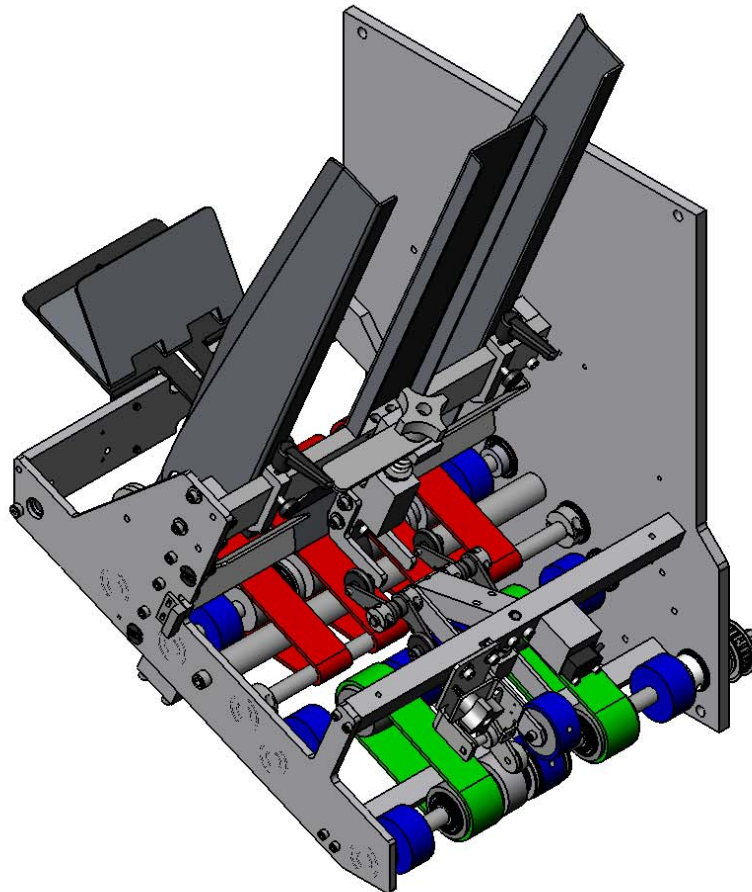

**THIN MAT'L FEEDER ASSEMBLY (Fig. 5-1)
(18020-376)**


ITEM	PART NO.	QTY.	DESCRIPTION
1	SEE FIG. 5-2	1	ASSEMBLIES, FEEDER SHAFTS
2	SEE FIG. 5-7	1	ASSEMBLY, PAPER HOPPER (18020-370)
3	SEE FIG. 5-5	1	ASSEMBLY, SEPERATOR (18020-335)
4	SEE FIG. 5-6	1	ASSEMBLY, TRANSPORT (18020-336)
5	SEE FIG. 5-2	1	ASSEMBLY, FEEDER TIMING
6	SEE FIG. 5-8	1	ASSEMBLY, DOUBLE DETECT (18020-068)
7	18011-095	1	PLATE, FEEDER MTG.
8	10000-018	1	SIDEFRAME, COLLATOR FEEDER
9	18008-013	1	BAR, SENSOR / DRAG STRAP MTG.
10	99003-093	2	BEARING, 1/2 X 1-1/8, SEALED W/ COLLAR
11	99003-072	1	BUSHING, 1/4 X 5/16 X 1/4
12	10008-019	1	BAR, BACK SUPPORT
13	18008-123	1	BAR, CAM FOLLOWER SUPPORT
14	18009-106	1	BRACKET, PAPER SLIDE SUPPORT
15	10005-104	1	GUIDE, PAPER, REAR WEDGE
16	18007-149	1	NUT, PAPER SLIDE
17	-	4	SCREW, SKT HEAD, #10-32 X 5/8
18	99004-002	1	KNOB, #10 SCREW
19	-	2	BOLT, SKT HEAD, 1/4-20 X 3/4
20	99006-031	1	PIN, SPRING CLIP, GROOVED
21	99003-002	1	BEARING, 1/4 X 5/8 SEALED
22	-	4	SCREW, SKT HEAD, #10-32 X 1/2
23	-	2	SCREW, SKT HEAD, #10-32 X 3/4
24	18009-024	1	BRACKET, UPPER SENSOR MTG.
25	98009-037	1	SENSOR, SENDER, THRU BEAM
26	98009-002	1	SENSOR, RECIEVER, THRU BEAM
27	18011-075	1	PLATE, ADAPTOR, LOWER SENSOR

**THIN MAT'L FEEDER ASSEMBLY (Fig. 5-1)
 (18020-376)**

ITEM	PART NO.	QTY.	DESCRIPTION
28	99003-007	8	BEARING, 1/2 X 1-1/8 SEALED W/ S.R.
29	99036-003	5	SHIM, BEARING, 3/4 X 1-1/8 X .006
30	18013-217	2	COVER, HOPPER SHIELD
31	98019-066	1	REFLECTOR
32	98009-051	1	SENSOR, P&F, RETRO REFLECTIVE
33	99039-062	2	MAGNETIC CATCH
34	98000-036	1	REED SWITCH
35	99033-006	1	SHOULDER BOLT, 1/4 X 1/4
36	99033-004	1	SHOULDER BOLT, 1/4 X 3/8
37	99003-073	1	BUSHING, SLEEVE, 1/4 X 5/16 X 3/8
38	99003-034	1	WASHER, NYLON, 1/2 X 1/16
39	-	1	BOLT, SKT HEAD, 5/16-18 X 5/8
40	-	4	SCREW, SKT HEAD, #8-32 X 5/8
41	-	9	SCREW, SKT HEAD, #10-24 X 5/8
42	-	7	FLAT WASHER, #10
43	-	1	SCREW, BUTTON HEAD, 1/4-20 X 1/2
45	-	4	SCREW, SKT HEAD, #8-32 X 5/8
47	-	2	SCREW, SKT HEAD, #6-32 X 1-1/8
48	-	2	SCREW, SKT HEAD, #6-32 X 5/8
49	-	2	SCREW, FLAT HEAD, #6-32 X 3/8
50	99005-012	1	SPRING, EXTENSION (NOT SHOWN) (ATTACHES TO ITEM #20)

PITNEY BOWES

Sure-Feed Engineering

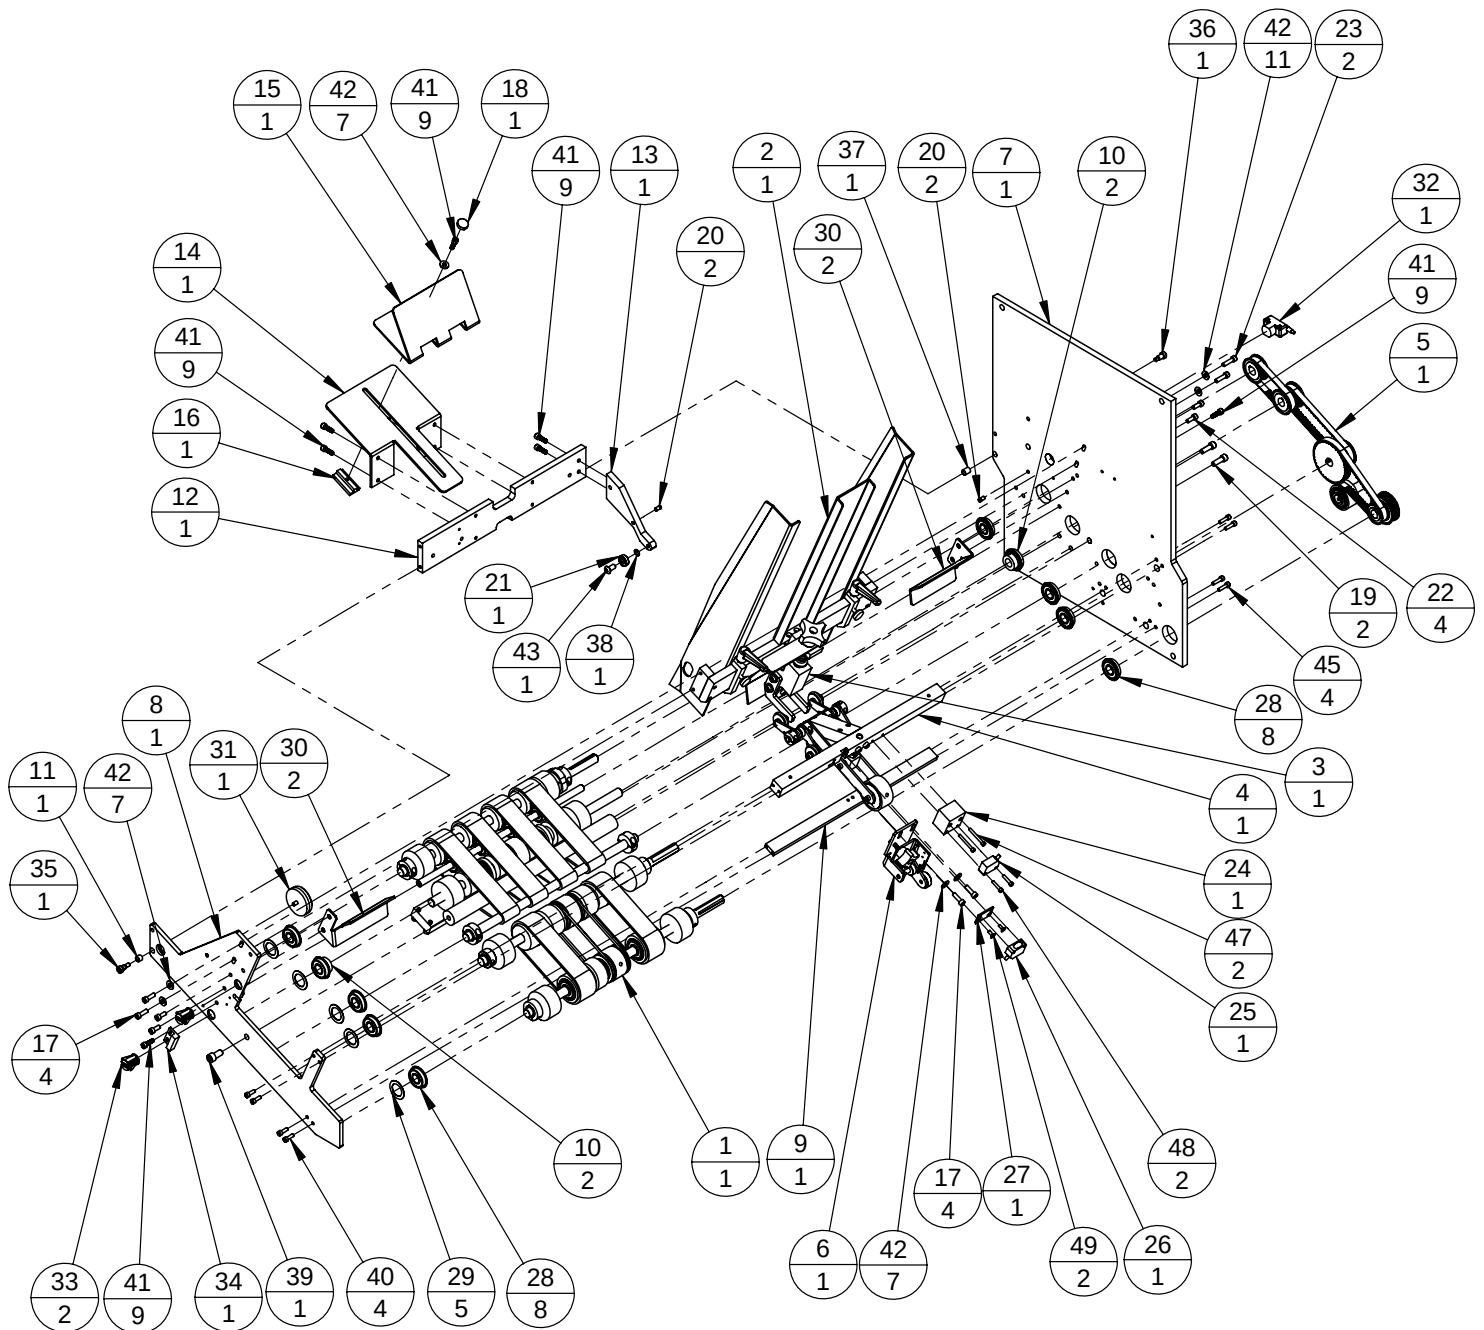


THIN MAT'L FEEDER (Fig. 5-2)
FEEDER SHAFT / TIMING ASSEMBLIES

ITEM	PART NO.	QTY.	DESCRIPTION
1	SEE FIG. 5-3	1	ASSEMBLY, CROWN ROLLER SHAFT (18020-329)
2	SEE FIG. 5-3	1	ASSEMBLY, IDLER SUPPORT SHAFT (18020-328)
3	SEE FIG. 5-4	1	ASSEMBLY, DOUBLE DETECT SHAFT (18020-110)
4	SEE FIG. 5-4	1	ASSEMBLY, ACCELERATOR SHAFT (18020-111)
5	SEE FIG. 5-4	1	ASSEMBLY, SEPERATOR SHAFT (18020-337)
6	18004-003	1	SHAFT, MAIN SUPPORT
7	18004-007	1	SHAFT, FRONT
8	99000-042	2	BELT, RED GUM, ACCELERATOR
9	18014-007	2	O-RING, ACCELERATOR
10	99002-031	1	PULLEY, TIMING, 24XL037, 1/2B
11	99002-054	4	PULLEY, TIMING, 20XL037, 1/2B
12	99002-032	1	PULLEY, TIMING, 16XL037, 1/2B
13	99002-016	1	PULLEY, TIMING, 40XL037, 1/2B NO FLANGES
14	99000-033	1	BELT, TIMING, 130XL037
15	99000-001	1	BELT, TIMNG, 90XL037
16	SEE FIG. 5-8	1	ASSEMBLY, TENSIONER (18020-153)
17	99000-032	1	BELT, TIMNG, 138XL037
18	99017-004	2	COLLAR, 1/2 SHAFT
19	99003-032	2	WASHER, NYLON, 1/2 X 1/32
20	99000-004	4	BELT, RED GUM
21	-	2	SCREW, SKT HEAD, #10-32 X 3/4
22	-	2	BOLT, SKT HEAD, 1/4-20 X 3/4

PITNEY BOWES



Sure-Feed Engineering

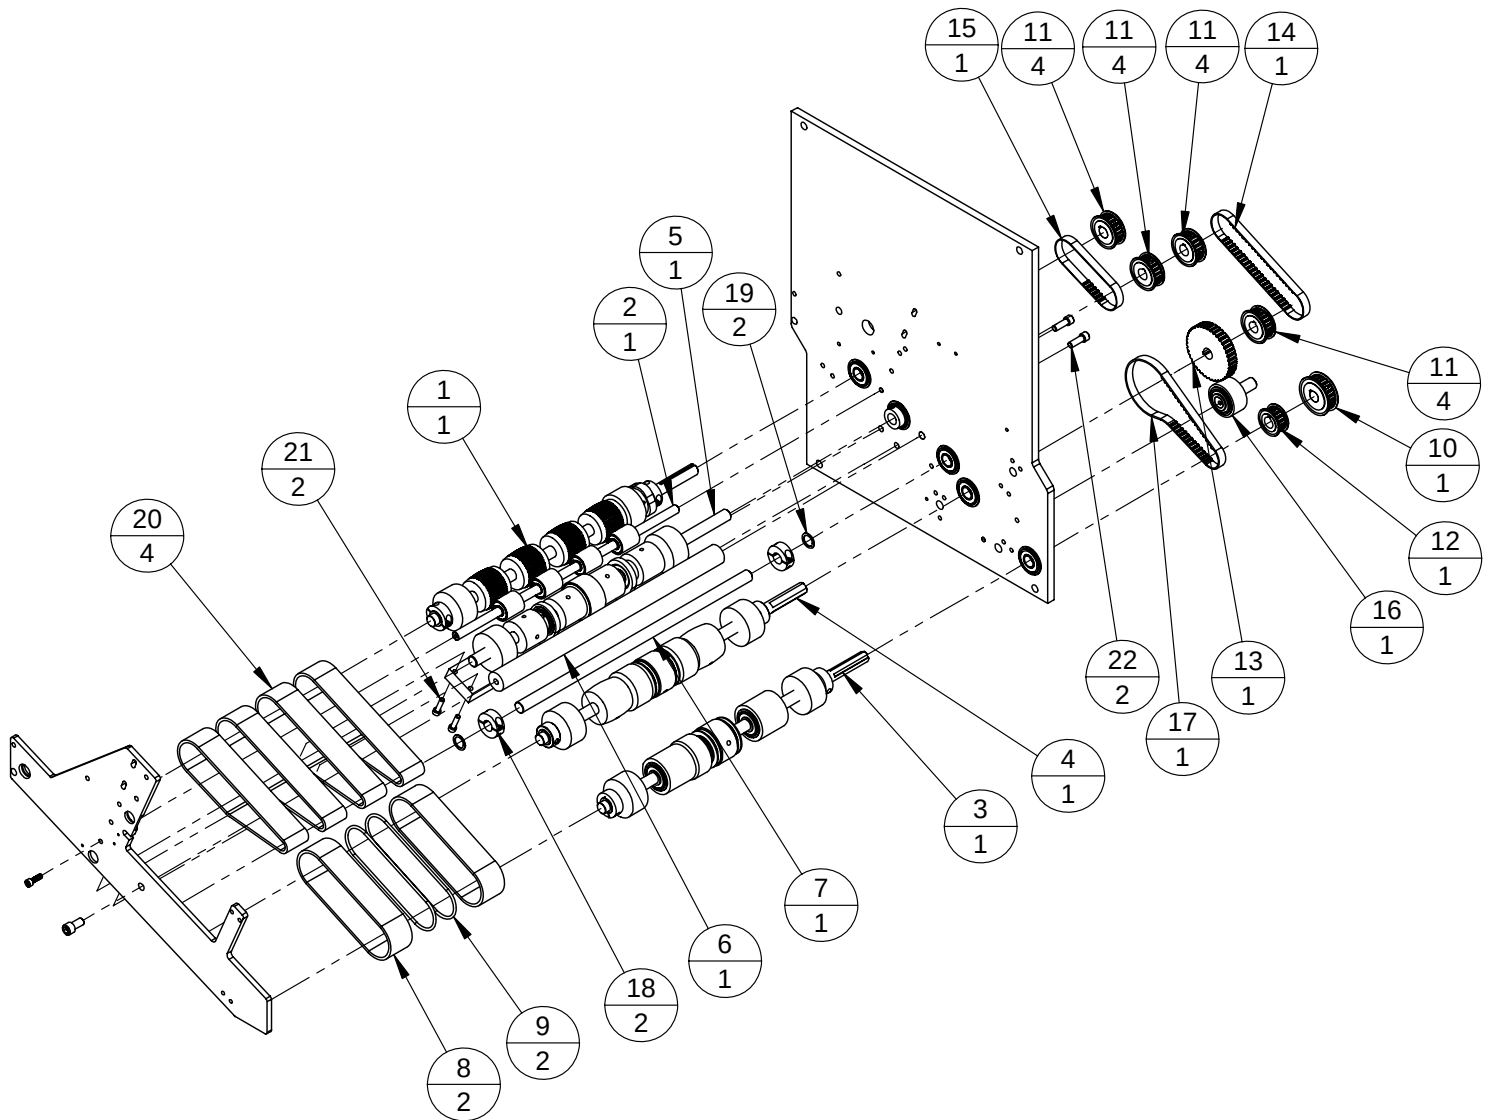

THIN MAT'L FEEDER (Fig. 5-3)
IDLER SUPPORT / CROWN ROLLER SHAFT ASSEMBLIES

ITEM	PART NO.	QTY.	DESCRIPTION
	18020-329	1	ASSEMBLY, CROWN ROLLER SHAFT
1	18004-006	1	SHAFT, MAIN
2	10006-018	4	PULLEY, CROWNED
	-	8	SET SCREW, #10-32 X 1/4
3	10006-007	2	ROLLER FEEDER, 1/2 B
4	99017-022	2	COLLAR, TWO-PC SPLIT, 1/2 B
5	99003-032	2	WASHER, NYLON, 1/2 X 1/32
6	18016-015	1	CAM, VIBRATING BACKSTOP
	-	2	SET SCREW, #10-24 X 1/4
	18020-328	1	ASSEMBLY, IDLER SUPPORT SHAFT
7	18004-004	1	SHAFT, IDLER SUPPORT
8	10006-012	4	ROLLER, IDLER
9	99003-008	8	BEARING, 3/8 X 7/8 SEALED
10	99022-004	8	SNAP RING, 3/8

PITNEY BOWES
Sure-Feed Engineering

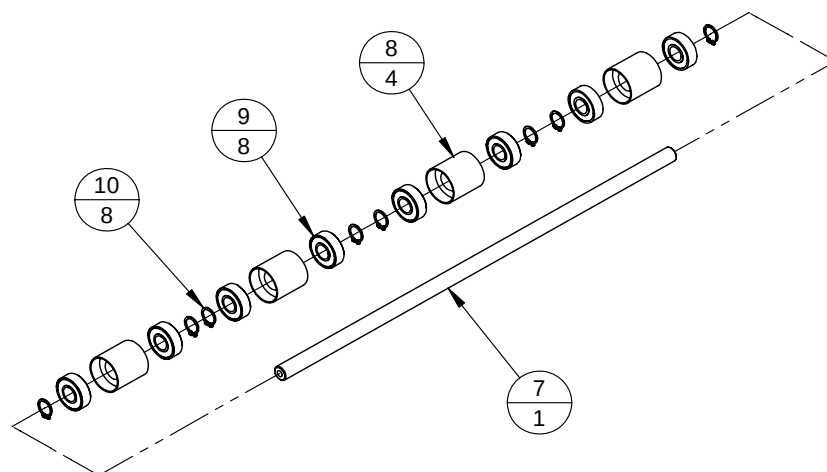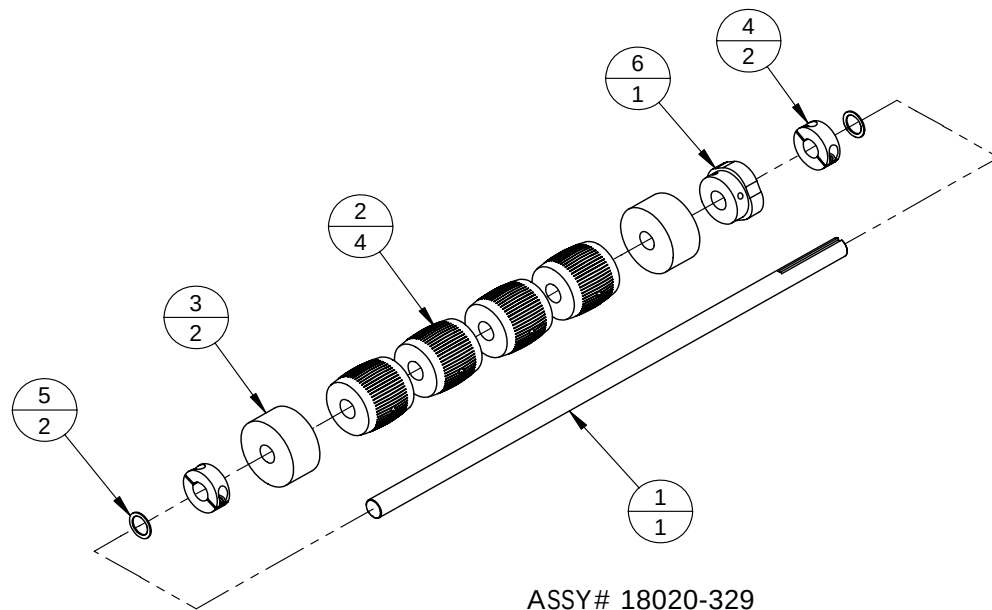

**THIN MAT'L FEEDER (Fig. 5-4)
SEPERATOR / DBL DETECT / ACCELERATOR SHAFT
ASSEMBLIES**


ITEM	PART NO.	QTY.	DESCRIPTION
	18020-337	1	ASSEMBLY, SEPERATOR SHAFT
1	18008-143	1	BAR, SEPERATOR SHAFT SUPPORT
2	18004-106	1	SHAFT, SEPERATOR DRIVE
3	18006-077	1	ROLLER, SEPERATOR
4	10006-007	2	ROLLER, FEEDER, 1/2 B
5	18007-150	2	BLOCK, BEARING
6	99003-093	2	BEARING, 1/2 X 1-1/8, SELAED W/ COLLAR
7	99003-018	2	WASHER, NYLON, 1/2 X 1/16
8	99003-032	2	WASHER, NYLON, 1/2 X 1/32
9	18006-076	4	PULLEY MATE
	-	8	SET SCREW, #10-32 X 1/4
10	99003-112	1	BEARING, ROLLER CLUTCH
11	-	4	SCREW, SKT HEAD, #10-32 X 3/4
	18020-110	1	ASSEMBLY, DOUBLE DETECT SHAFT
12	18004-064	1	SHAFT, DOUBLE DETECT
13	10006-013	1	ROLLER, NIP
	-	2	SET SCREW, #10-32 X 1/4
14	10006-007	2	ROLLER, FEEDER, 1/2 BORE
15	10006-032	2	PULLEY, IDLER
16	10006-030	2	PULLEY, O-RING IDLER
17	99003-007	6	BEARING, 1/2 X 1-1/8 SEALED W/ S.R.
18	99017-028	2	COLLAR, ONE PIECE SPLIT – 1/2B
19	99022-004	5	SNAP RING, 1/2
20	99003-032	3	WASHER, NYLON, 1/2 X 1/32
21	99003-018	2	WASHER, NYLON, 1/2 X 1/16

**THIN MAT'L FEEDER (Fig. 5-4)
 SEPERATOR / DBL DETECT / ACCELERATOR SHAFT
 ASSEMBLIES**

ITEM	PART NO.	QTY.	DESCRIPTION
	18020-111	1	ASSEMBLY, ACCELERATOR DRIVE
22	18004-006	1	SHAFT, MAIN
23	10006-007	4	ROLLER, FEEDER, 1/2 BORE
24	10006-031	2	PULLEY, ACCELERATOR DRIVE
	-	4	SET SCREW, #10-32 X 1/4
25	10006-004	2	PULLEY, O-RING DRIVE
	-	4	SET SCREW, #8-32 X 1/4
26	10006-013	1	ROLLER, NIP
	-	2	SET SCREW, #10-32 X 1/4
27	99003-032	4	WASHER, NYLON, 1/2 X 1/32
28	99017-004	2	COLLAR, 1/2" SHAFT

PITNEY BOWES

Sure-Feed Engineering

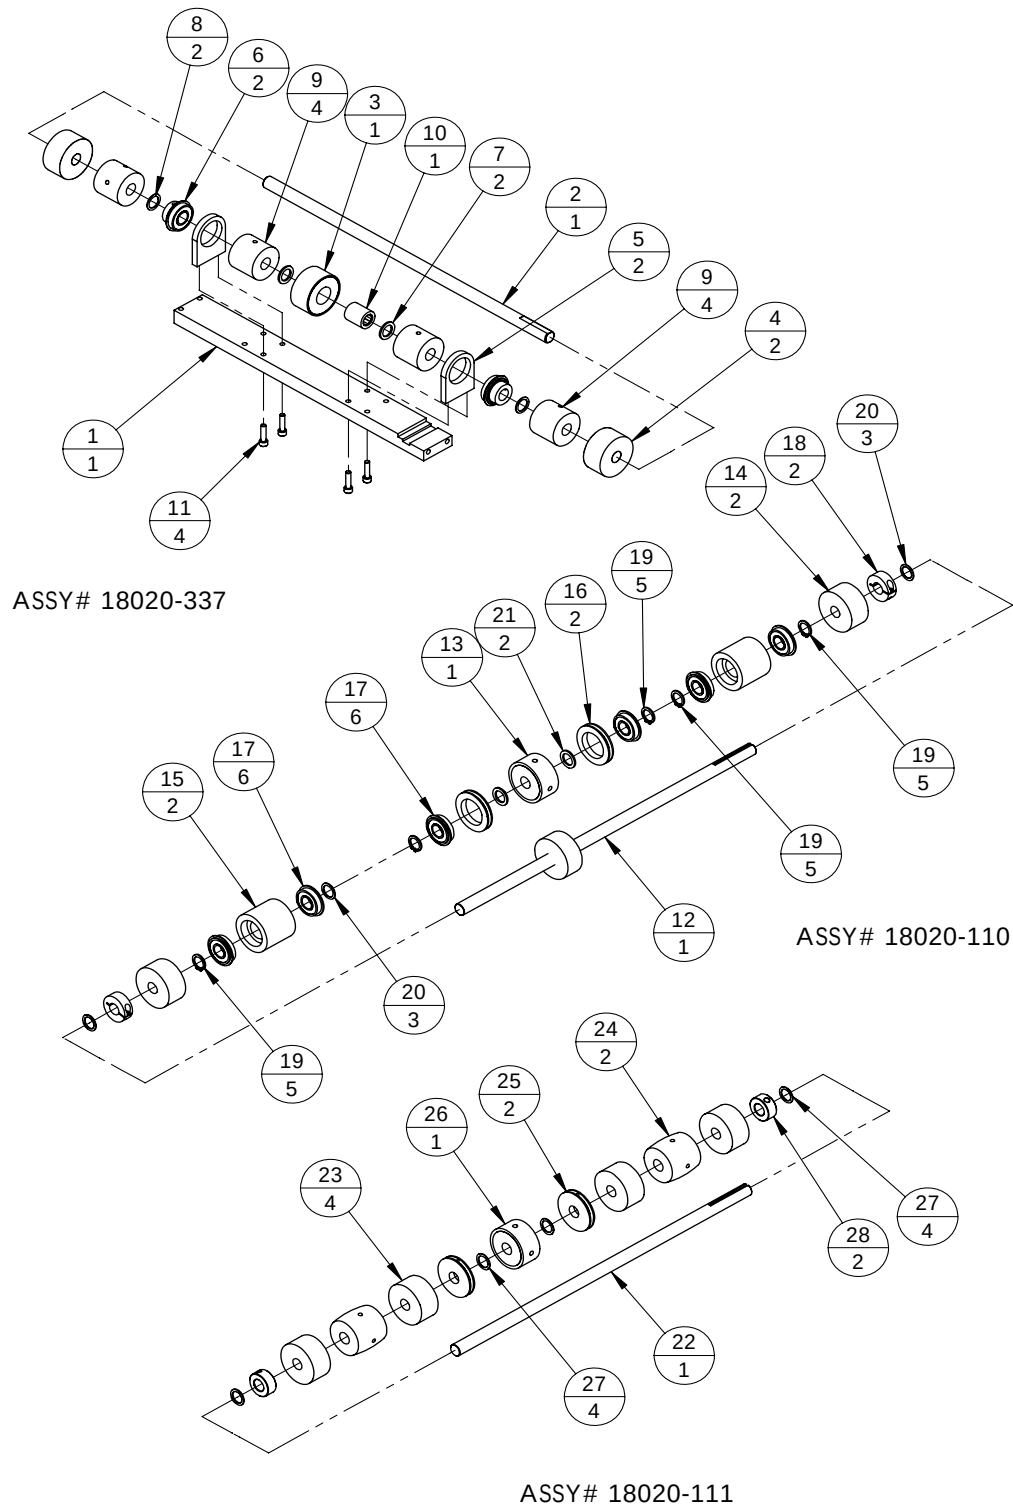


**THIN MAT'L FEEDER (Fig. 5-5)
SEPERATOR ASSEMBLY (18020-335)**

ITEM	PART NO.	QTY.	DESCRIPTION
1	18007-148	1	BLOCK, SEPERATOR
2	10004-028	1	STUD, SEPERATOR ADJ.
3	18011-133	1	PLATE, SEPERATOR CLAMP
4	18004-107	1	ROD, SEPERATOR
5	18005-170	1	SHROUD, SEPERATOR
6	99006-002	2	PIN, DOWEL, 5/16 X 3
7	-	1	HEX NUT, 5/16-24
8	-	2	SCREW, FLAT HEAD, #8-32 X 3/8
9	-	5	SCREW, SKT HEAD, #10-32 X 1/2
10	18005-181	2	GUIDE, SEPERATOR EXIT
11	-	4	FLAT WASHER, #10
12	10008-024	1	BAR, SEPERATOR RELEASE
13	99003-015	1	WASHER, NYLON, 5/16 X 1/16
14	99004-001	1	KNOB, 5/16-24 FEMALE
15	99005-045	1	SPRING, SEPERATOR
16	-	1	FLAT WASHER, 5/16

PITNEY BOWES


Sure-Feed Engineering

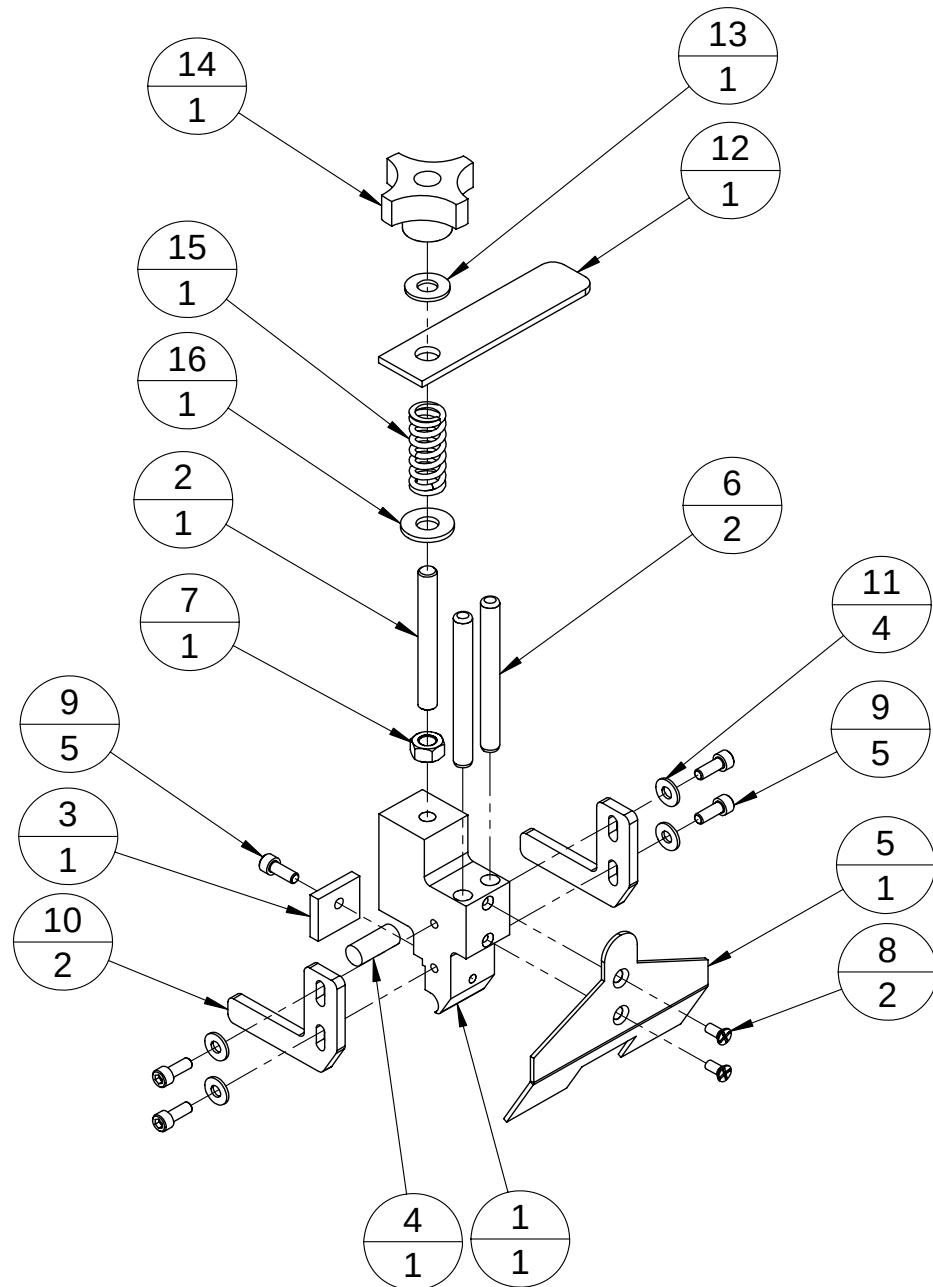

**THIN MAT'L FEEDER (Fig. 5-6)
 TRANSPORT ASSEMBLY (18020-336)**

ITEM	PART NO.	QTY.	DESCRIPTION
1	18008-147	1	BAR, DOUBLE DETECT
2	18004-105	1	STUD, SPRING
3	99005-006	1	SPRING, ACCELERATOR ADJ
4	10007-012	1	BLOCK, TONGUE ADJ
5	10012-003	2	SPACER, TONGUE
6	18008-144	1	BAR, TRANSPORT SUPPORT
7	18004-104	1	SHAFT, PIVOT
8	18009-101	2	BRACKET, TRANSPORT SIDE PLATE
9	18006-078	4	ROLLER, IDLER TRANSPORT
10	99039-164	4	O-RING, THIN FEEDER TRANSPORT
11	18008-148	4	BAR, TRANSPORT IDLER ARM
12	99003-110	4	BEARING, FLANGED SNAP IN, 5/16
13	10006-013	1	ROLLER, NIP
	-	2	SET SCREW, #10-32 X 1/4
14	99003-017	2	WASHER, NYLON, 3/8 X 1/16
15	99022-003	2	SNAP RING, 3/8
16	99017-046	4	COLLAR, TWO-PC SPLIT, 5/16 B
17	99003-111	2	BUSHING, SLEEVE, 3/8 X 1/2 X 3/16
18	-	1	HEX NUT, 5/16-24
19	99033-006	4	SHOULDER BOLT, 1/4 X 1/4
20	-	4	SCREW, SKT HEAD, #8-32 X 1/2
21	-	2	SCREW, SKT HEAD, #10-32 X 1
22	99005-052	2	SPRING, EXTENSION (NOT SHOWN)

187

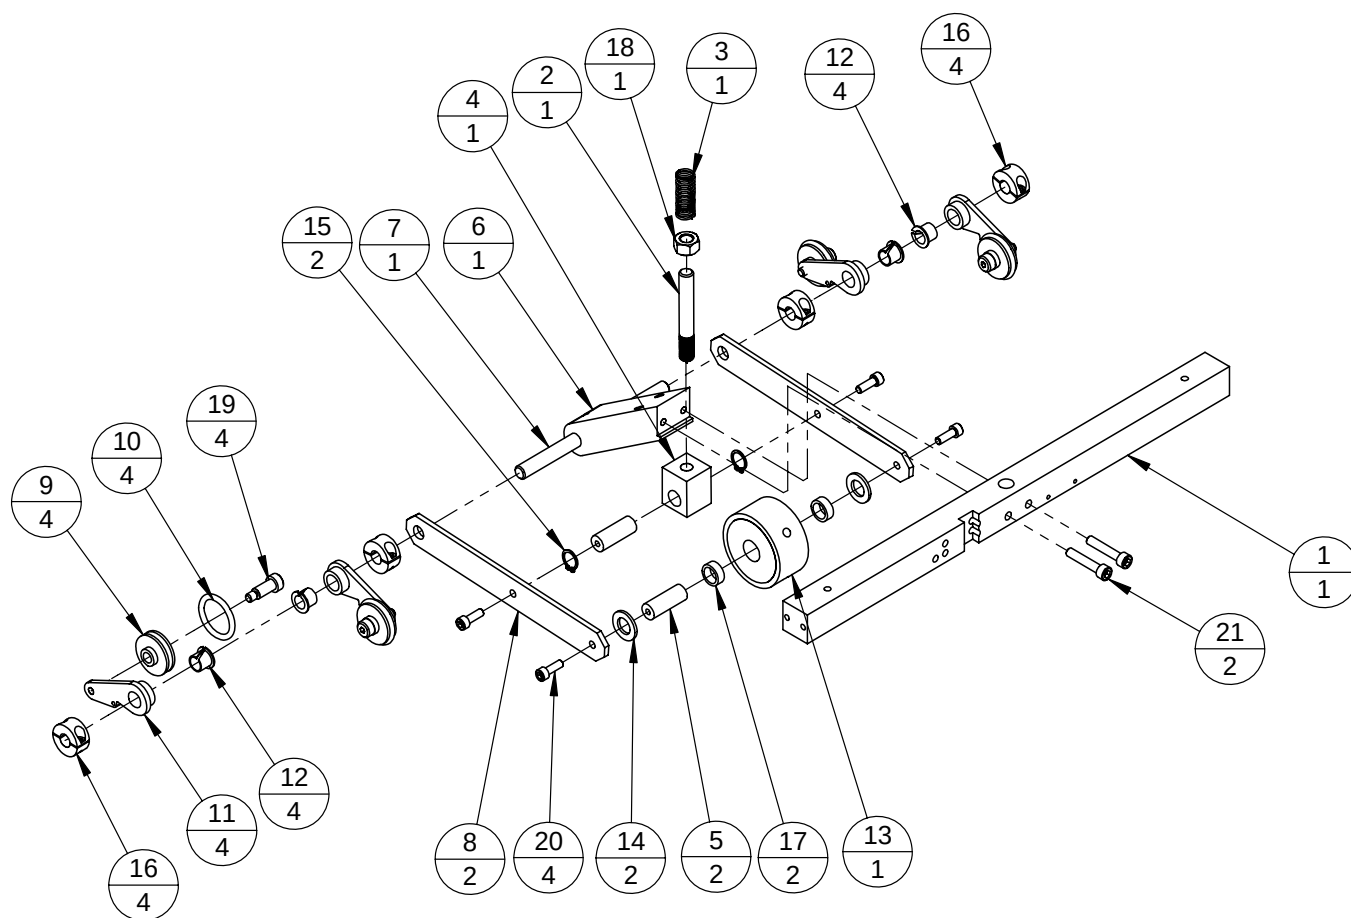


**THIN MAT'L FEEDER (Fig. 5-7)
 PAPER HOPPER ASSEMBLY (18020-370)**

ITEM	PART NO.	QTY.	DESCRIPTION
1	18008-146	1	BAR, BRIDGE
2	10009-046	2	BRACKET, SIDE GUIDE MTG
3	18005-175	1	SIDE GUIDE, LH
4	18005-176	1	SIDE GUIDE, RH
5	10005-002	1	GUIDE, FRONT PAPER
6	99004-028	2	HANDLE, RATCHET, #10-32 X 1/2
7	99004-002	2	KNOB, #10 SCREW
8	-	4	SCREW, SKT HEAD, #10-32 X 1/2
9	18012-049	2	SPACER, BRIDGE
10	-	4	SCREW, FLAT HEAD, #6-32 X 1/2
11	-	4	SCREW, FLAT HEAD, #10-24 X 3/8
12	10007-010	1	BLOCK, SEPERATOR ADJ.
13	-	4	SCREW, SKT HEAD, #10-32 X 3/4

PITNEY BOWES

Sure-Feed Engineering

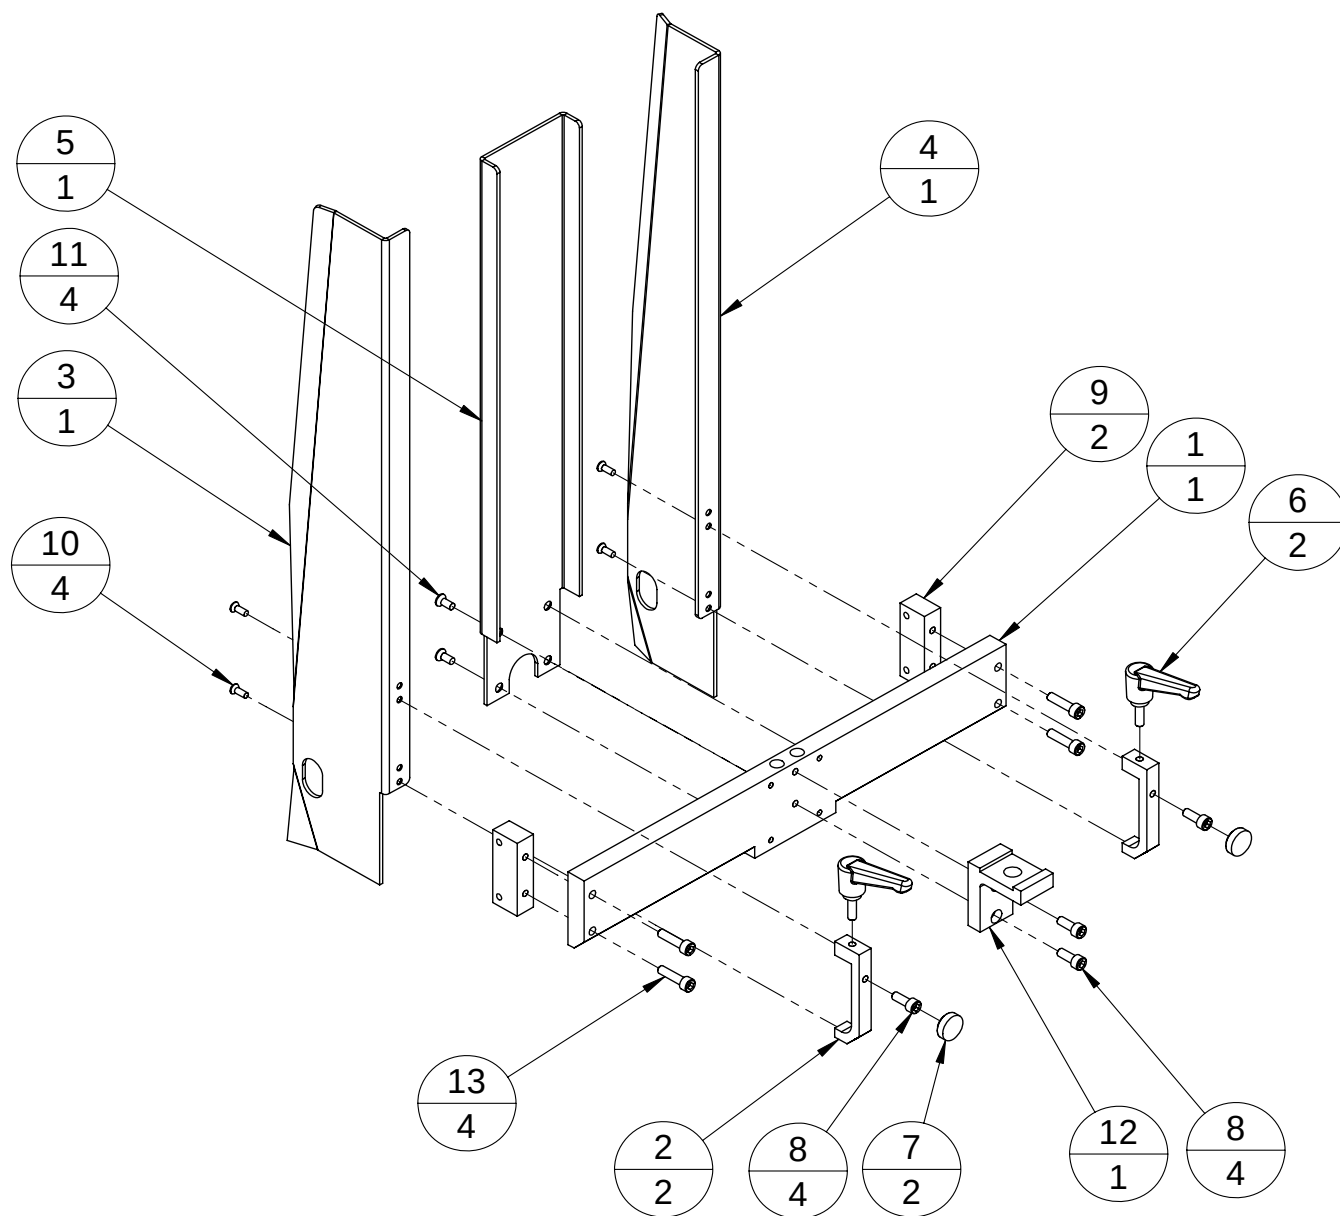


**THIN MAT'L FEEDER (Fig. 5-8)
DOUBLE DETECT / TENSIONER ASSEMBLIES**


ITEM	PART NO.	QTY.	DESCRIPTION
	18020-068	1	ASSEMBLY, DOUBLE DETECT
1	18009-001	1	BRACKET, DBL DETECT MTG.
2	10009-013	1	BRACKET, PIVOT, TUNING FORK
3	10004-052	1	SHAFT, DBL DETECT PIVOT
4	10009-012	1	BRACKET, TUNING FORK
5	10004-053	1	SHAFT, DBL DETECT
6	99032-003	1	STUD, #10-32 X 1-1/2
7	99004-005	1	KNOB, FEMALE, #10-32
8	99005-007	1	SPRING, GATE ADJ.
9	99003-002	2	BEARING, 1/4 X 5/8 SEALED
10	99003-001	1	BEARING, 3/8 X 7/8 SEALED
11	99003-005	1	BUSHING, SLEEVE, 1/4 X 3/8 X 5/16
12	99022-001	2	SNAP RING, 1/4
13	98009-004	1	SENSOR, DBL DETECT SWITCH
14	-	1	NUT, HEX, #10-32
15	-	1	FLAT WASHER, #10
16	-	2	SCREW, SKT HEAD, #8-32 X 1/2
17	-	1	SCREW, SKT HEAD, #10-24 X 5/8
18	-	1	NUT, HEX, #6-32
19	-	1	SCREW, SET, #6-32 X 7/8
20	-	1	SCREW, BUTTON HEAD, #4-40 X 1/2
	18020-153	1	ASSEMBLY, TENSIONER
21	18004-031	1	SHAFT, STUB IDLER
22	18006-011	1	PULLEY, FLAT IDLER, 1-1/2" OD X 3/4" W
23	99003-007	2	BEARING, 1/2 X 1-1/8 SEALED W/ S.R.
24	99003-018	1	WASHER, NYLON, 1/2 X 1/16
25	99022-004	1	SNAP RING, 1/2

PITNEY BOWES

Sure-Feed Engineering

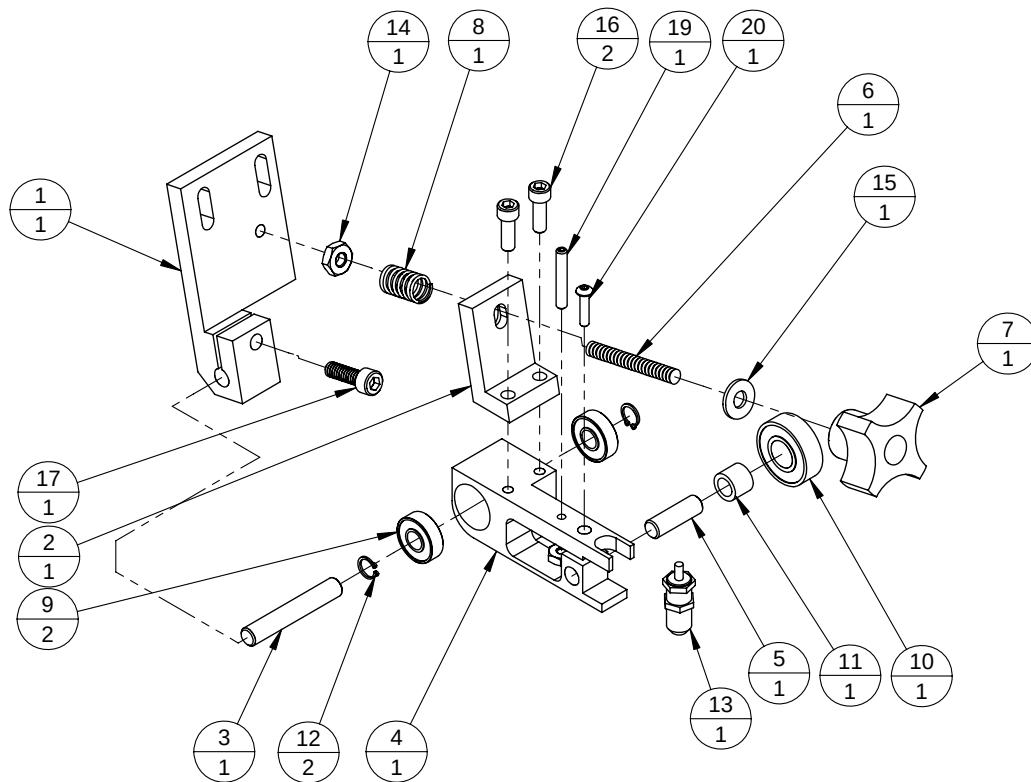


ASSY# 18020-068

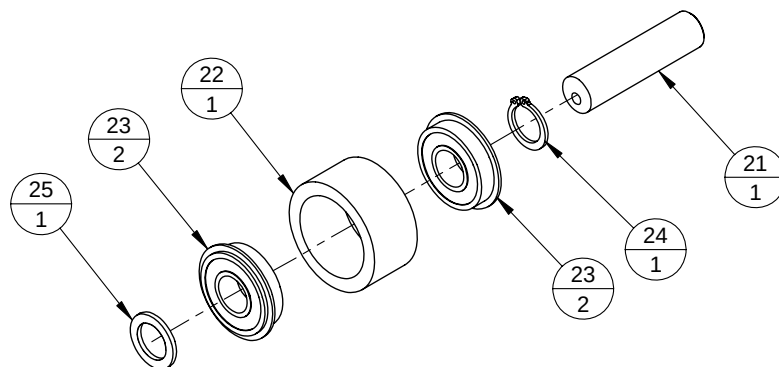

ASSY# 18020-153

THIN MAT'L FEEDER (Fig. 5-9)
FEEDER DRAG STRAP ASSEMBLY (18020-073)

ITEM	PART NO.	QTY.	DESCRIPTION
1	18009-014	1	BRACKET, DRAG STRAP MTG.
2	18009-029	1	BRACKET, DRAG STRAP PIVOT
3	18014-010	1	DRAG STRAP, FEEDER
4	-	2	SCREW, SKT HEAD, #10-24 X 1/2
5	-	2	SCREW, PAN HEAD, #6-32 X 1/4
6	99004-002	1	KNB, #10 SCREW

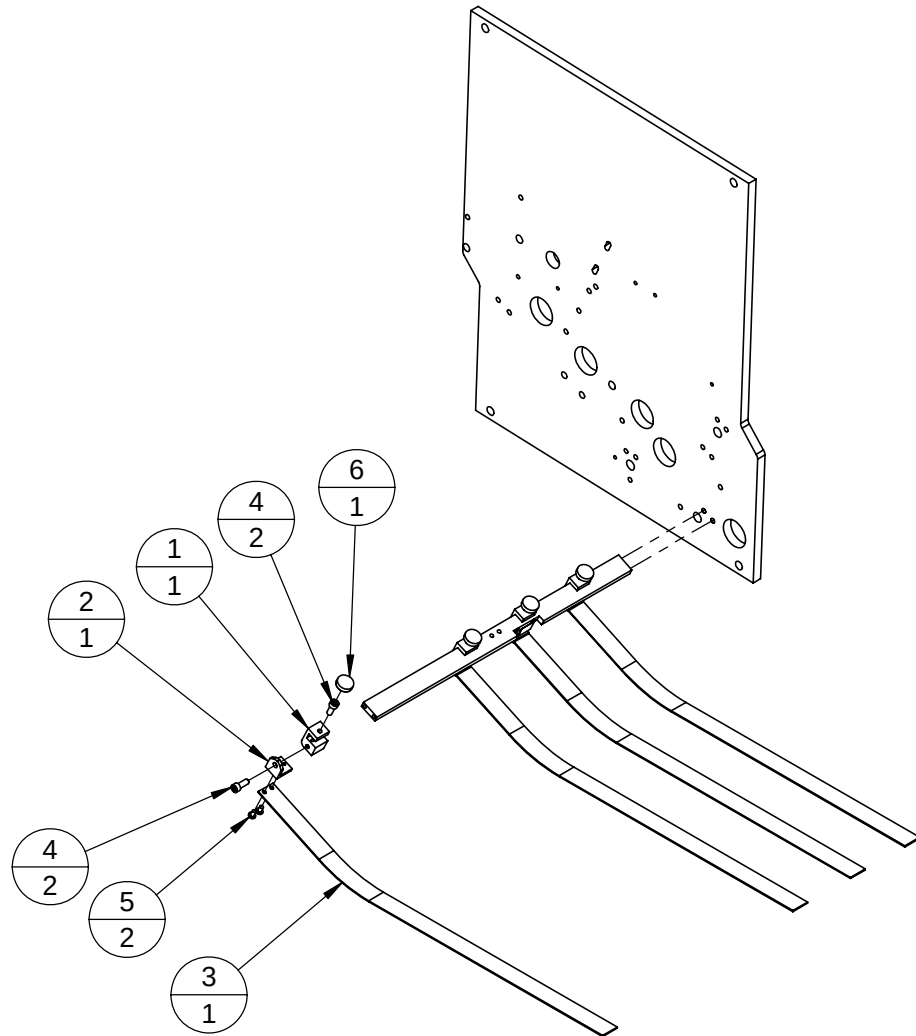


FRICITION FEEDER – ELECTRICAL (Fig. 5-10)
REAR FEEDER PLATE ASSEMBLY (18021-105)

ITEM	PART NO.	QTY.	DESCRIPTION
1	18021-087	1	ASSEMBLY, PLUG
2	98001-022	4"	DIN RAIL, PHOENIX
3	98001-010	12	TERMINAL BLOCK, SPRING, ENTRELEC
4	98001-014	2	TERMINAL BLOCK, END STOP, ENTRELEC
5	98001-026	1	CIRCUIT DIVIDER
6	98020-029	1	CAPACITOR, 60HZ
7	98012-004	10"	DUCT, 1" X 1" WIREWAY W/ COVER
8	98009-051	1	SENSOR, RETRO REFLECTIVE


PITNEY BOWES

Sure-Feed Engineering

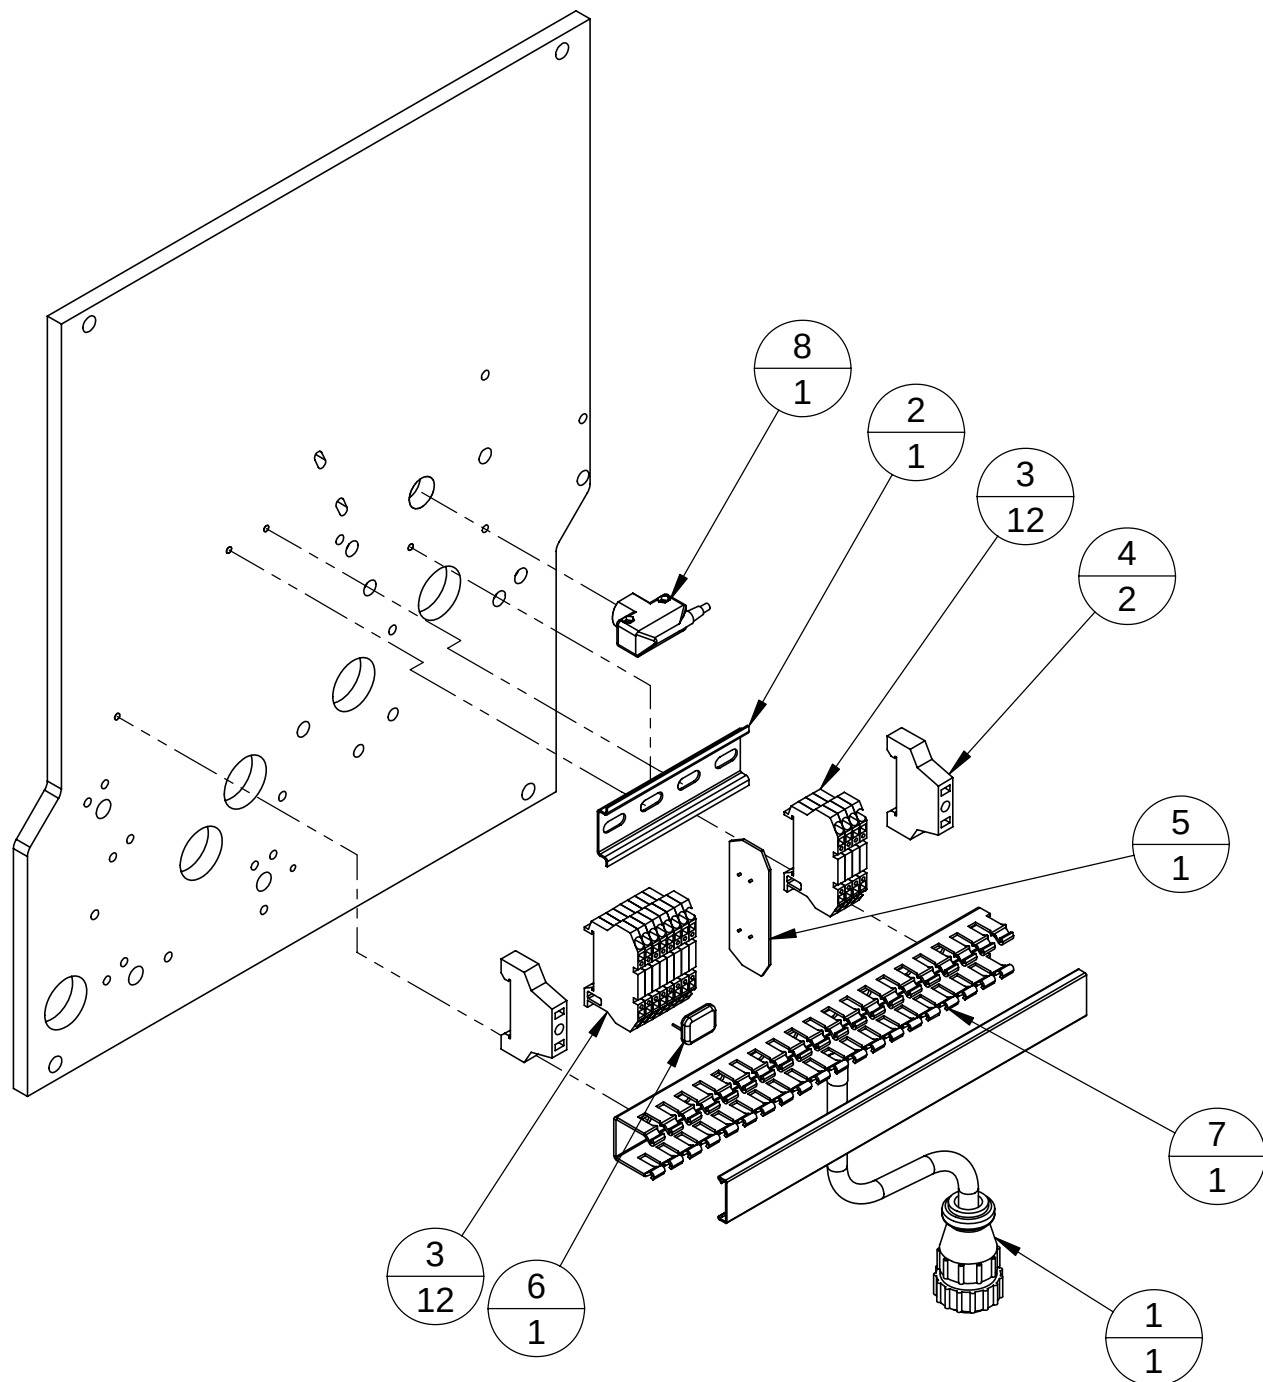

PITNEY BOWES
Sure-Feed Engineering

THIN MATERIAL FEEDER ***6X9***

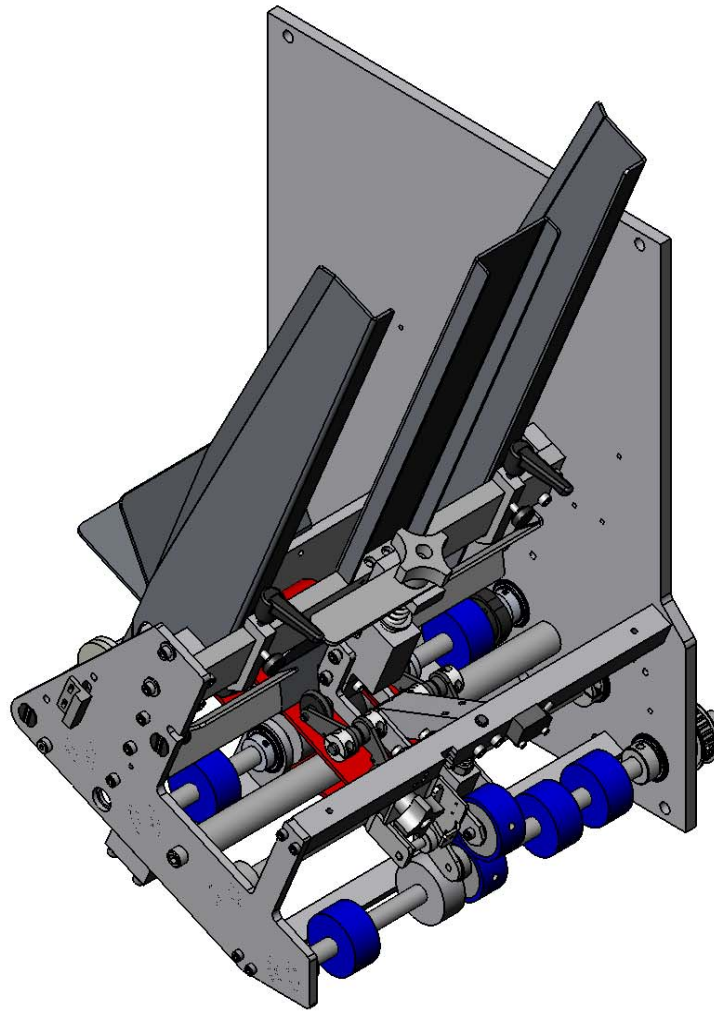


**THIN MAT'L FEEDER ASSEMBLY (Fig. 6-1)
(18020-365)**

ITEM	PART NO.	QTY.	DESCRIPTION
1	SEE FIG. 6-2	1	ASSEMBLIES, FEEDER SHAFTS
2	SEE FIG. 6-7	1	ASSEMBLY, PAPER HOPPER (18020-370)
3	SEE FIG. 6-5	1	ASSEMBLY, SEPERATOR (18020-335)
4	SEE FIG. 6-6	1	ASSEMBLY, TRANSPORT (18020-340)
5	SEE FIG. 6-2	1	ASSEMBLY, FEEDER TIMING
6	SEE FIG. 6-8	1	ASSEMBLY, DOUBLE DETECT (18020-068)
7	18011-143	1	PLATE, FEEDER MTG (6X9)
8	10000-017	1	SIDEFRAME, COLLATOR FEEDER (6X9)
9	18008-013	1	BAR, SENSOR / DRAG STRAP MTG.
10	99003-093	2	BEARING, 1/2 X 1-1/8, SEALED W/ COLLAR
11	99003-072	1	BUSHING, 1/4 X 5/16 X 1/4
12	18003-011	1	BAR, BACK SUPPORT (6X9)
13	18008-124	1	BAR, CAM FOLLOWER SUPPORT (6X9)
14	18005-005	1	BRACKET, PAPER SLIDE SUPPORT
15	10005-104	1	GUIDE, PAPER, REAR WEDGE
16	18007-149	1	NUT, PAPER SLIDE
17	-	8	SCREW, SKT HEAD, #10-32 X 5/8
18	99004-002	1	KNOB, #10 SCREW
19	-	2	BOLT, SKT HEAD, 1/4-20 X 3/4
20	99006-031	2	PIN, SPRING CLIP, GROOVED
21	99003-002	1	BEARING, 1/4 X 5/8 SEALED
22	-	7	SCREW, SKT HEAD, #10-32 X 1/2
23	98009-037	1	SENSOR, SENDER, THRU BEAM
24	98009-002	1	SENSOR, RECIEVER, THRU BEAM
25	18011-075	1	PLATE, ADAPTOR, LOWER SENSOR
26	99003-007	6	BEARING, 1/2 X 1-1/8 SEALED W/ S.R.
27	99036-003	4	SHIM, BEARING, 3/4 X 1-1/8 X .006

**THIN MAT'L FEEDER ASSEMBLY (Fig. 6-1)
(18020-365)**

ITEM	PART NO.	QTY.	DESCRIPTION
28	18013-217	2	COVER, HOPPER SHIELD
29	98019-066	1	REFLECTOR
30	98009-051	1	SENSOR, P&F, RETRO REFLECTIVE
31	99039-062	2	MAGNETIC CATCH
32	98000-036	1	REED SWITCH
33	99033-006	1	SHOULDER BOLT, 1/4 X 1/4
34	99033-004	1	SHOULDER BOLT, 1/4 X 3/8
35	99003-073	1	BUSHING, SLEEVE, 1/4 X 5/16 X 3/8
36	99003-034	1	WASHER, NYLON, 1/2 X 1/16
37	99017-028	2	COLLAR, 1/2", ONE-PIECE SPLIT
38	99003-032	2	WASHER, NYLON, 1/2 X 1/32
39	-	1	BOLT, SKT HEAD, 5/16-18 X 5/8
40	-	4	SCREW, SKT HEAD, #8-32 X 5/8
41	-	4	SCREW, SKT HEAD, #8-32 X 3/8
42	-	7	FLAT WASHER, #10
43	-	1	SCREW, BUTTON HEAD, 1/4-20 X 1/2
44	-	1	BOLT, BUTTON HEAD, 5/16-18 X 5/8
45	-	4	SCREW, SKT HEAD, #8-32 X 1/2
46	-	2	SCREW, SKT HEAD, #10-32 X 7/8
47	-	2	SCREW, SKT HEAD, #4-40 X 3/4
48	-	2	SCREW, SKT HEAD, #4-40 X 7/16
49		2	SCREW, FLAT HEAD, #6-32 X 3/8
50	99005-012	1	SPRING, EXTENSION (NOT SHOWN) (ATTACHES TO ITEM #20)

199

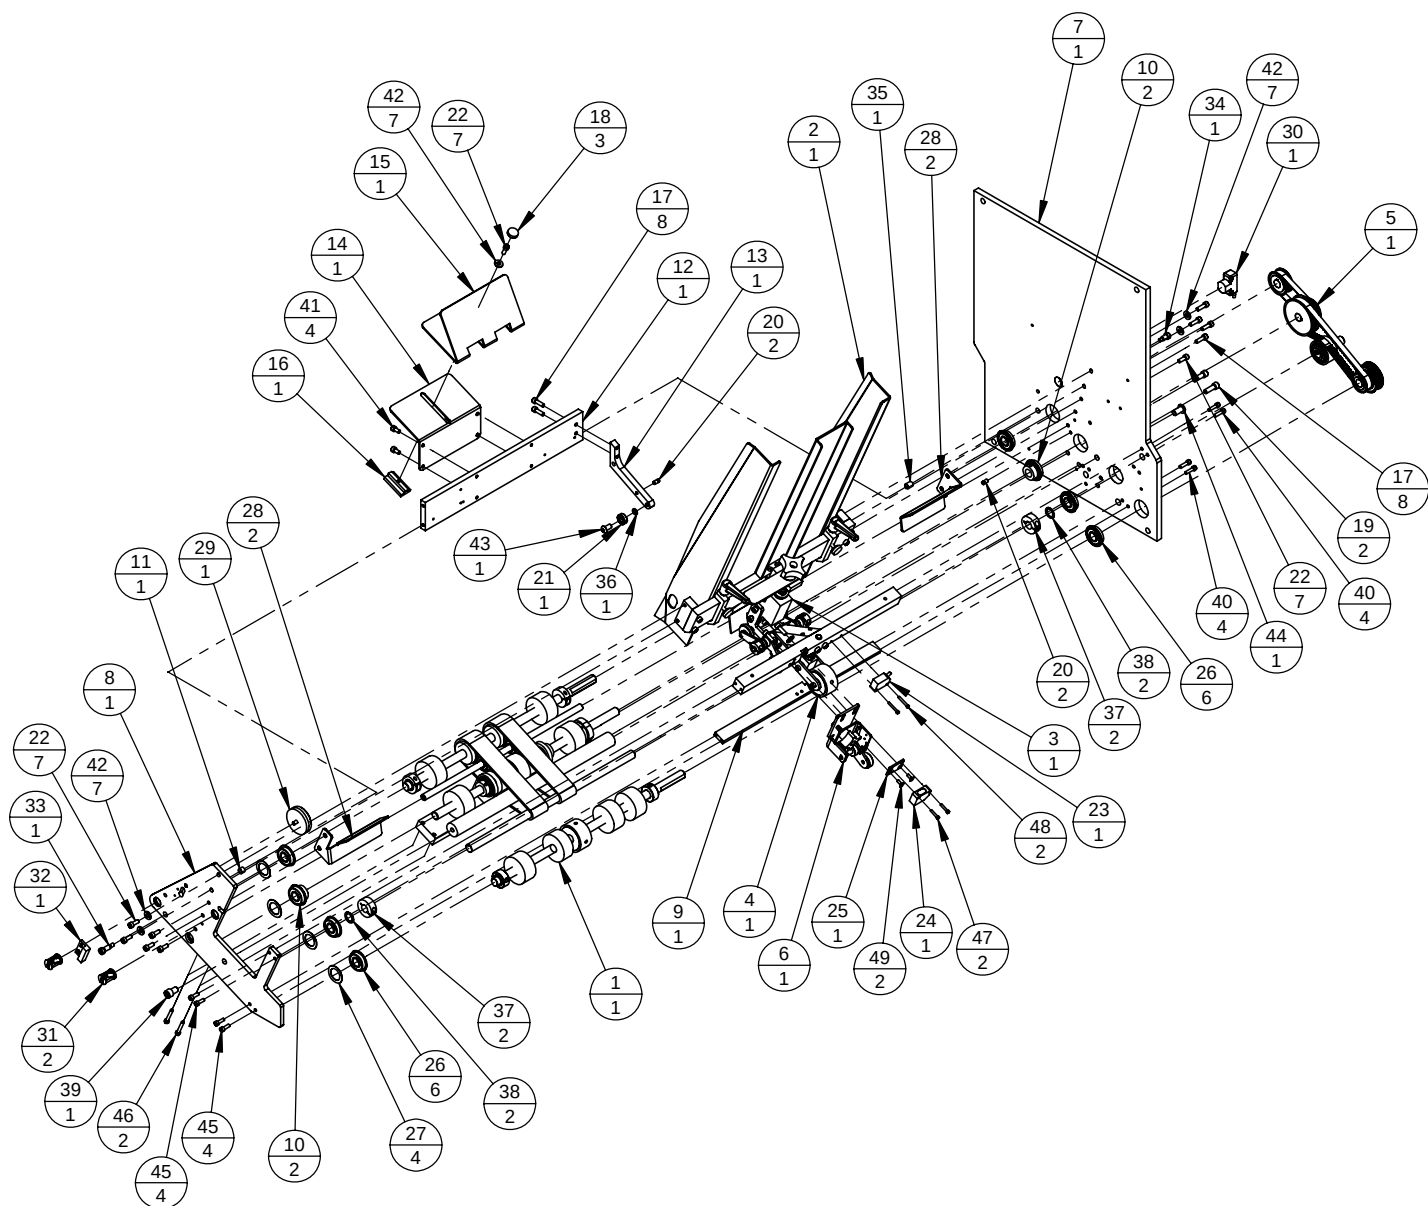


**THIN MAT'L FEEDER (Fig. 6-2)
 FEEDER SHAFT / TIMING ASSEMBLIES**

ITEM	PART NO.	QTY.	DESCRIPTION
1	SEE FIG. 6-3	1	ASSEMBLY, CROWN ROLLER SHAFT (18020-339)
2	SEE FIG. 6-3	1	ASSEMBLY, IDLER SUPPORT SHAFT (18020-341)
3	SEE FIG. 6-4	1	ASSEMBLY, DOUBLE DETECT SHAFT (18020-106)
4	SEE FIG. 6-4	1	ASSEMBLY, SEPERATOR SHAFT (18020-334)
5	18004-003	1	SHAFT, MAIN SUPPORT
6	18004-007	1	SHAFT, FRONT
7	99000-004	2	BELT, RED GUM
8	99002-054	2	PULLEY, TIMING, 20XL037, 1/2B
9	99002-031	1	PULLEY, TIMING, 24XL037, 1/2B
10	99002-032	1	PULLEY, TIMING, 16XL037, 1/2B
11	99002-017	1	PULLEY, TIMING, 32XL037, 1/2B
12	SEE FIG. 6-8	1	ASSEMBLY, TENSIONER (18020-153)
13	99000-001	1	BELT, TIMNG, 90XL037
14	99000-027	1	BELT, TIMING, 160XL037
15	-	2	SCREW, SKT HEAD, #10-32 X 1/2
16	-	1	BOLT, SKT HEAD, 5/16-18 X 1/2
17	-	2	BOLT, SKT HEAD, 1/4-20 X 3/4
18	-	1	BOLT, BUTTON HEAD, 5/16-18 X 5/8
19	-	2	SCREW, SKT HEAD, #10-32 X 7/8

PITNEY BOWES

Sure-Feed Engineering

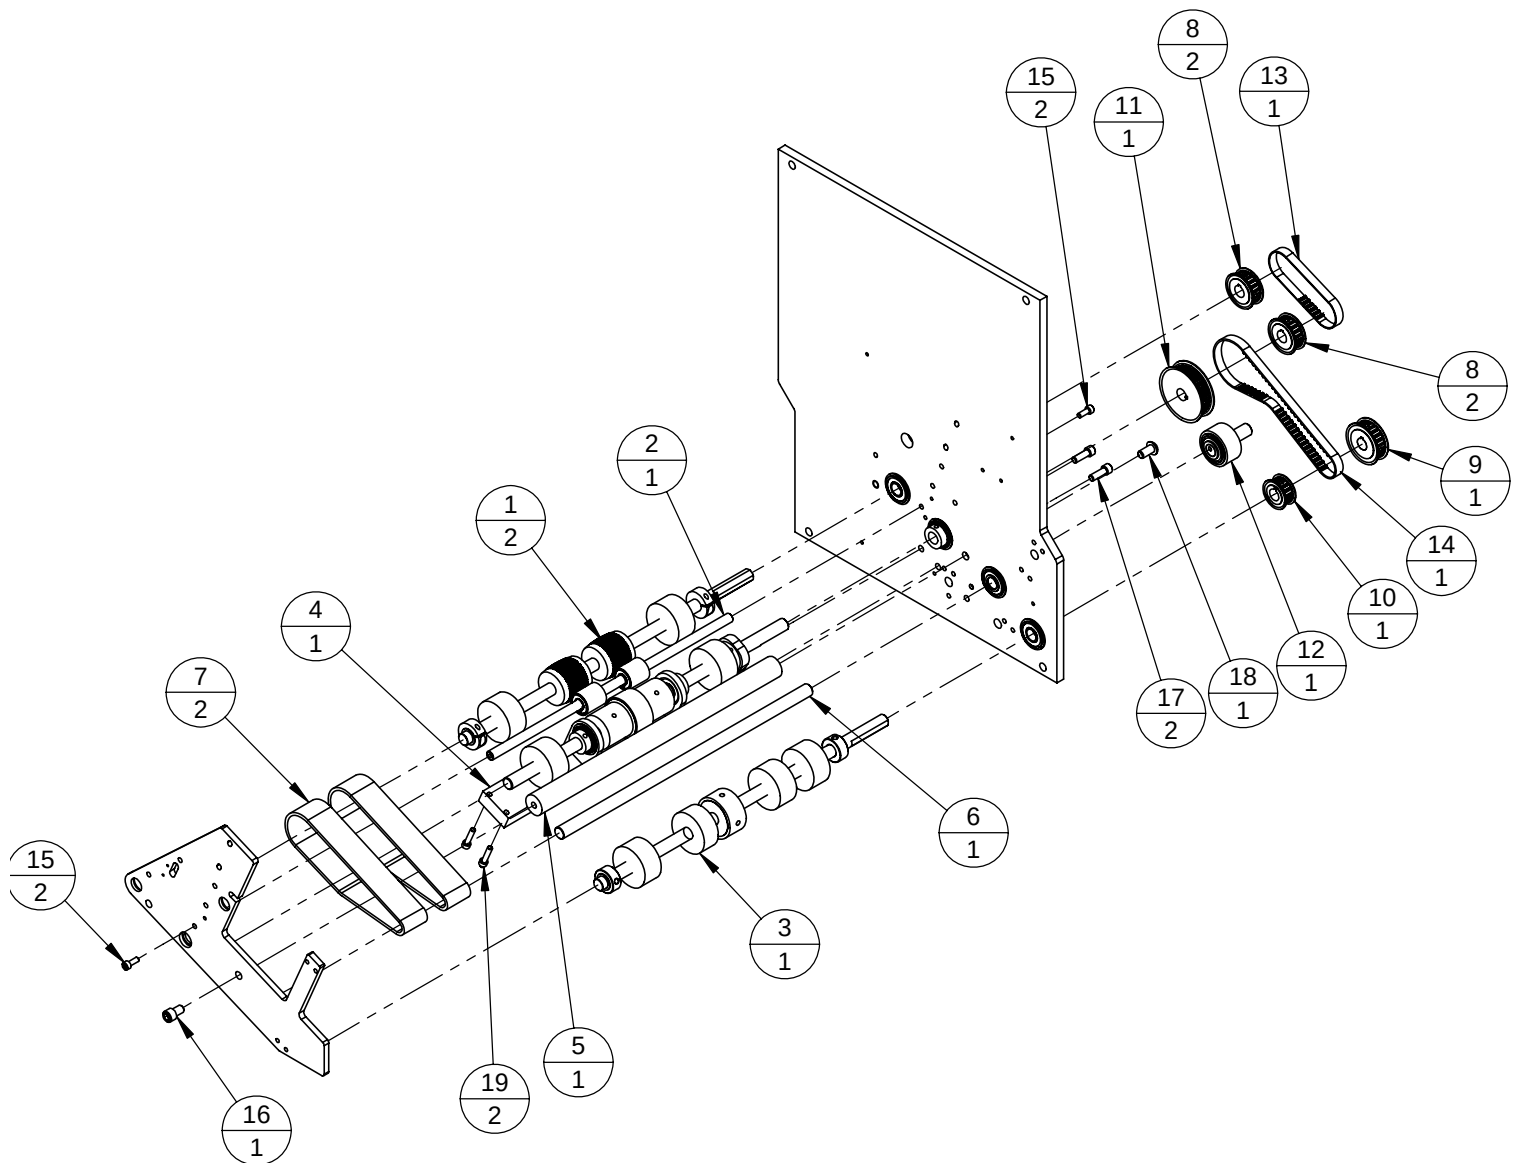


THIN MAT'L FEEDER (Fig. 6-3)
IDLER SUPPORT / CROWN ROLLER SHAFT ASSEMBLIES


ITEM	PART NO.	QTY.	DESCRIPTION
	18020-339	1	ASSEMBLY, CROWN ROLLER SHAFT
1	18004-006	1	SHAFT, MAIN
2	10006-018	2	PULLEY, CROWNED
	-	4	SET SCREW, #10-32 X 1/4
3	10006-007	2	ROLLER FEEDER, 1/2 B
4	99017-022	2	COLLAR, TWO-PC SPLIT, 1/2 B
5	99003-032	2	WASHER, NYLON, 1/2 X 1/32
	18020-341	1	ASSEMBLY, IDLER SUPPORT SHAFT
6	18004-004	1	SHAFT, IDLER SUPPORT
7	10006-012	2	ROLLER, IDLER
8	99003-008	4	BEARING, 3/8 X 7/8 SEALED
9	99022-004	4	SNAP RING, 3/8

PITNEY BOWES

Sure-Feed Engineering

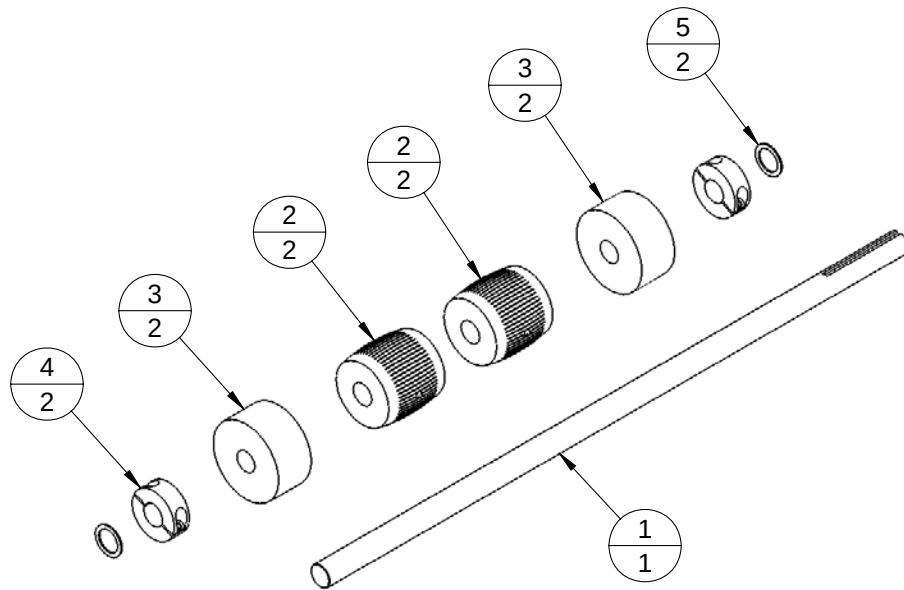

ASSY# 18020-339

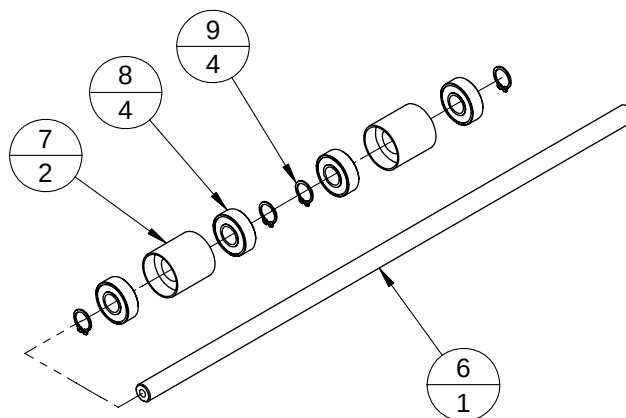


ASSY# 18020-341

**THIN MAT'L FEEDER (Fig. 6-4)
 SEPERATOR / DBL DETECT / ACCELERATOR SHAFT
 ASSEMBLIES**


ITEM	PART NO.	QTY.	DESCRIPTION
	18020-334	1	ASSEMBLY, SEPERATOR SHAFT
1	18008-143	1	BAR, SEPERATOR SHAFT SUPPORT
2	18004-106	1	SHAFT, SEPERATOR DRIVE
3	18006-077	1	ROLLER, SEPERATOR
4	10006-007	2	ROLLER, FEEDER, 1/2 B
5	18007-150	2	BLOCK, BEARING
6	99003-093	2	BEARING, 1/2 X 1-1/8, SELAED W/ COLLAR
7	99003-018	2	WASHER, NYLON, 1/2 X 1/16
8	18006-076	2	PULLEY MATE
	-	4	SET SCREW, #10-32 X 1/4
9	99003-112	1	BEARING, ROLLER CLUTCH
10	18016-015	1	CAM, ROLLER CLUTCH
	-	2	SET SCREW, #10-24 X 1/4
11	-	4	SCREW, SKT HEAD, #6-32 X 3/4
	18020-106	1	ASSEMBLY, DOUBLE DETECT SHAFT
12	18004-064	1	SHAFT, DOUBLE DETECT
13	10006-007	3	ROLLER, FEEDER, 1/2 BORE
14	10006-013	1	ROLLER, NIP
	-	2	SET SCREW, #10-32 X 1/4
15	99017-004	2	COLLAR, 1/2" SHAFT
16	99003-032	2	WASHER, NYLON, 1/2 X 1/32

PITNEY BOWES

Sure-Feed Engineering

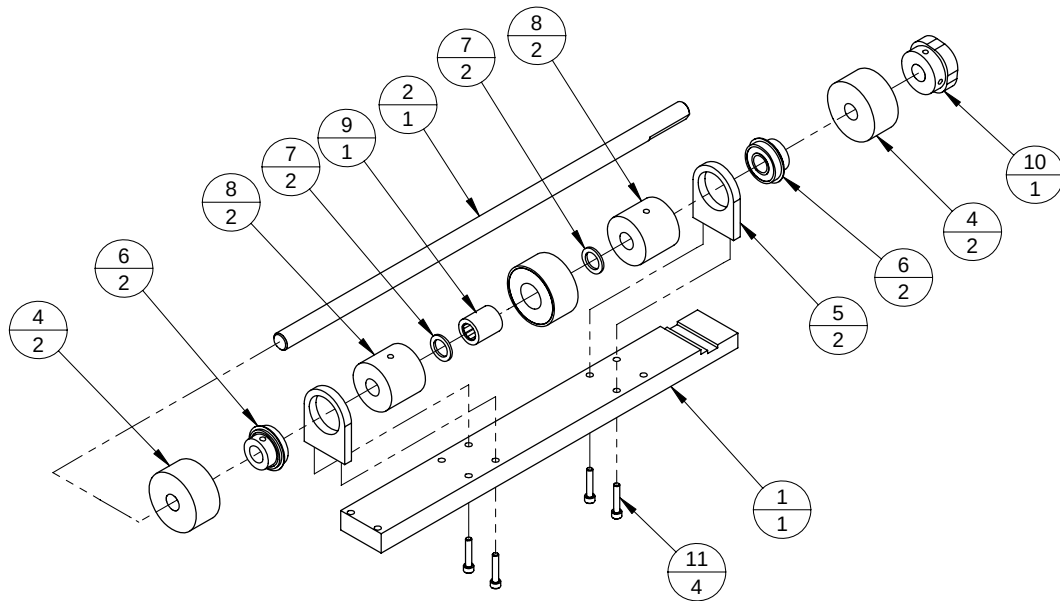

ASSY# 18020-334

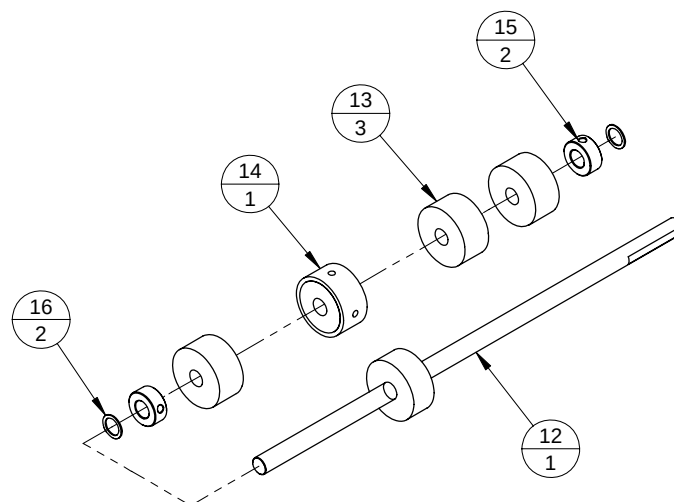


ASSY# 18020-106

**THIN MAT'L FEEDER (Fig. 6-5)
 SEPERATOR ASSEMBLY (18020-335)**

ITEM	PART NO.	QTY.	DESCRIPTION
1	18007-148	1	BLOCK, SEPERATOR
2	10004-028	1	STUD, SEPERATOR ADJ.
3	18011-133	1	PLATE, SEPERATOR CLAMP
4	18004-107	1	ROD, SEPERATOR
5	18005-170	1	SHROUD, SEPERATOR
6	99006-002	2	PIN, DOWEL, 5/16 X 3
7	-	1	HEX NUT, 5/16-24
8	-	2	SCREW, FLAT HEAD, #8-32 X 3/8
9	-	5	SCREW, SKT HEAD, #10-32 X 1/2
10	18005-181	2	GUIDE, SEPERATOR EXIT
11	-	4	FLAT WASHER, #10
12	10008-024	1	BAR, SEPERATOR RELEASE
13	99003-015	1	WASHER, NYLON, 5/16 X 1/16
14	99004-001	1	KNOB, 5/16-24 FEMALE
15	99005-045	1	SPRING, SEPERATOR
16	-	1	FLAT WASHER, 5/16

PITNEY BOWES

Sure-Feed Engineering

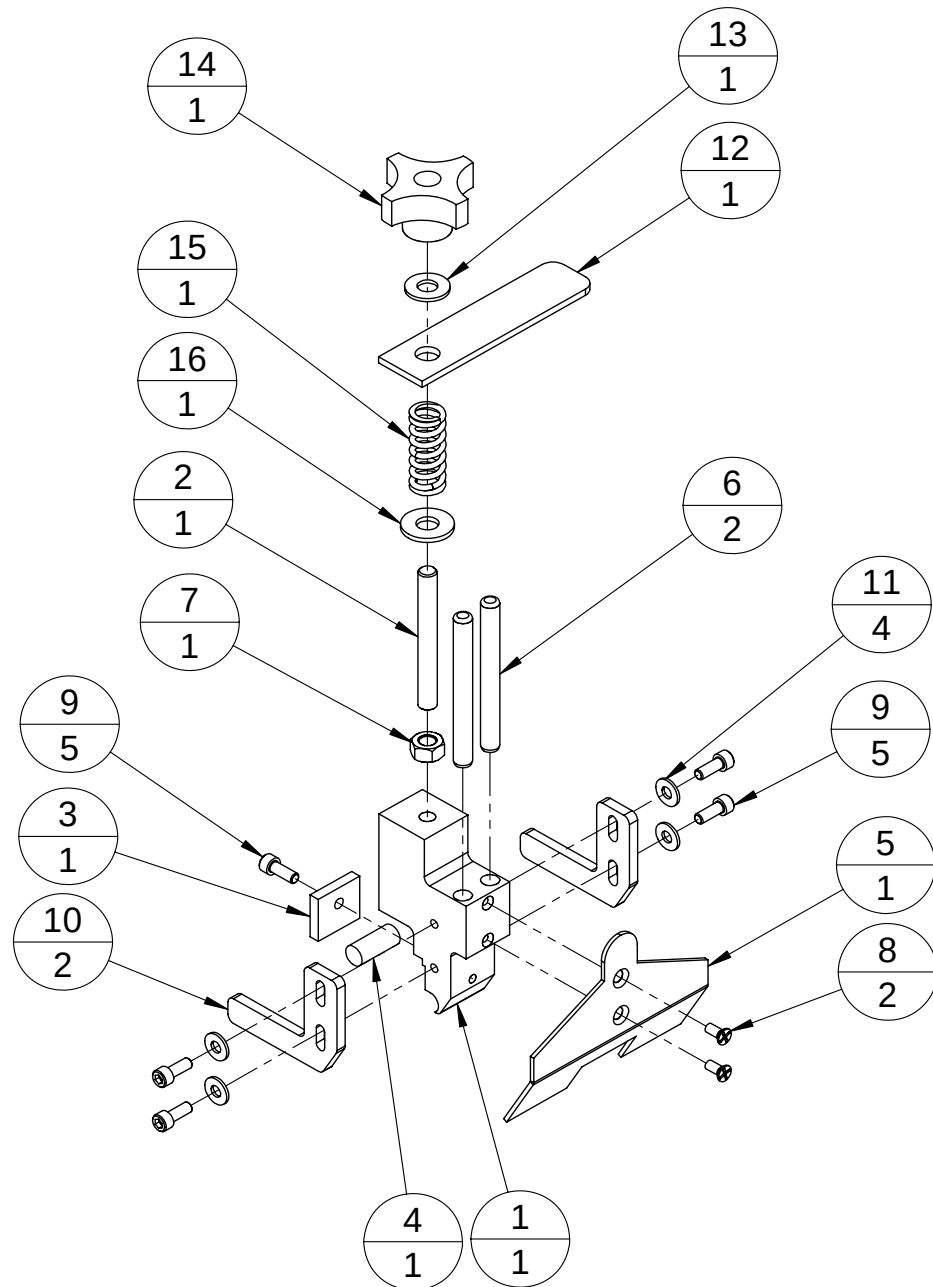


**THIN MAT'L FEEDER (Fig. 6-6)
TRANSPORT ASSEMBLY (18020-340)**

ITEM	PART NO.	QTY.	DESCRIPTION
1	18008-147	1	BAR, DOUBLE DETECT
2	18004-105	1	STUD, SPRING
3	99005-006	1	SPRING, ACCELERATOR ADJ
4	10007-012	1	BLOCK, TONGUE ADJ
5	10012-003	2	SPACER, TONGUE
6	18008-145	1	BAR, TRANSPORT SUPPORT (6X9)
7	18004-104	1	SHAFT, PIVOT
8	18009-102	2	BRACKET, TRANSPORT SIDE PLATE (6X9)
9	18006-078	4	ROLLER, IDLER TRANSPORT
10	99039-164	4	O-RING, THIN FEEDER TRANSPORT
11	18008-148	4	BAR, TRANSPORT IDLER ARM
12	99003-110	4	BEARING, FLANGED SNAP IN, 5/16
13	10006-013	1	ROLLER, NIP
	-	2	SET SCREW, #10-32 X 1/4
14	99003-017	2	WASHER, NYLON, 3/8 X 1/16
15	99022-003	2	SNAP RING, 3/8
16	99017-046	4	COLLAR, TWO-PC SPLIT, 5/16 B
17	99003-111	2	BUSHING, SLEEVE, 3/8 X 1/2 X 3/16
18	-	1	HEX NUT, 5/16-24
19	99033-006	4	SHOULDER BOLT, 1/4 X 1/4
20	-	4	SCREW, SKT HEAD, #8-32 X 1/2
21	-	2	SCREW, SKT HEAD, #10-32 X 1
22	99005-052	2	SPRING, EXTENSION (NOT SHOWN)

PITNEY BOWES

Sure-Feed Engineering

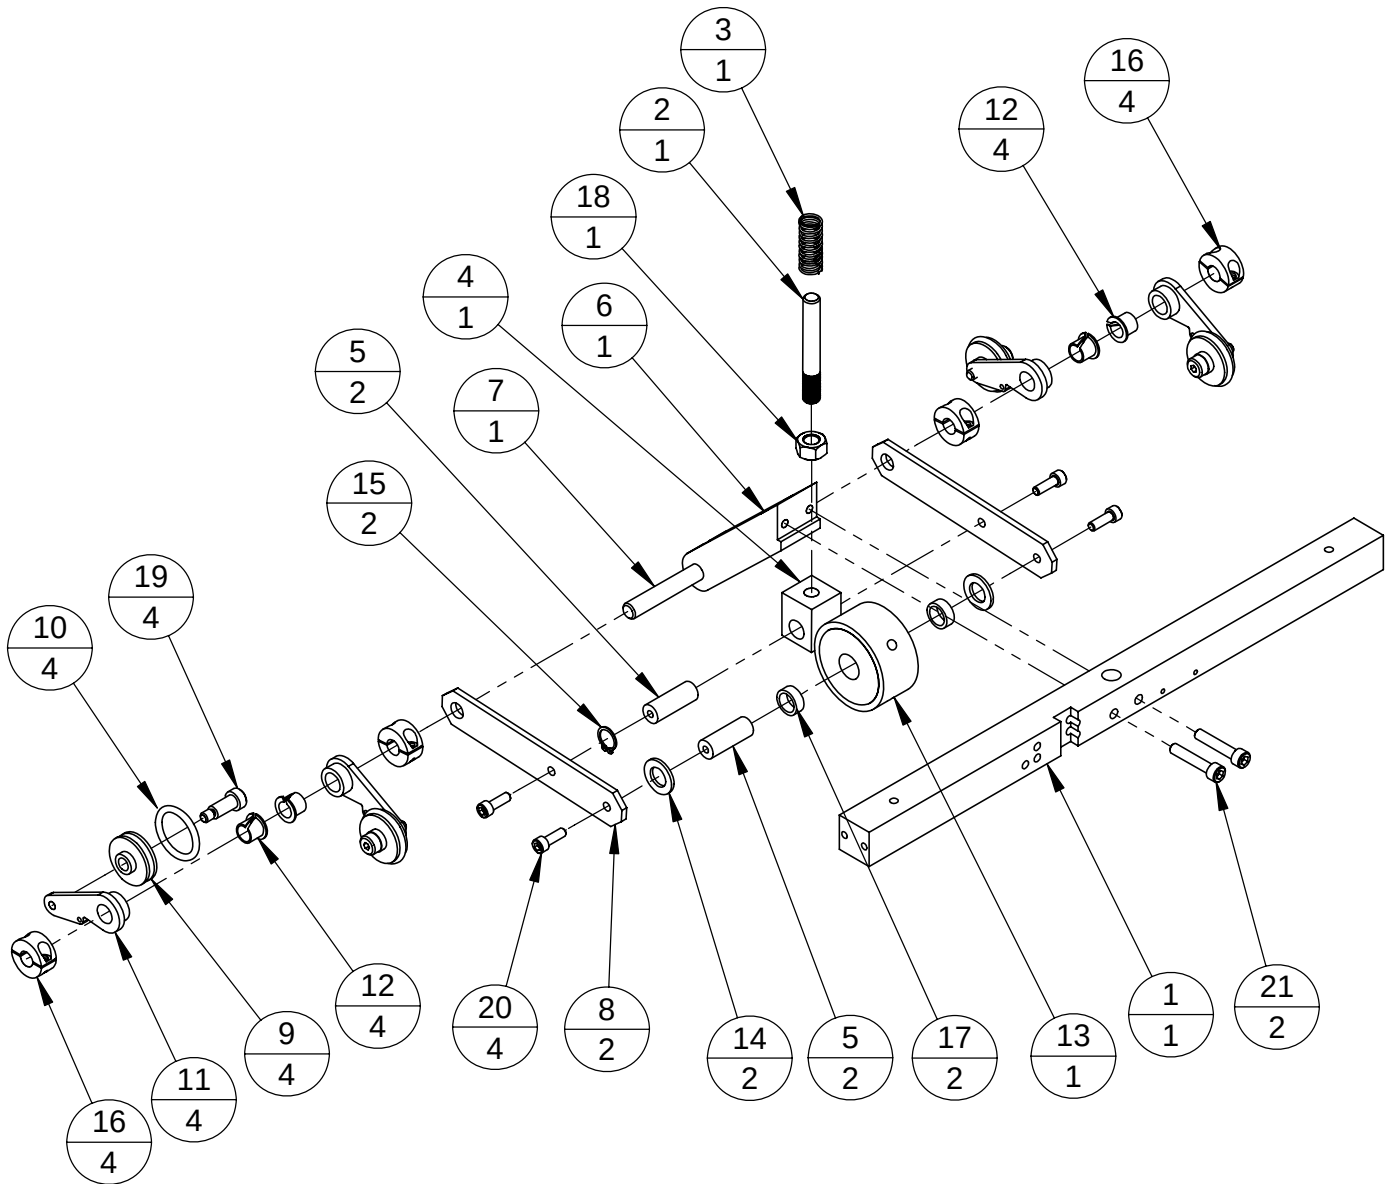


**THIN MAT'L FEEDER (Fig. 6-7)
 PAPER HOPPER ASSEMBLY (18020-370)**

ITEM	PART NO.	QTY.	DESCRIPTION
1	18008-146	1	BAR, BRIDGE
2	10009-046	2	BRACKET, SIDE GUIDE MTG
3	18005-175	1	SIDE GUIDE, LH
4	18005-176	1	SIDE GUIDE, RH
5	10005-002	1	GUIDE, FRONT PAPER
6	99004-028	2	HANDLE, RATCHET, #10-32 X 1/2
7	99004-002	2	KNOB, #10 SCREW
8	-	4	SCREW, SKT HEAD, #10-32 X 1/2
9	18012-049	2	SPACER, BRIDGE
10	-	4	SCREW, FLAT HEAD, #6-32 X 1/2
11	-	4	SCREW, FLAT HEAD, #10-24 X 3/8
12	10007-010	1	BLOCK, SEPERATOR ADJ.
13	-	4	SCREW, SKT HEAD, #10-32 X 3/4

PITNEY BOWES

Sure-Feed Engineering

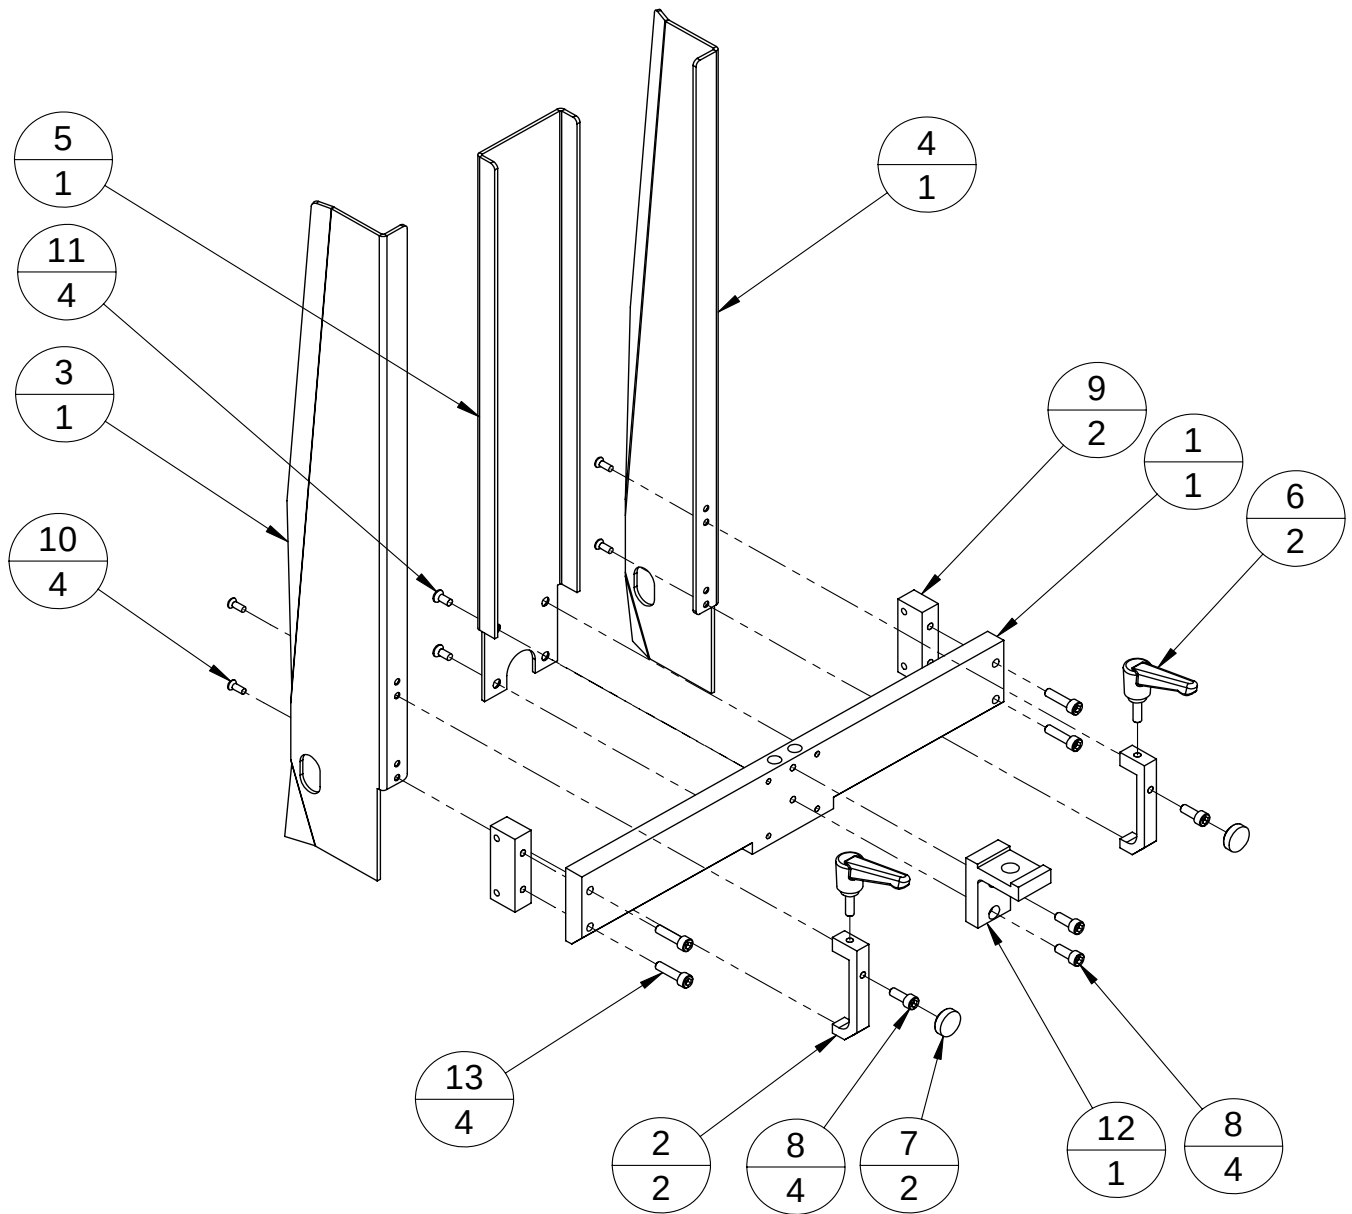


**THIN MAT'L FEEDER (Fig. 6-8)
DOUBLE DETECT / TENSIONER ASSEMBLIES**


ITEM	PART NO.	QTY.	DESCRIPTION
	18020-068	1	ASSEMBLY, DOUBLE DETECT
1	18009-001	1	BRACKET, DBL DETECT MTG.
2	10009-013	1	BRACKET, PIVOT, TUNING FORK
3	10004-052	1	SHAFT, DBL DETECT PIVOT
4	10009-012	1	BRACKET, TUNING FORK
5	10004-053	1	SHAFT, DBL DETECT
6	99032-003	1	STUD, #10-32 X 1-1/2
7	99004-005	1	KNOB, FEMALE, #10-32
8	99005-007	1	SPRING, GATE ADJ.
9	99003-002	2	BEARING, 1/4 X 5/8 SEALED
10	99003-001	1	BEARING, 3/8 X 7/8 SEALED
11	99003-005	1	BUSHING, SLEEVE, 1/4 X 3/8 X 5/16
12	99022-001	2	SNAP RING, 1/4
13	98009-004	1	SENSOR, DBL DETECT SWITCH
14	-	1	NUT, HEX, #10-32
15	-	1	FLAT WASHER, #10
16	-	2	SCREW, SKT HEAD, #8-32 X 1/2
17	-	1	SCREW, SKT HEAD, #10-24 X 5/8
18	-	1	NUT, HEX, #6-32
19	-	1	SCREW, SET, #6-32 X 7/8
20	-	1	SCREW, BUTTON HEAD, #4-40 X 1/2
	18020-153	1	ASSEMBLY, TENSIONER
21	18004-031	1	SHAFT, STUB IDLER
22	18006-011	1	PULLEY, FLAT IDLER, 1-1/2" OD X 3/4" W
23	99003-007	2	BEARING, 1/2 X 1-1/8 SEALED W/ S.R.
24	99003-018	1	WASHER, NYLON, 1/2 X 1/16
25	99022-004	1	SNAP RING, 1/2

PITNEY BOWES

Sure-Feed Engineering

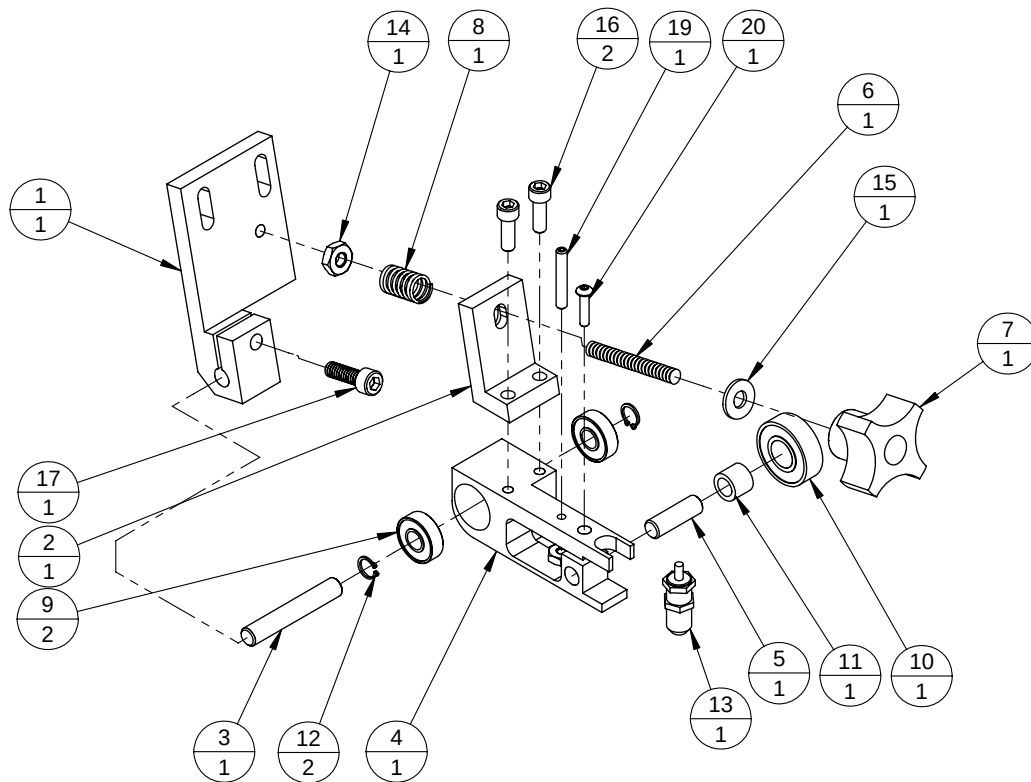

ASSY# 18020-068

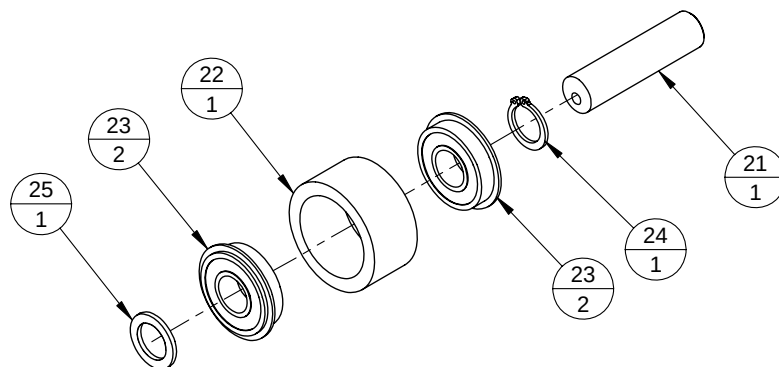


ASSY# 18020-153

THIN MAT'L FEEDER (Fig. 6-9)
FEEDER DRAG STRAP ASSEMBLY (18020-073)

ITEM	PART NO.	QTY.	DESCRIPTION
1	18009-014	1	BRACKET, DRAG STRAP MTG.
2	18009-029	1	BRACKET, DRAG STRAP PIVOT
3	18014-010	1	DRAG STRAP, FEEDER
4	-	2	SCREW, SKT HEAD, #10-24 X 1/2
5	-	2	SCREW, PAN HEAD, #6-32 X 1/4
6	99004-002	1	KNB, #10 SCREW

PITNEY BOWES

Sure-Feed Engineering

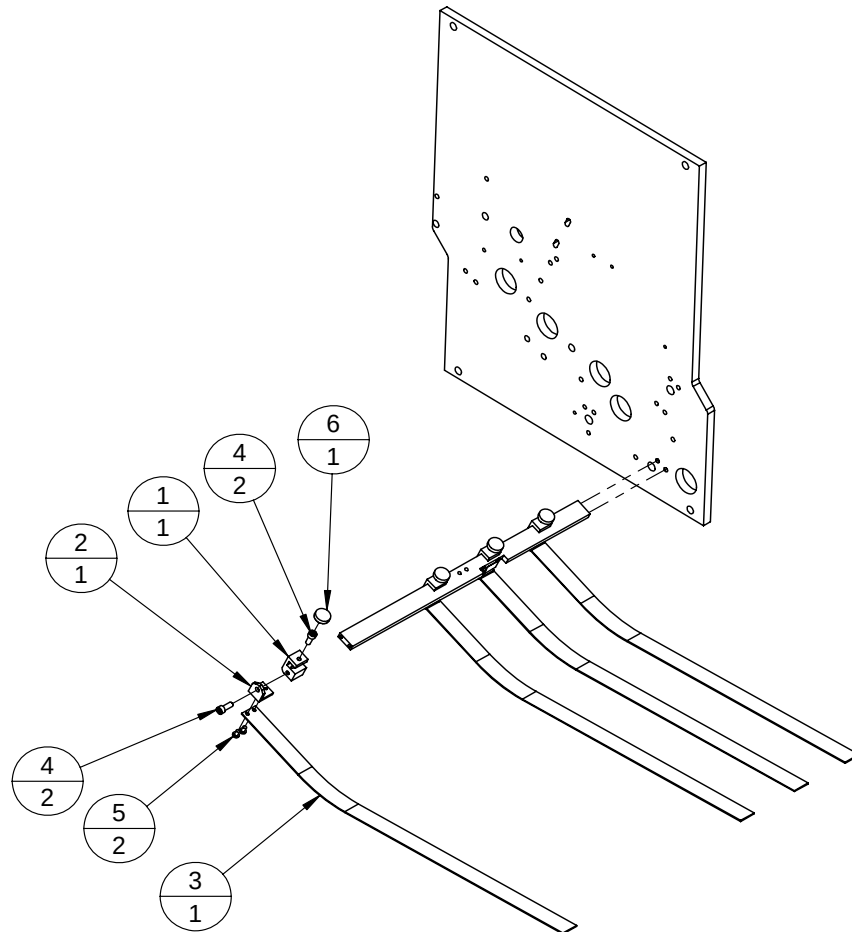


FRICITION FEEDER – ELECTRICAL (Fig. 6-10)
REAR FEEDER PLATE ASSEMBLY (18021-105)


ITEM	PART NO.	QTY.	DESCRIPTION
1	18021-087	1	ASSEMBLY, PLUG, REAR FEEDER PLATE
2	98001-022	4"	DIN RAIL, PHOENIX
3	98001-010	12	TERMINAL BLOCK, SPRING, ENTRELEC
4	98001-014	2	TERMINAL BLOCK, END STOP, ENTRELEC
5	98001-026	1	CIRCUIT DIVIDER
6	98020-029	1	CAPACITOR, 60HZ
7	98012-004	10"	DUCT, 1" X 1" WIREWAY W/ COVER
8	98009-051	1	SENSOR, RETRO REFLECTIVE

PITNEY BOWES

Sure-Feed Engineering

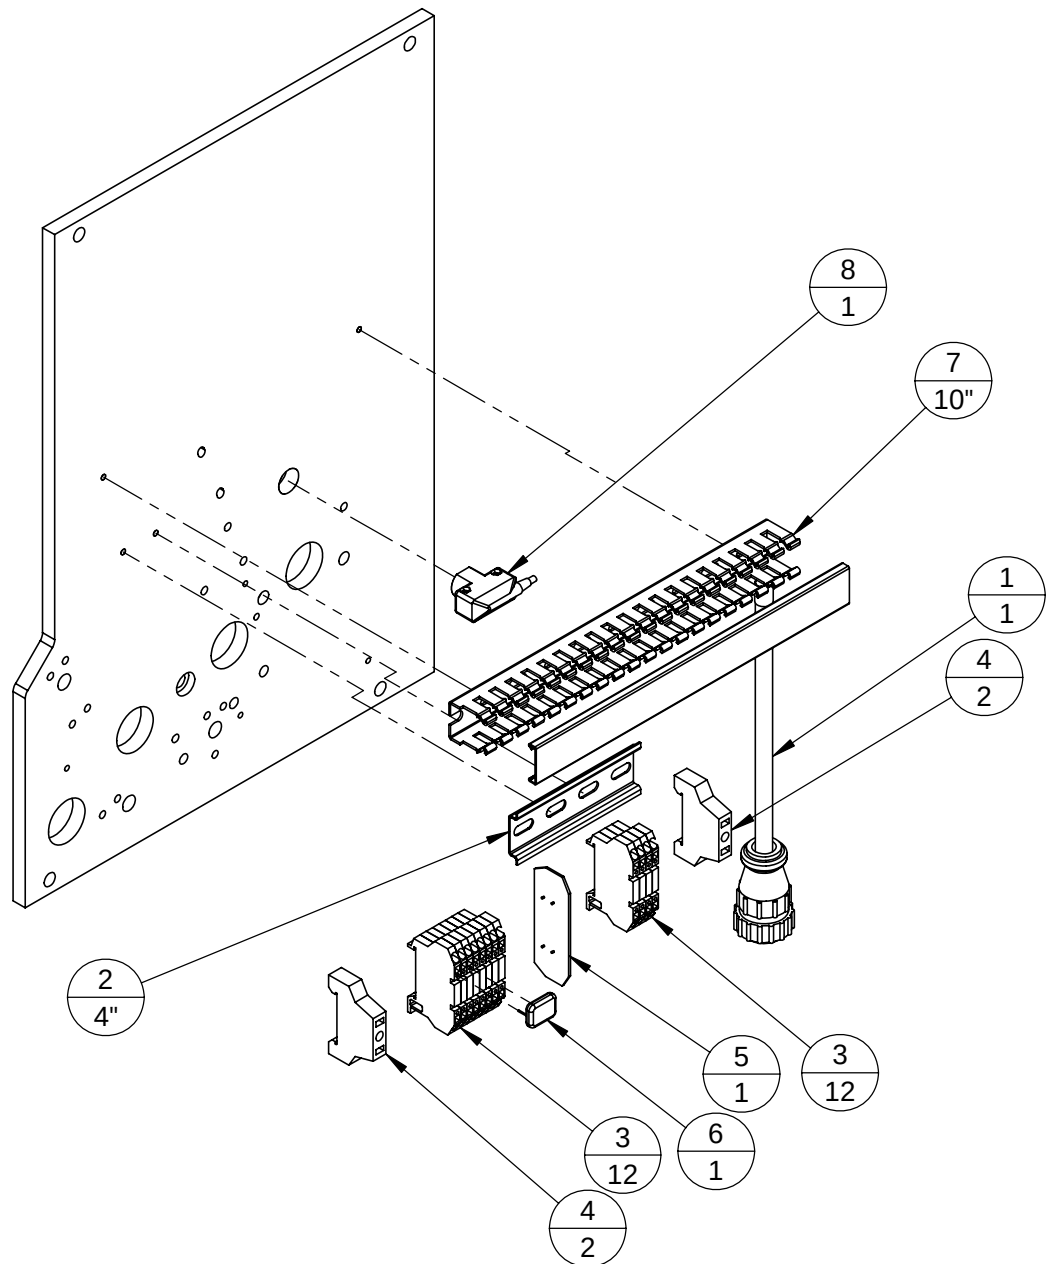

ROTARY FEEDER

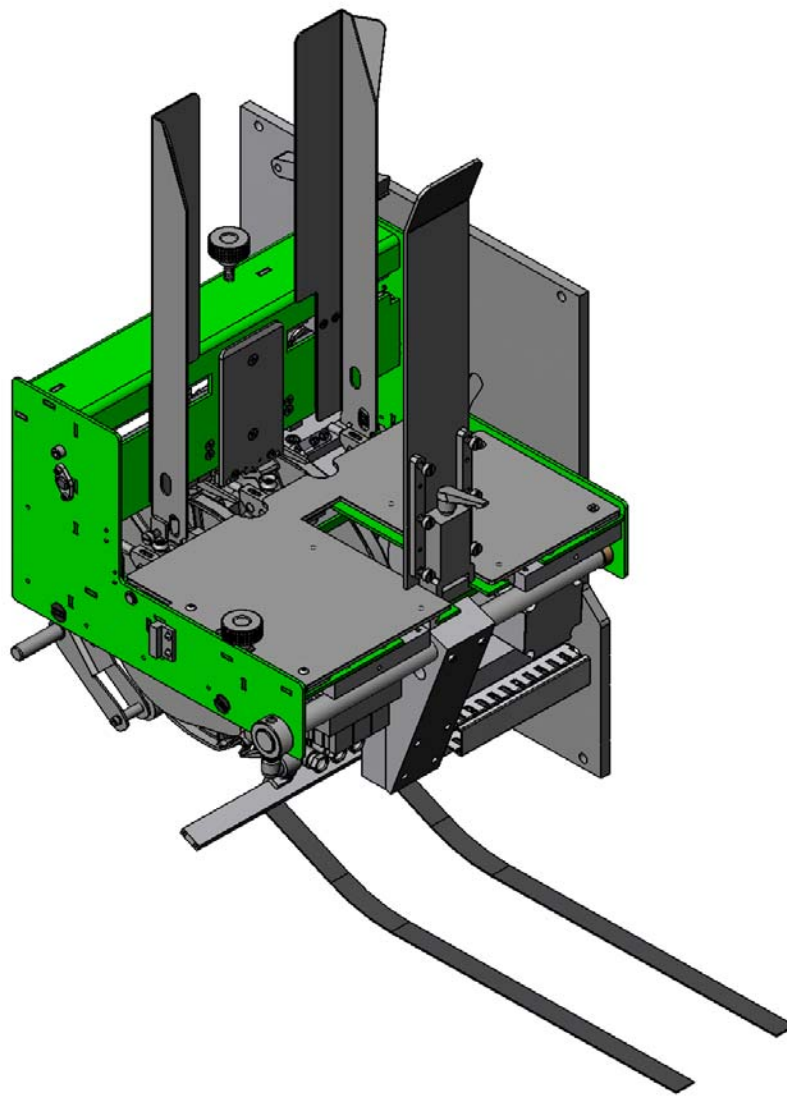


**ROTARY FEEDER ASSEMBLY (Fig. 7-1)
(18020-361)**

ITEM	PART NO.	QTY.	DESCRIPTION
1	SEE FIG. 7-2	1	EXIT ROLLER / DOUBLE DETECT ASSEMBLIES
2	SEE FIG. 7-4, 7-5	1	ASSEMBLY, UPPER FRAME (18020-362)
3	SEE FIG. 7-8	2	ASSEMBLY, DRAG STRAP, 10X13 (18020-073)
4	18007-154	1	BLOCK, FRAME PIVOT MTG.
5	18007-156	1	BLOCK, FRAME PIVOT SUPPORT
6	18004-108	1	SHAFT, UPPER FRAME PIVOT
7	98009-029	2	SENSOR, SENDER, PHOTOELECTRIC
8	99018-006	2	BRACKET, SENSOR MTG.
9	99017-039	1	COLLAR, SHAFT, 3/4" B
10	18009-109	1	BRACKET, MAGNETIC MTG.
11	98000-036	1	REED SWITCH
12	99039-062	1	MAGNETIC CATCH
13	18008-154	1	BAR, FEEDER TILT
14	18019-040	2	WIREWAY, 1" X 1" X 5.25"
15	18019-041	2	COVER, WIREWAY, 1" X 5.25"
16	18008-013	1	BAR, SENSOR / DRAG STRAP MTG.
17	-	6	SCREW, SKT HEAD, M3 X 6
18	-	2	BOLT, SKT HEAD, 5/16-18 X 3/4
19	-	4	SCREW, SKT HEAD, 1/4-20 X 1
20	-	2	SET SCREW, CUP PT, 1/4-20 X 1/2
21	-	4	SCREW, BUTTON HEAD, #8-32 X 3/8
22	-	4	FLAT WASHER, #6
23	-	2	FLAT WASHER, 1/8
24	-	2	SCREW, SKT HEAD, #10-24 X 3/8
25	-	2	SCREW, SKT HEAD, #10-24 X 1/2
26	-	2	SCREW, SKT HEAD, #8-32 X 5/8

PITNEY BOWES

Sure-Feed Engineering

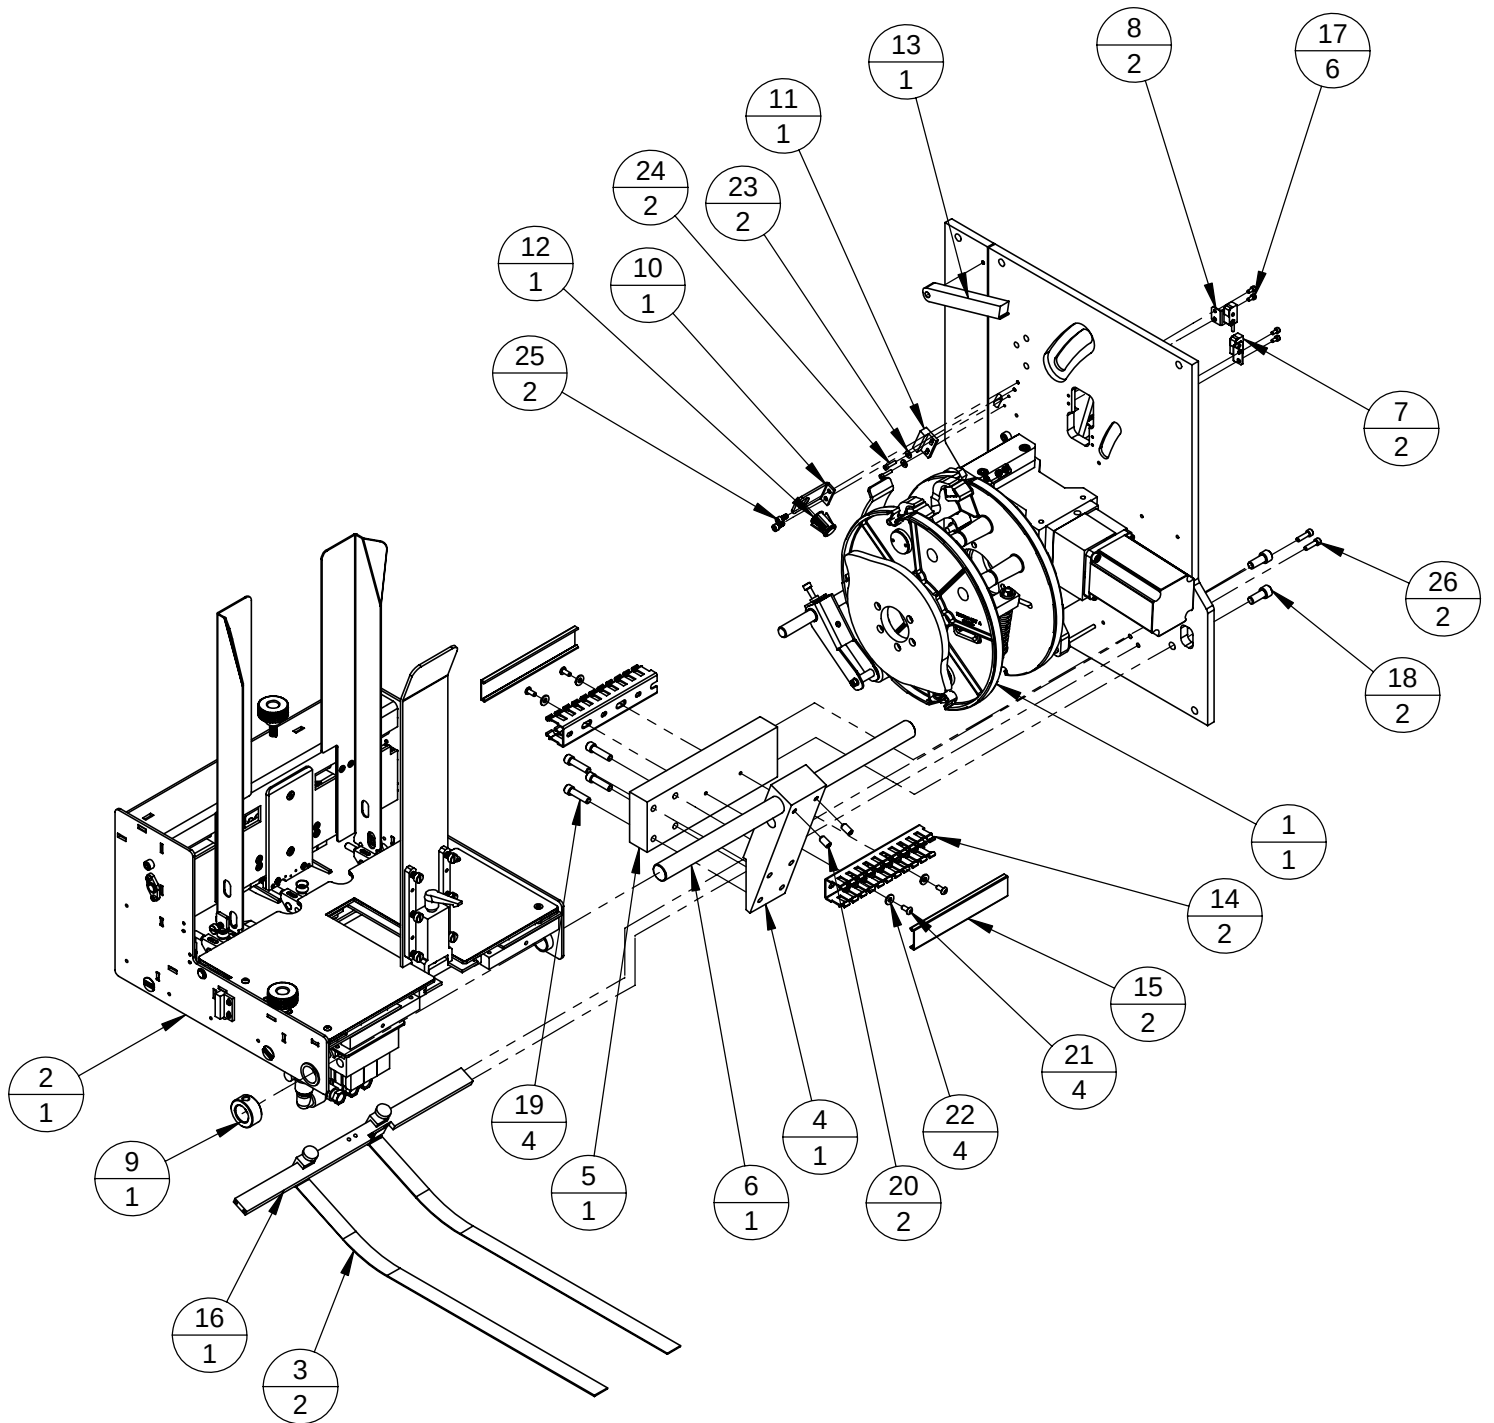


**ROTARY FEEDER ASSEMBLY (Fig. 7-2)
 (18020-361)**

ITEM	PART NO.	QTY.	DESCRIPTION
1	SEE FIG. 7-3	1	DRUM / MOTOR ASSEMBLIES
2	SEE FIG. 7-8	1	ASSEMBLY, EXIT ROLLER (18020-363)
3	SEE FIG. 7-9	1	ASSEMBLY, DOUBLE DETECT (18020-364)
4	18007-158	1	BLOCK, UPPER FRAME STOP
5	18007-159	1	BLOCK, DOUBLE DETECT SUPPORT
6	18004-110	1	SHAFT, DOUBLE DETECT SUPPORT
7	99003-001	1	BEARING, SEALED, 3/8 X 7/8
8	98009-040	1	SENSOR, RECEIVER
9	18009-108	1	BRACKET, MISS SENSOR MTG.
10	-	6	SCREW, SKT HEAD, M3 X 6
11	-	4	SCREW, SKT HEAD, 1/4-20 X 3/4
12	-	4	SCREW, SKT HEAD, M6 X 20
13	-	2	WASHER, FLAT, M6
14	-	2	SCREW, SKT HEAD, #10-24 X 5/8
15	-	2	WASHR, FLAT, M3

PITNEY BOWES

Sure-Feed Engineering

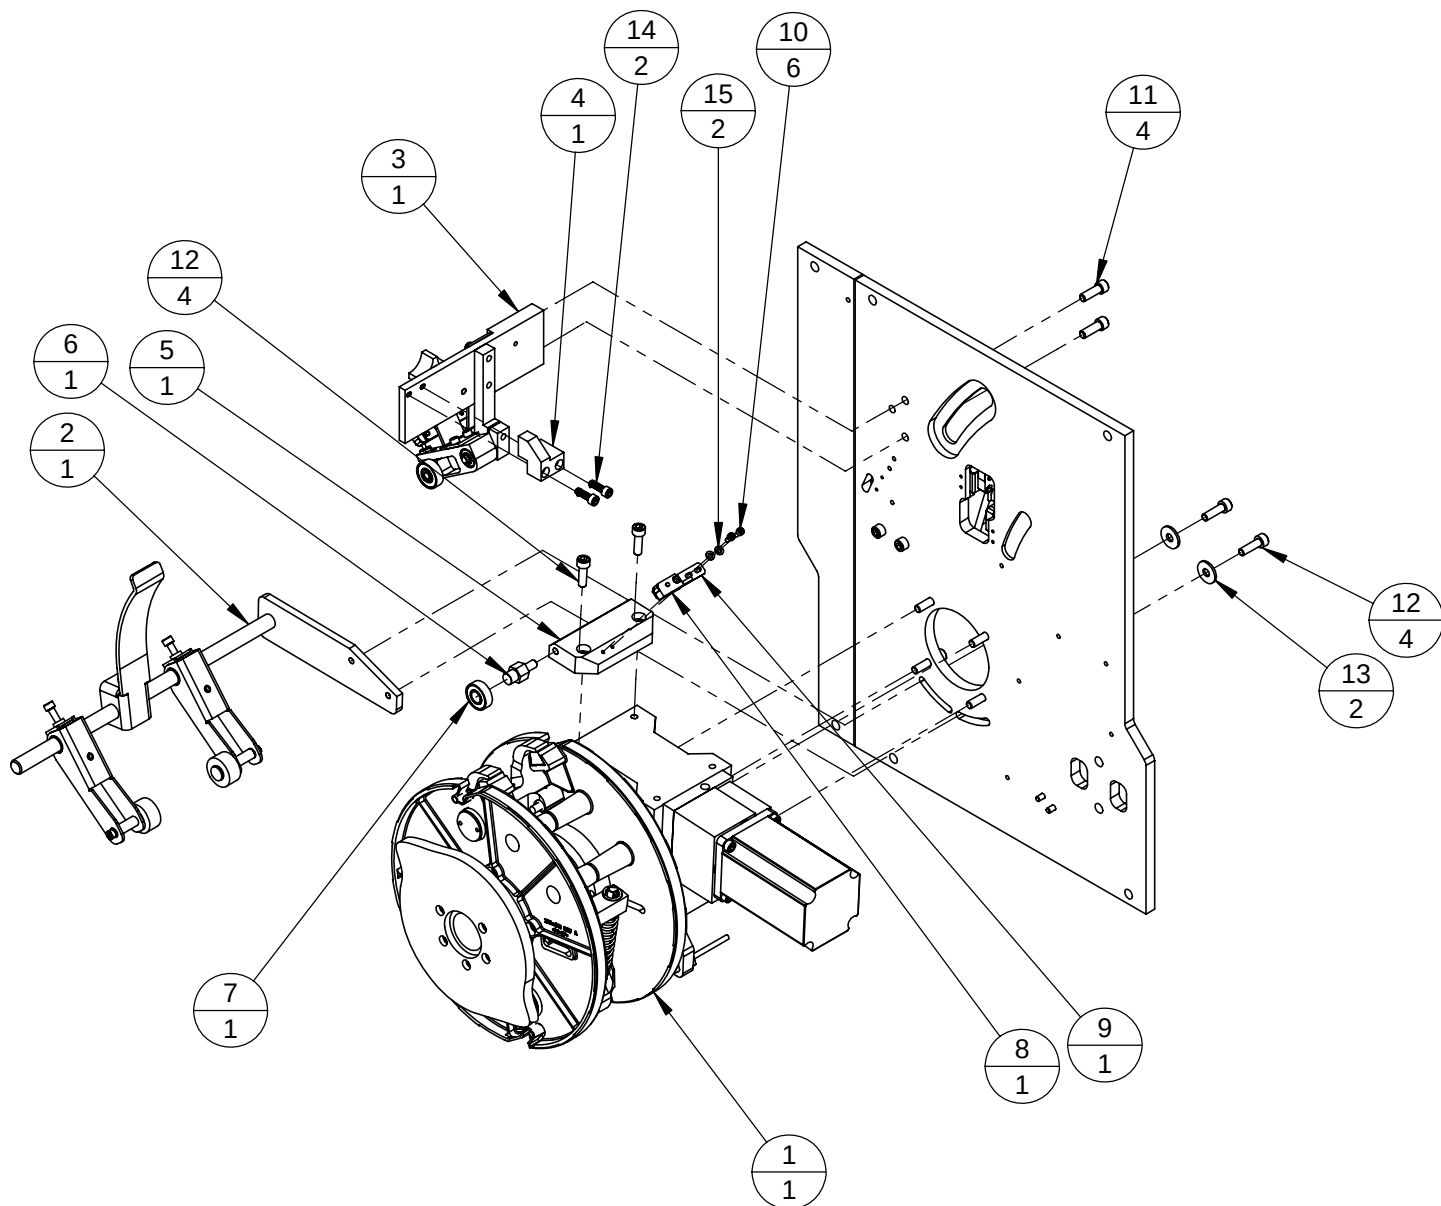


**ROTARY FEEDER ASSEMBLY (Fig. 7-3)
 (18020-361)**

ITEM	PART NO.	QTY.	DESCRIPTION
1	18011-136	1	PLATE, ROTARY FEEDER MTG.
2	18012-051	1	SPACER, GEARBOX
3	99015-006	1	REDUCER, ATEK, 19.5:1
4	99001-053	1	MOTOR, SERVO, 400W
5	18007-155	1	BLOCK, ARM PIVOT
6	99003-124	2	BUSHING, FL, 12MM X 15MM X 12MM
7	ZX00221	1	FLANGE, GEARBOX
8	ZX00237	1	CAM, GRIPPER
9	Y683036	1	SENSOR, PROXIMITY
10	ZX00128	1	ASSEMBLY, SEPERATOR FINGER CAM
11	ZX00272	1	ASSEMBLY, FINGER CAM ARM
12	158-0514	1	KEY, SQ, 6MM X 15MM ROUND END
13	ZX00501	1	ASSEMBLY, GRIPPER DRUM
14	18011-142	1	PLATE, FILLER, ROTARY AND 6X9
15	99017-054	1	COLLAR, SHAFT – SET SCREW, 12MM BORE
16	-	2	SCREW, SKT HEAD, 1/4-20 X 3/4
17	-	3	SCREW, SKT HEAD, M6 X 25
18	-	1	SCREW, FLAT HEAD, M6 X 25
19	-	4	SCREW, SKT HEAD, M6 X 16
20	-	9	SCREW, SKT HEAD, M5 X 16

PITNEY BOWES

Sure-Feed Engineering

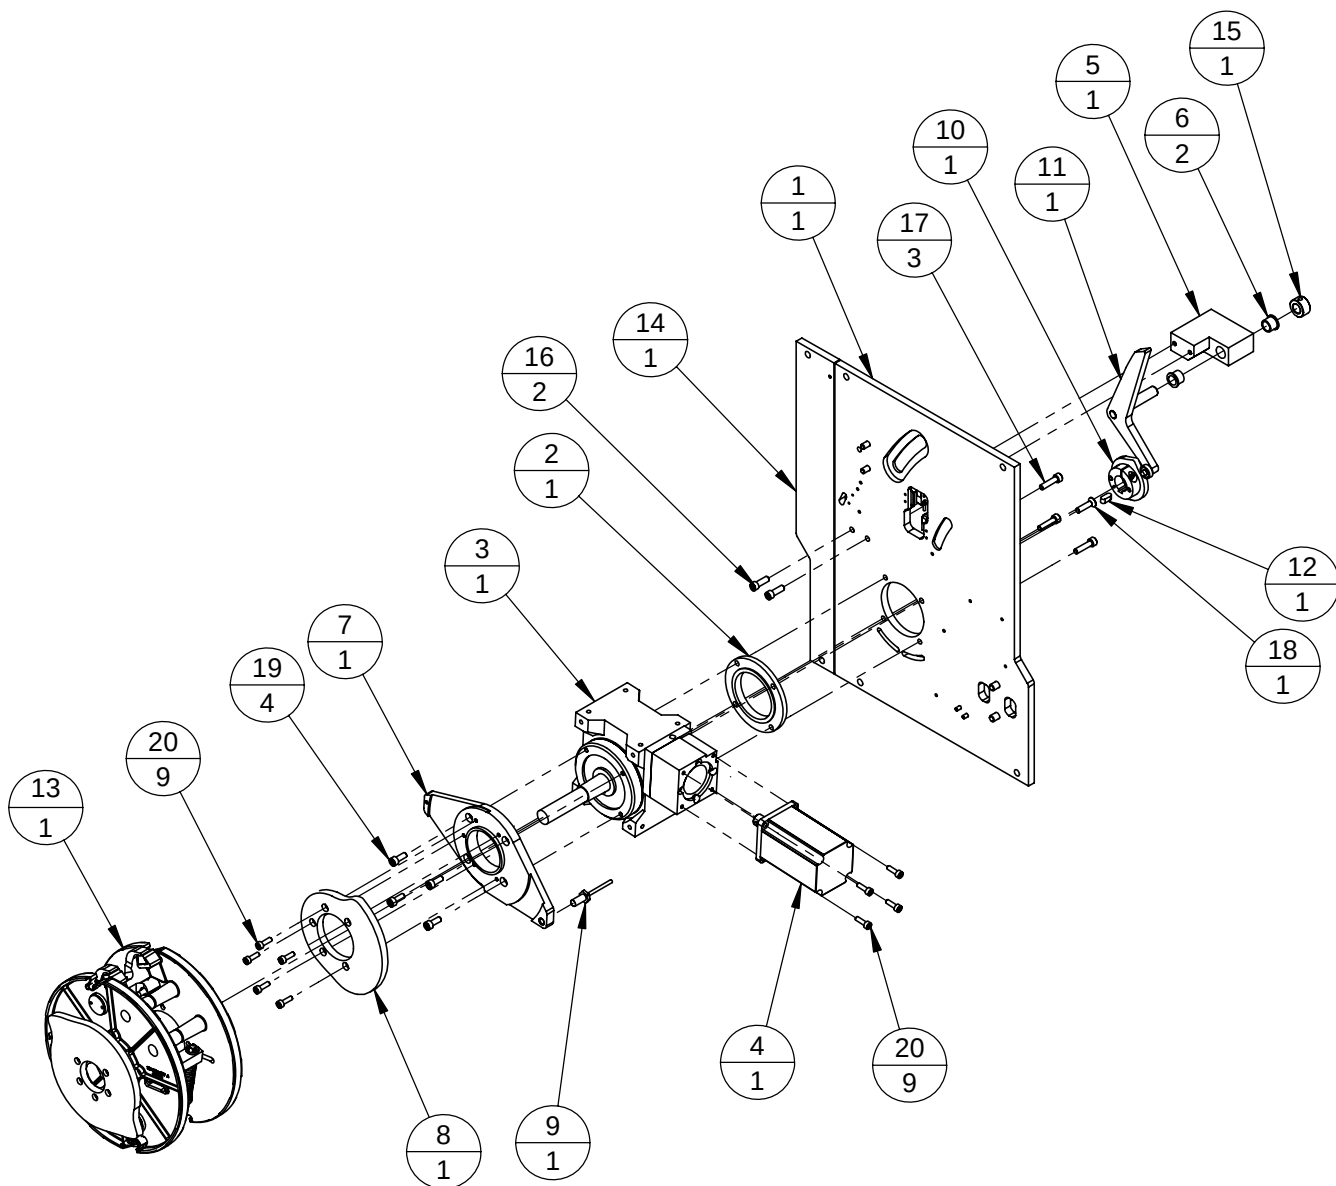


ROTARY FEEDER – (Fig. 7-4)
UPPER FRAME ASSEMBLY (18020-362)

ITEM	PART NO.	QTY.	DESCRIPTION
1	18000-021	1	FRAME WELDMENT – UPPER
2	ZX00140	1	ASSEMBLY, BACK STOP
3	SEE FIG. 7-6	1	ASSEMBLY, DECK PLATE (18020-357)
4	ZX00145	1	ASSEMBLY, CENTER GATE
5	ZX00199	1	ASSEMBLY, KNOB, DECK HIEGHT
6	18005-182	1	SIDE GUIDE, RH
7	18005-183	1	SIDE GUIDE, LH
8	ZX0015	2	PIN, POINTED THUMBSCREW
9	212-5015	2	SPRING, COMPRESSION, 31 LB/IN
10	18004-109	1	SHAFT, SIDE GUIDE ADJUSTING
11	18007-157	2	BLOCK, SIDE GUIDE ADJUSTING
12	99004-005	2	KNOB, FEMALE, #10-32
13	99032-001	2	STUD, THREADED, #10-32 X 2
14	98000-036	1	REED SWITCH
15	99003-123	2	BUSHING, FL, 3/4 X 7/8 X 1/2
16	-	2	SCREW, BUTTON HEAD, M3 X 8
17	-	4	SCREW, FLAT HEAD, #6-32 X 3/8
18	-	1	SCREW, SKT HEAD, 1/4-20 X 3/4
19	-	1	SCREW, FLAT HEAD, 1/4-20 X 5/8
20	99039-062	2	MAGNETIC CATCH
21	212-5020	1	SPRING, COMPRESSION, 11LB/IN
22	19-0150	1	KNOB, KNURLED, M6 X 12

PITNEY BOWES

Sure-Feed Engineering

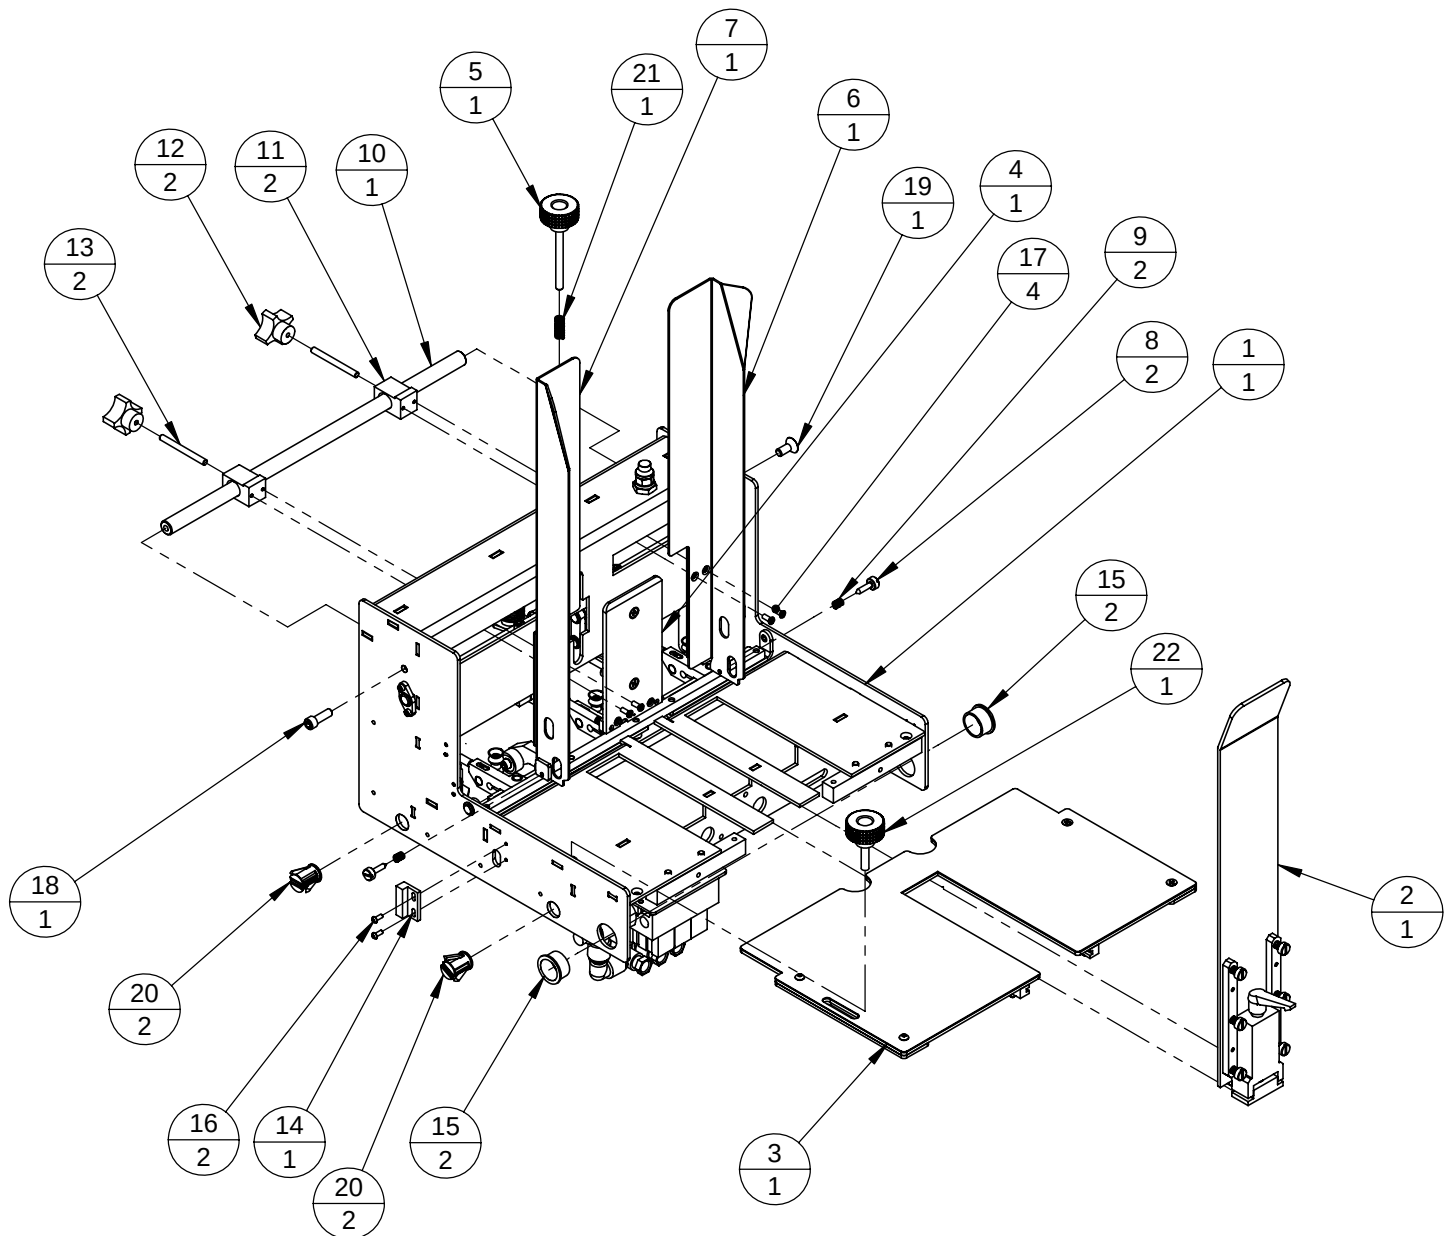


ROTARY FEEDER (Fig. 7-5)
UPPER FRAME ASSEMBLY (18020-362)

ITEM	PART NO.	QTY.	DESCRIPTION
1	SEE FIG. 7-7	1	ASSEMBLY, SEPERATOR FINGER BAR (18020-358)
2	SEE FIG. 7-6	1	ASSEMBLY, SUCTION CUP BAR (18020-356)
3	ZX00163	2	GUIDE, SPRING
4	ZX00184	2	BEARING, FLANGED HOUSING
5	-	4	SCREW, SKT HEAD, M3 X 8
6	ZX00245	1	ASSY, VALVE, PACK AIR
7	ZX00258	1	BRACKET, VACUUM VALVE
8	ZX00243	3	ASSY, VACUUM VALVE
9	98009-040	2	SENSOR, RECEIVER
10	99018-006	2	BRACKET, SENSOR MTG.
11	18012-053	2	SPACER, COVER HINGE
12	-	2	SCREW, SKT HEAD, M4 X 8
13	-	4	SCREW, SKT HEAD, M5 X 16
14	-	2	SCREW, SKT HEAD, M3 X 16
15	212-5012	2	SPRING, COMPRESSION, 12 LB/IN
16	-	4	SCREW, FLAT HEAD, M4 X 8
17	175-0912	2	BEARING, CLIP, 8MM ID
18	-	4	SCREW, SKT HEAD, M3 X 5

PITNEY BOWES

Sure-Feed Engineering


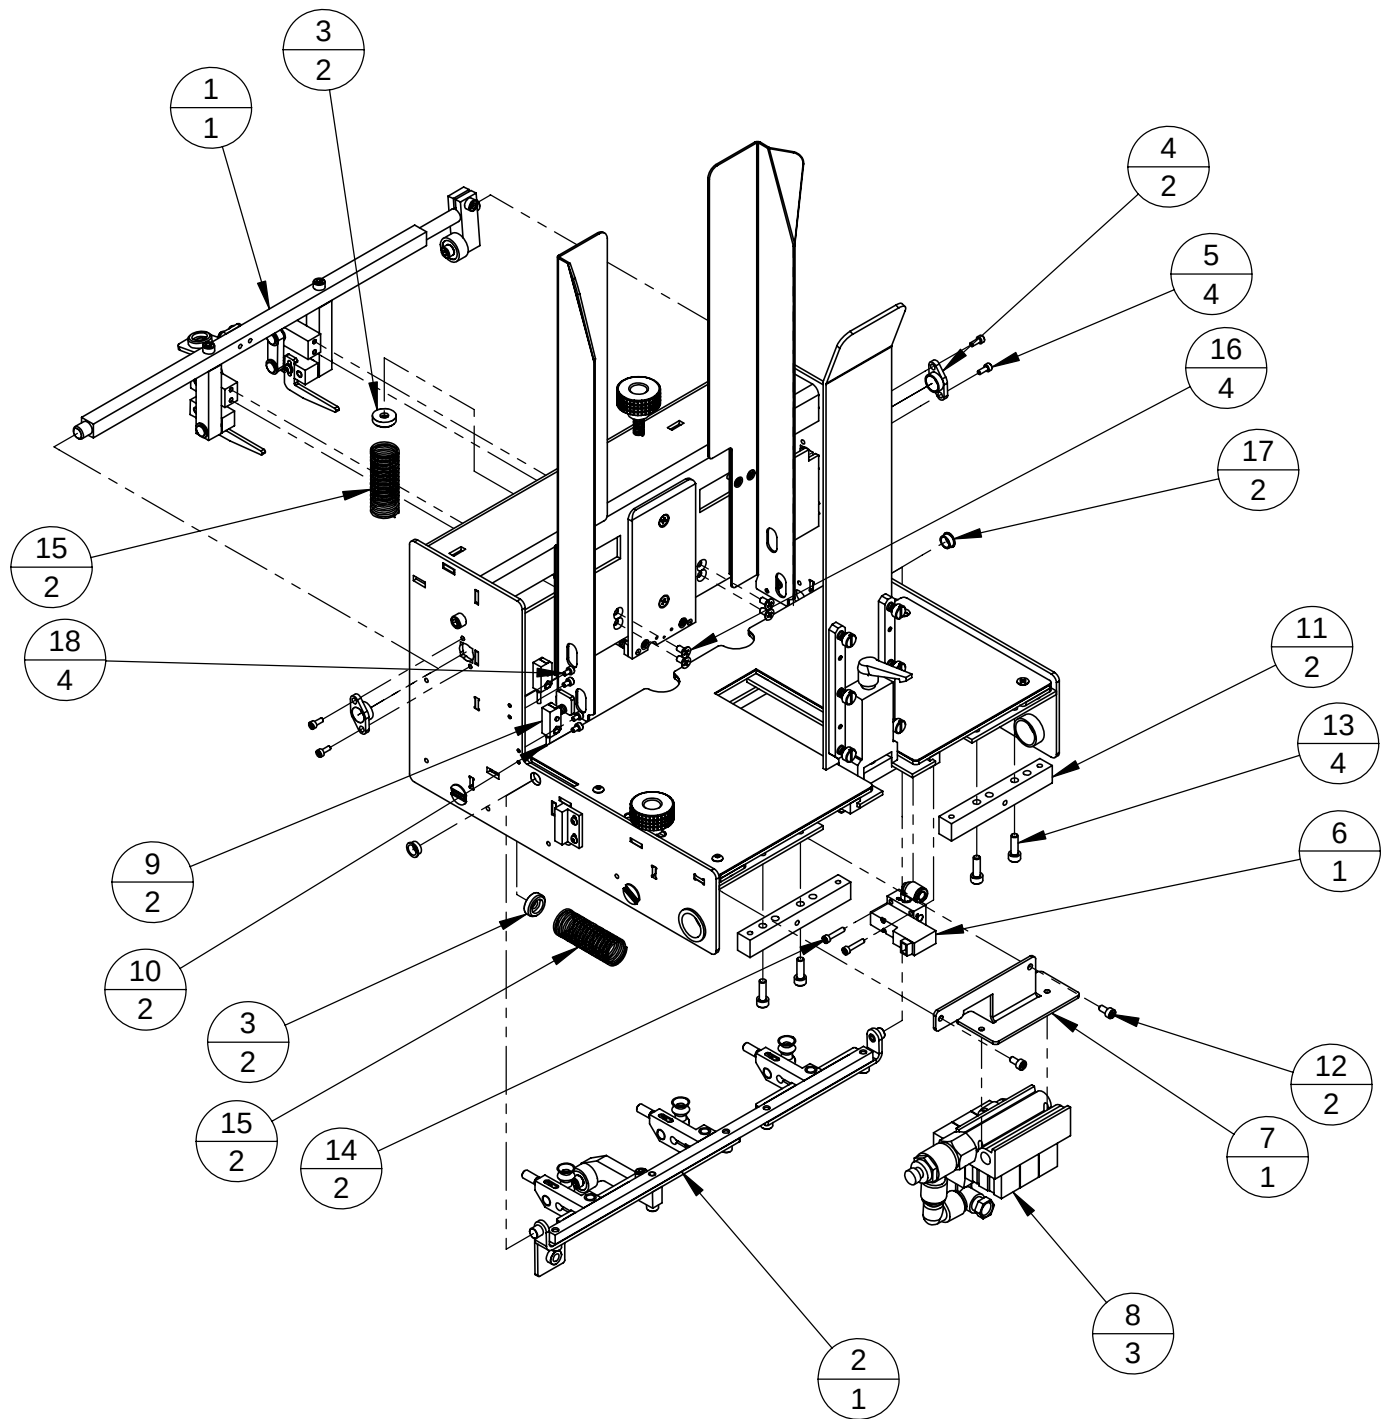


**ROTARY FEEDER – UPPER FRAME (Fig. 7-6)
 DECK PLATE / SUCTION CUP BAR ASSEMBLIES**

ITEM	PART NO.	QTY.	DESCRIPTION
	18020-357	1	ASSEMBLY, DECK PLATE
1	18011-137	1	DECK PLATE SUPPORT
2	18011-138	1	PLATE, DECK
3	ZX00115	2	GUIDE, SLIDER
4	-	2	SCREW, BUTTON HEAD, M4 X .07 X 6
5	-	4	NUT, HEX, M4 X .07
6	-	2	SCREW, FLAT HEAD, M4 X .07 X 6
	18020-356	1	ASSEMBLY, SUCTION CUP BAR
7	18008-152	1	BAR, SUCTION CUP PIVOT
8	18009-110	1	BRACKET, SUCTION CUP PIVOT, REAR
9	ZX00176	1	ASSY, BRACKET, SUCTION CUP FRONT
10	ZX00168	3	ASSY, SUCTION CUP
11	ZX00180	1	LEVER, SUCTION CAM
12	ZX00242	1	BEARING, CAM FOLLOWER, 3/4"
13	ZX00163	1	GUIDE, SPRING, FINGER DEVICE
14	-	1	SCREW, SKT HEAD, M5 X 0.8 X 25
15	-	1	SCREW, SKT HEAD, M5 X 0.8 X 12
16	-	4	SCREW, SKT HEAD, M5 X 0.8 X 10
17	-	1	SCREW, SKT HEAD, M5 X 0.8 X 20

PITNEY BOWES

Sure-Feed Engineering

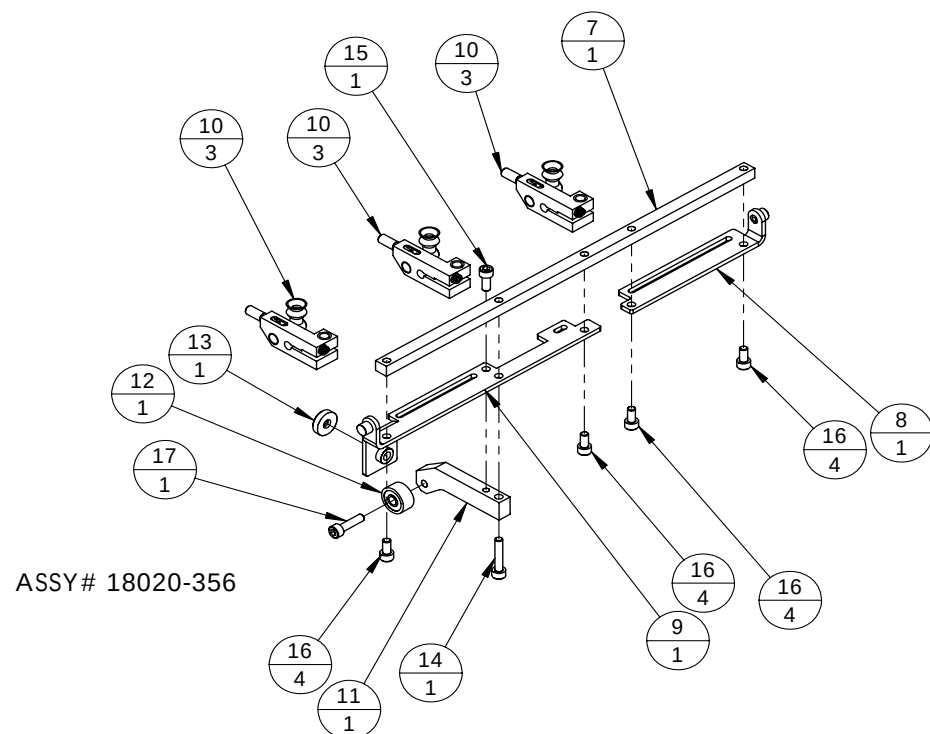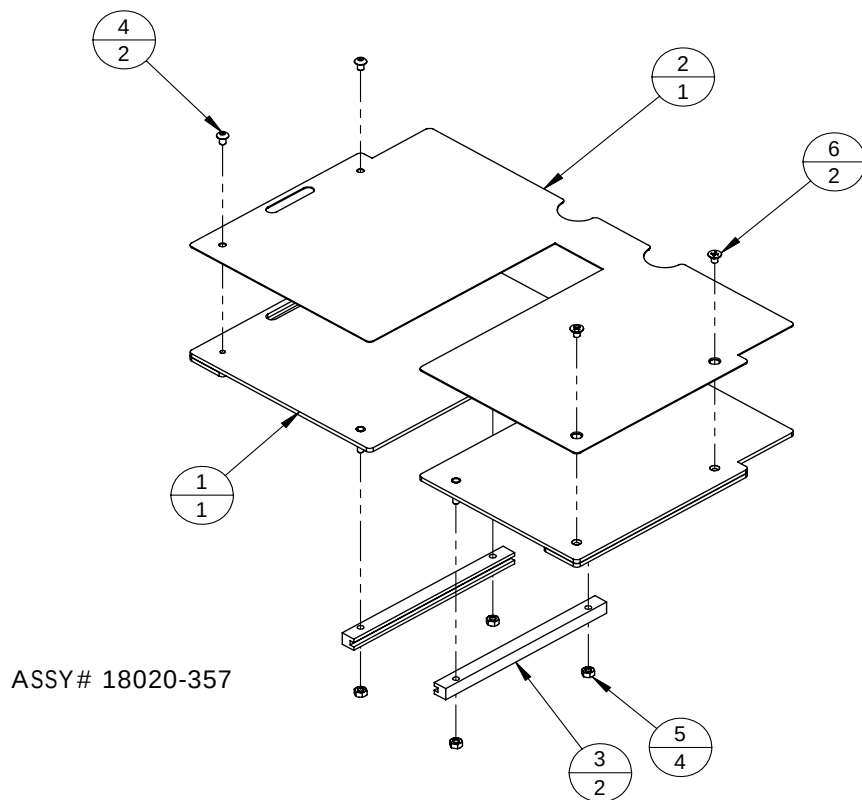


**ROTARY FEEDER – UPPER FRAME (Fig. 7-7)
 SEPERATOR FINGER BAR ASSEMBLY (18020-358)**

ITEM	PART NO.	QTY.	DESCRIPTION
1	18004-111	1	SHAFT, SEPERATOR FINGER
2	ZX00158	2	ASSY, CRANK ARM
3	ZX00160	2	PIN, FINGER PIVOT, LONG
4	ZX00156	2	CLAMP, FINGER
5	ZX00159	2	ASSY, ARM, LINK FINGER
6	ZX00161	4	PIN, FINGER PIVOT, SHORT
7	ZX00155	2	BLOCK, SUPPORT, FINGER
8	ZX00157	2	FINGER, PRESSURE RELIEF
9	ZX00162	1	BRACKET, SPRING FINGER DEVICE
10	ZX00163	1	GUIDE, SPRING, FINGER DEVICE
11	ZX00164	1	CLAMP, FINGER FOLLOWER
12	ZX00242	1	BEARING, CAM FOLLOWER, 3/4"
13	-	2	SCREW, SKT HEAD, M4 X 12
14	-	3	SCREW, SKT HEAD, M5 X 0.8 X 20
15	-	1	SCREW, SKT HEAD, M5 X 0.8 X 16
16	-	6	SET SCREW, FLAT, M3 X 0.5 X 4
17	-	2	SCREW, BUTTON HEAD, M3 X 0.5 X 10
18	-	2	WASHER, FLAT, M3

PITNEY BOWES

Sure-Feed Engineering

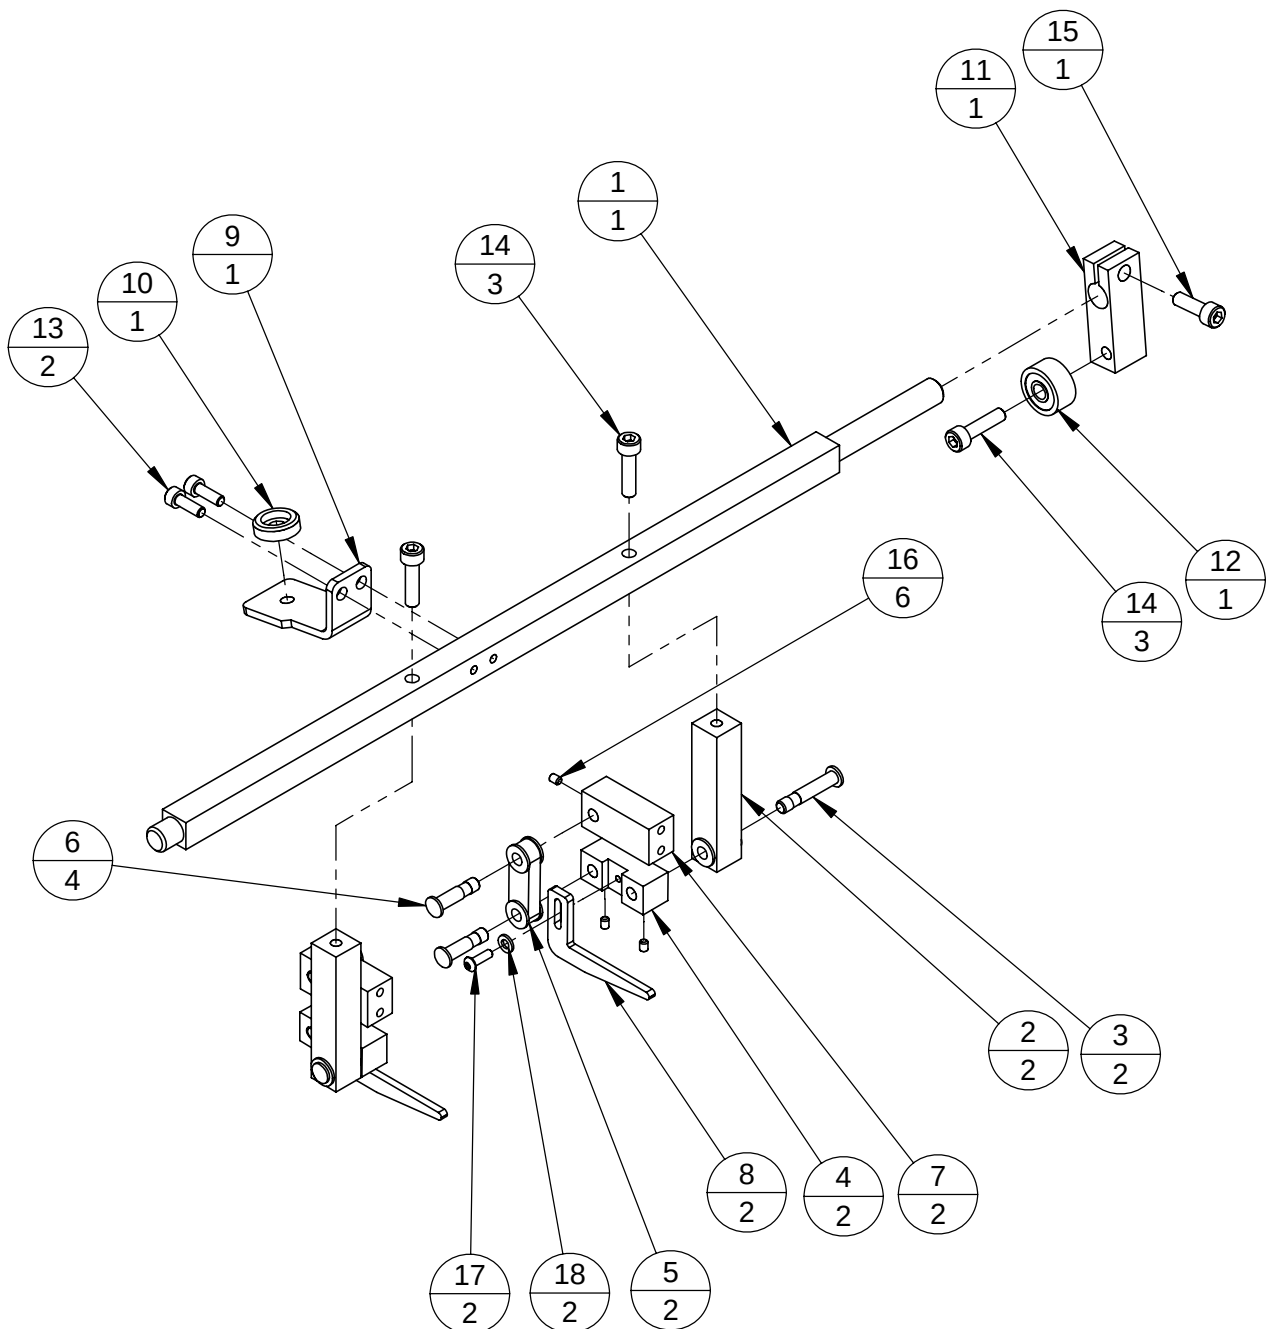


**ROTARY FEEDER (Fig. 7-8)
 EXIT ROLLER / DRAG STRAP ASSEMBLIES**


ITEM	PART NO.	QTY.	DESCRIPTION
	18020-073	2	ASSEMBLY, DRAG STRAP
1	18009-014	1	BRACKET, DRAG STRAP MTG.
2	18009-029	1	BRACKET, DRAG STRAP PIVOT
3	18014-010	1	DRAG STRAP, FEEDER
4	-	2	SCREW, SKT HEAD, #10-24 X 1/2
5	-	2	SCREW, PAN HEAD, #6-32 X 1/4
6	99004-002	1	KNOB, #10 SCREW
	18020-363	1	ASSEMBLY, EXIT ROLLER
7	18008-153	1	BAR, DISCHARGE ROLLER SUPPORT
8	ZX00259	1	SHAFT, EXIT ROLLER SUPPORT
9	ZX00188	1	ASSY, GUIDE
10	ZX00193	1	ASSY, RH ROLLER
11	ZX00194	1	ASSY, LH ROLLER
12	-	1	SCREW, FLAT HEAD, M8 X 1.25 X 25
13	-	3	SCREW, SKT HEAD, #10-24 X 3/4

PITNEY BOWES

Sure-Feed Engineering

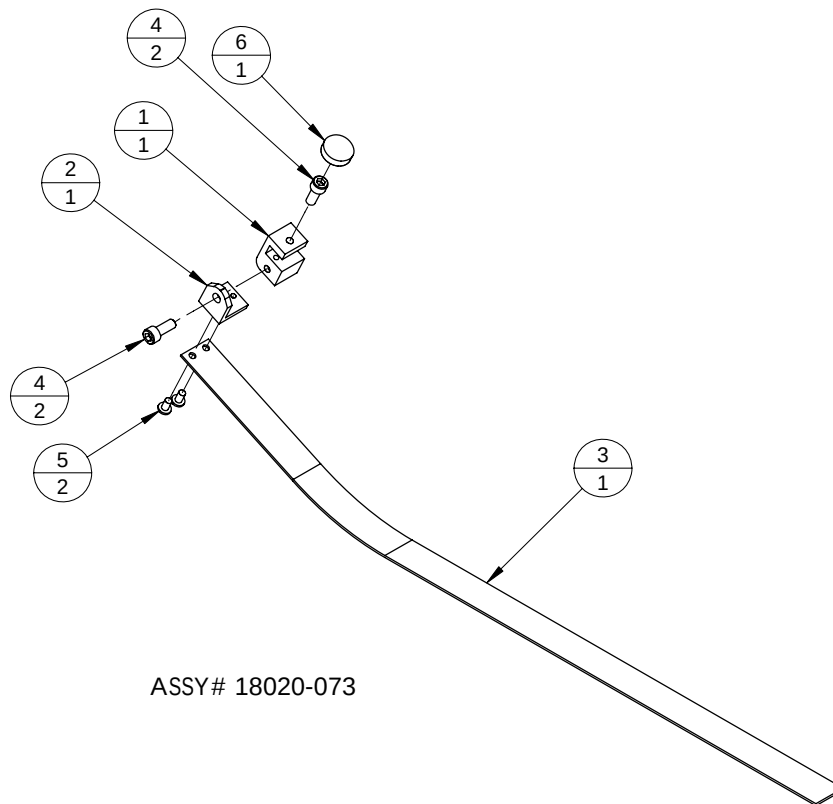

ASSY# 18020-073

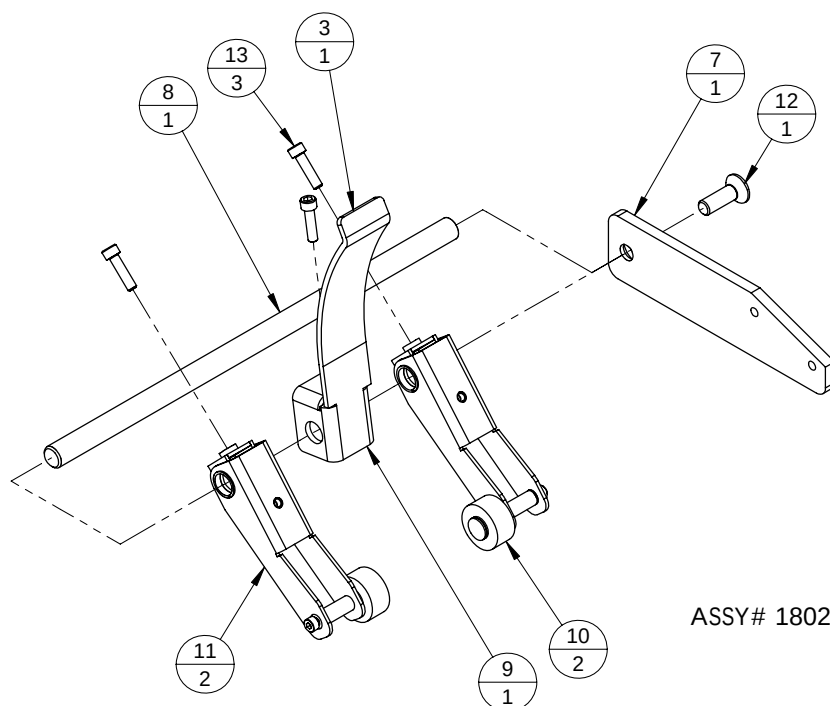


ASSY# 18020-363

**ROTARY FEEDER (Fig. 7-9)
DOUBLE DETECT ASSEMBLY (18020-364)**

ITEM	PART NO.	QTY.	DESCRIPTION
1	18008-151	1	BAR, FEEDER STOP
2	18007-160	1	BLOCK, DOUBLE DETECT PIVOT
3	10004-052	1	SHAFT, DOUBLE DETECT PIVOT
4	18009-103	1	BRACKET, DOUBLE DETECT ADJUSTING
5	99032-003	1	STUD, #10-32 X 1-1/2
6	99005-007	1	SPRING, COMPRESSION, DOUBLE DETECT
7	16009-079	1	BRACKET, TUNING FORK, LH
8	10004-053	1	SHAFT, DOUBLE DETECT
9	99003-001	1	BEARING, SEALED, 3/8 X 7/8
10	99003-005	1	BUSHING, SLEEVE, 1/4 X 3/8 X 5/16
11	98009-004	1	SENSOR, DOUBLE DETECT SWITCH
12	99003-002	2	BEARING, SEALED, 1/4 X 5/8
13	18009-108	1	BRACKET, MISS SENSOR MTG.
14	18009-107	1	BRACKET, MISS SENSOR SUPPORT
15	99004-005	1	KNOB, FEMALE, #10-32
16	98009-050	1	SENSOR, SHORT RANGE EMITTER
17	99003-034	1	WASHER, NYLON, 1/2 X 1/16
18	99022-001	1	SNAP RING, 1/4
19	-	2	SCREW, SKT HEAD, #8-32 X 1/2
20	-	1	SCREW, SKT HEAD, #10-24 X 3/4
21	-	2	WASHER, FLAT, 3MM
22	-	2	SCREW, SKT HEAD, M3 X 0.5 X 6
23	-	2	SCREW, SKT HEAD, #10-24 X 3/8


PITNEY BOWES

Sure-Feed Engineering

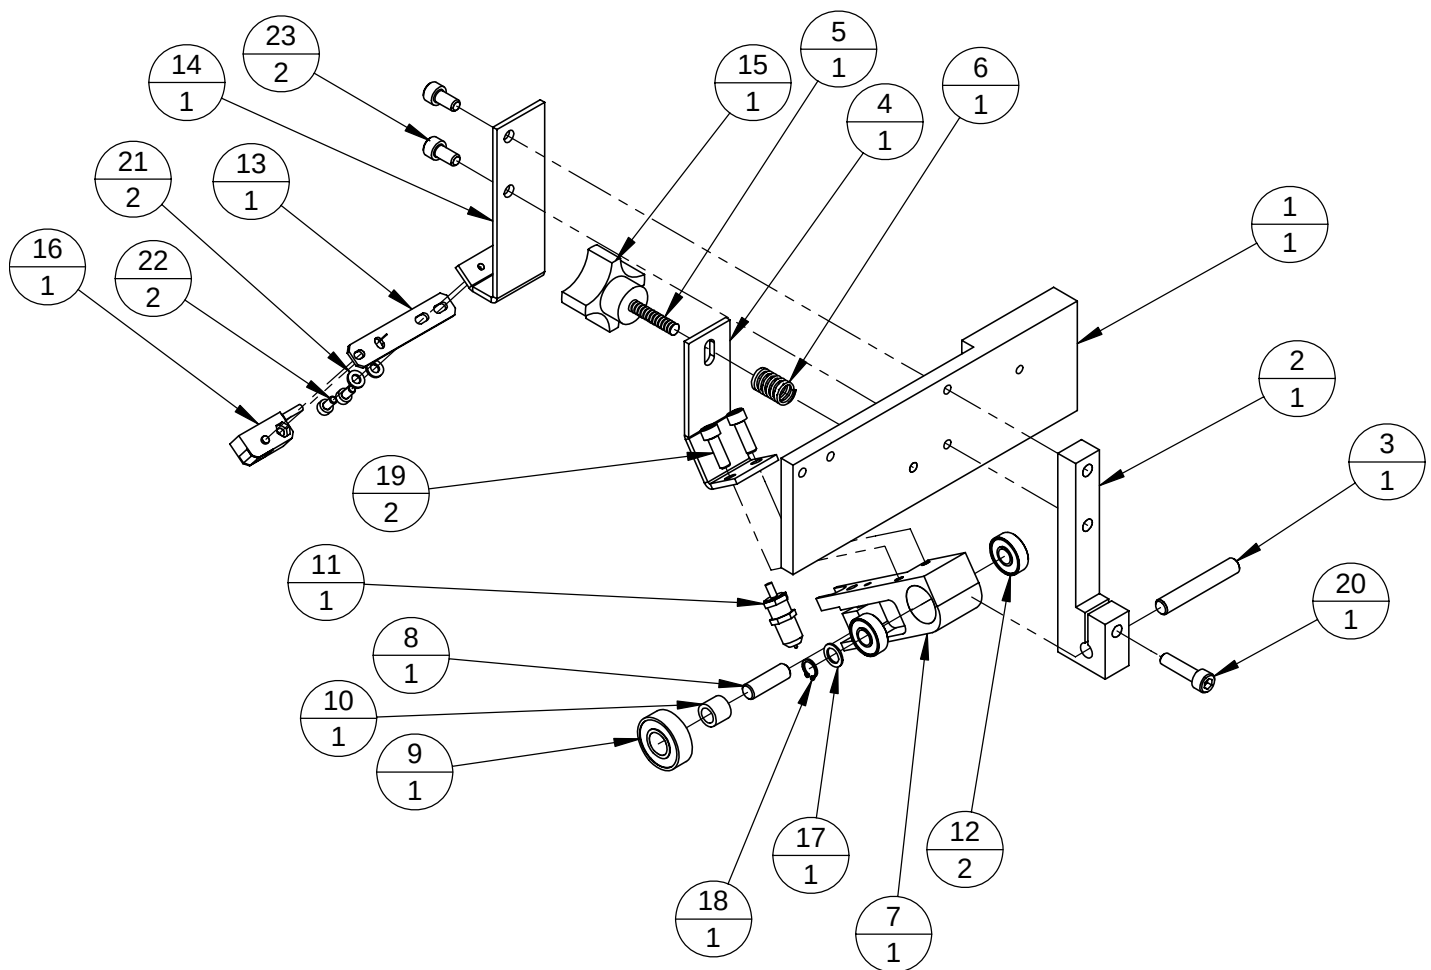

PITNEY BOWES
Sure-Feed Engineering

TURNOVER ***10X13***

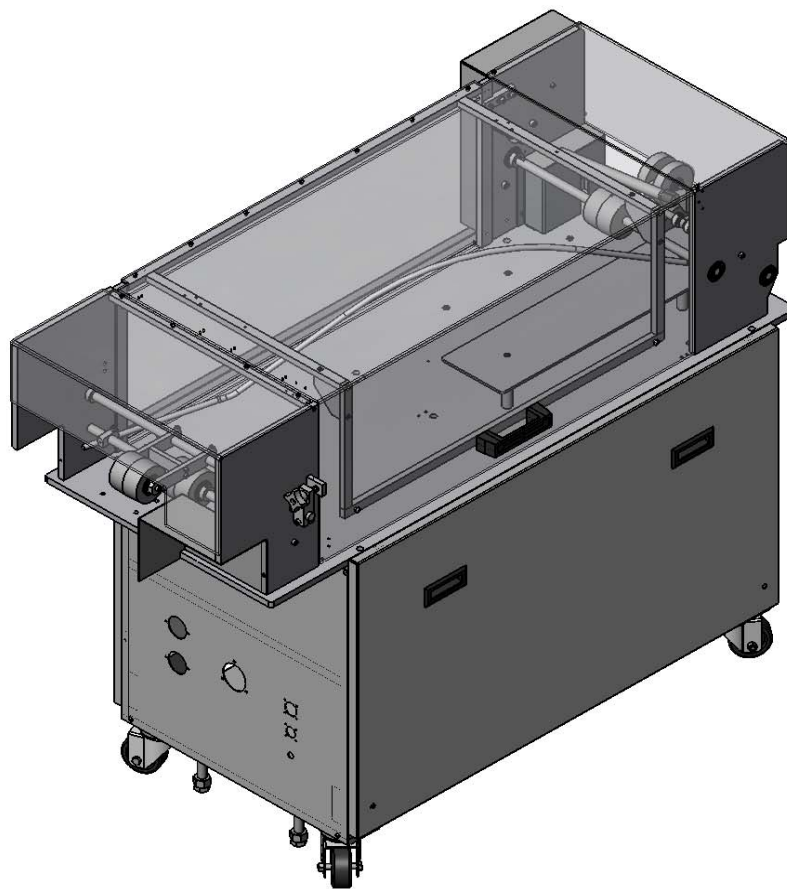


**TURNOVER ASSEMBLY (Fig. 8-1)
(20022-006)**

ITEM	PART NO.	QTY.	DESCRIPTION
1	SEE FIG. 8-2	1	ASSEMBLY, FRAME (22020-002)
2	SEE FIG. 8-3	1	ASSEMBLY, TRANSPORT (20020-014)
3	SEE FIG. 8-6	1	ASSEMBLY, DC DRIVE (20020-039)
4	-	4	BOLT, SKT HEAD, 5/16-18 X 3/4
5	20005-001	1	GUIDE, ENVELOPE TWIST
6	SEE FIG. 8-8, 8-9	1	ASSEMBLY, COVERS (20020-018) (NOT SHOWN)

PITNEY BOWES

Sure-Feed Engineering

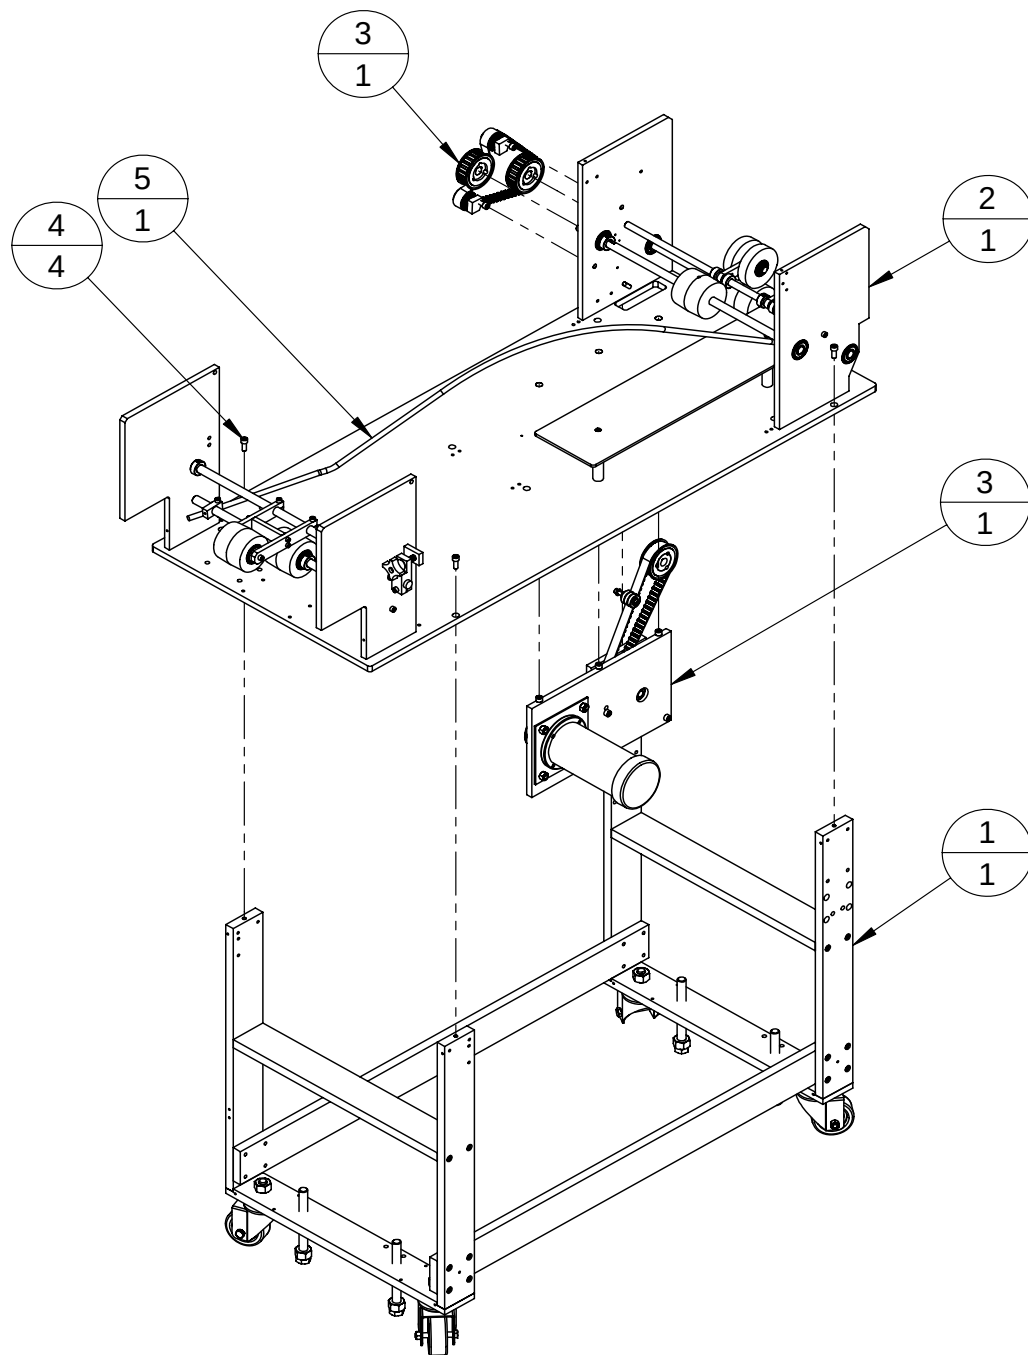


TURNOVER (Fig. 8-2)
FRAME ASSEMBLY (20020-002)

ITEM	PART NO.	QTY.	DESCRIPTION
1	20003-005	2	CROSSBAR, UPPER
2	20003-003	2	CROSSBAR, SIDE
3	20010-001	2	LEG, DISCHARGE
4	20010-002	2	LEG, INFEED
5	20003-004	2	CROSS BRACE, LOWER
6	99010-005	4	CASTOR, 5/8-11 STEM
7	-	32	BOLT, SKT HEAD, 5/16-18 X 3/4
8	-	8	NUT, HEX, 5/8-11
9	-	4	BOLT, HEX HEAD, 5/8-11 X 6

PITNEY BOWES

Sure-Feed Engineering

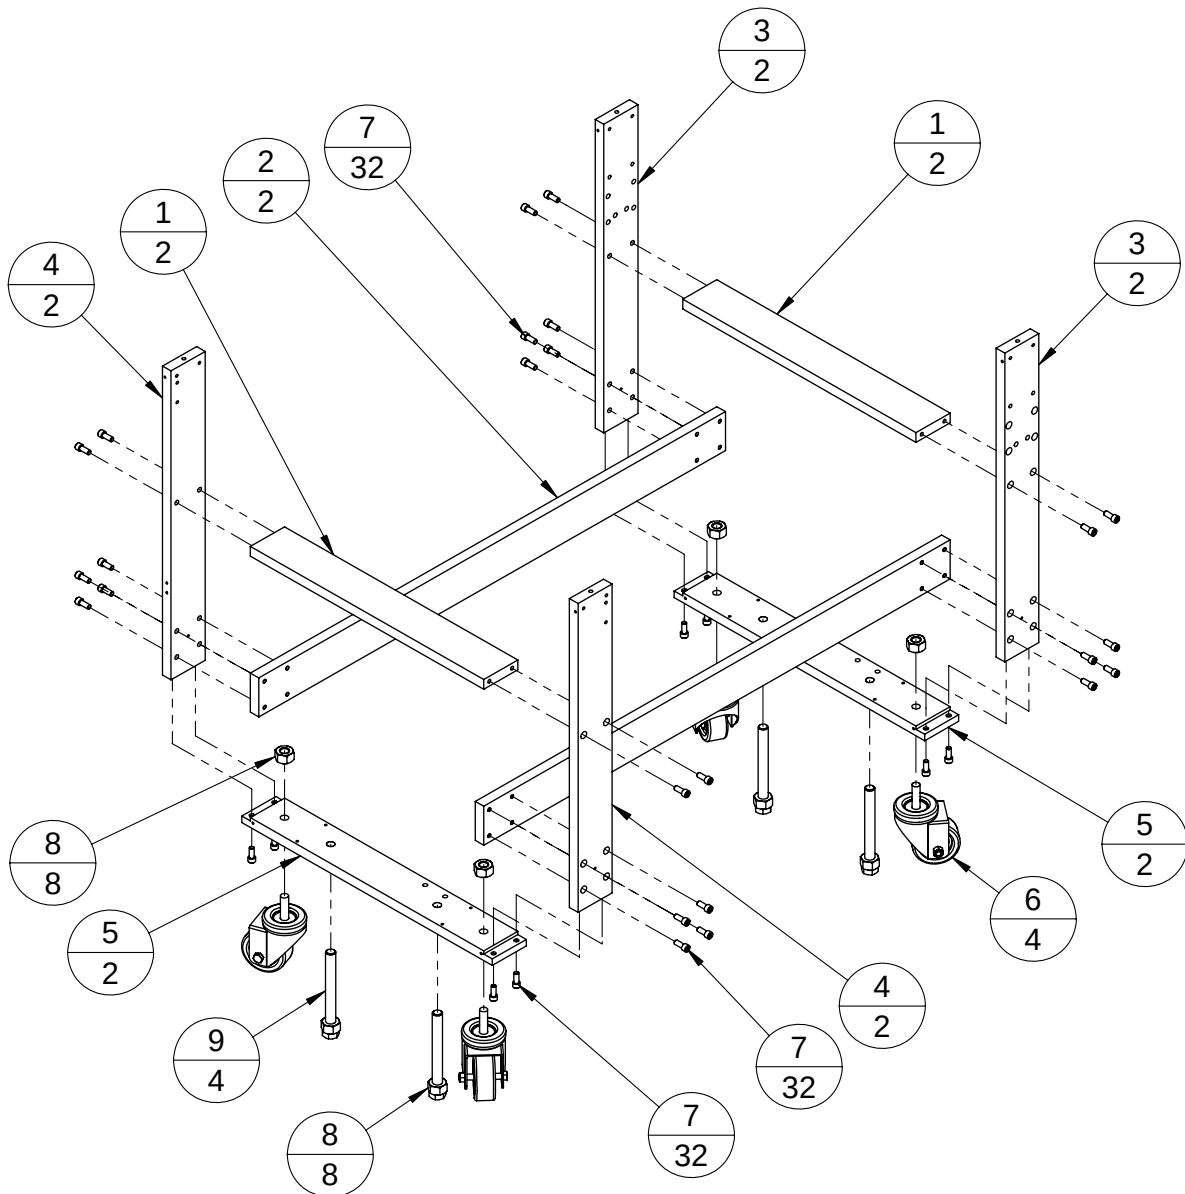


TURNOVER (Fig. 8-3)
TRANSPORT ASSEMBLY (20020-014)

ITEM	PART NO.	QTY.	DESCRIPTION
1	20001-002	1	PLATE, TURNOVER DECK
2	20000-006	1	SIDEFRAME, LH DISCHARGE
3	20000-005	1	SIDEFRAME, RH DISCHARGE
4	20000-004	2	SIDEFRAME, INFEED
5	20004-012	2	SHAFT, SECONDARY
6	20004-009	1	SHAFT, IDLER, LONG
7	20004-010	1	SHAFT, IDLER, SHORT
8	20004-011	1	SHAFT, NIP PIVOT
9	20006-002	2	ROLLER, CROWNED DRIVE
10	20006-001	1	ROLLER, CROWNED IDLER
11	99003-029	2	BUSHING, SL, 5/8 X 3/4 X 1/2
12	99003-006	10	BEARING, 5/8 X 1-3/8, SEALED W/ S.R.
13	99003-021	8	WASHER, NYLON, 5/8 X 1/16
14	99017-005	7	COLLAR, 5/8 SHAFT
15	12006-001	1	PULLEY, 3" CROWNED X 1" WIDE
16	10014-001	1	BELT, URETHANE
17	18012-013	2	STANDOFF, SKID PLATE
18	20011-003	1	PLATE, SKID
19	20009-004	2	BRACKET, TURNOVER GUIDE MTG, 3/8"
20	20009-002	1	BRACKET, TURNOVER GUIDE MTG, 5/8"
21	20009-003	1	BRACKET, TURNOVER GUIDE MTG, 1/2"
22	SEE FIG. 8-4	1	ASSEMBLY, SHAFT ADJ. (20020-003)
23	SEE FIG. 8-5	1	ASSEMBLY, IDLER ROLLER (20020-004)
24	99017-004	4	COLLAR, 1/2
25	SEE FIG. 8-5	1	ASSEMBLY, EXIT ROLLER (DOUBLE) (20020-005)
26	SEE FIG. 8-5	1	ASSEMBLY, EXIT ROLLER (SINGLE) (20020-010)
27	-	8	BOLT, SKT HEAD, 1/4-20 X 1
28	-	2	BOLT, SKT HEAD, 1/4-20 X 1.25
29	-	2	SCREW, FLAT HEAD, #10-24 X 1/2
30	-	8	BOLT, SKT HEAD, 5/16-18 X 1
31	99000-038	1	BELT, TURNOVER, 111.6" LONG (NOT SHOWN)
32	99000-039	1	BELT, TURNOVER, 91.65" LONG (NOT SHOWN)

PITNEY BOWES
Sure-Feed Engineering

PITNEY BOWES

Sure-Feed Engineering

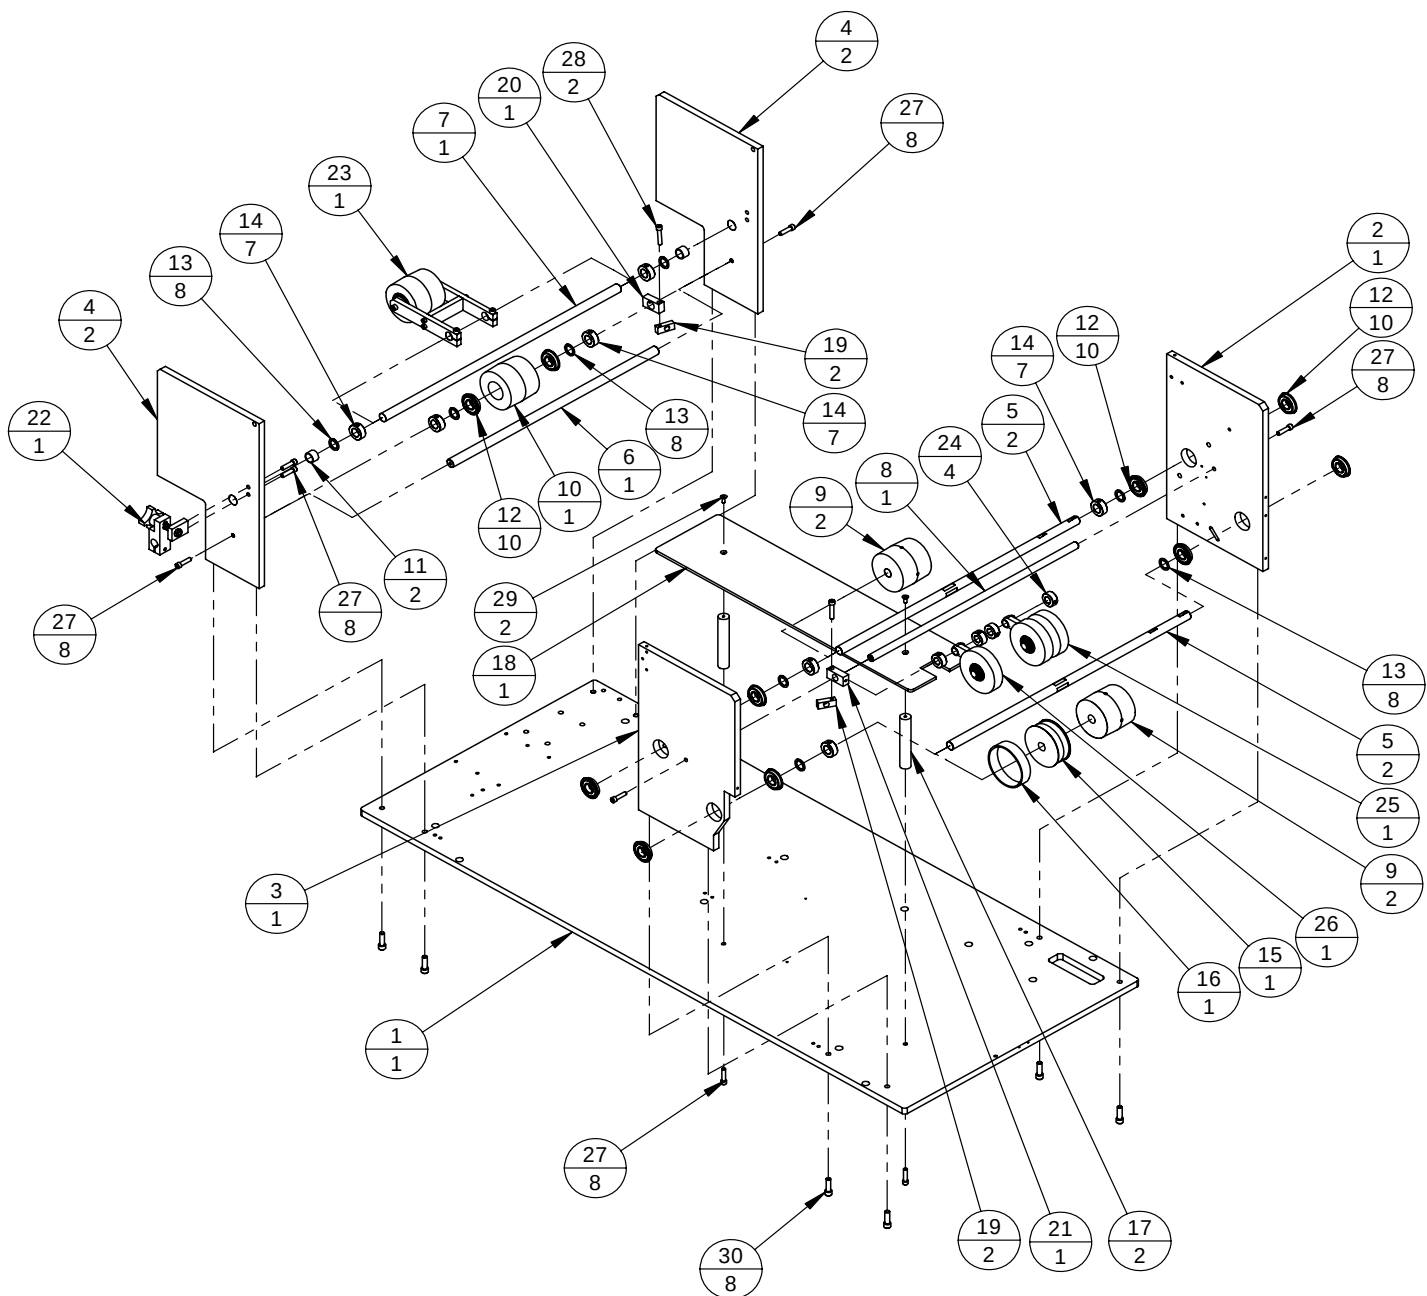


TURNOVER (Fig. 8-4)
SHAFT ADJ. ASSEMBLY (20020-003)

ITEM	PART NO.	QTY.	DESCRIPTION
1	20007-002	1	BLOCK, SHAFT CLAMP
2	20007-001	1	BLOCK, SHAFT ADJ
3	10004-028	1	STUD, SEPERATOR ADJ.
4	99004-001	1	KNOB, 5/16-24 FEMALE
5	99003-015	1	WASHER, NYLON, 5/16 X 1/16
6	10019-001	1	SPRING, SEPERATOR
7	-	1	NUT, HEX, 5/16-24
8	-	1	SCREW, SKT HEAD, 1/4-20 X 1

PITNEY BOWES

Sure-Feed Engineering

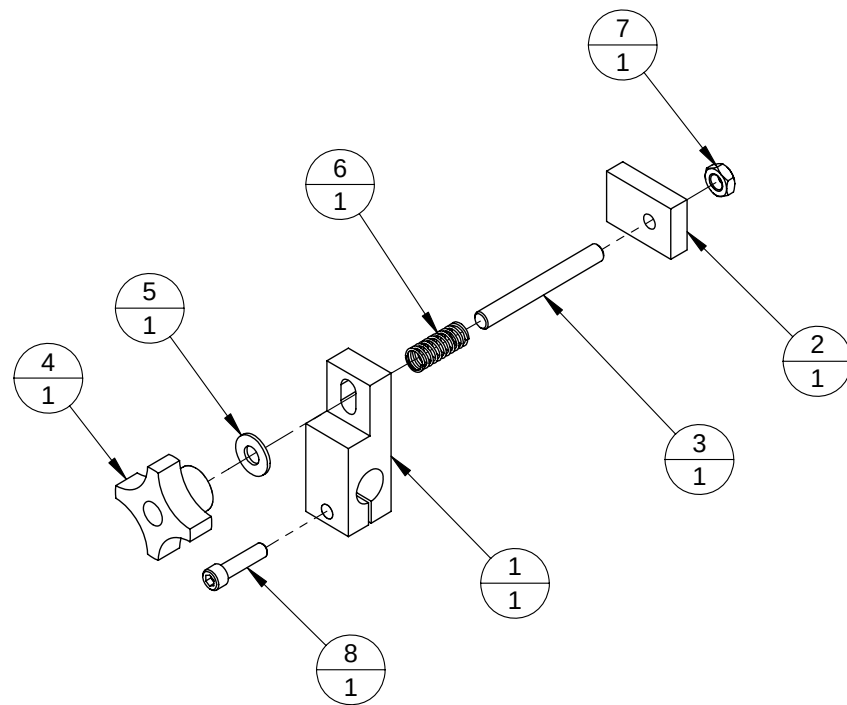


**TURNOVER (Fig. 8-5)
 ROLLER ASSEMBLIES**


ITEM	PART NO.	QTY.	DESCRIPTION
	20020-004	1	ASSEMBLY, IDLER ROLLER
1	20008-001	2	BAR, IDLER ROLLER MTG.
2	20006-001	1	ROLLER, CROWNED IDLER
3	20004-001	1	SHAFT, IDLER, SHORT
4	20012-002	1	SPACER, IDLER SUPPORT
5	99003-006	2	BEARING, 5/8 X 1-3/8, SEALED W/ S.R.
6	99003-021	2	WASHER, NYLON, 5/8 X 1/16
7	-	4	SCREW, SKT HEAD, #10-24 X 5/8
8	-	2	BOLT, SKT HEAD, 1/4-20 X 3/4
9	-	2	BOLT, SKT HEAD, 1/4-20 X 7/8
	20020-005	1	ASSEMBLY, EXIT ROLLER (DOUBLE)
10	20008-002	1	BAR, EXIT ROLLER
11	20004-005	2	SHAFT, EXIT ROLLER
12	20006-003	2	ROLLER, EXIT
13	99003-007	4	BEARING, 1/2 X 1-1/8, SEALED W/ S.R.
14	99003-038	1	BUSHING, SLEEVE, 1/2 X 5/8 X 3/4
15	99003-018	4	WASHER, NYLON, 1/2 X 1/16
16	99022-004	2	SNAP RING, 1/2
17	-	1	SET SCREW, 1/4-20 X 1
	20020-010	1	ASSEMBLY, EXIT ROLLER (SINGLE)
18	20008-002	1	BAR, EXIT ROLLER
19	20004-005	1	SHAFT, EXIT ROLLER
20	20006-003	1	ROLLER, EXIT
21	99003-007	2	BEARING, 1/2 X 1-1/8, SEALED W/ S.R.
22	99003-038	1	BUSHING, SLEEVE, 1/2 X 5/8 X 3/4
23	99003-018	2	WASHER, NYLON, 1/2 X 1/16
24	99022-004	1	SNAP RING, 1/2
25	-	1	BOLT, SKT HEAD, 1/4-20 X 5/8

PITNEY BOWES


Sure-Feed Engineering

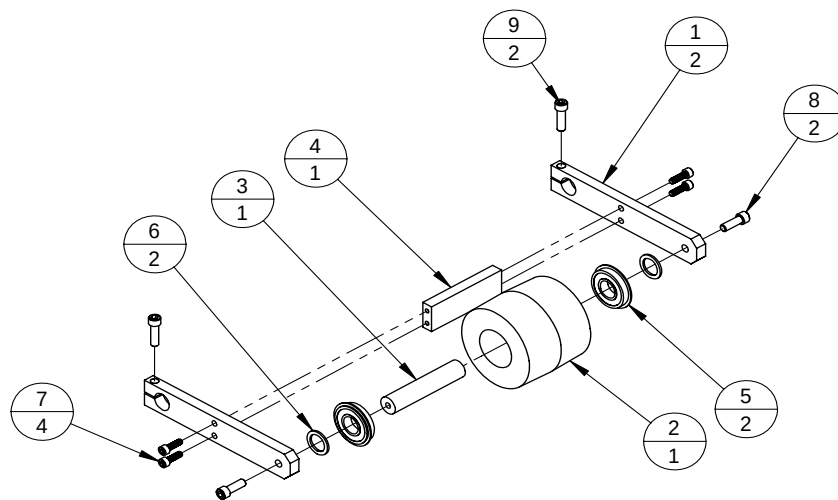

ASSY# 22020-004

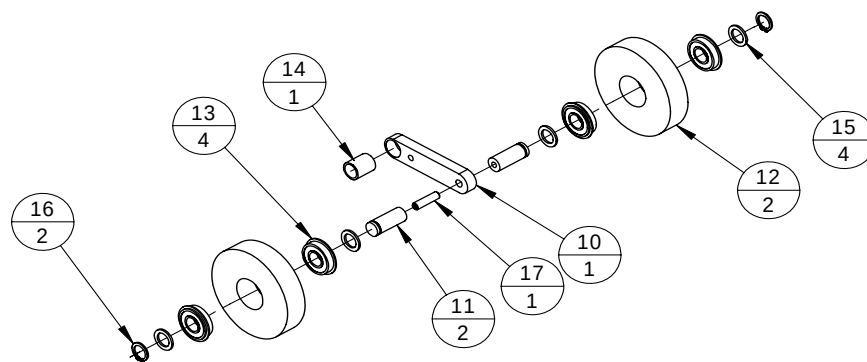

ASSY# 22020-005

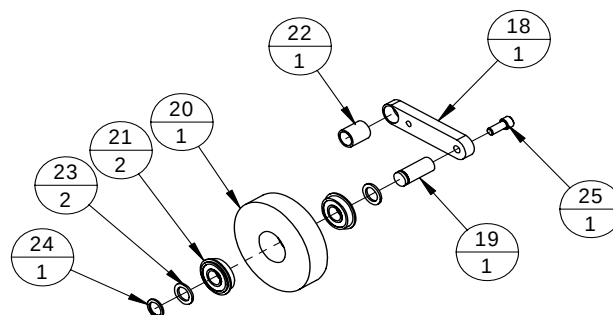

ASSY# 22020-010

TURNOVER (Fig. 8-6)
DC DRIVE ASSEMBLY (20020-039)


ITEM	PART NO.	QTY.	DESCRIPTION
1	20011-001	1	PLATE, MOTOR MTG.
2	20011-002	1	PLATE, INTERMEDIATE SHAFT
3	20012-004	1	STANDOFF, MOTOR SUPPORT
4	99002-065	1	PULLEY, TIMING, 36L075 (1610 TAPERLOCK)
5	99002-059	1	PULLEY, TIMNG, 12L075, 1/2B W/ KEYWAY
6	99002-035	4	PULLEY, TIMING, 22L075 (1008 TAPERLOCK)
7	20004-008	1	SHAFT, INTERMEDIATE
8	99017-019	4	BUSHING, TAPERLOCK, 1008, 5/8B
9	99017-026	1	BUSHING, TAPERLOCK, 1610, 1/2B
10	99003-007	2	BEARING, 1/2 X 1-1/8, SEALED W/ S.R.
11	99003-032	1	WASHER, NYLON, 1/2 X 1/32
12	99003-018	2	WASHER, NYLON, 1/2 X 1/16
13	99017-004	1	COLLAR, 1/2
14	SEE FIG. 8-7	1	ASSEMBLY, TENSIONER (W/ ROLLER) (20020-006)
15	SEE FIG. 8-7	2	ASSEMBLY, TENSIONER (W/ PULLEY) (20020-007)
16	99000-157	1	BELT, TIMING, 285L075
17	-	4	BOLT, SKT HEAD, 3/8-16 X 1
18	-	2	BOLT, SKT HEAD, 5/16-18 X 5/8
19	-	5	BOLT, SKT HEAD, 5/16-18 X 1
20	-	3	BOLT, SKT HEAD, 5/16-18 X 3/4
21	99000-028	1	BELT, TIMNG, 255L075
22	99000-034	1	BELT, TIMING, D240L075

TURNOVER (Fig. 8-6)
DC DRIVE ASSEMBLY (20020-039)

ITEM	PART NO.	QTY.	DESCRIPTION
23	99001-019	1	MOTOR, DC, 1/4 HP
24	20011-005	1	PLATE, MOTOR ADAPTOR
25	-	4	BOLT, SKT HEAD, 1/4-20 X 5/8
26	-	4	NUT, HEX, 3/8-16
27	20004-024	1	STUD, TENSIONER
28	99003-062	3	BEARING, SEALED, 10X26X8 MM
29	-	2	WASHER, FLAT, 1/4
30	-	1	BOLT, BUTTON HEAD, 1/4-20 X 1/2
31	-	1	BOLT, SKT HEAD, 1/4-20 X 3/4
32	20011-014	1	PLATE, SENSOR FLAG
33	20019-001	1	COLLAR, FLAG MTG.
34	98009-028	1	SENSOR, PROXIMITY
	20020-040	1	ASSEMBLY, AC DRIVE
35	99001-004	1	MOTOR, AC, 1/4 HP, 56C

PITNEY BOWES

Sure-Feed Engineering

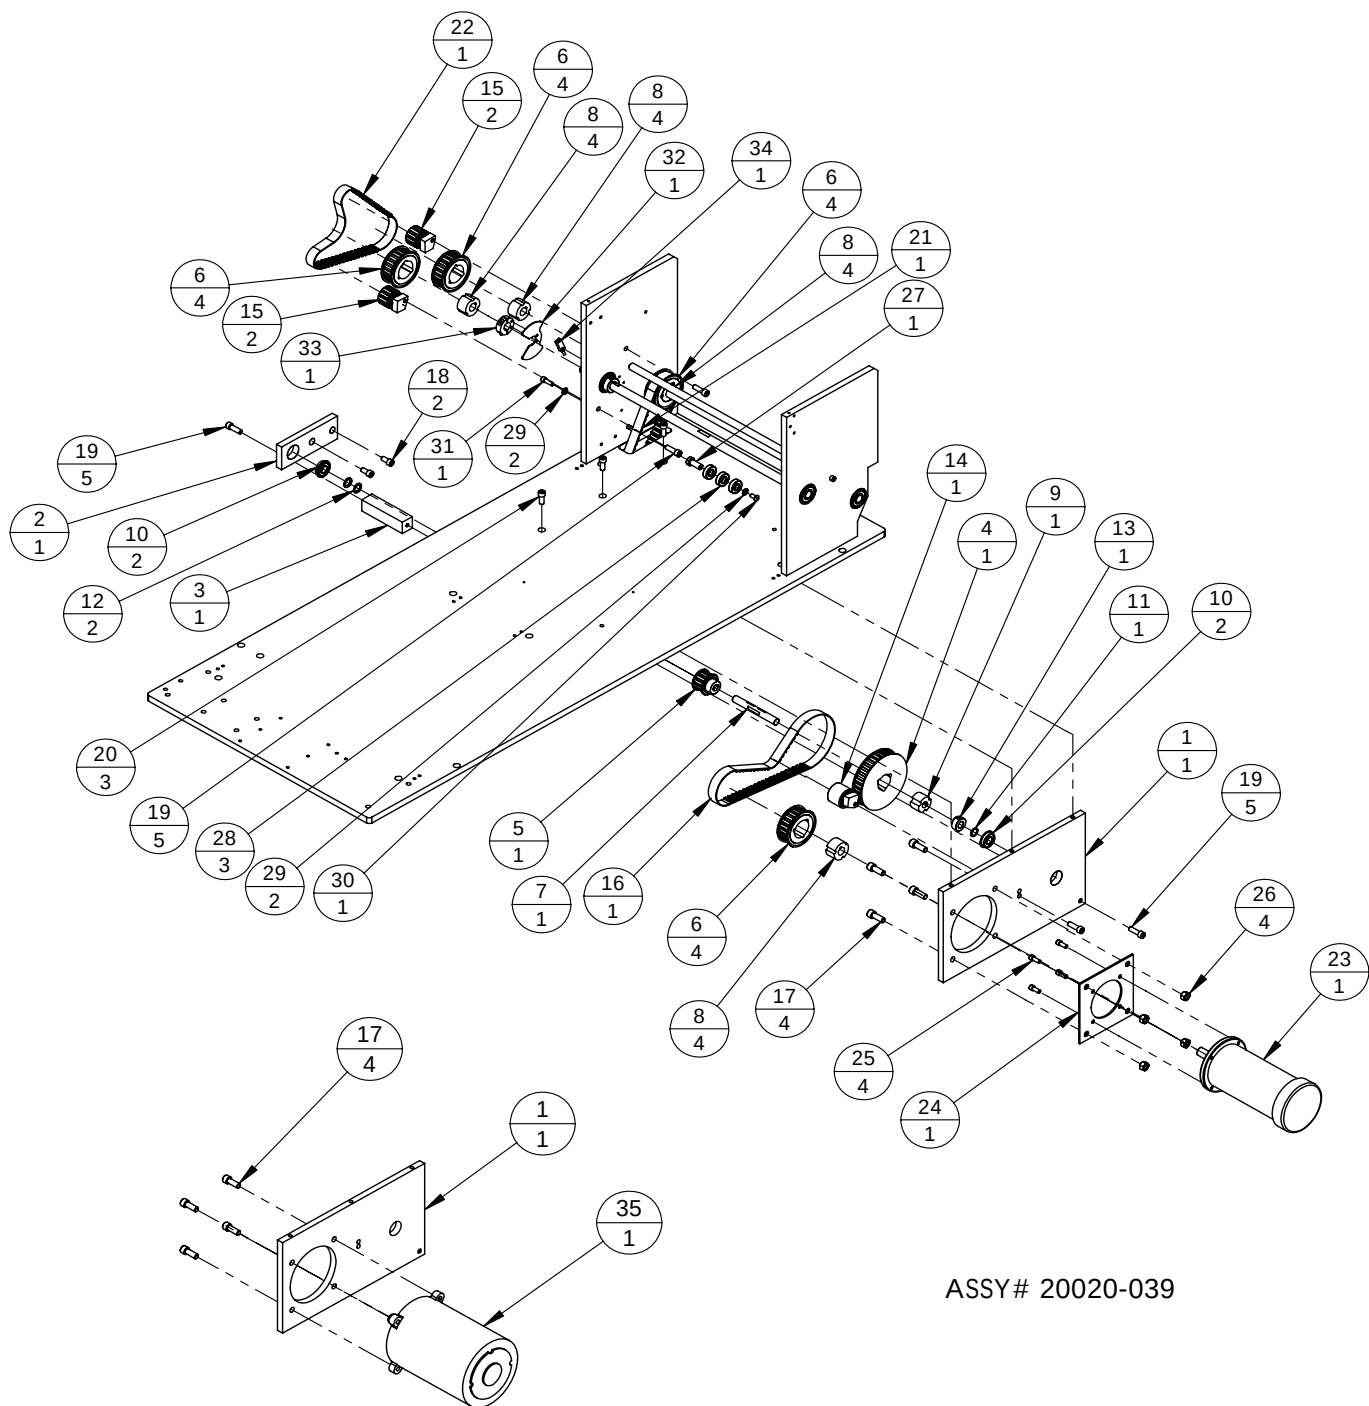

ASSY# 20020-039

ASSY# 20020-040


NOTE: AC DRIVE SYSTEM (20020-040) HAS ITEM #35 IN PLACE ON ITEM # 23 AND #24

**TURNOVER (Fig. 8-7)
 TENSIONER ASSEMBLIES**


ITEM	PART NO.	QTY.	DESCRIPTION
	20020-006	1	ASSEMBLY, TENSIONER (FLAT ROLLER)
1	18004-022	1	SHAFT, ECCENTRIC IDLER, 1/2
2	18006-012	1	ROLLER, FLAT IDLER, 1.5 X 1-1/8 WIDE
3	99003-007	2	BEARING, 1/2 X 1-1/8, SEALED W/ S.R.
4	99003-018	2	WASHER, NYLON, 1/2 X 1/16
5	99022-004	1	SNAP RING, 1/2
	20020-007	2	ASSEMBLY, TENSIONER (PULLEY)
6	18004-022	1	SHAFT, ECCENTRIC IDLER, 1/2
7	20006-004	1	PULLEY, IDLER, 12L075
8	99003-007	2	BEARING, 1/2 X 1-1/8, SEALED W/ S.R.
9	99003-018	5	WASHER, NYLON, 1/2 X 1/16
10	90022-004	1	SNAP RING, 1/2

PITNEY BOWES

Sure-Feed Engineering

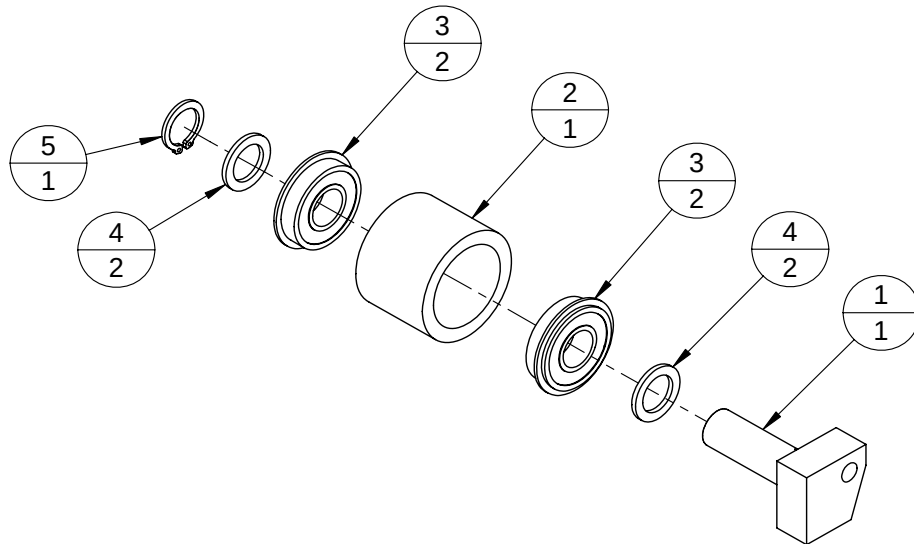

ASSY# 20020-006

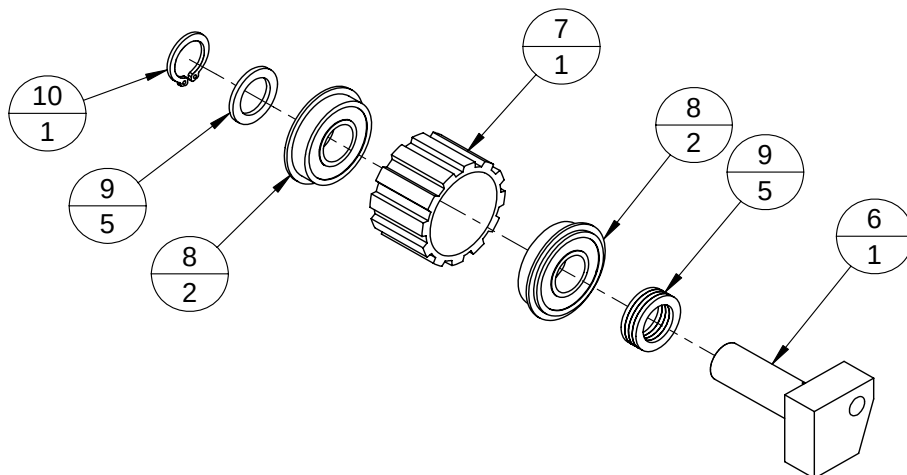


ASSY# 20020-007

**TURNOVER (Fig. 8-8)
 COVER ASSEMBLY #1 (20020-018)**

ITEM	PART NO.	QTY.	DESCRIPTION
1	18013-073	1	COVER, FLOOR
2	20013-023	1	COVER, INFEEED END
3	20013-024	1	COVER, DISCHARGE END
4	-	12	SCREW, BUTTON HEAD, #10-32 X 1/2
5	20013-013	1	COVER, DRIVE
6	20012-003	2	STANDOFF, DRIVE COVER
7	-	2	SCREW, BUTTON HEAD, #10-24 X 1/2
8	-	2	SCREW, BUTTON HEAD, #8-32 X 1/2
9	18007-042	4	BLOCK, SIDE COVER MTG.
10	99039-079	4	STANDOFF, HEX, #10-32
11	20013-003	2	COVER, LOWER SIDE
12	99012-002	4	HANDLE, POCKET PULL
13	20013-018	1	COVER, TURNOVER @ FRONT TABLE, RH

PITNEY BOWES

Sure-Feed Engineering

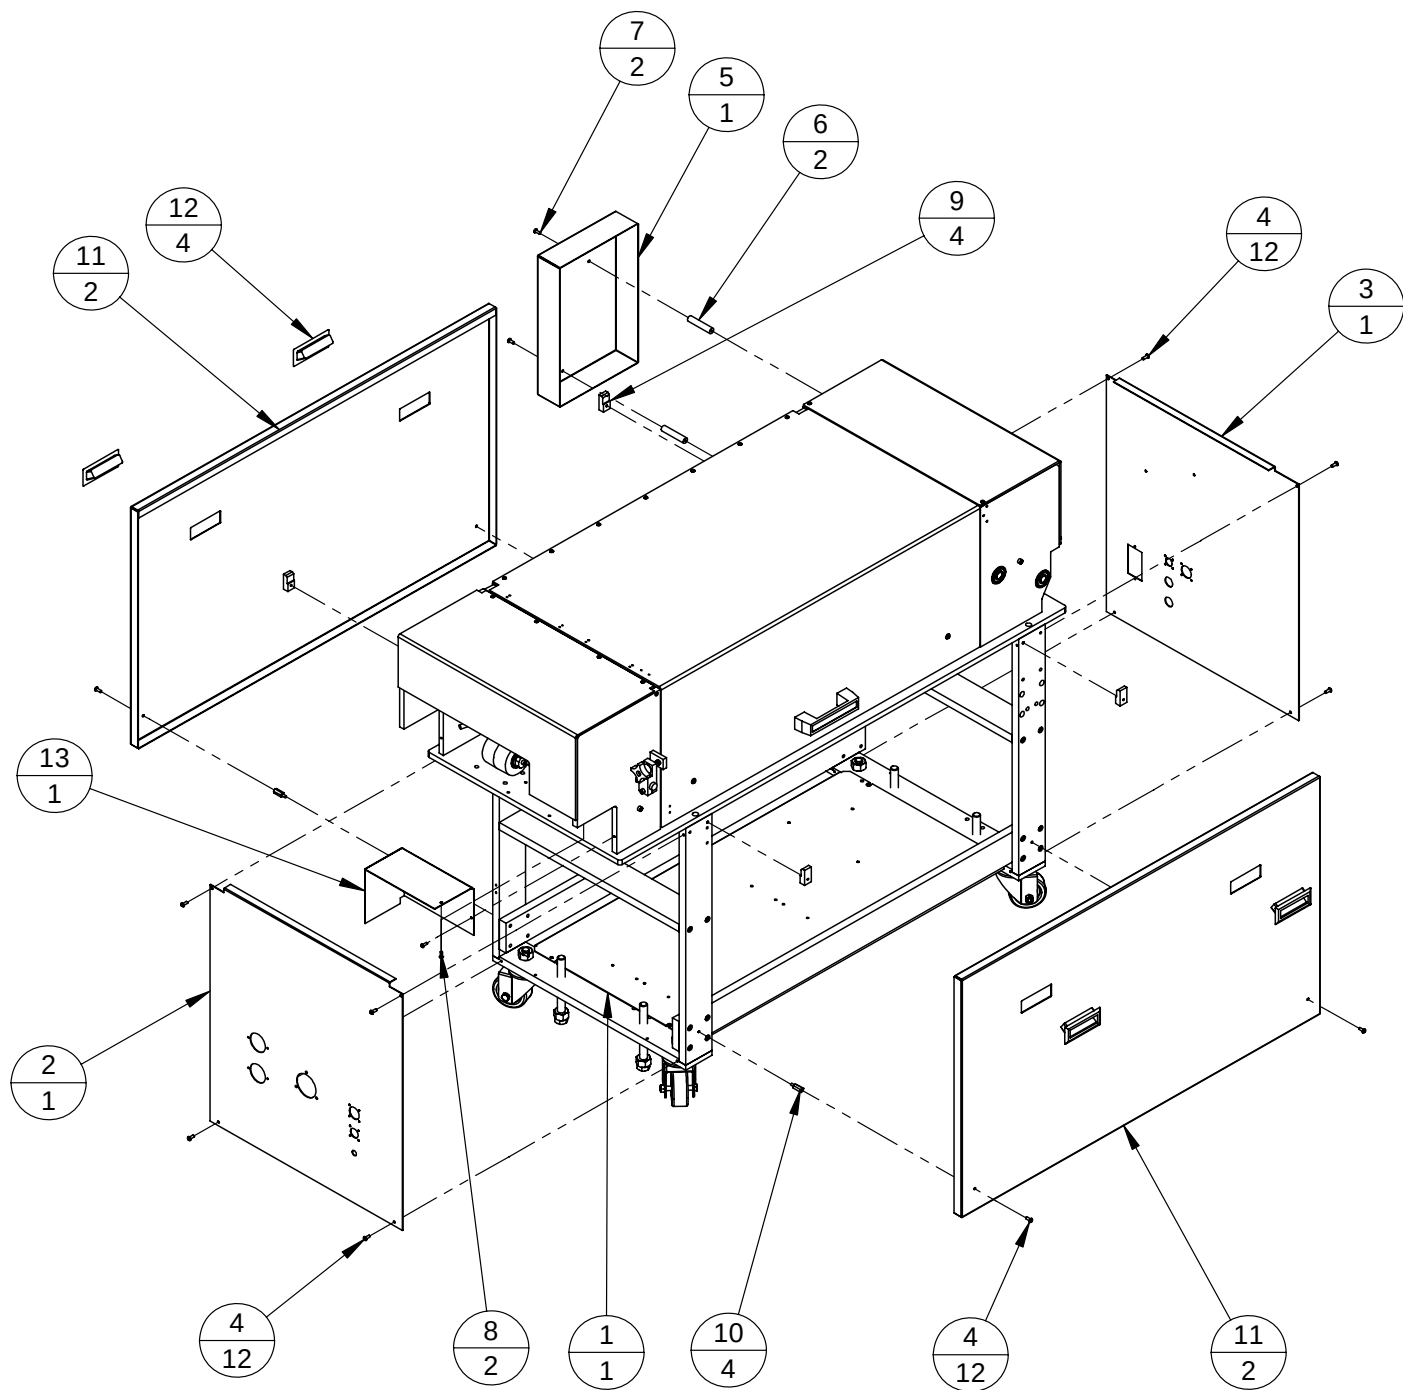


TURNOVER (Fig. 8-9)
COVER ASSEMBLY #2 (20020-018)

ITEM	PART NO.	QTY.	DESCRIPTION
1	20008-005	1	BAR, END COVER MTG.
2	20007-005	2	BLOCK, END COVER MTG.
3	20008-004	1	BAR, COVER MTG.
4	20008-008	2	BAR, COVER SUPPORT TOP
5	20007-006	2	BLOCK, GUSSET, COVER SUPPORT
6	20008-007	2	BAR, COVER SUPPORT SIDE
7	20008-006	1	BAR, COVER SUPPORT HANDLE
8	99006-024	4	PIN, STUD, 5/16-24 X 1-1/8
9	-	6	BOLT, SKT HEAD, 1/4-20 X 1/2
10	-	6	BOLR, SKT HEAD, 1/4-20 X 3/4
11	20013-014	1	COVER, CENTER LEXAN
12	20013-009	1	COVER, INFEED LEXAN
13	20013-015	1	COVER, SIDE LEXAN
14	20013-010	1	COVER, DISCHARGE LEXAN
15	-	1	SCREW, SKT HEAD, #10-24 X 3/4
16	-	3	SCREW, SKT HEAD, #8-32 X 1/2
17	-	19	SCREW, BUTTON HEAD, #8-32 X 1/2
18	99014-005	2	END FITTING, BALL SOCKET
19	99014-004	1	GAS SPRING, 20LB (10.35 TO 18.62)
20	99014-006	2	ANGLE BRACKET, BALL SOCKET
21	99012-001	1	HANDLE, DOOR
22	20013-016	1	COVER, DRIVE BELT
23	-	2	SCREW, BUTTON, HEAD, 1/4-20 X 1/2
24	98009-037	1	SENSOR, RECIEVER, THRU BEAM
25	98009-002	1	SENSOR, SENDER, THRU BEAM
26	20009-006	1	BRACKET, COVER SUPPORT
27	-	2	WASHER, FLAT, 1/4


PITNEY BOWES

Sure-Feed Engineering

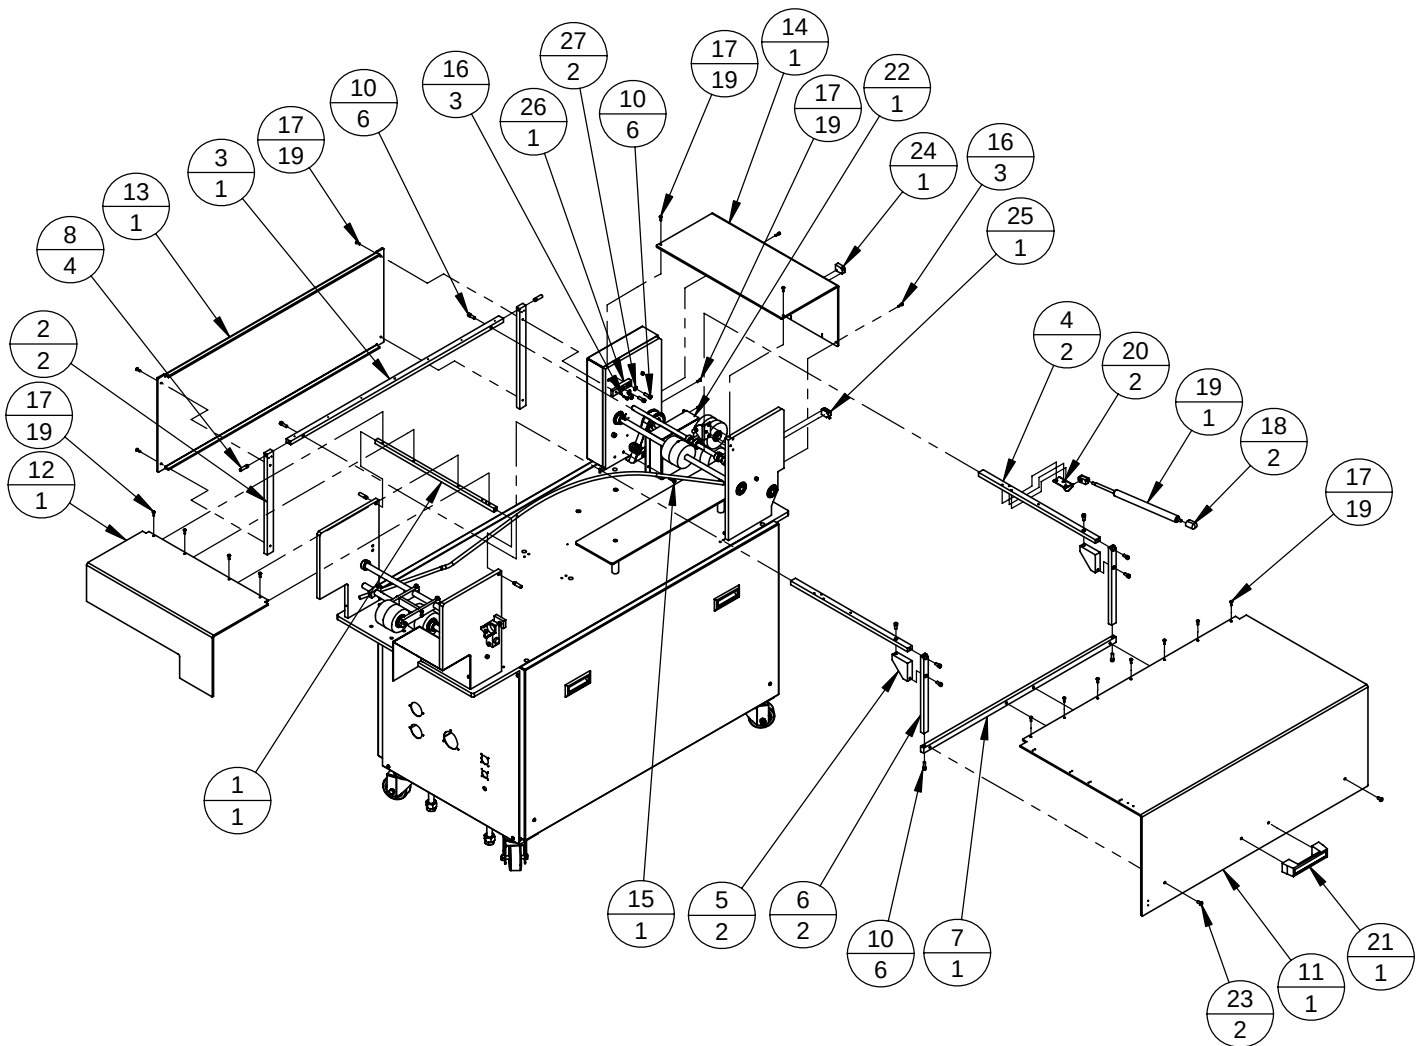

PITNEY BOWES
Sure-Feed Engineering

ENVELOPE INFEEED CONVEYOR (10X13)

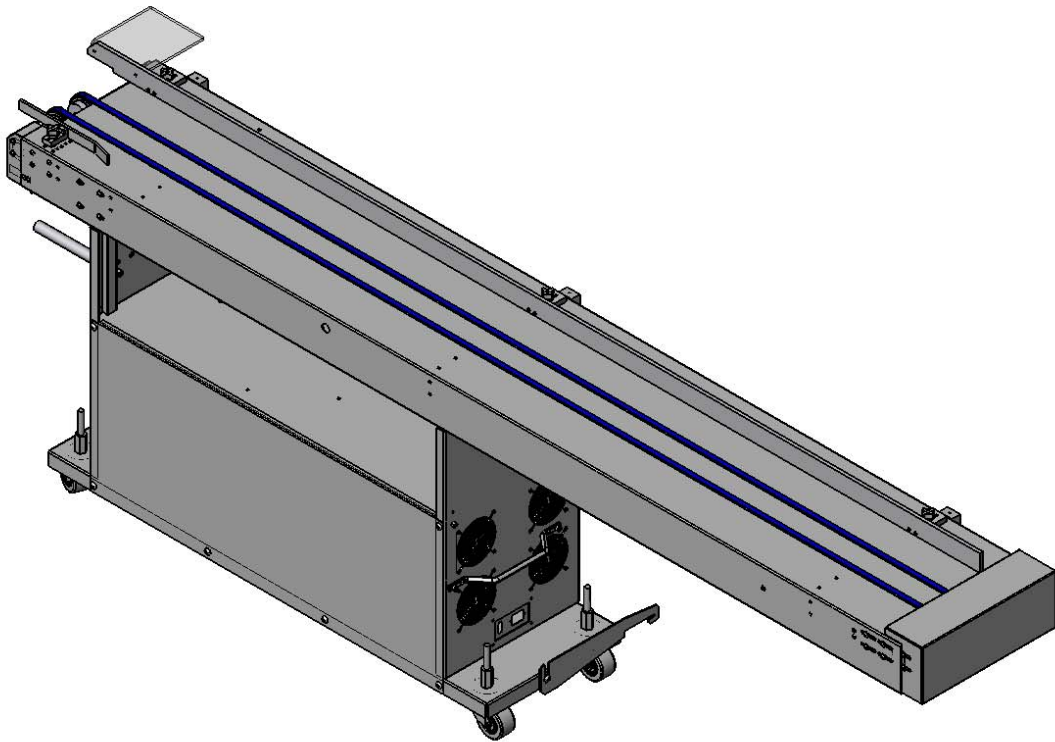


**INFEED CONVEYOR (Fig. 9-1)
(12022-014)**

ITEM	PART NO.	QTY.	DESCRIPTION
1	SEE FIG. 9-2	1	ASSEMBLY, CONVEYOR BED, 10X13 (12020-045)
2	SEE FIG. 9-3	1	ASSEMBLY, AIR LEG BASE (12020-046)
3	-	5	BOLT, HEX HEAD, 1/4-20 X 5/8
4	-	5	NUT, HEX, 1/4-20

PITNEY BOWES

Sure-Feed Engineering

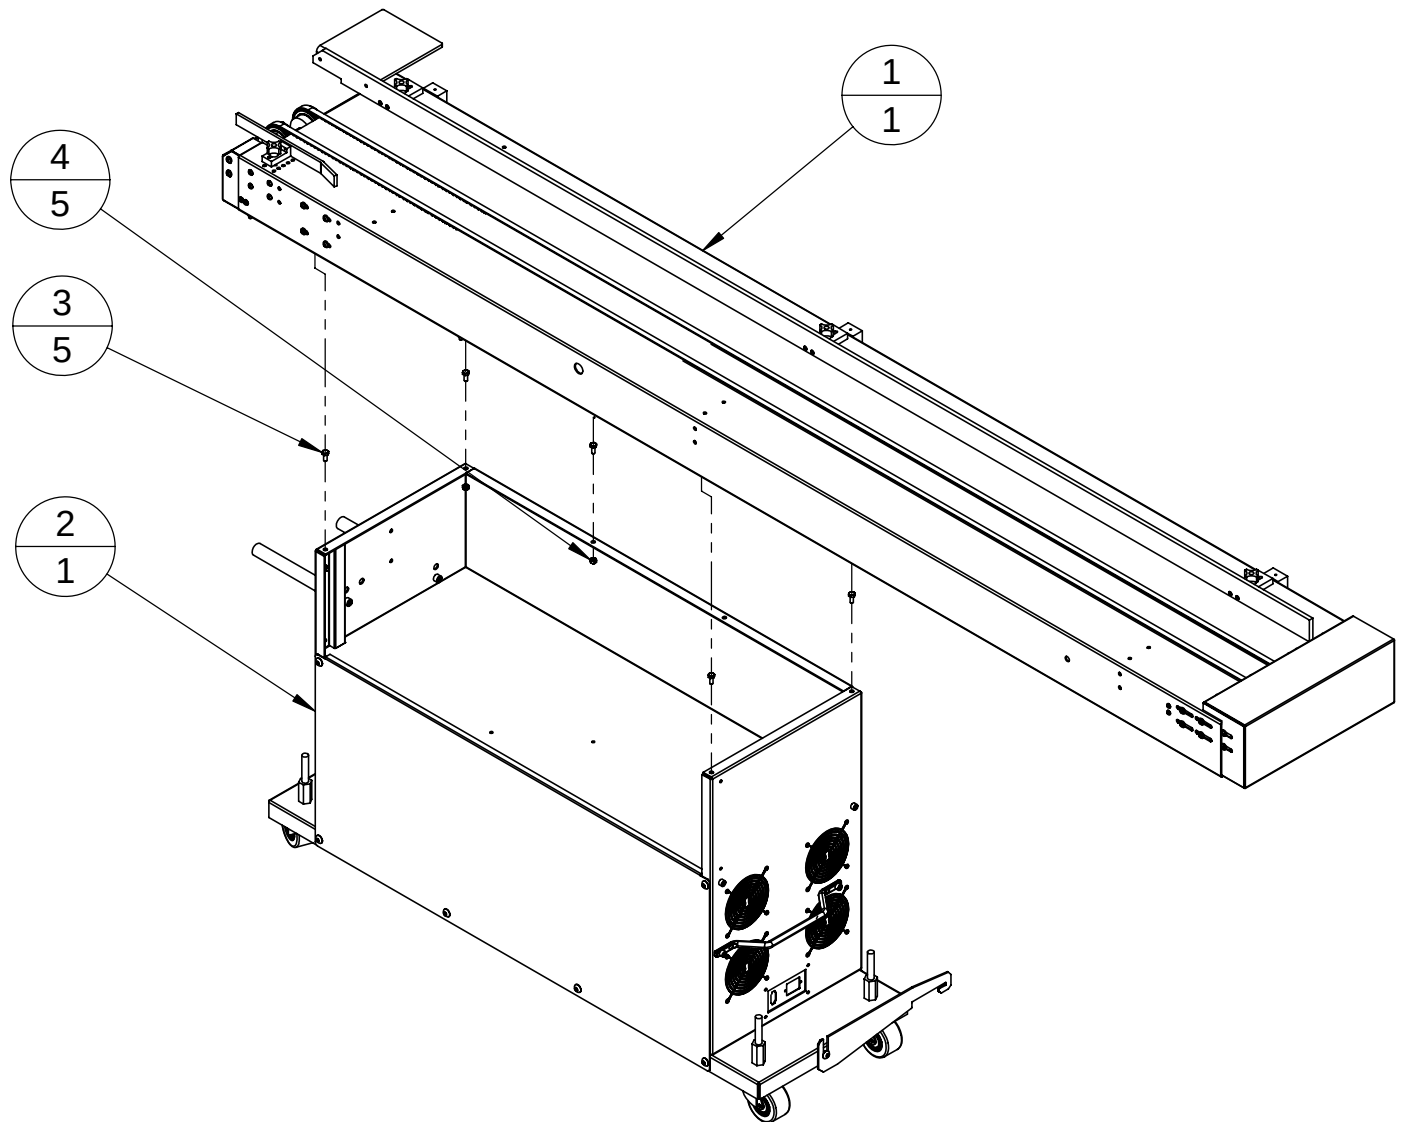

INFEED CONVEYOR (Fig. 9-2)
CONVEYOR BED ASSEMBLY (12020-045)


ITEM	PART NO.	QTY.	DESCRIPTION
1	12000-007	1	SIDEFRAME, 9' ENVELOPE CONVEYOR
2	18008-023	1	BAR, ENVELOPE GUIDE MTG.
3	18005-071	1	GUIDE, ENVELOPE SIDE
4	18005-017	3	GUIDE, ENVELOPE
5	18008-031	3	BAR, SIDE GUIDE ADJ.
6	12007-001	1	BLOCK, BEARING, FRONT
7	12007-009	1	BLOCK, BEARING, SHORT FRONT
8	99003-006	4	BEARING, 5/8 X 1-3/8, SELAED W/ S.R.
9	12004-003	2	SHAFT, DRIVE
10	99003-021	4	WASHER, NYLON, 5/8 X 1/16
11	99017-005	3	COLLAR, 5/8 SHAFT
12	99002-033	1	PULLEY, TIMING, 36XL037, 5/8B W/ KEYWAY
13	99002-150	4	PULLEY, TIMING, 24L050, 5/8B
14	18014-059	2	BELT, ENVELOPE CONVEYOR
15	12007-008	1	BLOCK, SIDE GUIDE MTG.
16	12005-010	1	GUIDE, LH SIDE
17	99004-019	4	KNOB, #10-24 MALE
18	12012-001	4	STANDOFF, MOTOR
19	12021-020	1	ASSEMBLY, CONVEYOR MOTOR
20	99000-030	1	BELT, TIMING, 220XL037
21	12011-006	1	END CAP, IDLER
22	12011-009	1	END CAP, DRIVE
23	12007-002	2	BLOCK, TAKE UP
24	12013-031	1	SHIELD, FRONT, INFEED CONV. MOTOR
25	12013-032	1	SHIELD, REAR, INFEED CONV. MOTOR
26	18013-087	1	COVER, INFEED CONVEYOR
27	12007-010	3	BLOCK, SIDE GUIDE MTG.
28	18005-064	1	GUIDE, ENVELOPE @ SHUTTLE
29	12007-027	2	BLOCK, BEARING, REAR CONVEYOR

**INFEED CONVEYOR (Fig. 9-2)
 CONVEYOR BED ASSEMBLY (12020-045)**

ITEM	PART NO.	QTY.	DESCRIPTION
30	99002-008	1	PULLEY, TIMING, 12XL037, 5/16 B
31	12013-009	1	GUARD, IDLER CONV. LEG
32	-	6	SCREW, SKT HEAD, #10-24 X 1/2
33	-	23	WASHER, FLAT, 1/4
34	-	30	BOLT, BUTTON HEAD, 1/4-20 X 1/2
35	-	4	SCREW, BUTTON HEAD, #10-24 X 1/2
36	-	6	BOLT, SKT HEAD, 1/4-20 X 1-1/4
37	-	2	SCREW, FLAT HEAD, #8-32 X 1/2
38	-	3	SCREW, BUTTON HEAD, #10-24 X 3/4
39	-	3	BOLT, HEX HEAD, 1/4-20 X 5/8
40	-	3	NUT, HEX HEAD, 1/4-20
41	-	2	BOLT, SKT HEAD, 1/4-20 X 1/2
42	-	2	BOLT, HEX HEAD, 1/4-20 X 2
43	-	2	NUT, HEX HEAD, 1/4-20

PITNEY BOWES

Sure-Feed Engineering

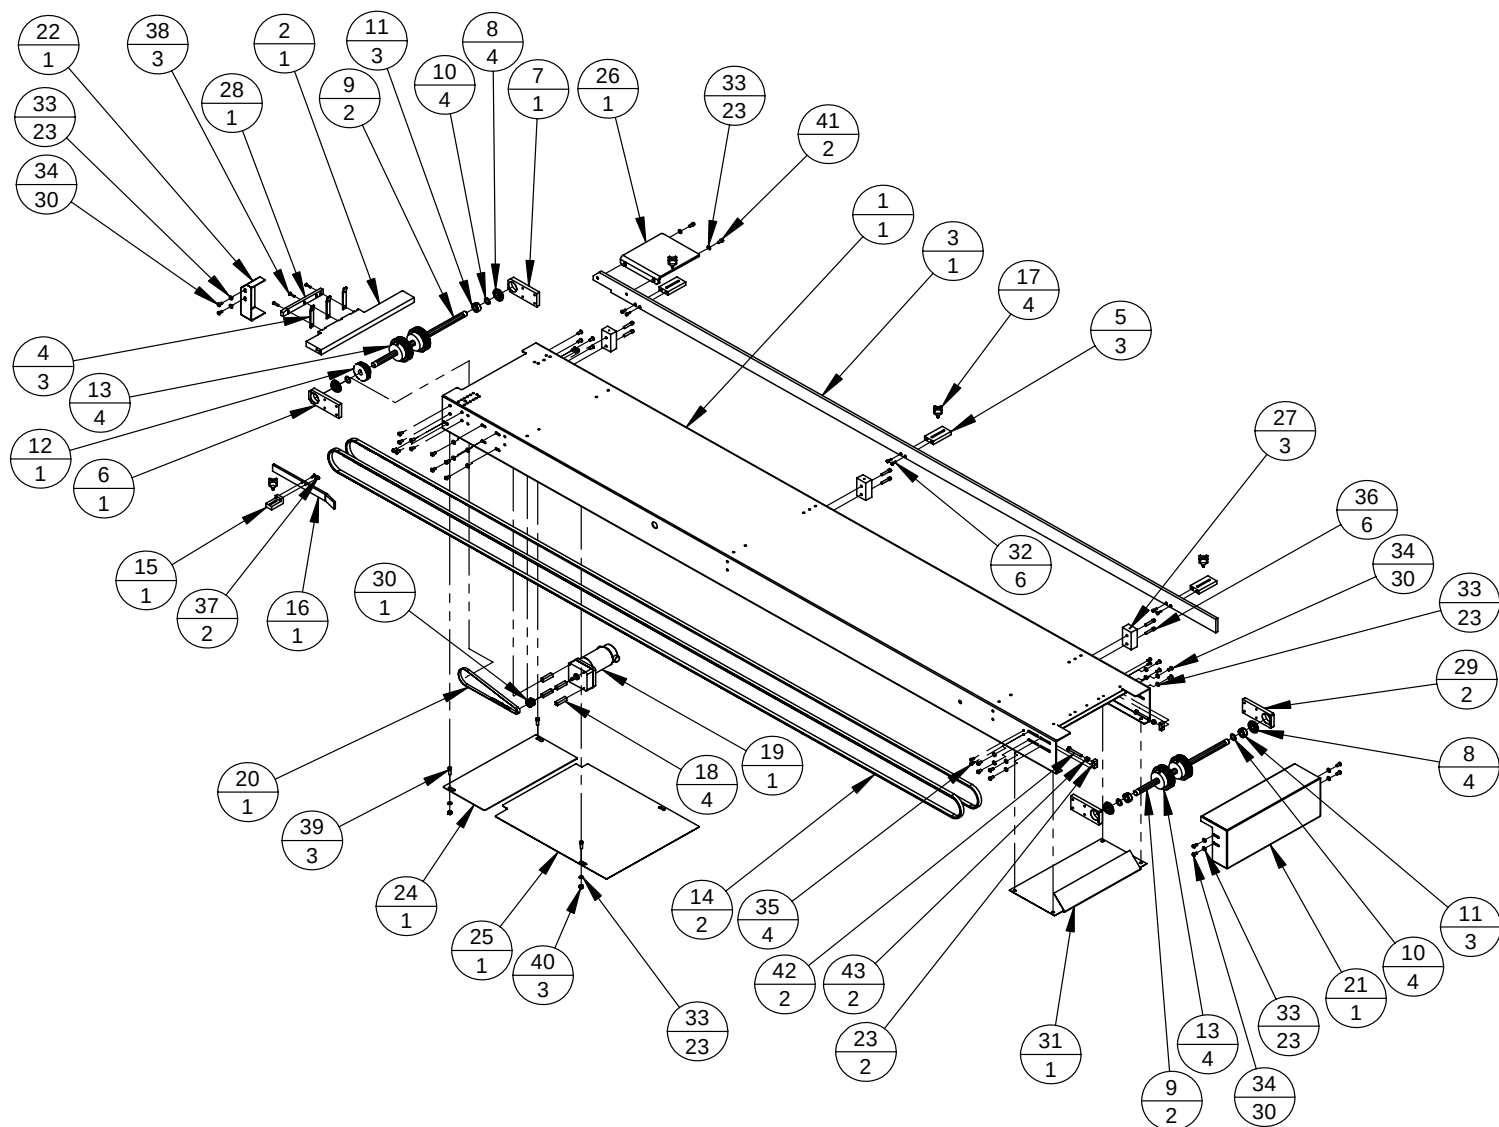


**INFEEED CONVEYOR (Fig. 9-3)
 AIR LEG BASE ASSEMBLY (12020-046)**

ITEM	PART NO.	QTY.	DESCRIPTION
1	12010-023	1	LEG, AIR, INFED CONVEYOR
2	12011-051	1	PLATE, AIR LEG
3	12013-025	1	COVER, AIR LEG
4	12013-034	1	COVER, MOTOR CABLE
5	12012-011	2	STANDOFF, COVER SUPPORT
6	12012-012	1	SPACER, CONVEYOR / FRONT TABLE
7	12011-055	1	PLATE, CONNECTOR MTG.
8	12009-016	1	BRACE, CONVEYOR ALIGNMENT
9	99041-003	3	FAN, AC, 120 CFM – 290 RPM
10	99041-004	7	FAN COVER
11	99012-005	1	HANDLE, PULL
12	SEE FIG 9-4	1	ASSEMBLY, PUMP BASE (12020-047)
13	12011-054	1	PLATE, CONNECTOR MTG.
14	-	1	BOLT, SKT HEAD, 3/8-16 X 1/2
15	-	1	BOLT, SKT HEAD, 3/8-16 X 1-1/2
16	-	7	BOLT, BUTTON HEAD, 3/8-16 X 5/8
17	-	8	BOLT, SKT HEAD, 5/16-18 X 5/8
18	-	4	BOLT, SKT HEAD, 3/8-16 X 5/8
19	99031-022	15 FT	HOSE, 3/4" ID (NOT SHOWN)
20	99017-030	4	HOSE CLAMP, SS, 11/16 X 1-1/2

PITNEY BOWES

Sure-Feed Engineering

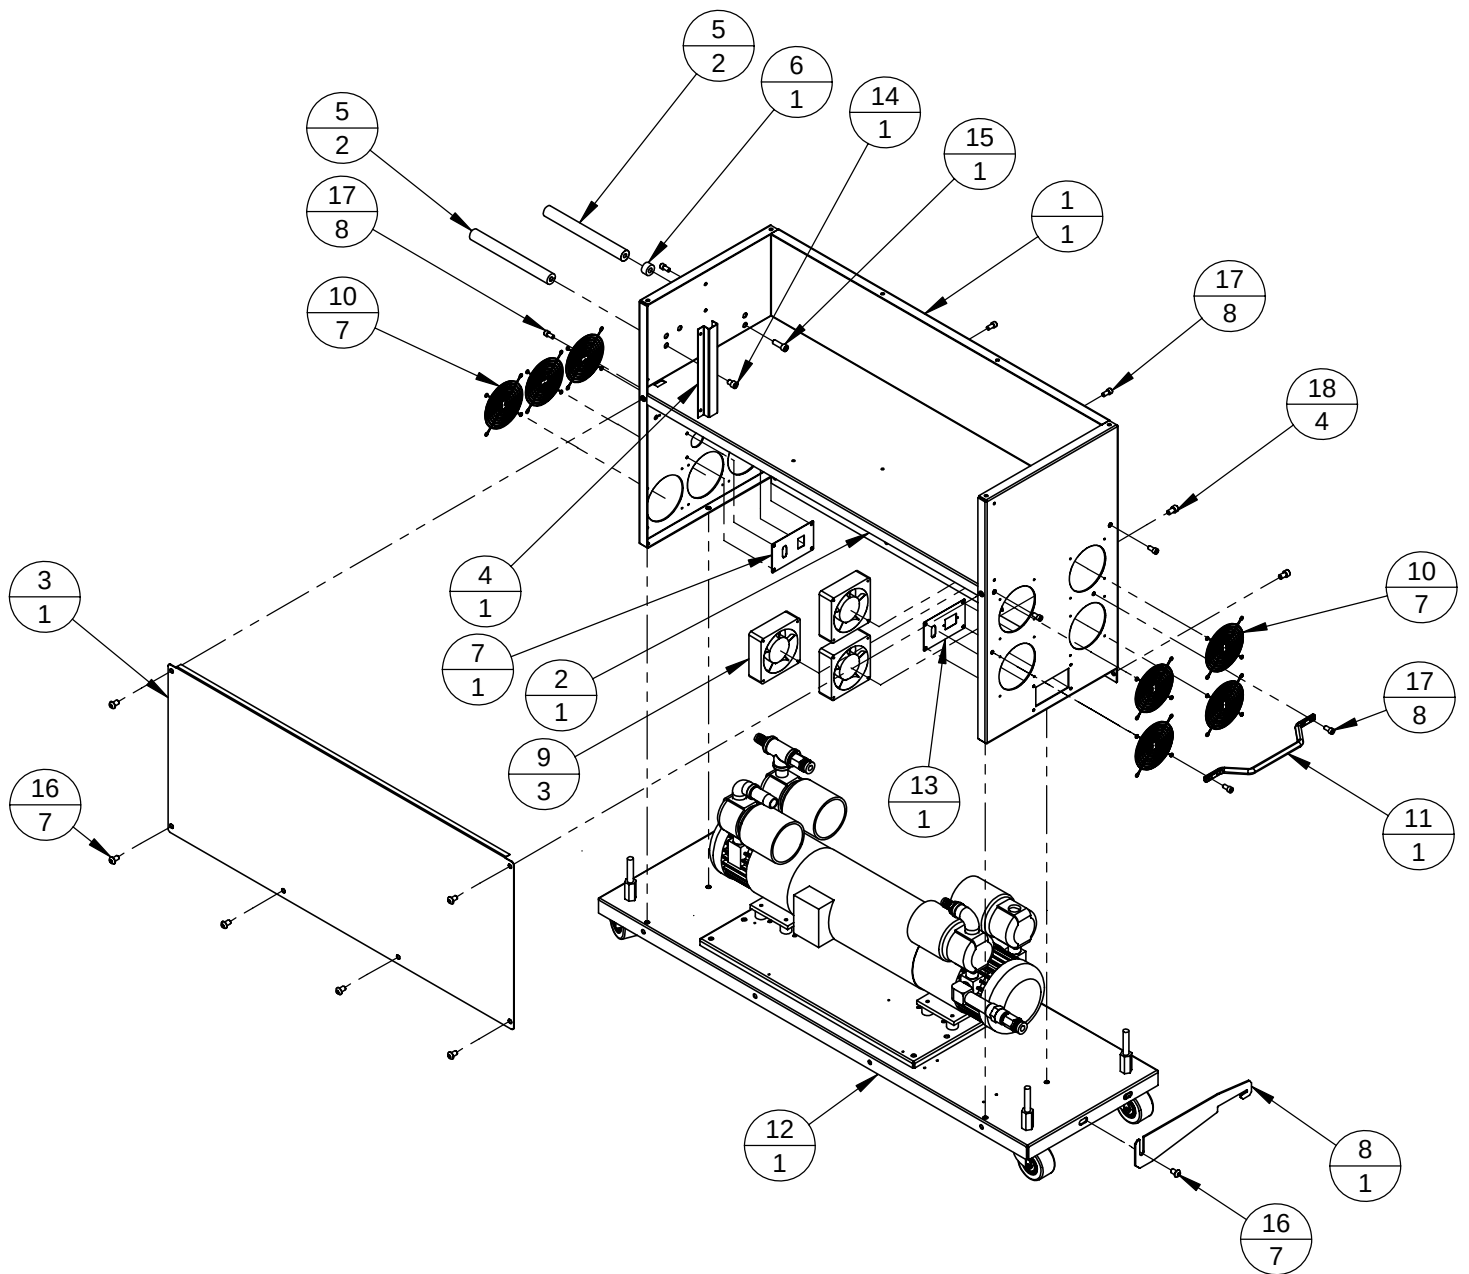


INFEED CONVEYOR (Fig. 9-4)
PUMP BASE ASSEMBLY (12020-047)


ITEM	PART NO.	QTY.	DESCRIPTION
1	12011-052	1	PLATE, AIR LEG BASE
2	12011-053	1	PLATE, PUMP MTG.
3	99010-017	4	CASTER, 3"
4	99039-155	8	VIBRATION MOUNT, 1/4-20 THREAD
5	99029-013	1	GAST PUMP / BLOWER COMBO
6	-	8	BOLT, HEX HEAD, 1/4-20 X 3/4

PITNEY BOWES

Sure-Feed Engineering

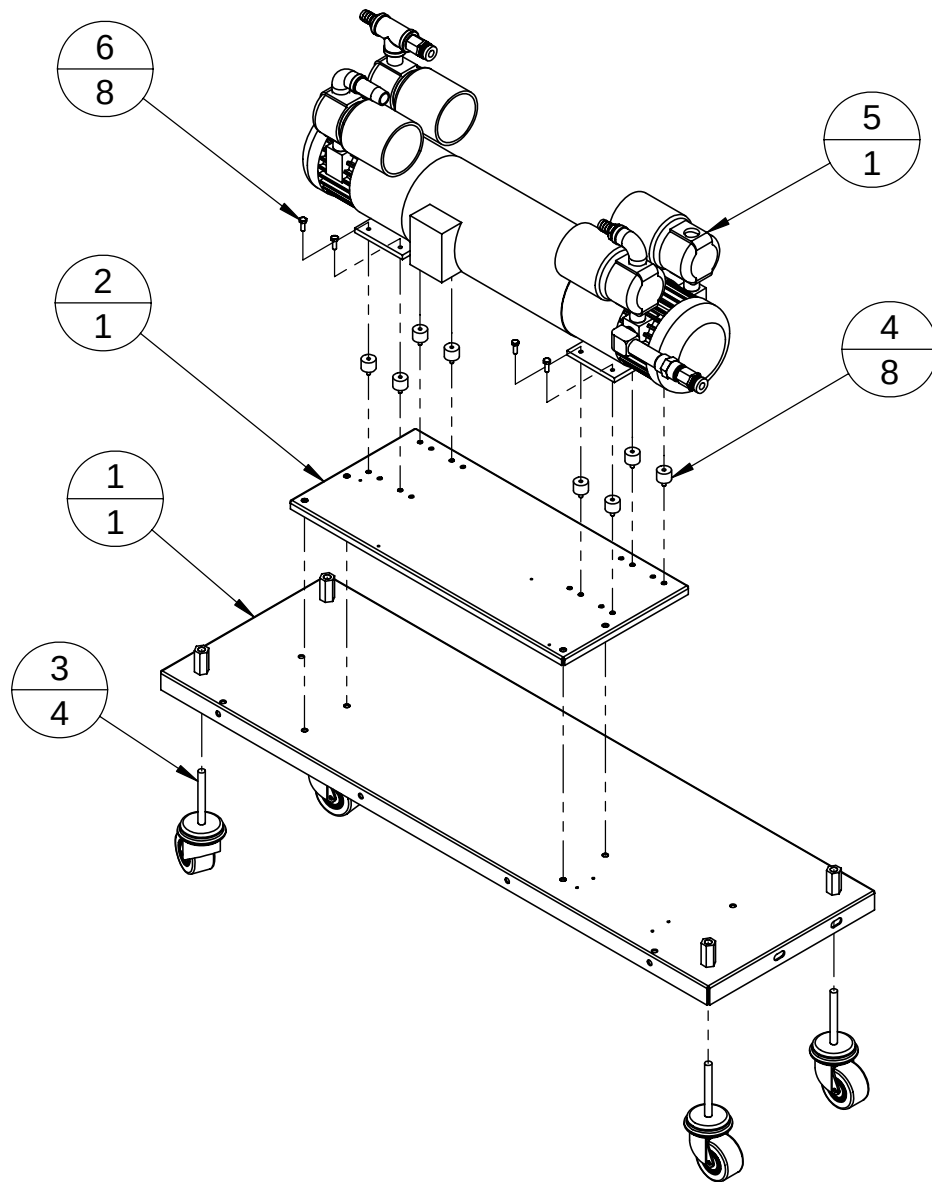

SHINGLE CONVEYOR

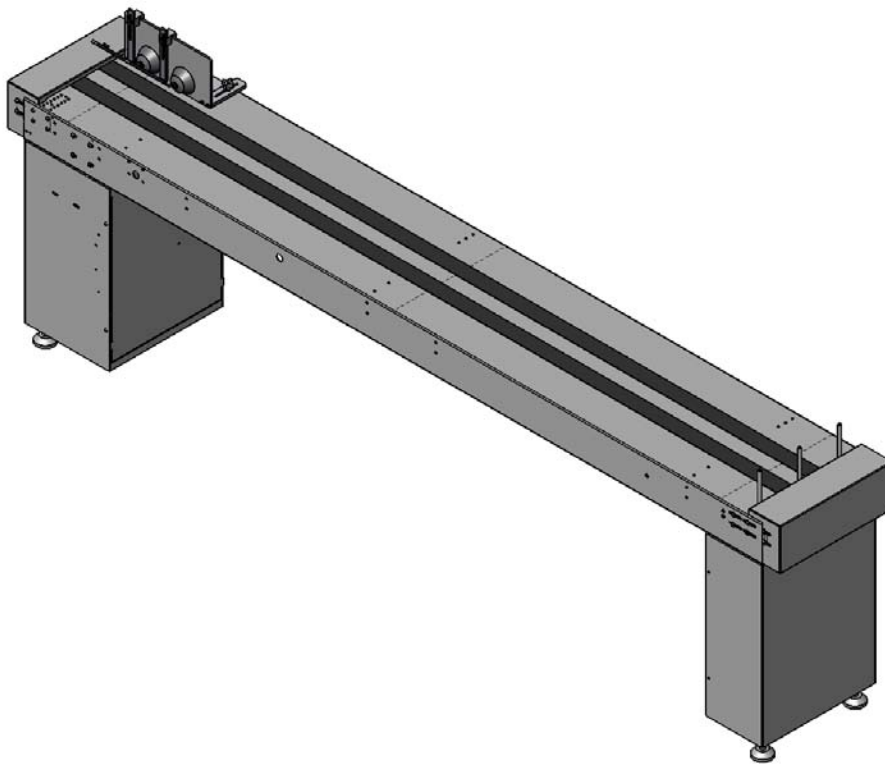


**SHINGLE CONVEYOR ASSEMBLY (Fig. 10-1)
(12022-003)**

ITEM	PART NO.	QTY.	DESCRIPTION
1	12000-007	1	SIDEFAME, 9' CONVEYOR
2	12010-003	1	LEG, CONVEYOR IDLER, 30"
3	12010-004	1	LEG, CONVEYOR DRIVE, 30"
4	99010-001	4	LEVELING PAD, 5/8-11
5	12007-001	4	BLOCK, BEARING
6	99003-006	4	BEARING, 5/8 X 1-3/8 SEALED W/ S.R.
7	12004-003	2	SHAFT, DRIVE
8	99003-021	4	WASHER, NYLON, 5/8 X 1/16
9	99002-033	1	PULLEY, TIMING, 36XL037, 5/8 BORE W/ KEYWAY
10	99017-005	3	COLLAR, 5/8
11	12006-002	4	PULLEY, CROWNED
12	99000-052	2	BELT, ENDLESS, 2" WIDE X 18'1" LONG
13	99001-009	1	MOTOR, 1/30 HP, 32 RPM
14	12012-009	4	STANDOFF, MOTOR
15	99002-008	1	PULLEY, TIMING, 12XL037, 5/16 BOREE
16	99000-030	1	BELT, TIMING, 220XL037
17	12007-002	2	BLOCK, TAKE UP
18	12011-006	2	END CAP, IDLER
19	12004-008	3	POST, STOP
20	12013-005	1	GUARD, CONVEYOR DRIVE LEG
21	SEE FIG. 10-2	1	ASSEMBLY, KNOCK DOWN (12020-009)
22	12011-043	1	PLATE, SPACER
23	-	32	WASHER, FLAT, 1/4
24	-	28	BOLT, BUTTON HEAD, 1/4-20 X 1/2
25	-	8	SCREW, BUTTON HEAD, #10-24 X 1/2
26	-	2	BOLT, HEX HEAD, 1/4-20 X 2
27	-	12	NUT, HEX, 1/4-20
28	-	10	BOLT, HEX HEAD, 1/4-20 X 5/8

PITNEY BOWES

Sure-Feed Engineering

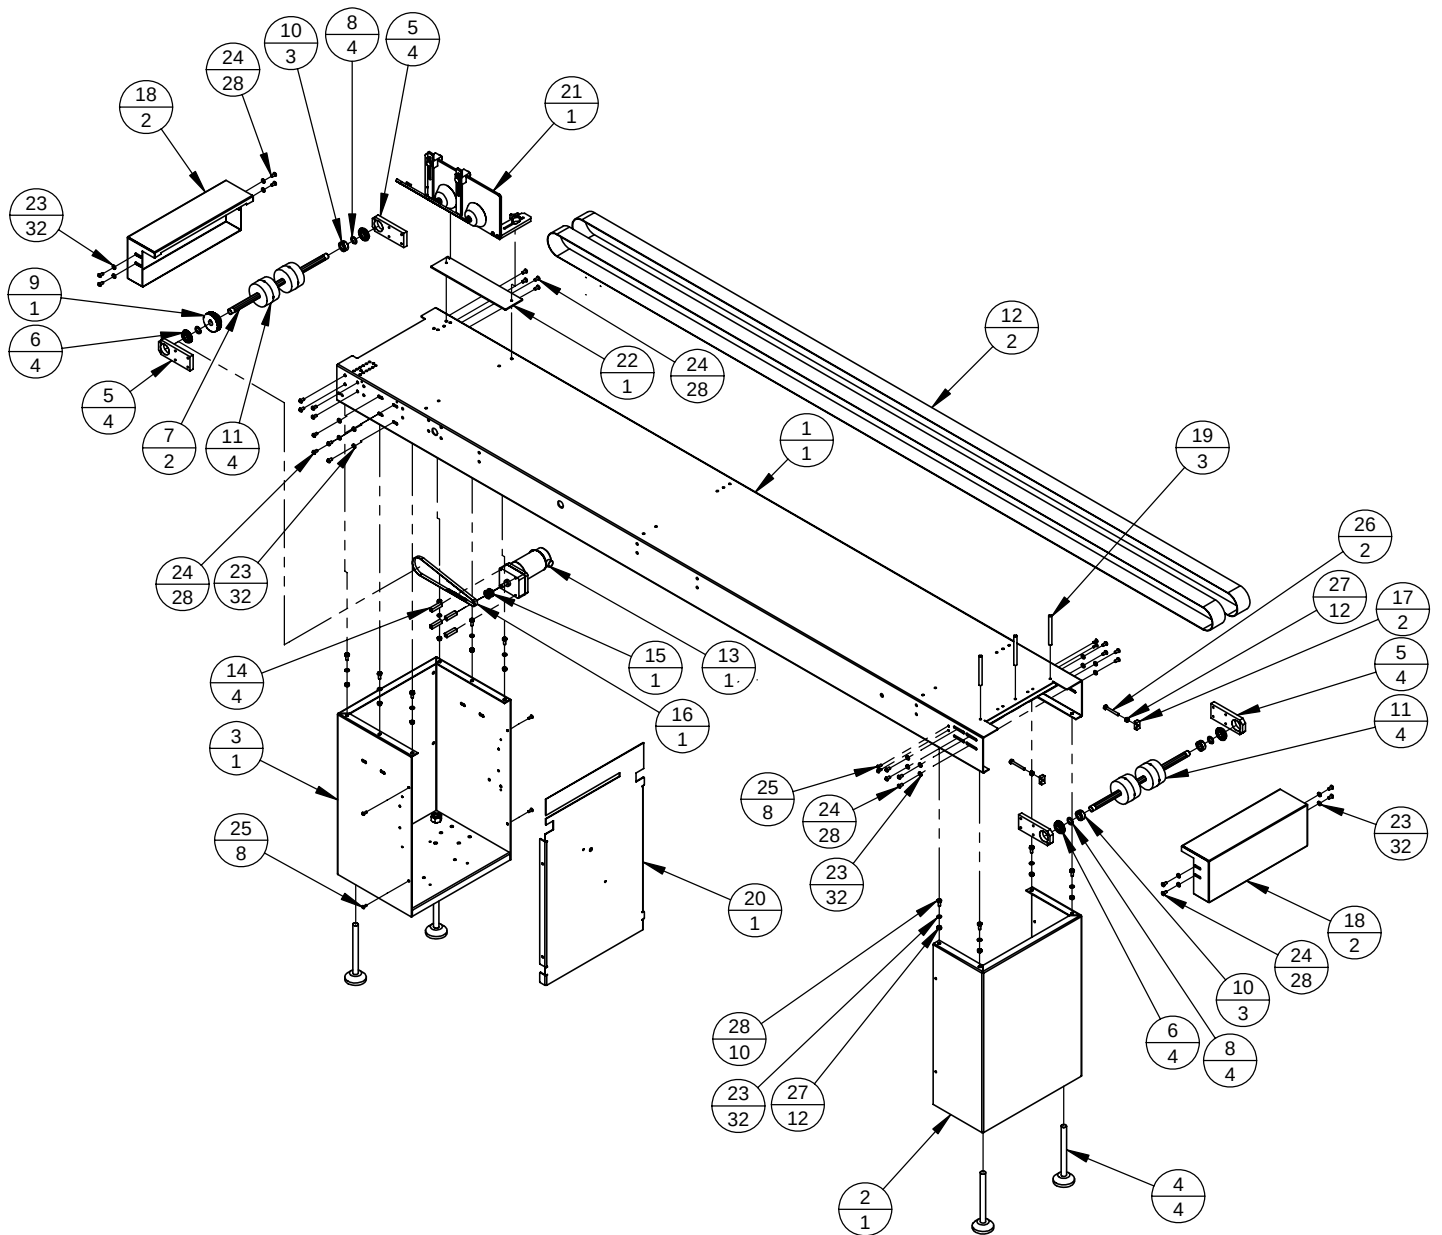


**SHINGLE CONVEYOR (Fig. 10-2)
 KNOCK DOWN ASSEMBLY (12020-009)**

ITEM	PART NO.	QTY.	DESCRIPTION
1	12007-006	2	BLOCK, PLATE MTG.
2	12011-007	1	PLATE, KNOCK DOWN
3	12007-007	2	BLOCK, KNOCK DOWN
4	12008-001	2	BRACKET, KNOCK DOWN
5	99004-002	6	KNOB, #10 SCREW
6	12005-007	2	GUIDE, KNOCK DOWN
7	99004-019	2	KNOB, #10-24 MALE
8	12008-028	2	BAR, KNOCK DOWN ROLLER MTG.
9	12006-020	2	ROLLER, KNOCK DOWN
10	12004-028	2	SHAFT, KNOCK DOWN ROLLER
11	99033-005	2	SHOULDER BOLT, 1/4 X 3/4
12	99003-017	2	WASHER, NYLON, 3/8 X 1/16
13	-	2	SCREW, SKT HEAD, #10-24 X 1-1/4
14	99022-003	2	SNAP RING, 3/8
15	-	4	SCREW, FLAT HEAD, #10-24 X 1/2
16	-	4	SCREW, BUTTON HEAD, #10-24 X 1/4
17	-	4	SCREW, SKT HEAD, #10-24 X 3/8
18	-	2	SCREW, SKT HEAD, #10-24 X 1/2

PITNEY BOWES

Sure-Feed Engineering

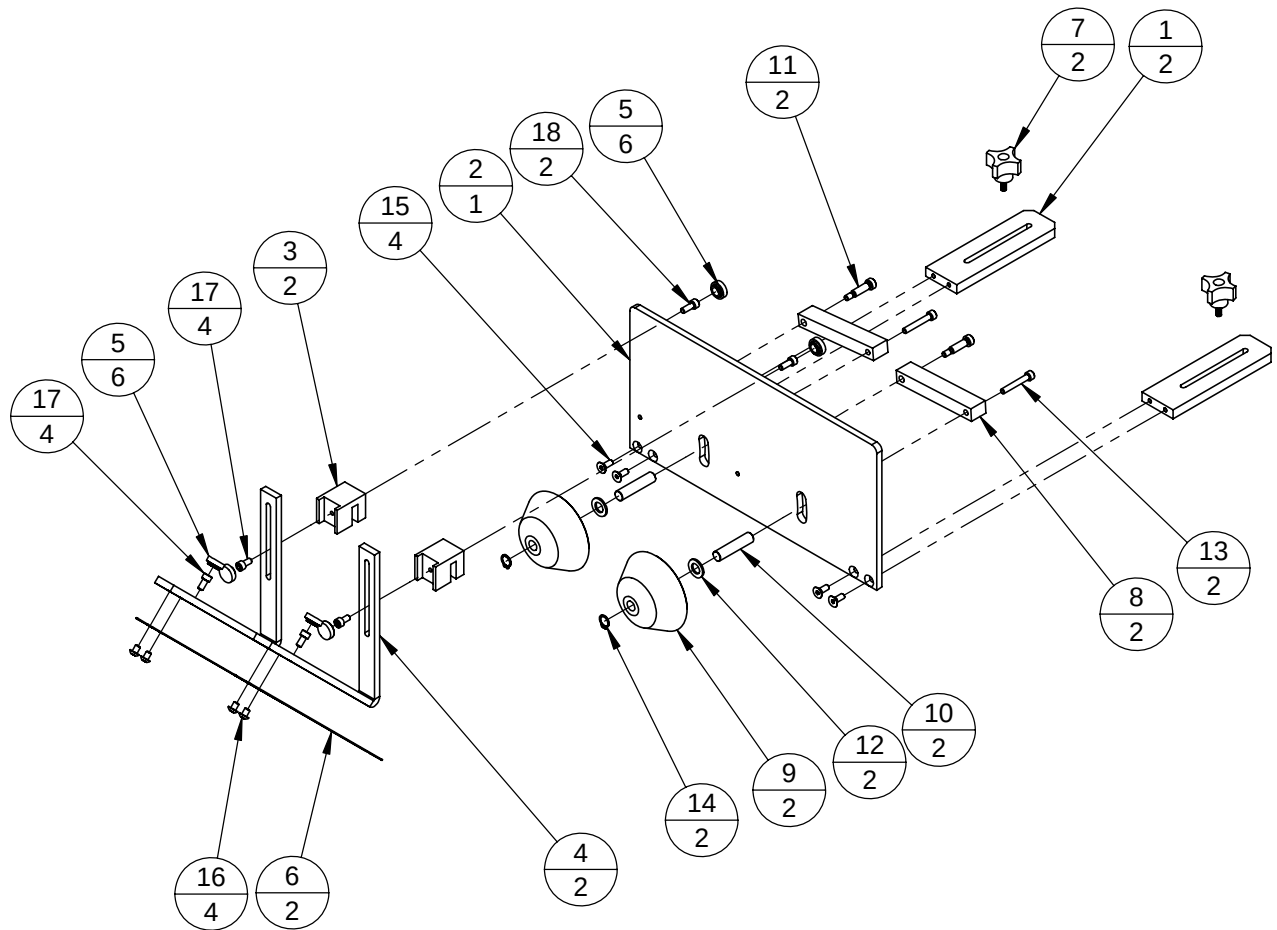

Special Note:

The following pages pertain to those FlowMaster RS and RS Flex inserters specifically built with integrated Font Table to “Front Table / Turnover Combo”. These parts do not pertain to FlowMaster inserters using “Modular Turnovers”

Front Table / Turnover Combo

Parts

TABLE of CONTENTS


<i>Topic</i>	<i>Page</i>
Discharge Roller Assembly	276
Front Table Guide Assembly (10X13)	277
Envelope Chain Drive Assembly (10X13)	279
Front Table Covers (10X13)	281
Transition Cover Assembly	285
Gripper Chain Tensioner	287
Sensor, Gripper Chain Tensioner	289
Turnover Frame Assembly	290
Double Exit Roller Assembly	291
Tensioner Assembly (w/ Flat Roller)	292
Exit Roller Assembly	293
Input Nip Roller Assembly	294
Exit Roller Shaft Assembly	296
Turnover Motor AC (10X13)	297
Turnover, Belt Drive	298
Turnover Motor AC (6X9)	299
Intermediate Drive Shaft	300
Belt Transport (10X13)	301
Turnover Infeed Assembly	303
Turnover Discharge Assembly (10X13)	304
Turnover Covers (10X13)	307
Flat Idler Roller Assembly	310
Crowned Roller Assembly	311

PITNEY BOWES

Sure-Feed Engineering

Assembly, Discharge Roller, Front Table / Turnover 18020-154

Item Num.	Part Number	Description	Qty
1	18007-113	BLOCK, EXIT ROLLER MTG	1
2	18004-081	SHAFT, FRONT TABLE ROLLER	1
3	20006-012	PULLEY, CROWNED	1
4	99003-006	BEARING, 5/8 X 1-3/8 SEALED W/ S.R.	2
5	99003-021	WASHER, NYLON, 5/8 X 1/16	1
6	99022-011	E-CLIP, 5/8	1
7	18013-116	SHIELD, INPUT ROLLER	1
8	-	SHCS, 5/16-18 X 1-1/4	1
9	-	PHMS, #6-32 X 3/8	2

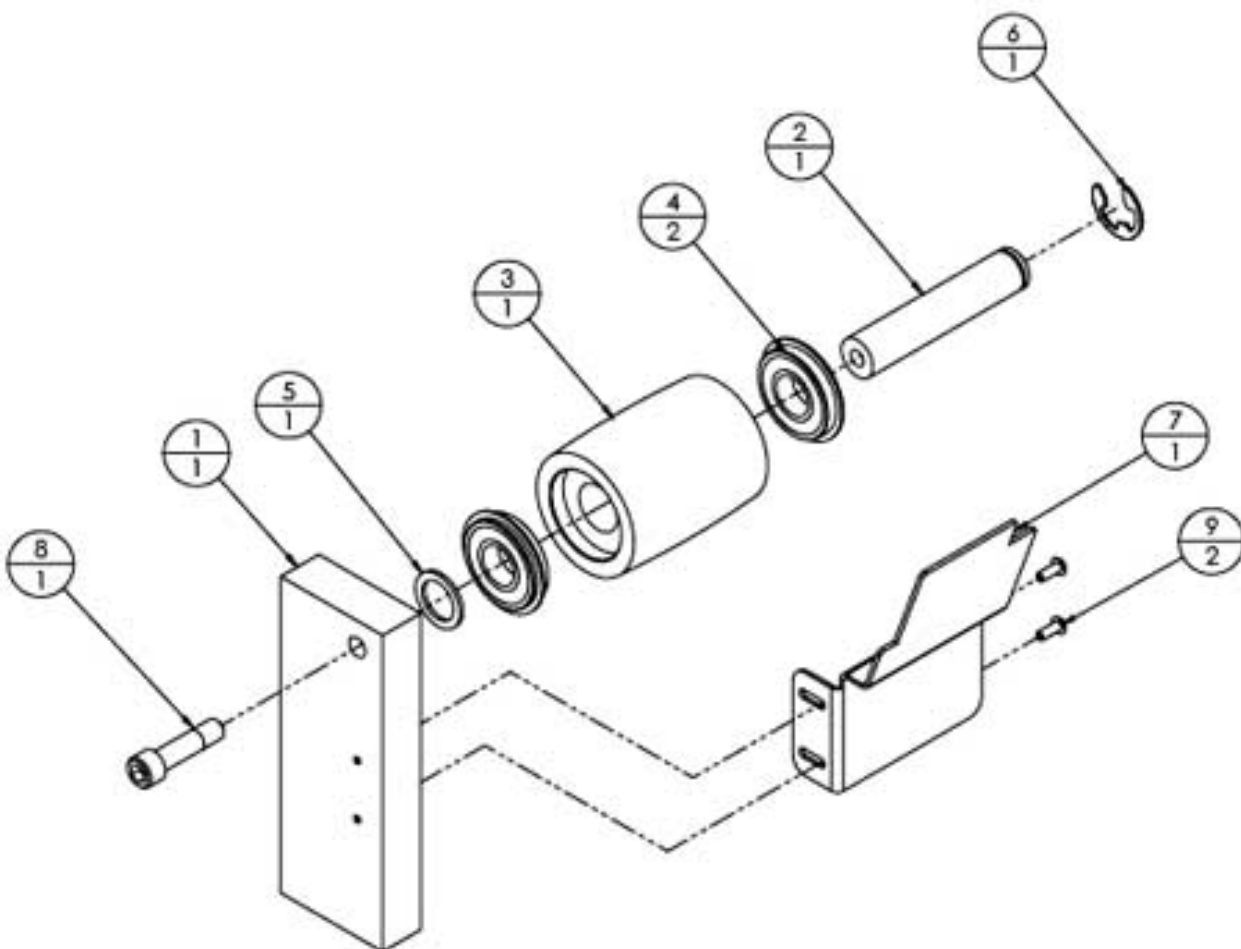

PITNEY BOWES


Sure-Feed Engineering

Assembly, Front Table Guide 10 X 13 FT /To Combo 18020-186

Item Num.	Part Number	Description	Qty
1	18020-090	ASSEMBLY, PAPER GUIDE	1
2	18020-064	ASSEMBLY, GATE	1
3	18020-092	ASSEMBLY, ENVELOPE PLOW	1
4	18020-093	ASSY, EXIT ROLLER	1
5	18020-094	ASSEMBLY, ENVELOPE ROLLER	1
6	18020-270	ASSY, INSERT GUIDE RIAL @ DISCHARGE	1
7	18020-269	ASSEMBLY, ADJ, INSERT GUIDE RAIL	1
8	18020-154	ASSY, DISCHARGE ROLLER	1
9	18011-089	PLATE, TOP, FRONT TABLE (10X13)	1
10	18012-008	STANDOFF, FRONT TABLE	5
11	18011-034	RAIL, INSERT GUIDE	1
12	20013-064	COVER, FILLER PLATE	1
13	99018-008	BRACKET, SENSOR MTG.	1
14	98015-016	GROMMET, RUBBER, 1/2" HOLE	4
15	98009-037	SENSOR, RECIEVER, THRU BEAM	REF
16	-	SHCS, 1/4-20 X 3/4	2
17	-	SHCS, #10-24 X 2	2
18	-	SHCS, #10-24 X 1	2
19	-	SHCS, #10-24 X 3/4	3
20	-	SHCS, #10-32 X 1/2	2
21	-	SHCS, #8-32 X 3/4	2
22	-	SBHCS, #10-24 X 1/2	1
23	-	SBHCS, #4-40 X 3/8	2
24	-	FHMS, #10-24 X 1/2	19
25	-	FHMS, #10-24 X 3/8	5
26	-	FHMS, #4-40 X 3/8	2
27	-	LOCK WASHER, #4	2
28	-	FLAT WASHER, 1/8	2
29	-	HNUT, #4-40	2

PITNEY BOWES

Sure-Feed Engineering

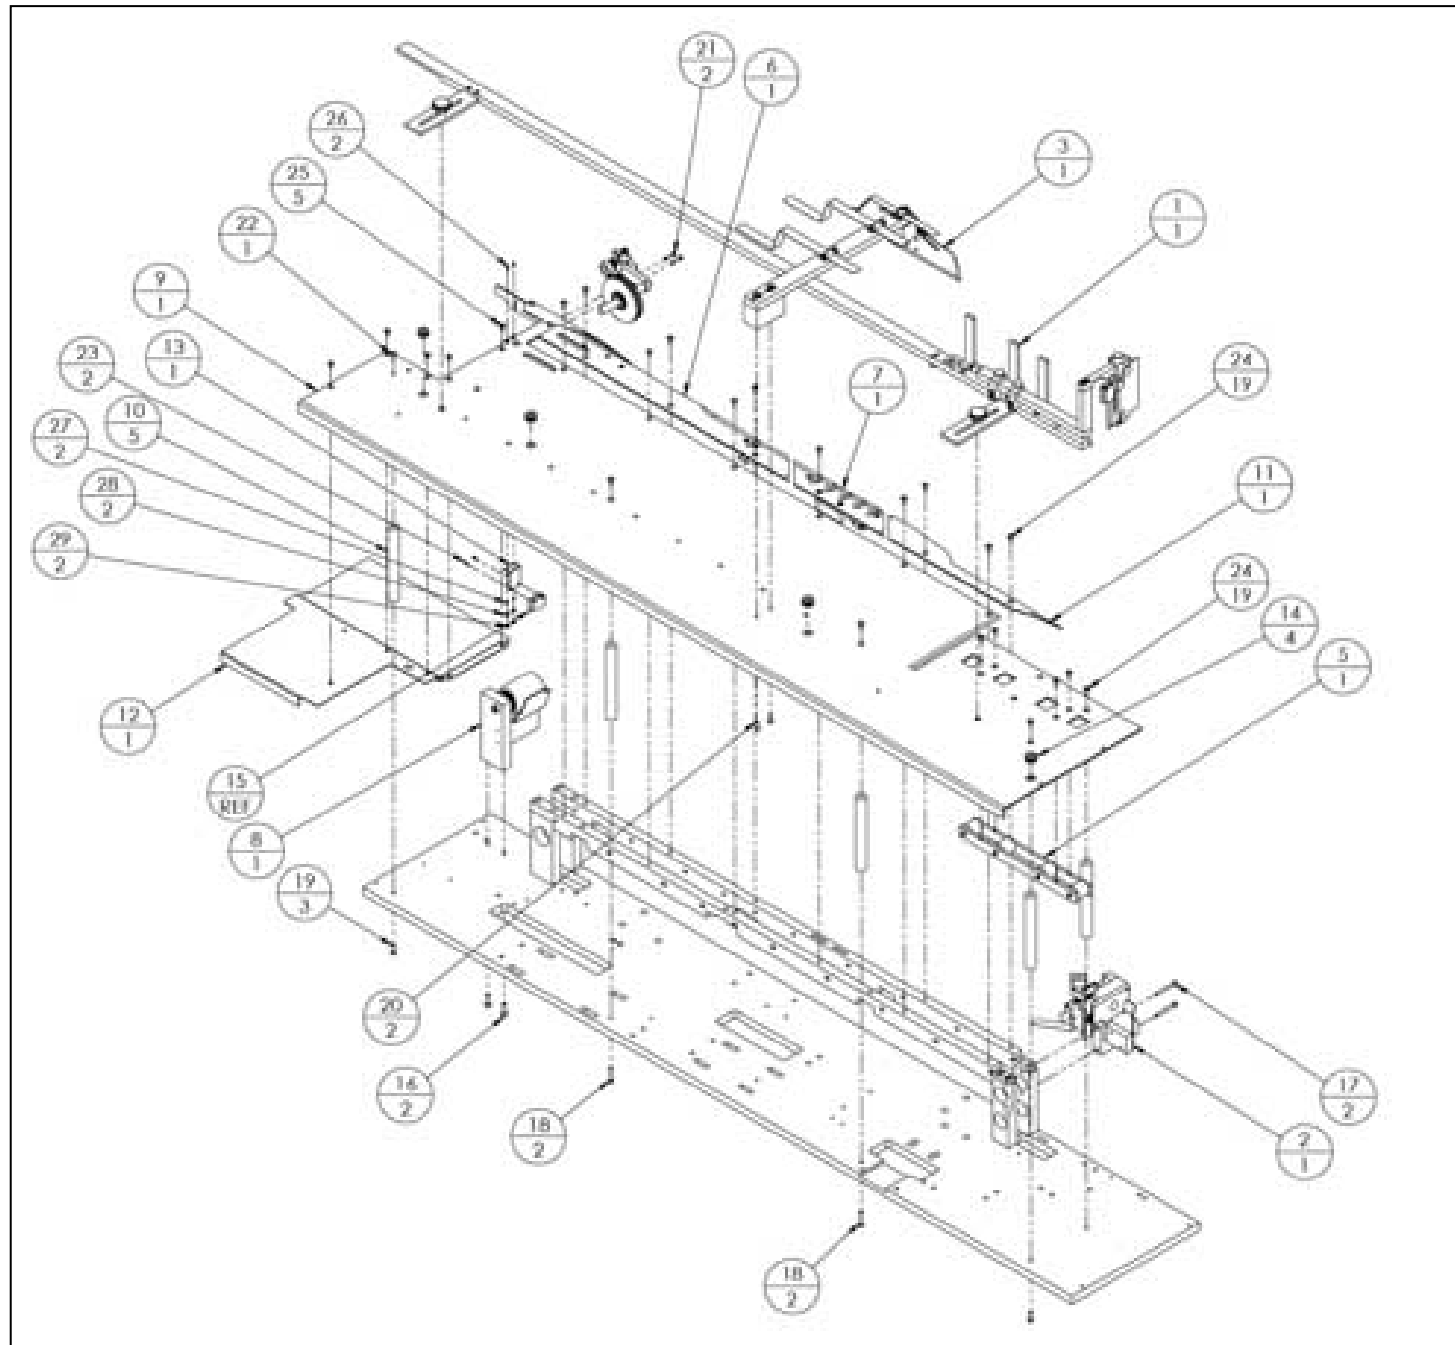


PITNEY BOWES

Sure-Feed Engineering

Assembly, Envelope Chain Drive, Front Table 10 X 13 18020-384

Item Num.	Part Number	Description	Qty
1	18020-385	ASSEMBLY, GEAR MOTOR / REDUCER	1
2	18020-057	ASSEMBLY, INDEXING BOX	1
3	18020-386	ASSY, TENSIONER / ENCODER	1
4	18020-267	ASSY, CHAIN DRIVE SHAFT	1
5	18020-464	ASSY, CHAIN IDLER	1
6	18020-011	ASSY, RH JAW OPENER	1
7	18014-009	CHAIN, ENVELOPE, 10X13	1
8	18011-028	PLATE, FRONT TABLE DRIVE	1
9	18003-019	BAR, CHAIN GUIDE SUPPORT	1
10	18003-021	BAR, CHAIN GUIDE SUPPORT	1
11	18005-038	GUIDE, ENV. CHAIN, RH	1
12	18005-039	GUIDE, ENV. CHAIN, LH	1
13	18007-078	BLOCK, TAKE UP	2
14	18007-091	BLOCK, ACTUATOR MTG	1
15	18011-010	BLOCK, GUIDE, DRIVE PLATE	4
16	18007-105	BLOCK, FRONT TABLE STOP	1
17	99000-055	BELT, 1040-8M-20 SH	1
18	99000-016	BELT, 920-8M-20	1
19	99000-336	BELT, TIMING, 170XL025	1
20	99014-002	LINEAR ACTUATOR, 4" STROKE	1
21	99033-001	SHOULDER BOLT, 1/4 X 1	1
22	18020-463	ASSY, CHAIN TENSIONER	1
23	18020-466	ASSY, SENSORS, CHAIN TENSIONER	1
24	-	SHCS, 3/8-16 X 1-1/4	4
25	-	SHCS, 5/16-18 X 1-1/4	4
26	-	SHCS, 1/4-20 X 1-1/4	26
27	-	HBOLT, 1/4-20 X 2	2
28	-	SHCS, 1/4-20 X 1-1/4	2
29	-	SHCS, 1/4-20 X 5/8	2
30	-	SBHCS, 1/4-20 X 5/8	2
31	-	SHCS, #8-32 X 3/4	20
32	-	FW, 1/4	2
33	-	FW, 3/8	4
34	-	FW, 5/16	4
35	-	HNUT, 1/4-20	2
36	-	LOCK WASHER, 3/8	4
37	-	LOCK WASHER, 5/16	4

PITNEY BOWES
Sure-Feed Engineering

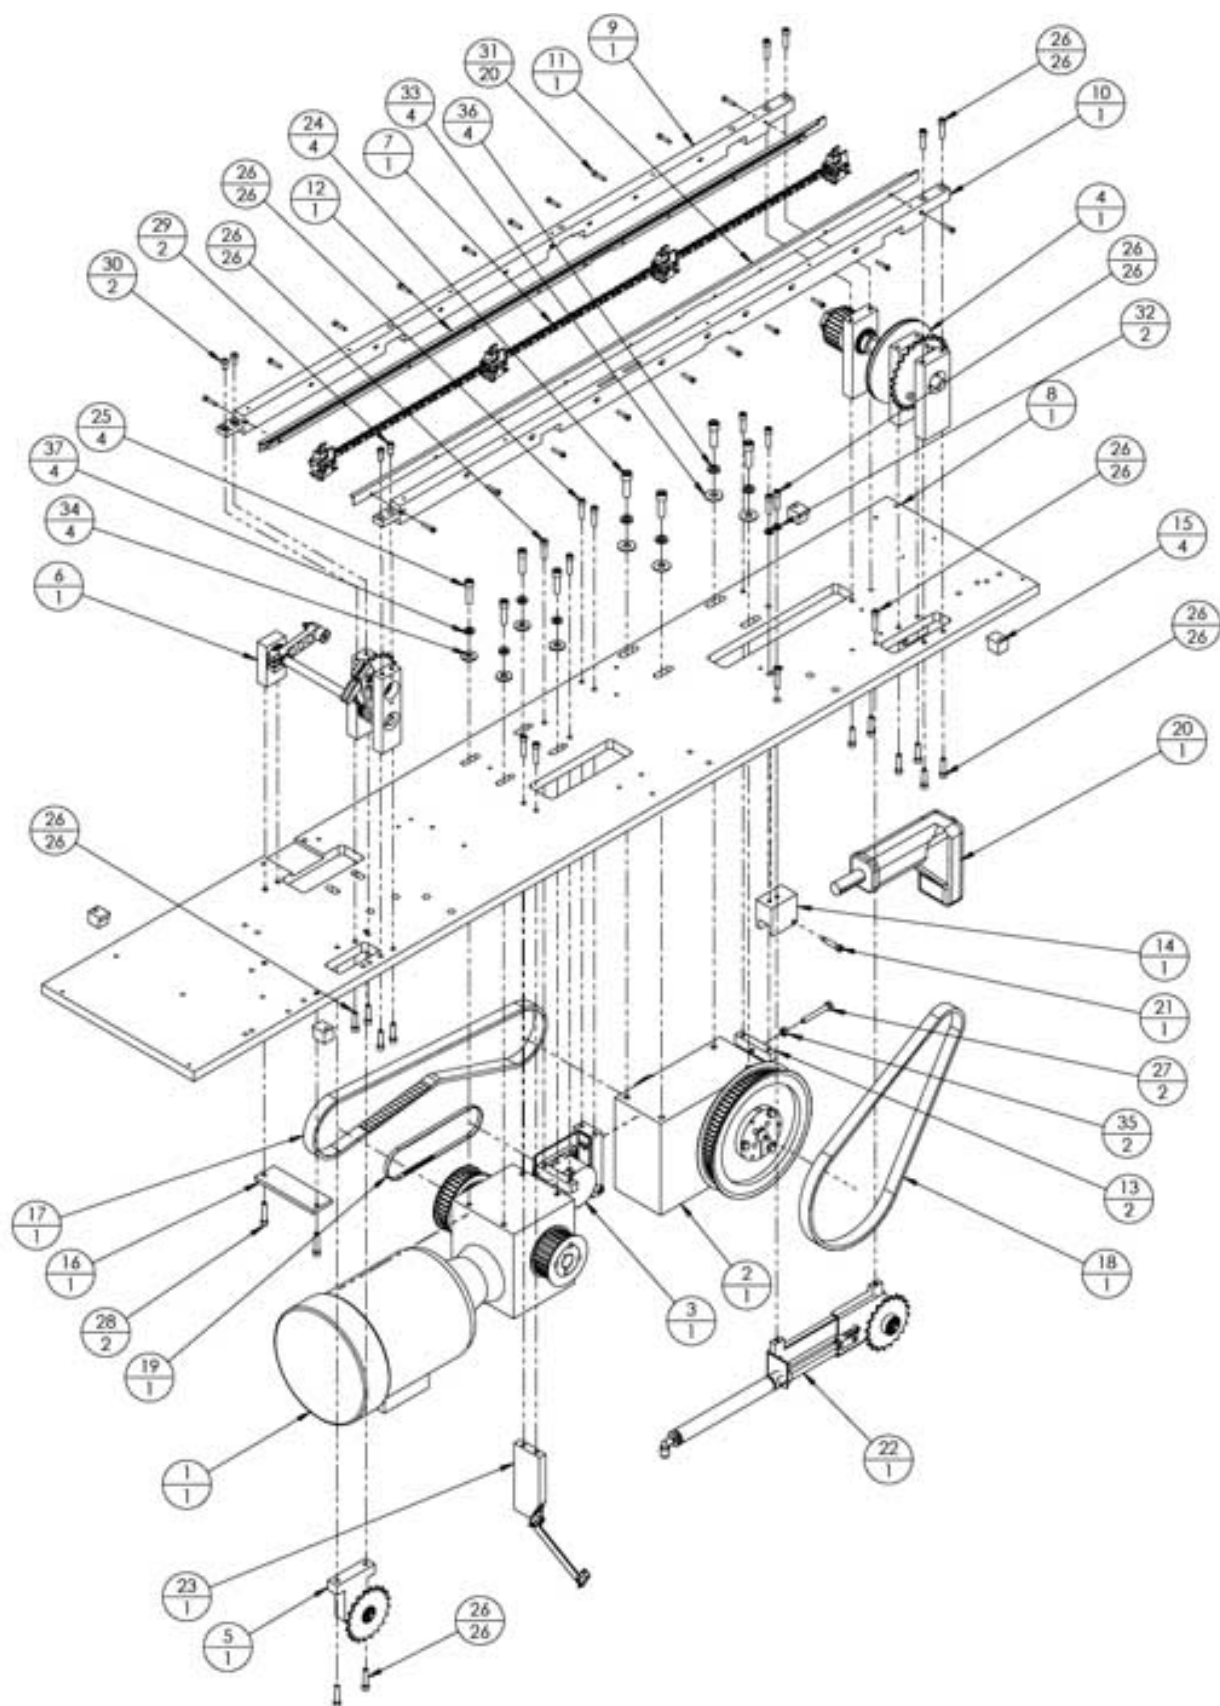


PITNEY BOWES
Sure-Feed Engineering

Assembly, Covers, 10 X 13 FT / To Combo 18020-442			
Item Num.	Part Number	Description	Qty
1	18013-021	DOOR, FRONT TABLE	2
2	18013-015	COVER, END CAP-RH	1
3	18013-007	COVER, END	1
4	18008-025	BAR, END COVER MTG.	1
5	99012-001	HANDLE, DOOR	2
6	99013-001	LATCH, DOOR	2
7	18013-013	HINGE, FRONT TABLE	2
8	98020-024	MAGNET, REED SW	REF
9	98000-036	REED SWITCH	REF
10	-	SHCS, #10-24 X 1/2	3
11	-	SHCS, #4-40 X 3/8	4
12	-	SBHCS, #10-32 X 1/2	4
13	-	SBHCS, #10-32 X 1/2	2
14	-	SBHCS, #4-40 X 3/8	4
15	-	PHMS, #10-24 X 1/2	2
16	-	PHMS, #8-32 X 3/8	30
17	-	PHMS, #6-32 X 1/2	4
18	-	PHMS, #6-32 X 1/2	4
19	-	FLAT WASHER, 1/4	4
20	-	LOCK WASHER, #4	4
21	-	HNUT, #6-32	20
22	-	HNUT, #4-40	4

PITNEY BOWES

Sure-Feed Engineering

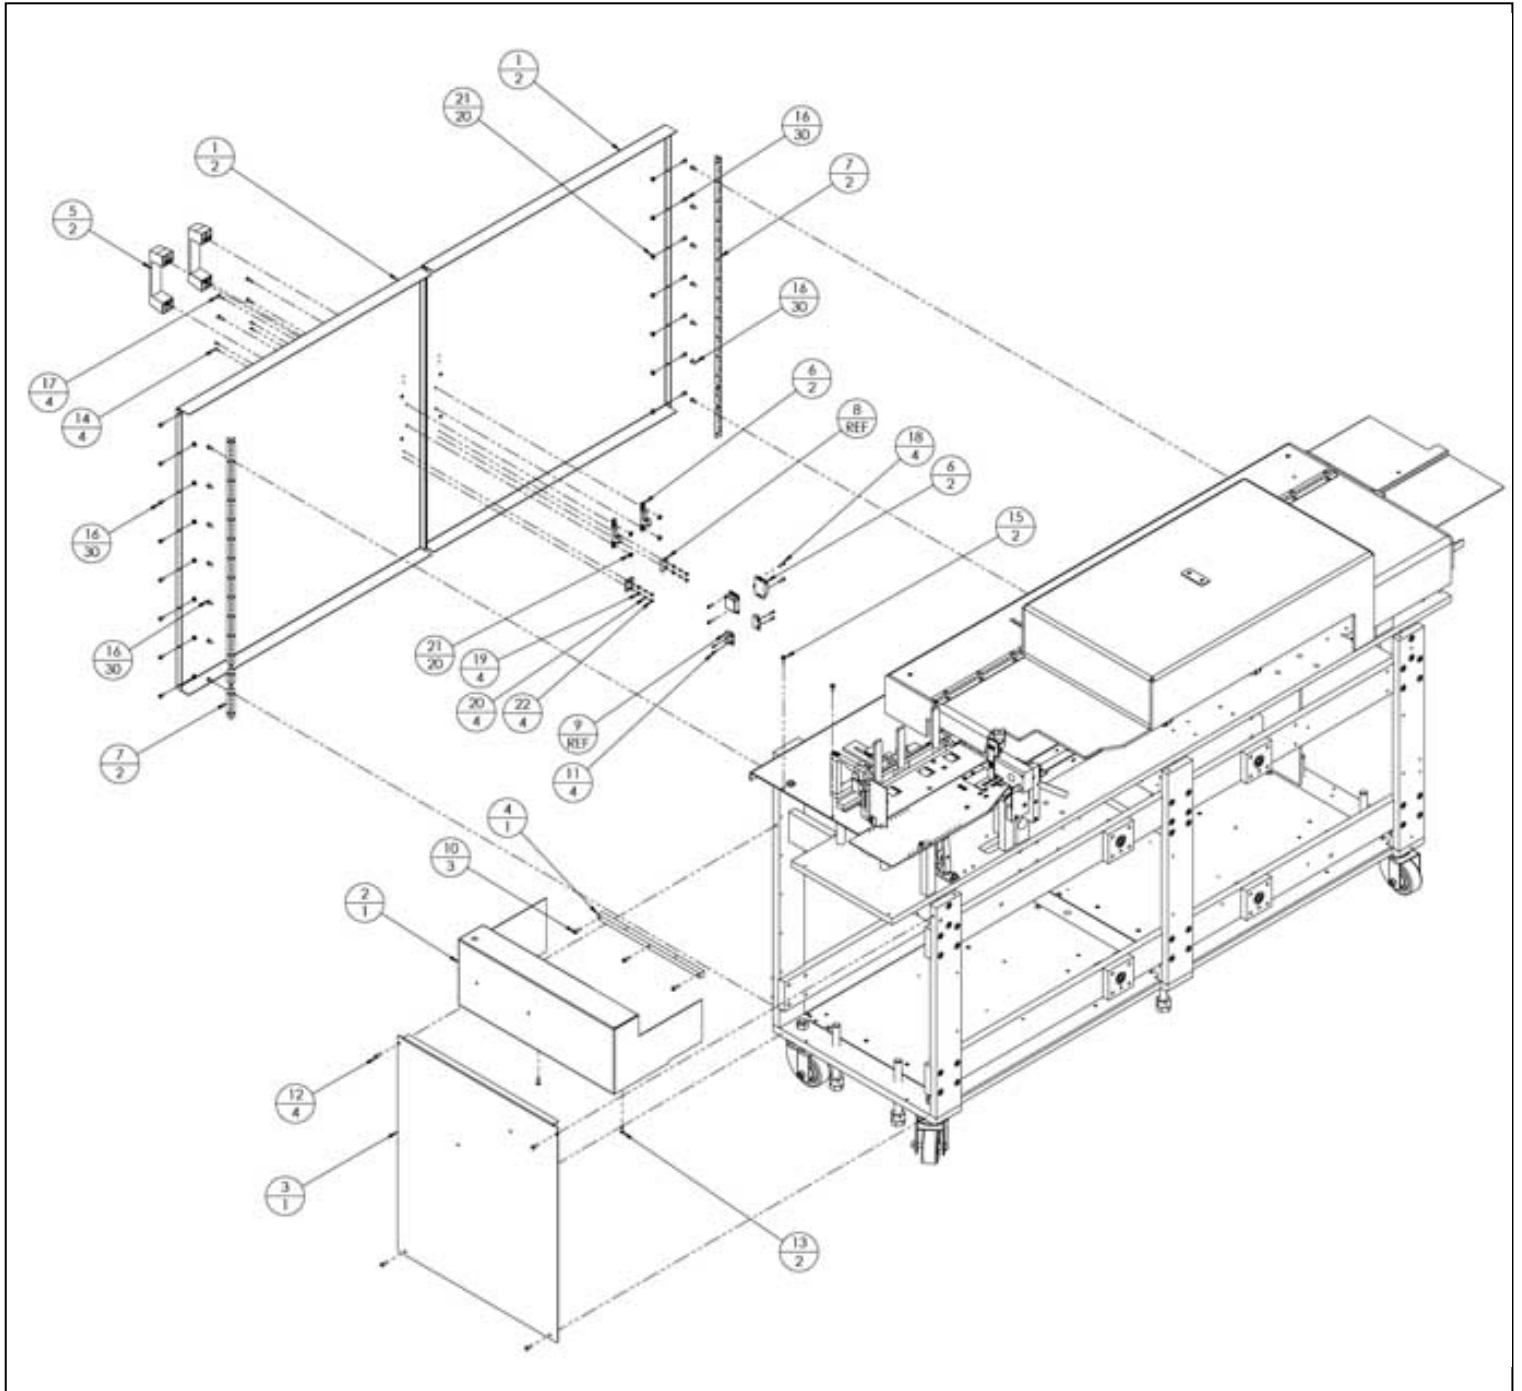

PITNEY BOWES


Sure-Feed Engineering

Assembly, Front Table / To Combo 18020-442 (continued)

ITEM #	PART #	DESCRIPTION	QTY
1	18013-245	COVER, FRONT TABLE - 10X13 W/ASSIST	1
2	18013-100	COVER, TOP LEFT	1
3	18013-049	COVER, MAIN	1
4	18013-082	COVER, 10"	2
5	18002-005	SUPPORT, MAIN COVER	1
6	18009-048	BRACKET, GAS SHOCK	1
7	18009-047	BRACKET, GAS SHOCK	1
8	99018-008	BRACKET, SENSOR MTG.	2
9	18009-074	BRACKET, SENSOR MTG	1
10	18012-027	STANDOFF, MAIN COVER	2
11	99014-005	BALL SOCKET END FITTING 10MM	2
12	99014-009	BALL STUD, 10MM	2
13	99014-007	GAS SPRING, 20LB (6.45 TO 9.60)	1
14	18013-079	HINGE, 26"	1
15	18011-087	PLATE, STUD	1
16	18017-006	LABEL, CAUTION (NOT SHOWN)	1
17	18017-009	LABEL, GATE ADJ. (NOT SHOWN)	1
18	98020-024	MAGNET, REED SW	REF
19	98000-036	REED SWITCH	REF
20	98009-002	SENSOR, SENDER, THRU BEAM	REF
21	98009-037	SENSOR, RECIEVER, THRU BEAM	REF
22	-	SHCS, #10-24 X 1/2	7
23	-	SHCS, #10-24 X 3/8	2
24	-	SHCS, #8-32 X 1/2	2
25	-	SHCS, #4-40 X 3/8	4
26	-	SHCS, #4-40 X 1/4	2
27	-	SBHCS, #10-24 X 1/2	2
28	-	SBHCS, #10-24 X 1/2	26
29	-	SBHCS, #10-24 X 3/8	2
30	-	PHMS, #6-32 X 1/4	2
31	-	PHMS, #4-40 X 3/8	4
32	-	HNUT, #10-24	16
33	-	HNUT, 5/16-24	2

PITNEY BOWES

Sure-Feed Engineering

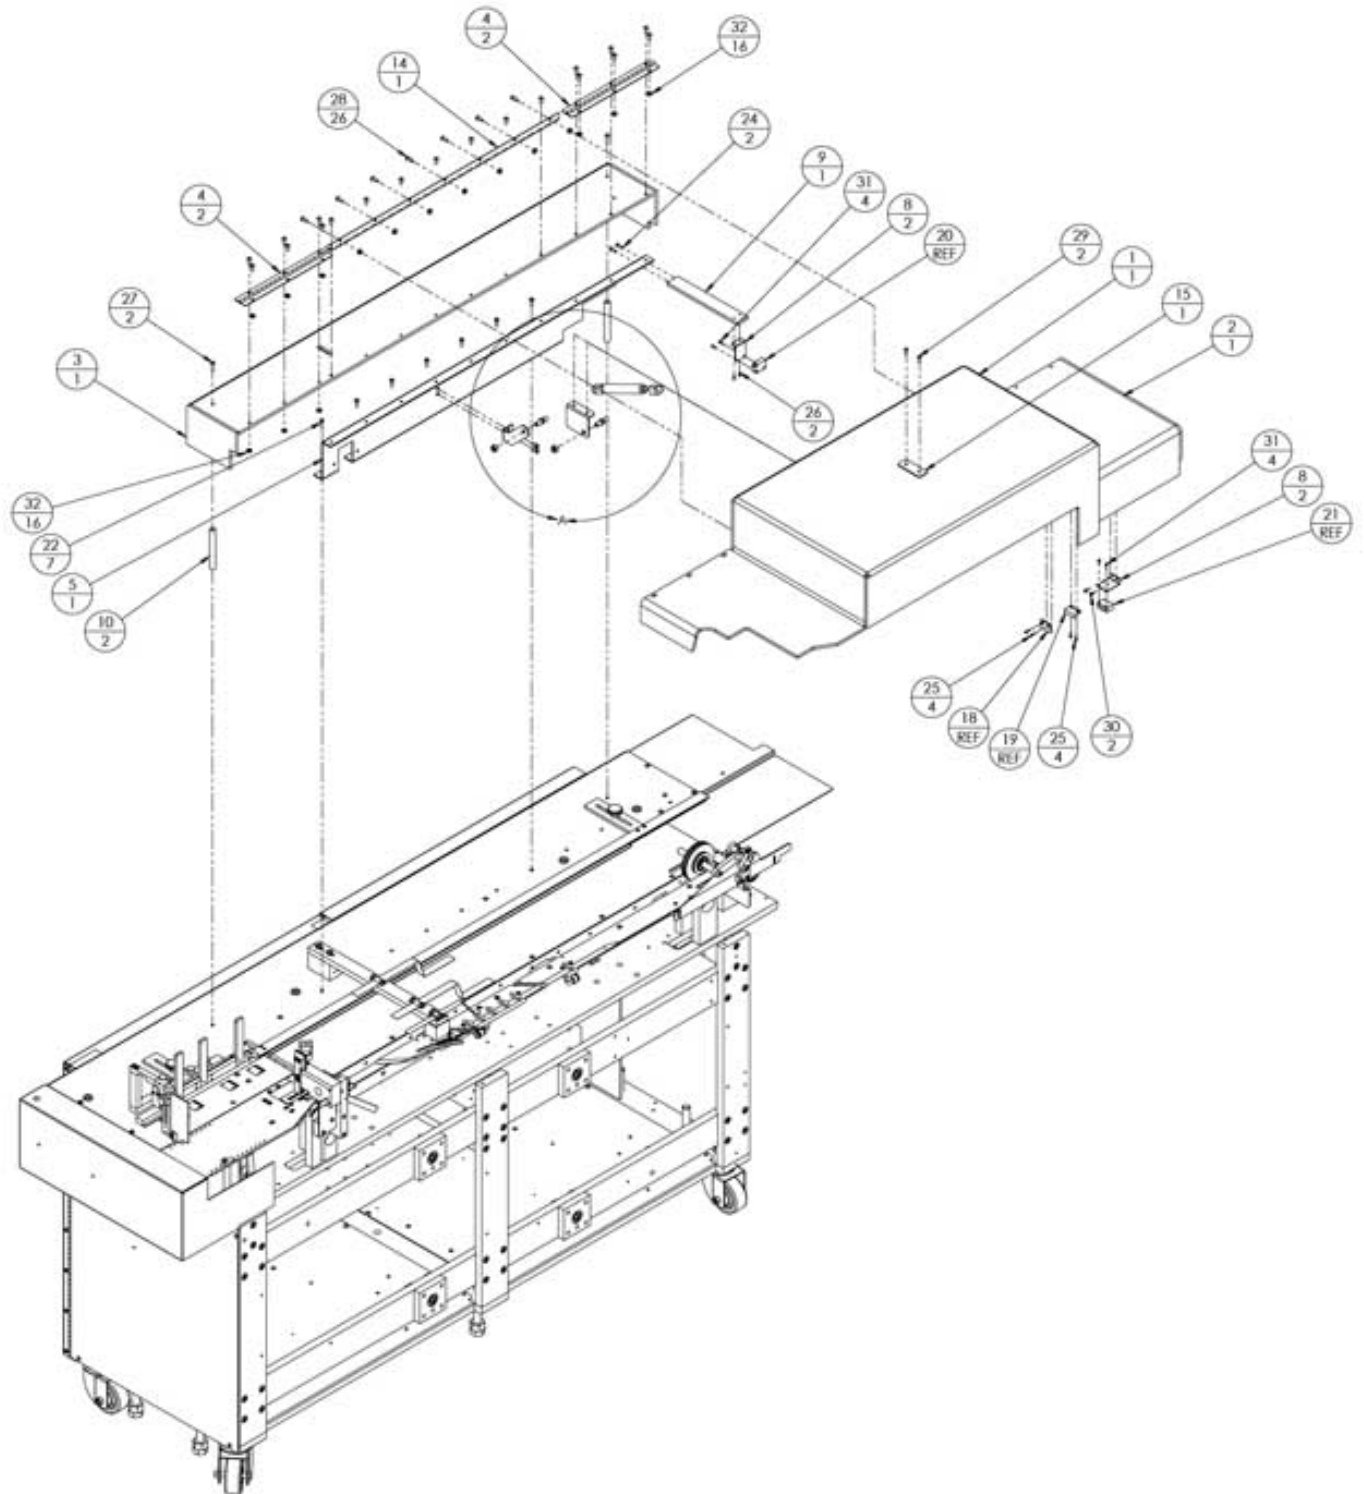


Assembly, Transition Covers, Front Table / To Combo 18020-443 (continued)

ITEM #	PART #	DESCRIPTION	QTY
1	18013-257	DESCRIPTION	1
2	18013-255	COVER, FLOOR TRANSITION	1
3	18013-258	COVER, REAR, FRONT TABLE	1
4	20013-063	COVER, FILLER PLATE, RH	1
5	20013-062	COVER, FILLER PLATE, LH	1
6	18013-256	COVER, LOWER SIDE, RH TRANSITION	1
7	20013-053	COVER, LOWER SIDE, LH TRANSITION	1
8	20009-019	COVER, INTERFACE LEXAN	1
9	20011-016	BRACKET, LEXAN TRANSITION COVER MTG.	1
10	99039-079	PLATE, PLUG MTG	4
11	18012-007	STANOFF, HEX, #10-32	2
12	18007-042	SPACER, FRONT TABLE	2
13	20007-016	BLOCK, SIDE COVER MTG	1
14	18013-104	BLOCK, COVER MTG.	1
15	99012-002	HINGE, CONTINUOUS, 9" LONG	1
16	-	HANDLE, POCKET PULL	8
17	-	SBHCS, #10-24 X 1/2	10
18	-	SBHCS, #10-32 X 1/2	3
19	-	SBHCS, #10-24 X 1/4	4
20	-	SBHCS, #8-32 X 1/2	5
21	-	SBHCS, #10-24 X 3/8	2
22	-	SHCS, #10-24 X 1/2	1
23	-	SHCS, 1/4-20 X 7/8	3

PITNEY BOWES

Sure-Feed Engineering

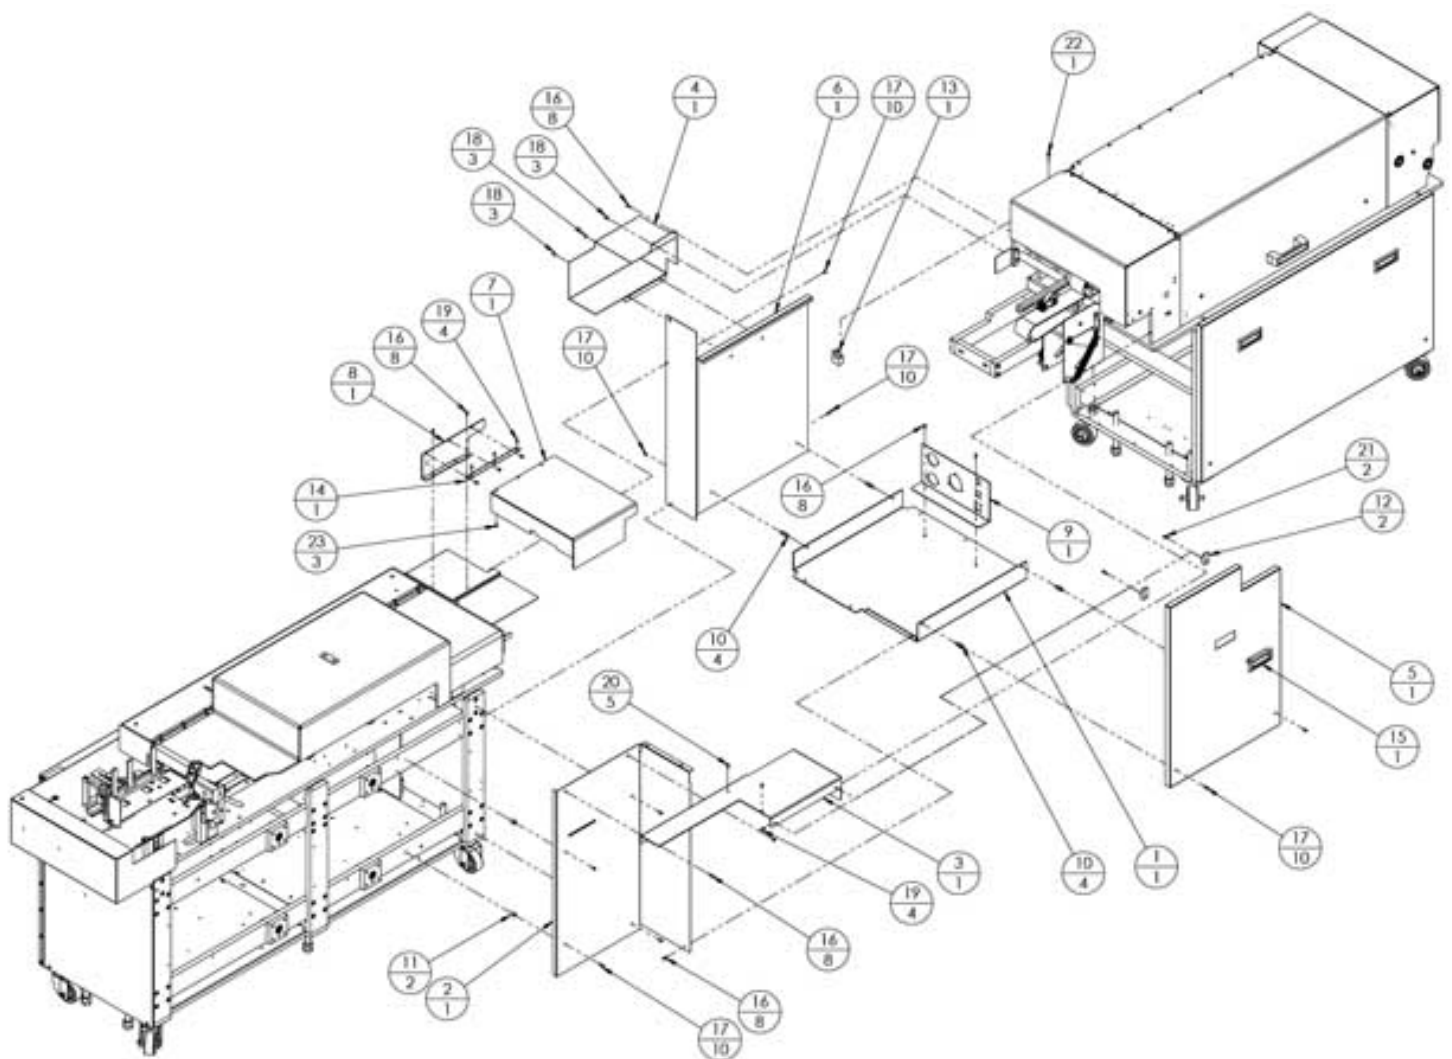


PITNEY BOWES
Sure-Feed Engineering

Assembly, Gripper Chain Tensioner 18020-463

ITEM #	PART #	DESCRIPTION	QTY
1	18007-171	BLOCK, TENSIONER MTG.	1
2	18009-130	BRACKET, TENSIONER SLIDER	1
3	18009-131	BRACKET, CYLINDER MTG.	1
4	18007-170	BLOCK, TENSIONER T-NUT	1
5	18004-119	SHAFT, SPROCKET MTG.	1
6	18015-004	SPROCKET, IDLER, 20T	1
7	99014-011	ROD CLEVIS, 1/4-28 X 1/4 PIN	1
8	99003-020	BEARING, 3/8 X 7/8, SEALED W/ S.R.	2
9	99014-031	AIR CYLINDER, SST, 3/4" B X 6.0" STROKE	1
10	99028-217	FITTING, MALE ELBOW, M6 X 1/8 NPT	1
11	99003-016	WASHER, NYLON, 3/8 X 1/32	2
12	99022-012	E-CLIP, RETAINING RING, 3/8	1
13	-	HEX NUT, 1/4-20	1
14	-	SHCS, 1/4-20 X 3/4	1
15	-	SHCS, 1/4-20 X 1/2	2

PITNEY BOWES

Sure-Feed Engineering

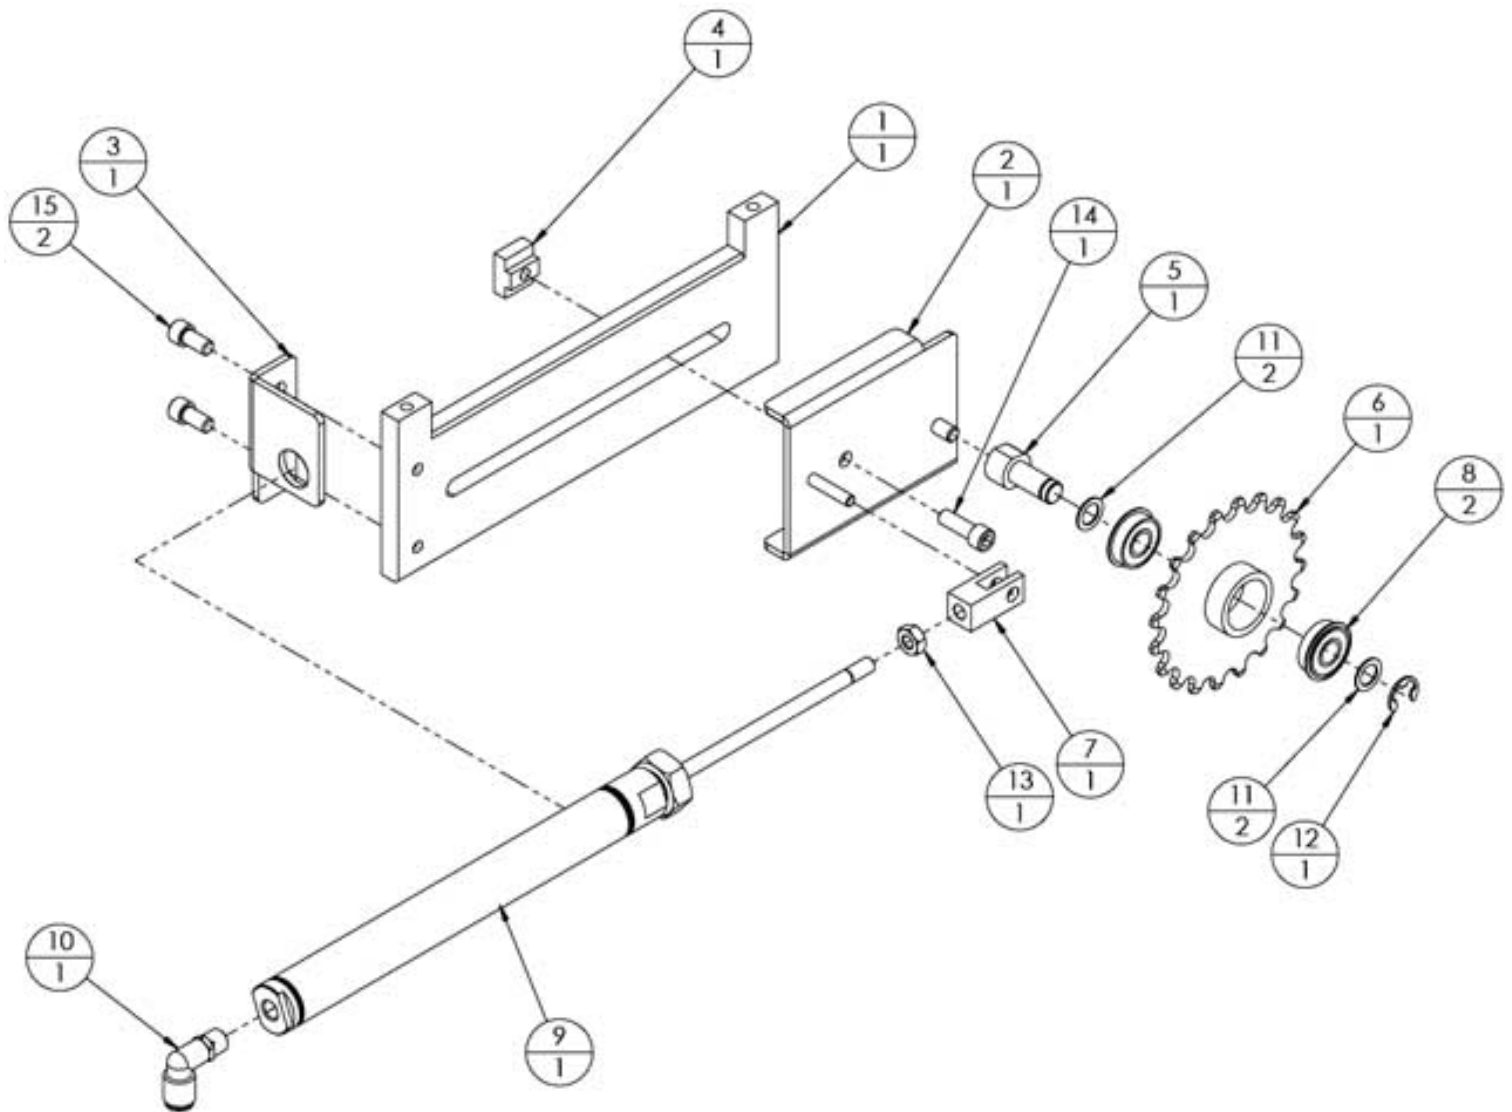


PITNEY BOWES

Sure-Feed Engineering

Assembly, Sensor, Gripper Chain Tensioner 18020-466

ITEM #	PART #	DESCRIPTION	QTY
1	18007-173	BLOCK, SENSOR MTG.	1
2	18009-132	BRACKET, SENSOR MTG.	1
3	98009-029	SENSOR, SENDER	1
4	98009-040	SENSOR, RECIEVER	1
5	-	SHCS, #8-32 X 3/8	2
6	-	SHCS, #4-40 X 1/2	2
7	-	HNUT, #4-40	2
8	-	FW, 1/8	2

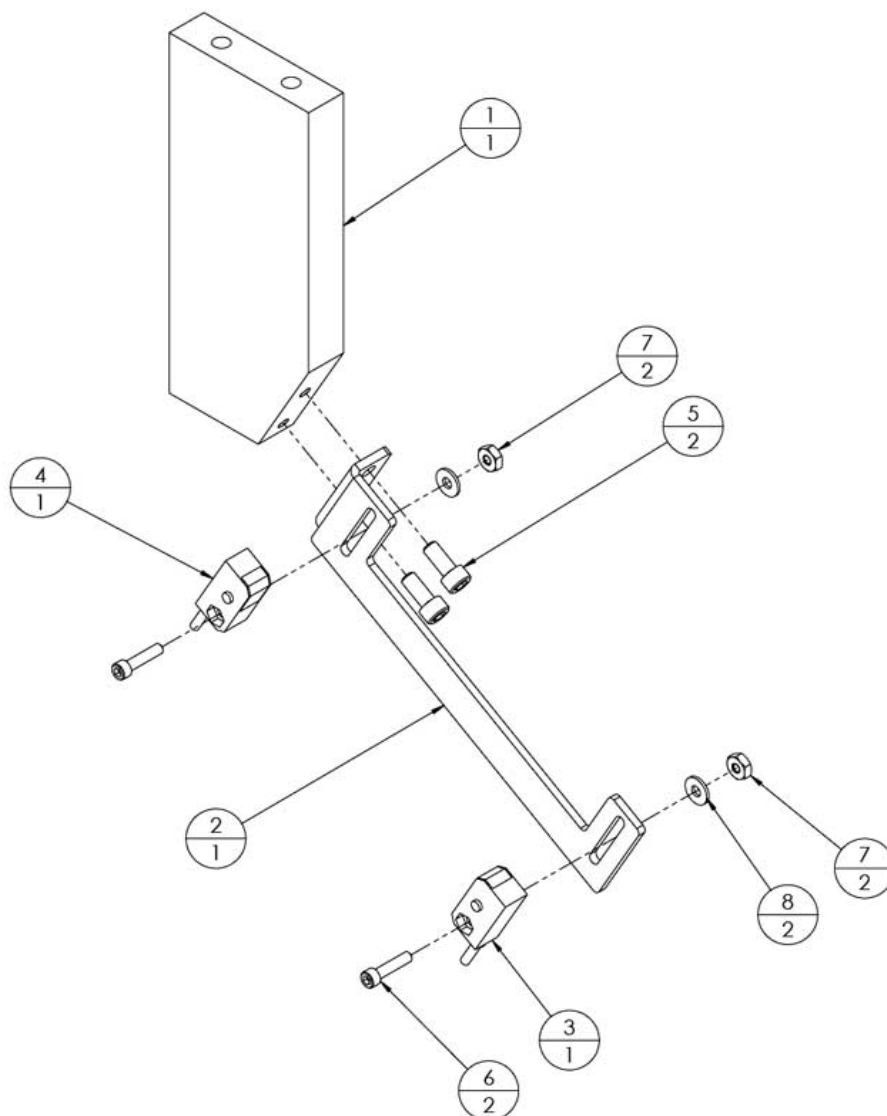


PITNEY BOWES

Sure-Feed Engineering

Assembly, Turnover Frame 20020-002

ITEM #	PART #	DESCRIPTION	QTY
9	-	NUT, HEX, 5/8-11	8
8	-	BOLT, SKT HEAD, 5/16-18 X 1	32
7	079-1781	BOLT, HEX, FULL THD, 5/8-11 X 6	4
6	99010-005	CASTOR, 1/2-13 STEM	4
5	20003-004	CROSS BRACE, LOWER	2
4	20010-002	LEG, INFEED	2
3	20010-001	LEG, DISCHARGE	2
2	20003-003	CROSSBAR, SIDE	2
1	20003-005	CROSS BAR, UPPER	2

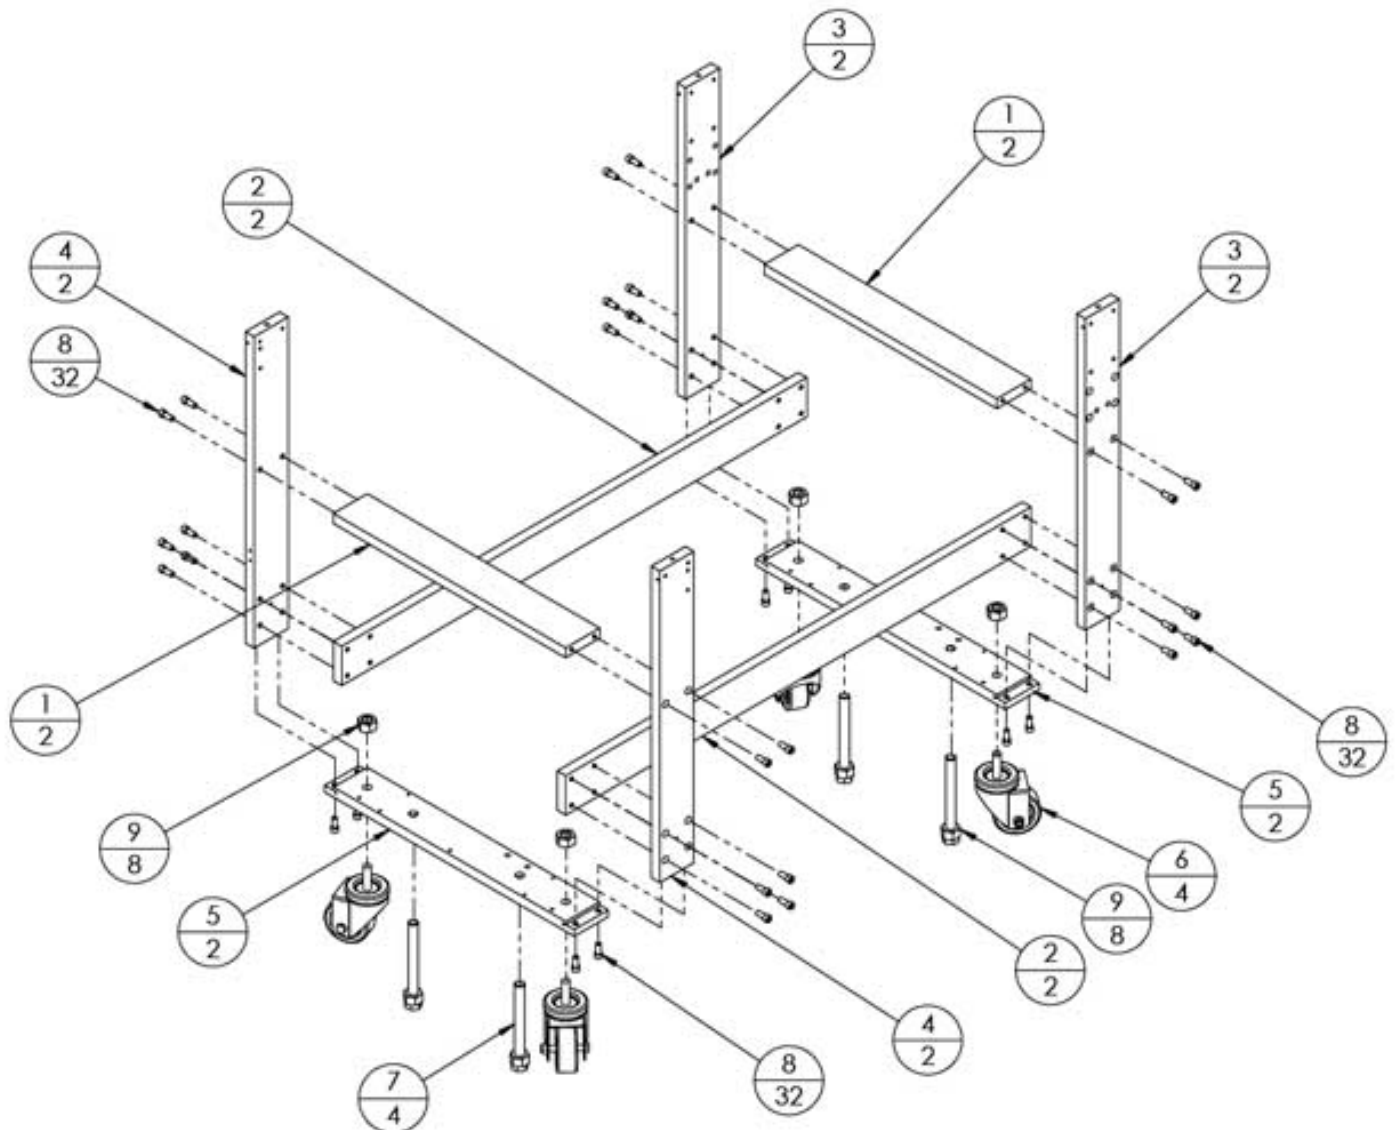


PITNEY BOWES

Sure-Feed Engineering

Assembly, DBL Exit Roller 20020-005

ITEM #	PART #	DESCRIPTION	QTY
1	20008-002	BAR, EXIT ROLLER	1
2	20004-005	SHAFT, EXIT ROLLER	2
3	20006-003	ROLLER, EXIT	2
4	99003-007	BEARING, 1/2 X 1-1/8 SEALED W/ S.R.	4
5	99003-037	BUSHING, SLEEVE, 1/2 X 5/8 X 1/2	1
6	99003-018	WASHER, NYLON, 1/2 X 1/16	6
7	99022-004	SNAP RING, 1/2	2
8	-	SET SCREW, 1/4-20 X 1	1

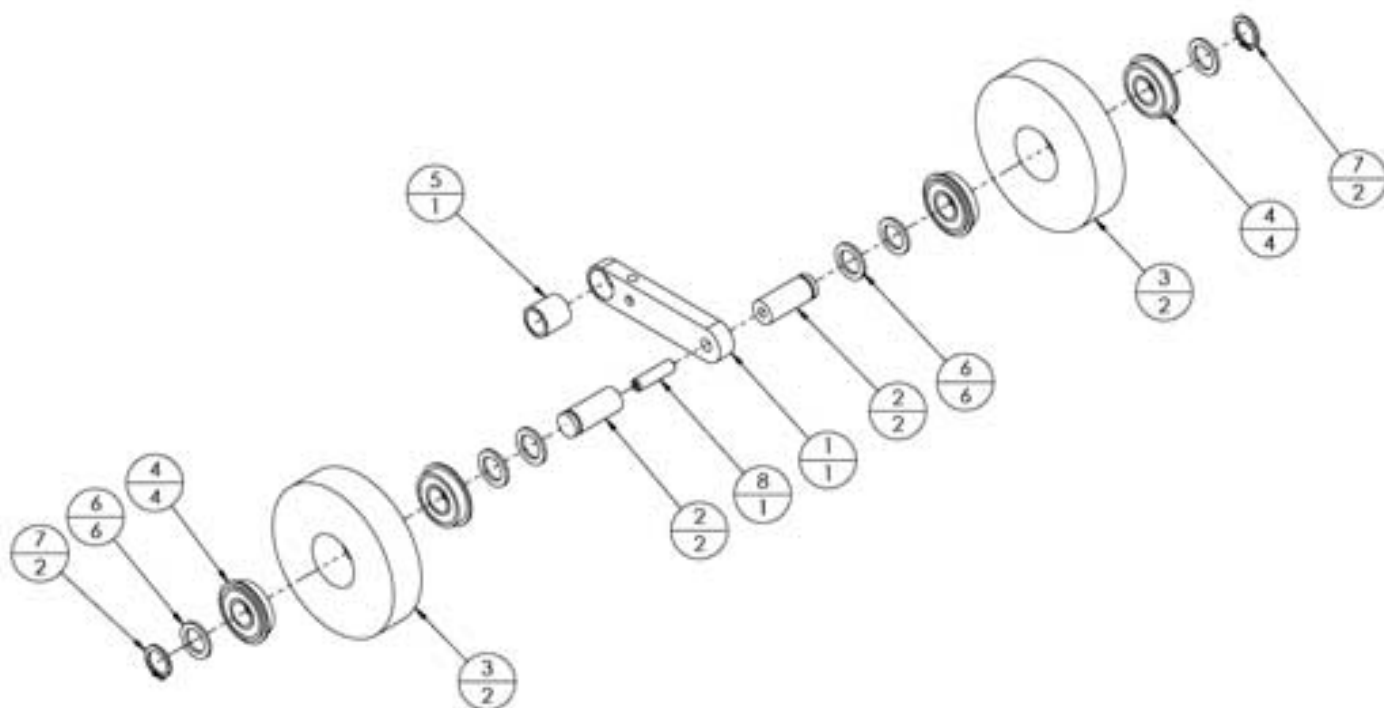


PITNEY BOWES

Sure-Feed Engineering

Assembly, Tensioner (w/ Flat Roller) 20020-006

ITEM #	PART #	DESCRIPTION	QTY
1	18004-022	SHAFT, ECCENTRIC IDLER, 1/2	1
2	18006-012	ROLLER, FLAT IDLER, 1.5 X 1-1/8	1
3	99003-007	BEARING, 1/2 X 1-1/8 SEALED W/ S.R.	2
4	99003-018	WASHER, NYLON, 1/2 X 1/16	2
5	99022-004	SNAP RING, 1/2	1

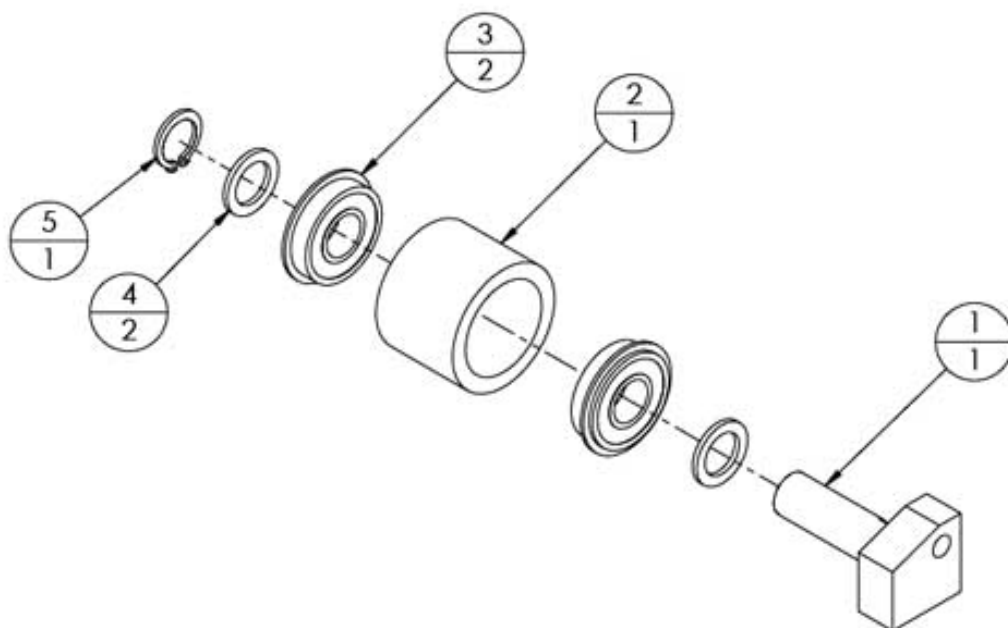


PITNEY BOWES

Sure-Feed Engineering

Assembly, Exit Roller (Single) 20020-010

ITEM #	PART #	DESCRIPTION	QTY
1	20008-002	BAR, EXIT ROLLER	1
2	20004-005	SHAFT, EXIT ROLLER	1
3	20006-003	ROLLE, EXIT	1
4	99003-007	BEARING, 1/2 X 1-1/8 SEALED W/ S.R.	2
5	99003-037	BUSHING, SLEEVE, 1/2 X 5/8 X 1/2	1
6	99003-018	WASHER, NYLON, 1/2 X 1/16	3
7	99022-004	SNAP RING, 1/2	1
8	-	SHCS, 1/4-20 X 5/8	1

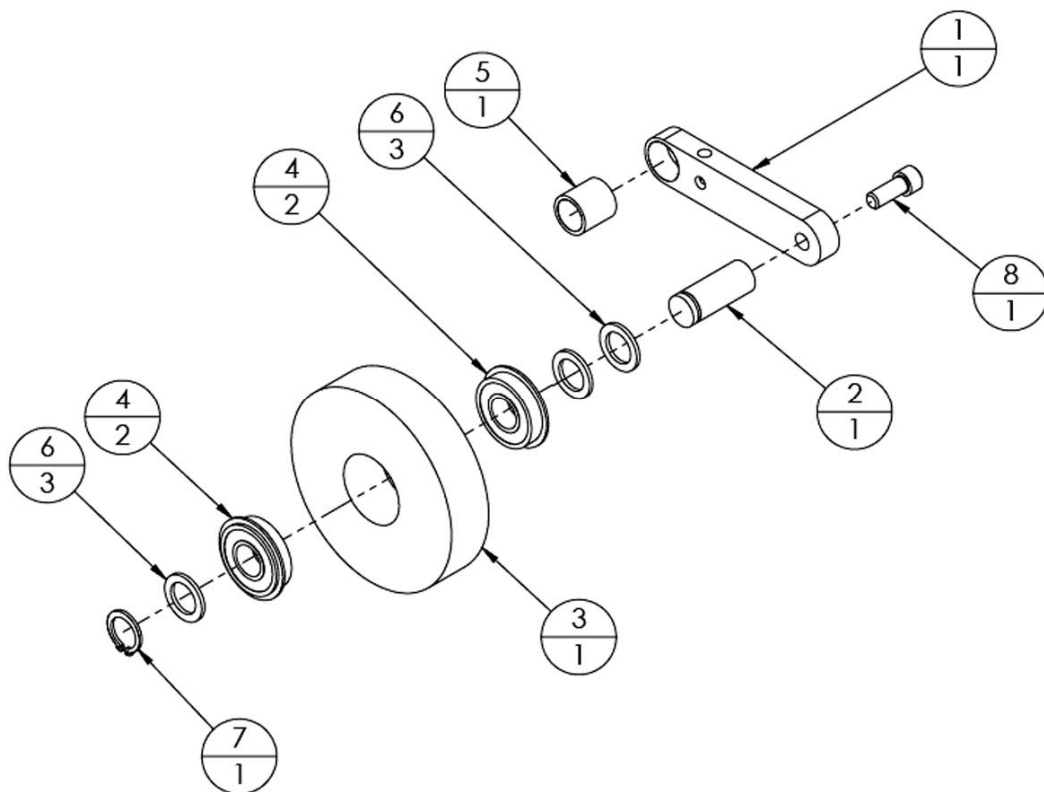


PITNEY BOWES

Sure-Feed Engineering

Assembly, Input Nip Roller 20020-030

ITEM #	PART #	DESCRIPTION	QTY
1	20012-010	STANDOFF, NIP ROLLER	2
2	20008-018	BAR, NIP ROLLER SUPPORT	1
3	FL84067	ASSY, DRIVE ROLLER	1
4	-	FLAT WASHER, #10	1
5	-	SHCS, #10-24 X 1	1
6	-	SHCS, 5/16-18 X 3/4	2

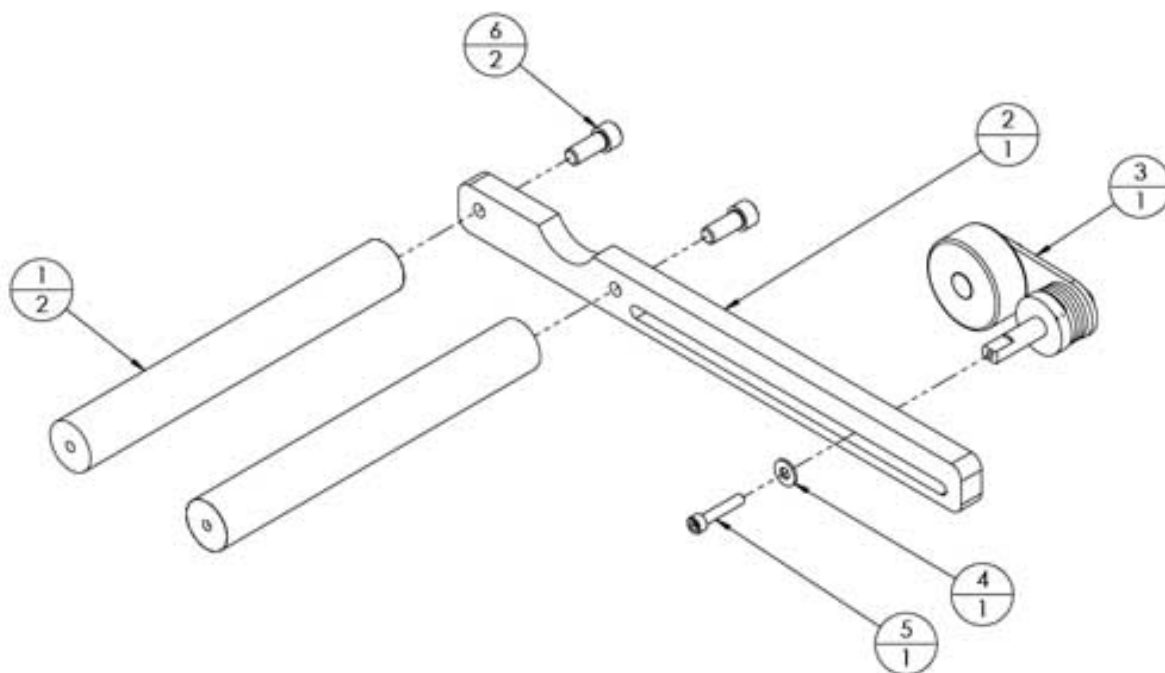


PITNEY BOWES

Sure-Feed Engineering

Assembly, Infeed Idler Roller Lower 20020-031

ITEM #	PART #	DESCRIPTION	QTY
1	20006-001	ROLLER, CROWNED IDLER	1
2	20004-009	SHAFT, IDLER, LONG	1
3	99003-006	BEARING, 5/8 X 1-3/8 SEALED W/ S.R.	2
4	99017-005	COLLAR, 5/8 SHAFT	2
5	99003-021	WASHER, NYLON, 5/8 X 1/16	2

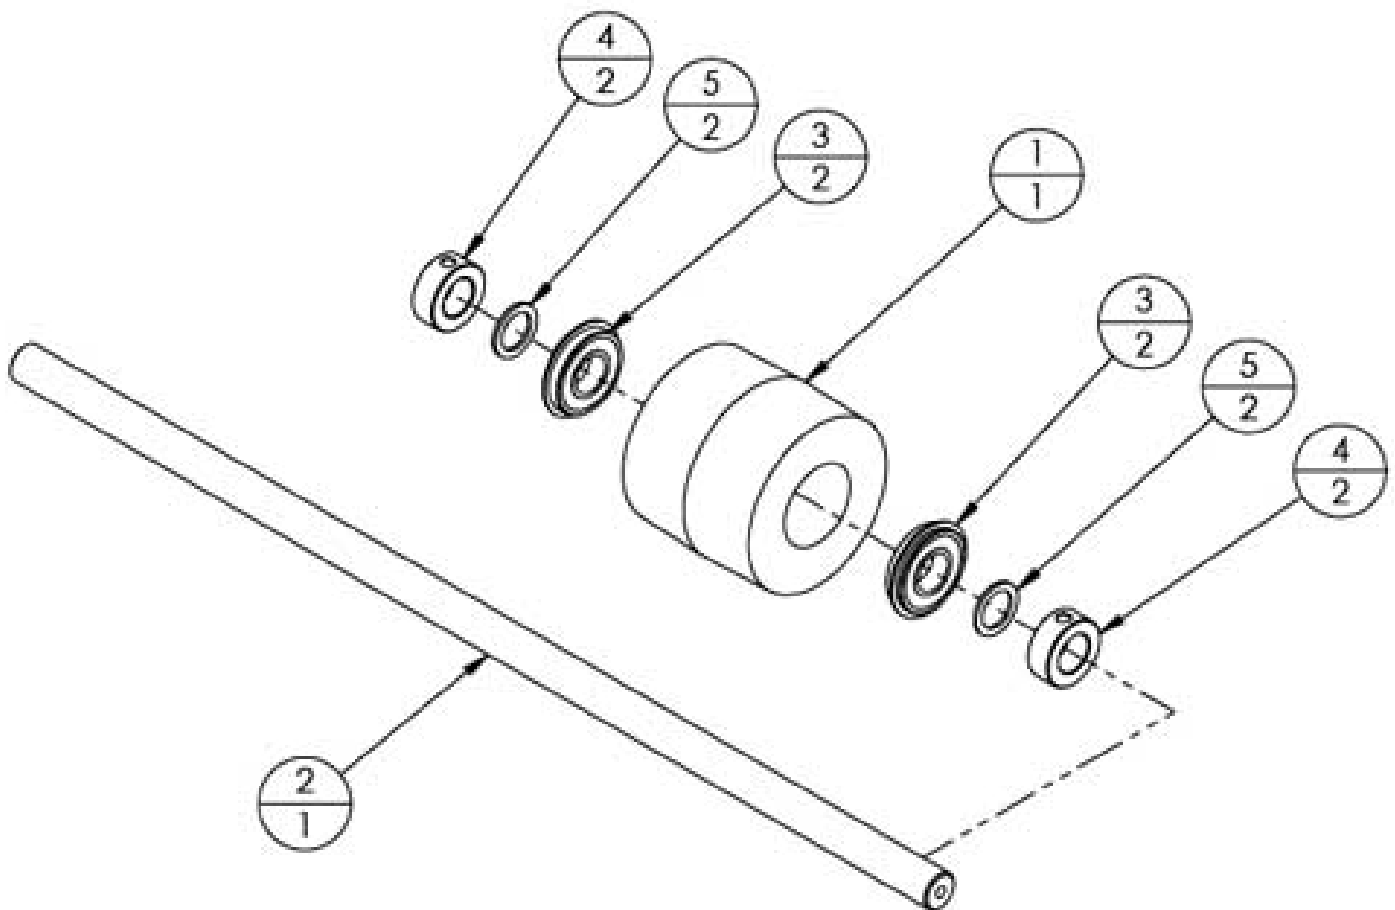


PITNEY BOWES

Sure-Feed Engineering

Assembly, Exit Roller Shaft 20020-032

ITEM #	PART #	DESCRIPTION	QTY
1	20020-005	ASSY, DBL EXIT ROLLER	1
2	20020-010	ASSY, EXIT ROLLER (SINGLE)	1
3	20004-011	SHAFT, NIP PIVOT	1
4	99017-004	COLLAR, 1/2 SHAFT	4

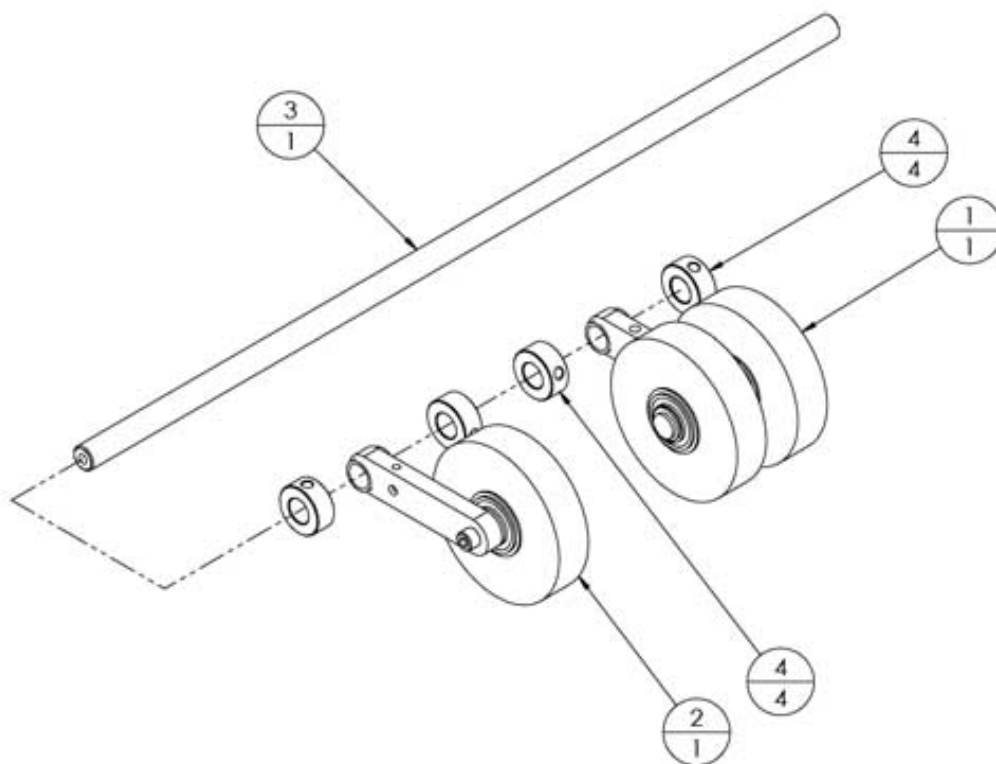


PITNEY BOWES

Sure-Feed Engineering

Assembly, Turnover Motor AC 10X13 20020-037

ITEM #	PART #	DESCRIPTION	QTY
1	20011-001	PLATE, MOTOR MTG.	1
2	20021-012	ASSY, AC MOTOR W/ CABLE	1
3	99002-035	PULLEY, TIMING, 22L075, 1008 TAPERLOCK	1
4	99017-019	BUSHING, TAPERLOCK, 1008, 5/8B	1
5	99003-007	BEARING, 1/2 X 1-1/8 SEALED W/ S.R.	1
6	-	SHCS, 3/8-16 X 1	4

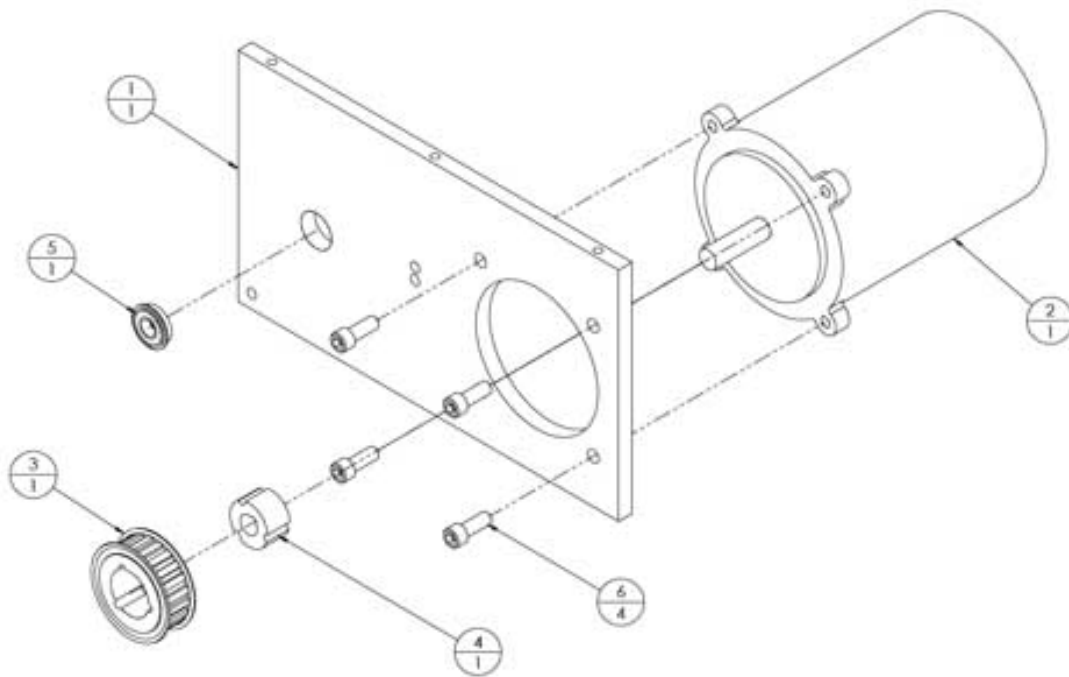


PITNEY BOWES

Sure-Feed Engineering

Assembly, Belt Drive Turnover (LS & RS Flex)20020-038

ITEM #	PART #	DESCRIPTION	QTY
12	20000-006	SIDEFRAME, DISCHARGE, LH (10X13)	REF
11	20000-003	SIDEFRAME, DISCHARGE, LH (6X9)	REF
10	98009-028	SENSOR, PROXIMITY, MINI SURFACE MTG.	REF
9	-	SBHCS, #6-32 X 3/8	2
8	-	SHCS, 5/16-18 X 1	2
7	99034-007	KEY, WOODRUF, 1/8 X 3/4	2
6	20011-014	PLATE, SENSOR FLAG	1
5	20019-001	COLLAR, TIMING FLAG	1
4	99000-034	BELT, TIMING, D240L075	1
3	99017-019	BUSHING, TAPERLOCK, 1008, 5/8B	2
2	99002-035	PULLEY, TIMING, 22L075, 1008 TAPERLOCK	2
1	20020-007	ASSY, TENSIONER (W/ PULLEY)	2

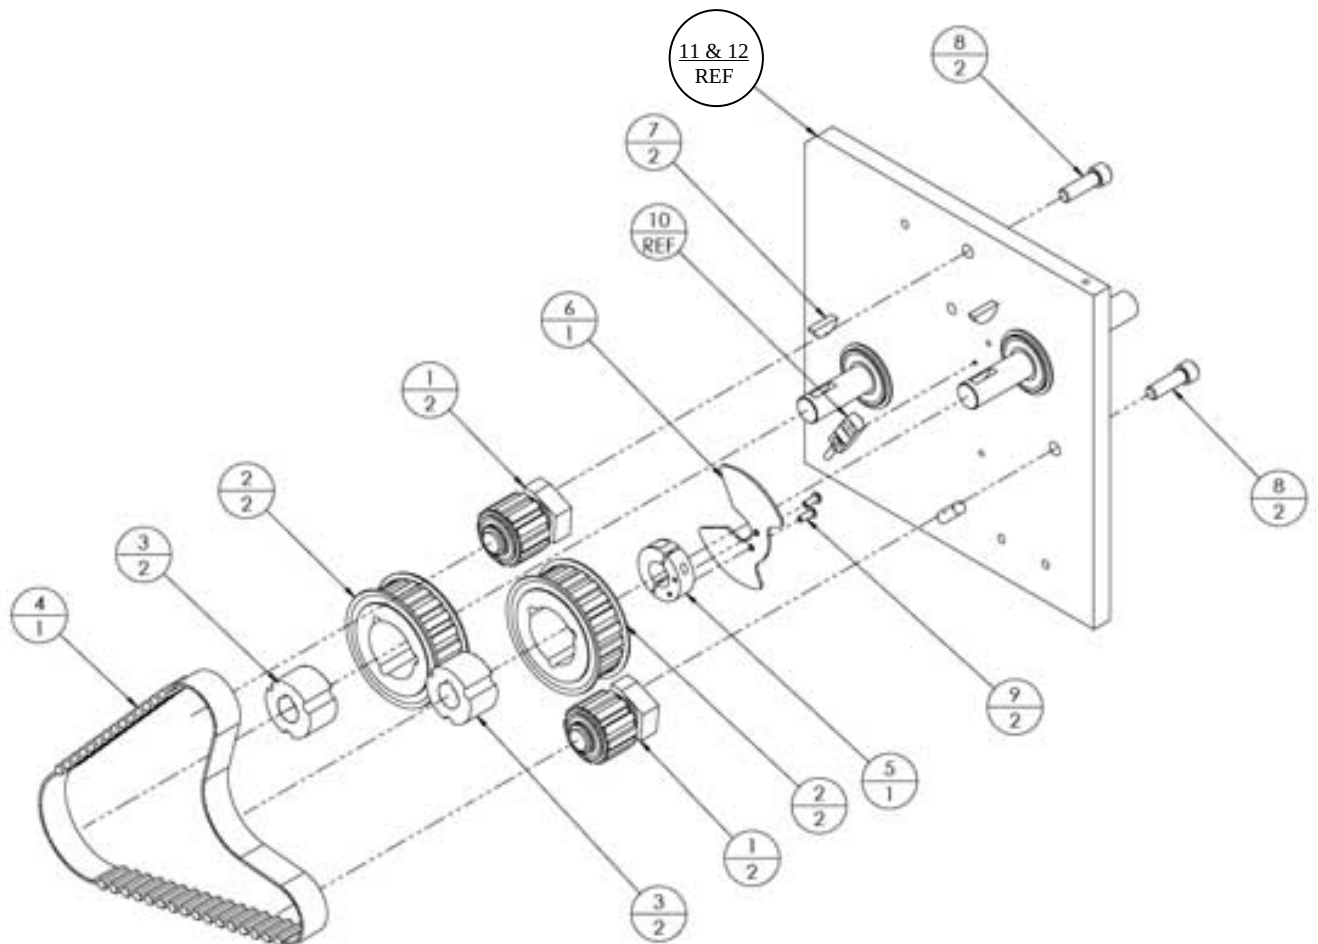


PITNEY BOWES

Sure-Feed Engineering

Assembly, Turnover Motor Drive AC (6X9) 20020-040

ITEM #	PART #	DESCRIPTION	QTY
1	20020-037	ASSY, MOTOR, AC	1
2	20020-045	ASSY, INTERMEDIATE DRIVE SHAFT	1
3	20020-006	ASSY, TENSIONER (W/ ROLLER)	1
4	20011-002	PLATE, INTERMEDIATE SHAFT	1
5	20012-004	STANDOFF, MOTOR SUPPORT	1
6	99003-007	BEARING, 1/2 X 1-1/8 SEALED W/ S.R.	1
7	99000-028	BELT, TIMING, 255L075	1
8	99000-157	BELT, TIMING, 285L075	1
9	-	SHCS, 5/18-16 X 5/8	2
10	-	SHCS, 5/16-18 X 1	3
11	-	SHCS, 5/16-18 X 3/4	3
12	20001-002	PLATE, TURNOVER DECK	REF

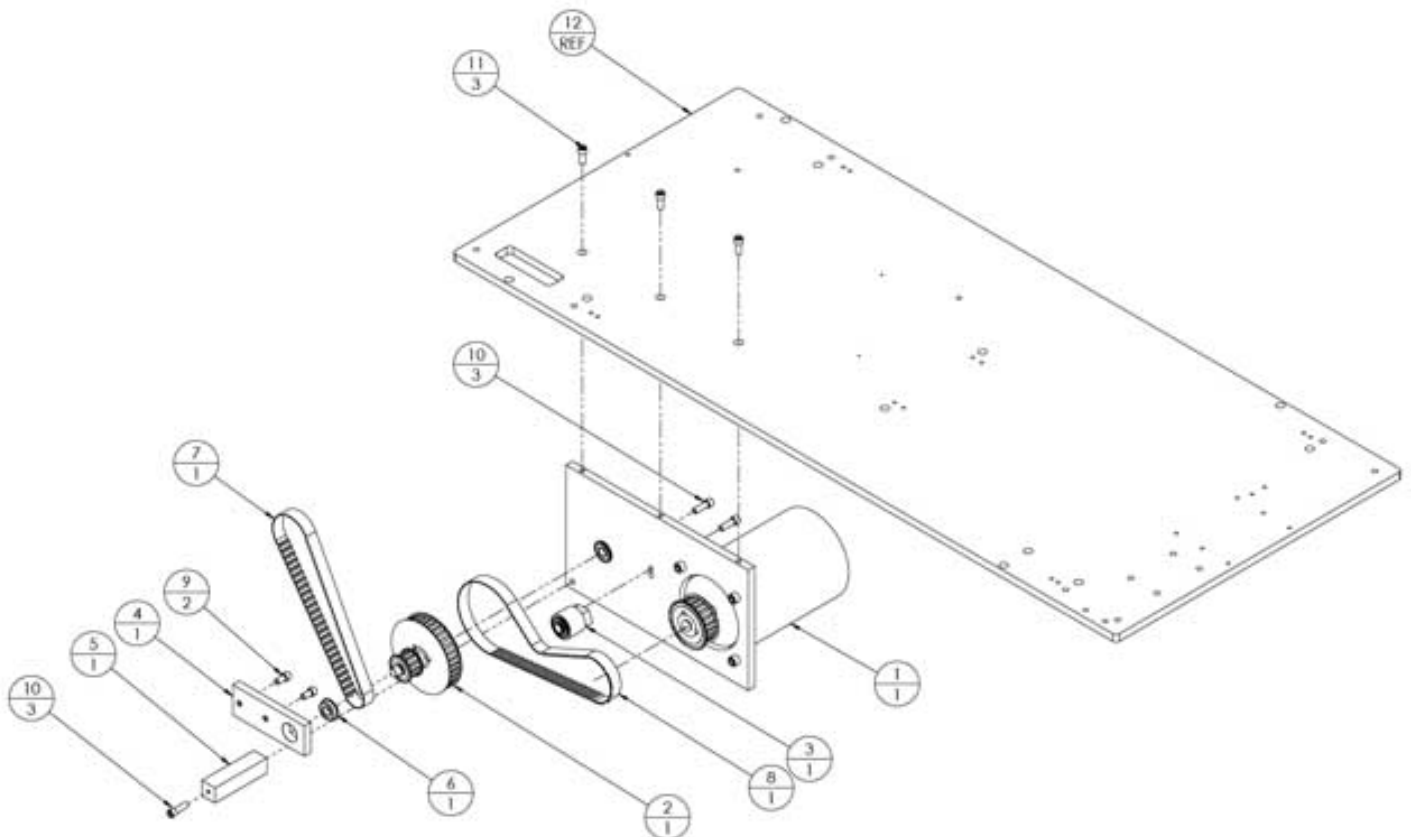


PITNEY BOWES

Sure-Feed Engineering

Assembly, Intermediate Drive Shaft LS & RS FLEX 20020-045

ITEM #	PART #	DESCRIPTION	QTY
1	20004-008	SHAFT, INTERMEDIATE	1
2	99002-065	PULLEY, TIMING, 36L075 (1610 TAPERLOCK)	1
3	99002-059	PULLEY, TIMING, 12L075, 1/2B W/ KW	1
4	99017-026	BUSHING, TAPERLOCK, 1610, 1/2B	1
5	99003-018	WASHER, NYLON, 1/2 X 1/16	3
6	99017-004	COLLAR, 1/2 SHAFT	1
7	99034-001	KEY, WOODRUF, 1/8 X 3/4	2
8	-	SET SCREW, #10-24 X 1/4	2

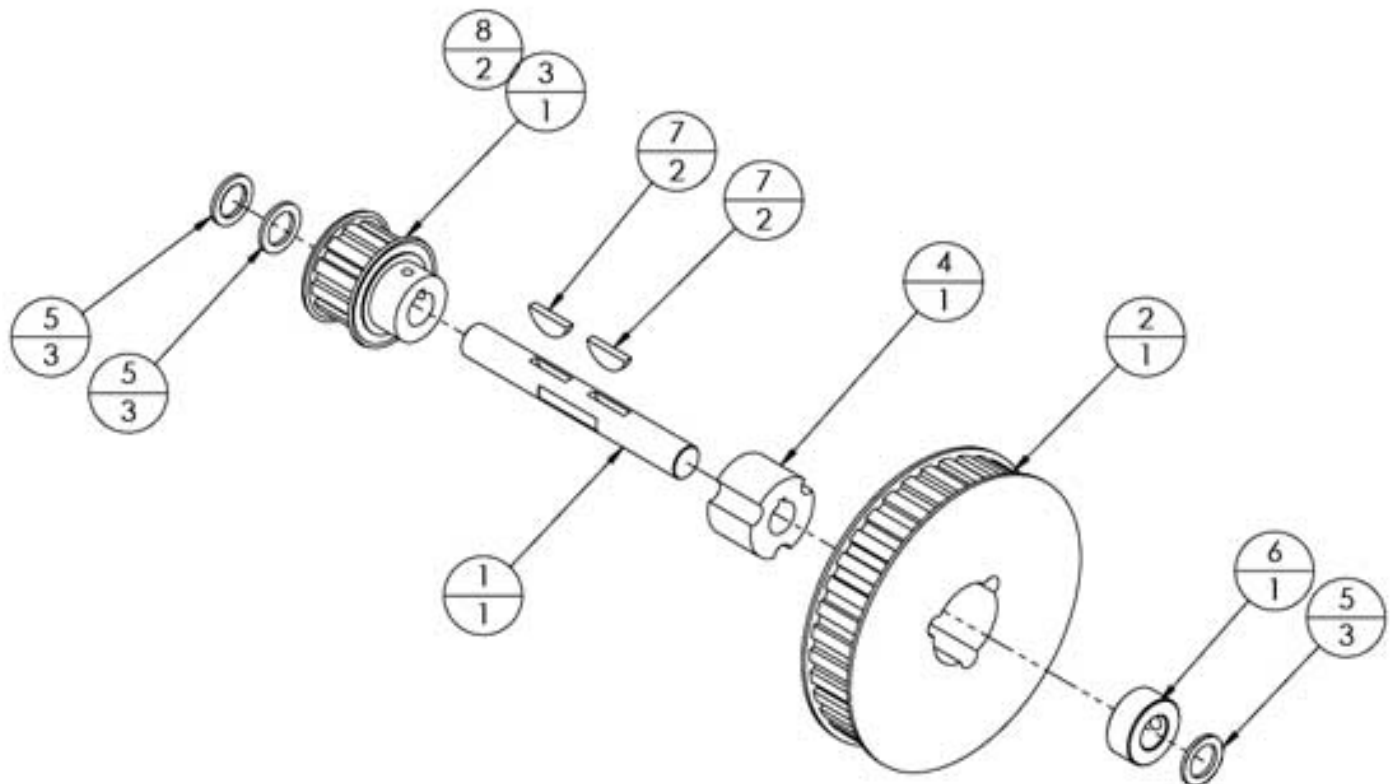


PITNEY BOWES
Sure-Feed Engineering

Assembly, Belt Transport10X13 20020-047

ITEM #	PART #	DESCRIPTION	QTY
1	20020-048	ASSY, INFEED	1
2	20020-049	ASSEMBLY, DISCHARGE	1
3	20020-050	ASSY, BELT TRANSFER	1
4	20001-002	PLATE, TURNOVER DECK	1
5	18012-013	STANDOFF, SKIF PLATE	2
6	20011-003	PLATE, SKID	1
7	20008-019	BAR, FT/ TO MTG.	1
8	20011-013	PLATE, TRANSITION MTG	2
9	20011-012	PLATE, MTG	1
10	20005-001	GUIDE, ENVELOPE TWIST	1
11	99000-039	BELT, TURNOVER, 2.5" W X 111.60" L	1
12	20014-001	BELT, TURNOVER LOWER TWIST NO TWIST	1
13	-	SBHCS, 1/4-20 X 1/2	6
14	-	SCREW, FLAT HD, #10-24 X 1/2	2
15	-	NUT, HEX, 5/16-18	4

PITNEY BOWES

Sure-Feed Engineering

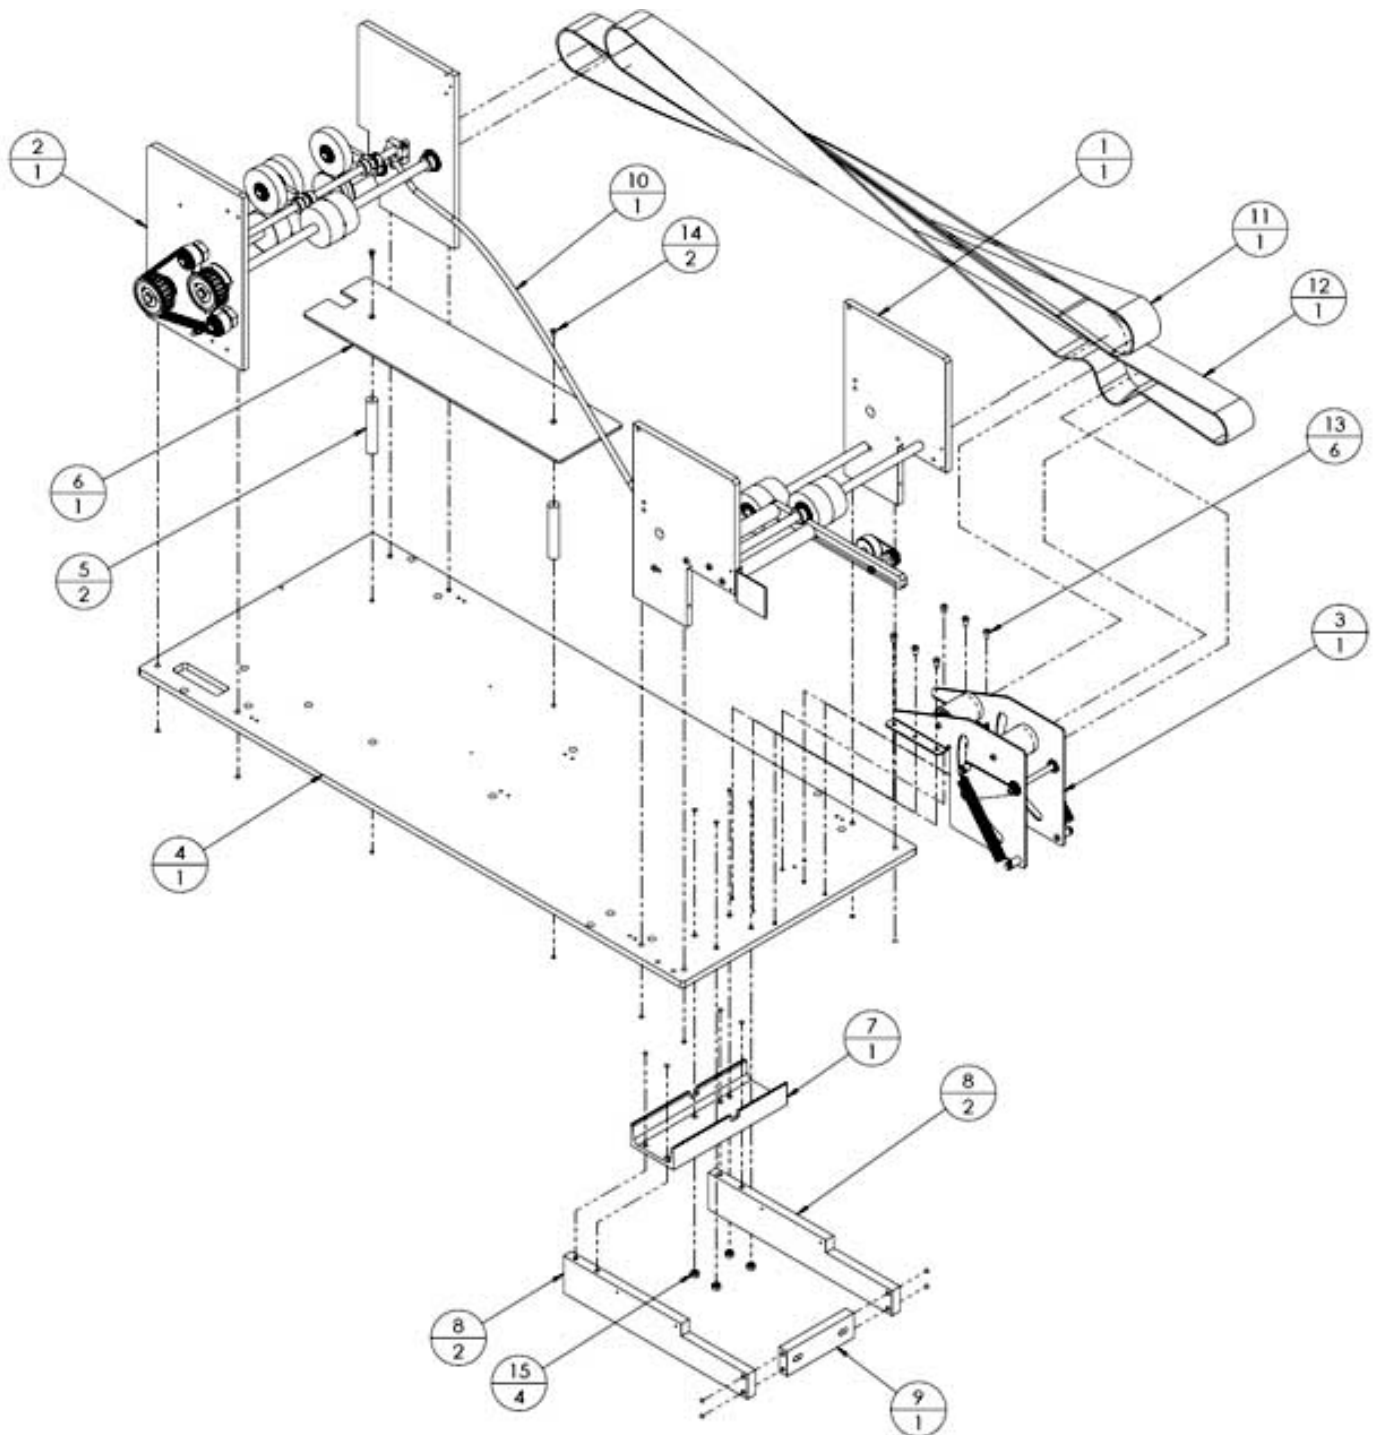


PITNEY BOWES

Sure-Feed Engineering

Assembly, Turnover Infeed 10X13 20020-048

ITEM #	PART #	DESCRIPTION	QTY
1	20000-004	SIDEFRAME, INFEED	2
2	20020-031	ASSY, INFEED IDLER ROLLER, LOWER	2
3	20020-030	ASSY, INPUT NIP ROLLER	1
4	20013-065	COVER, SIDE ADJ	1
5	20009-002	BRACKET, TURNOVER GUIDE MTG.	1
6	20009-004	BRACKET, TURNOVER GUIDE MTG.	1
7	-	SHCS, 1/4-20 X 1	1
8	-	SBHCS, 1/4-20 X 1	6
9	-	SBHCS, #10-24 X 3/8	1
10	-	SBHCS, #10-24 X 1/4	1
11	-	SCREW, SET, #10-24 X 1/4	2

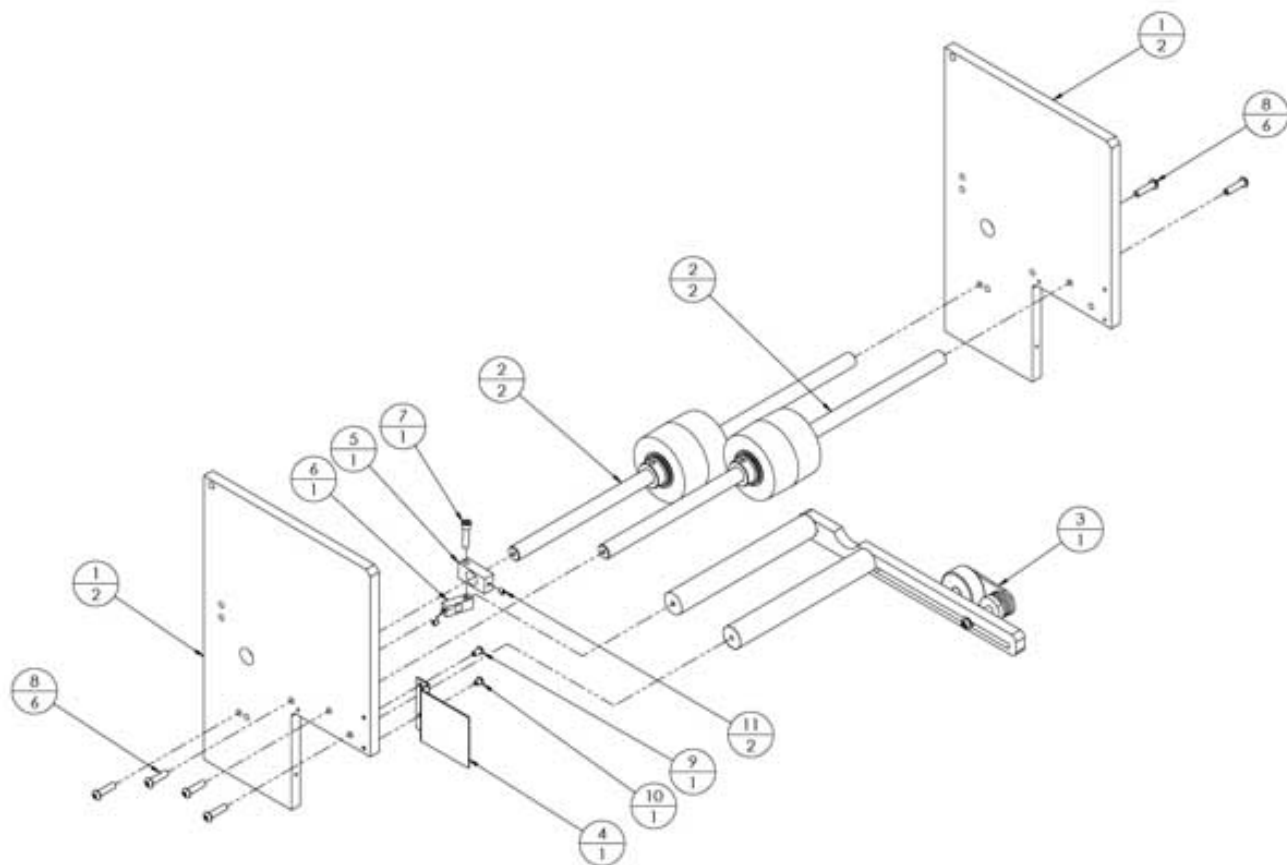


PITNEY BOWES

Sure-Feed Engineering

Assembly, Turnover Discharge 10X13 20020-049

ITEM #	PART #	DESCRIPTION	QTY
1	20020-038	ASSEMBLY, BELT DRIVE	1
2	20020-032	ASSY, EXIT ROLLER	1
3	20000-005	SIDEFRAME, RH DISCHARGE	1
4	20000-006	SIDEPLATE, DISCHARGE, LH	1
5	20004-012	SHAFT, SECONDARY	2
6	20006-002	PULLEY, CROWNED DRIVE	2
7	12006-001	PULLEY, CROWNED, 3" DIAM X 1" W	1
8	99002-035	PULLEY, TIMING, 22L075, 1008 TAPERLOCK	1
9	99017-019	BUSHING, TAPERLOCK, 1008, 5/8B	1
10	20009-004	BRACKET, TURNOVER GUIDE MTG.	1
11	20009-003	BRACKET, TURNOVER GUIDE MTG.	1
12	20004-024	STUD, TENSIONER	1
13	10014-001	BELT, 3" SEPARATOR	1
14	99003-006	BEARING, 5/8 X 1-3/8 SEALED W/ S.R.	8
15	99003-062	BEARING, SEALED, 10X26X8 MM	3
16	99017-005	COLLAR, 5/8 SHAFT	3
17	99003-021	WASHER, NYLON, 5/8 X 1/16	4
18	99034-007	KEY, WOODRUF, 1/8 X 3/4	1
19	-	SHCS, 1/4-20 X 3/4	1
20	-	SBHCS, 1/4-20 X 1/2	1
21	-	WASHER, FLAT, 1/4	2
22	-	SET SCREW, FLAT, #10-24 X 1/4	2

Sure-Feed Engineering

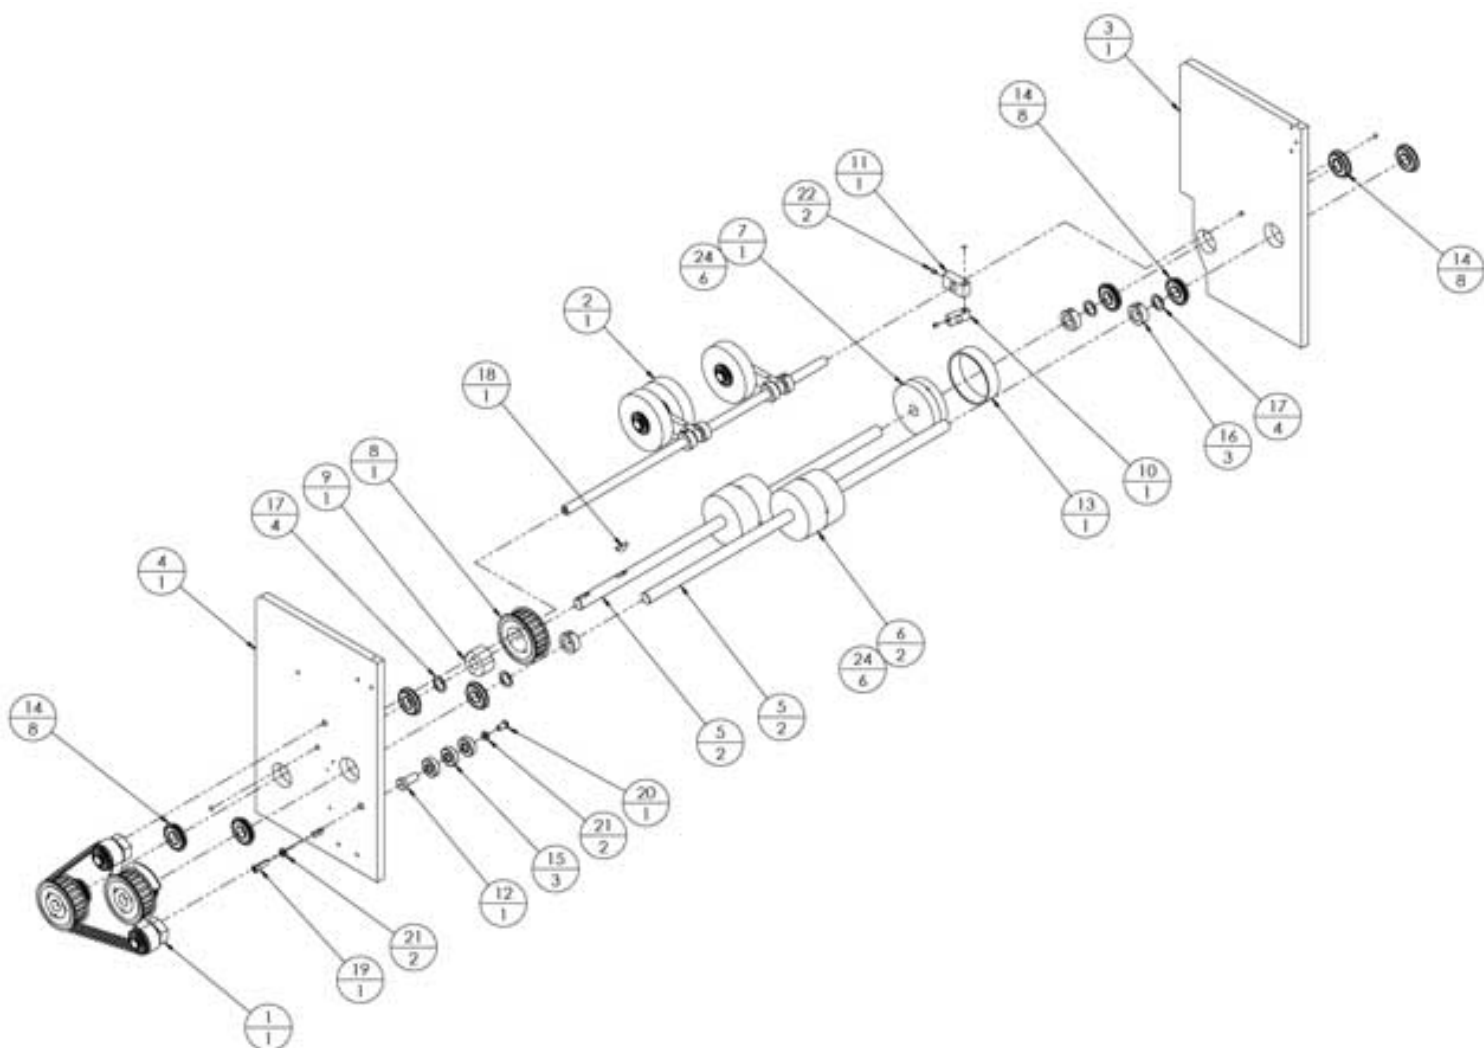


PITNEY BOWES

Sure-Feed Engineering

Assembly, Belt Transfer 10X13 20020-050

ITEM #	PART #	DESCRIPTION	QTY
1	20020-065	ASSY, FLAT IDLER ROLLER	2
2	20020-066	ASSY, CROWNED IDLER ROLLER	1
3	20009-009	BRACKET, LH TRANSFER FRAME	1
4	20009-010	BRACKET, RH TRANSFER FRAME	1
5	20009-007	BRKT, ARM TENSIONER	2
6	20004-018	SHAFT, TENSIONER PIVOT	1
7	99003-020	BEARING, 3/8 X 7/8, SEALED W/ S.R.	2
8	20004-023	PIN, SPRING-SHORT	2
9	20004-022	PIN, SPRING-LONG	2
10	99022-012	E-CLIP, 3/8 SHAFT	2
11	99005-036	SPRING, EXTENSION	2
12	-	BHCS, 1/4-20 X 5/8	12

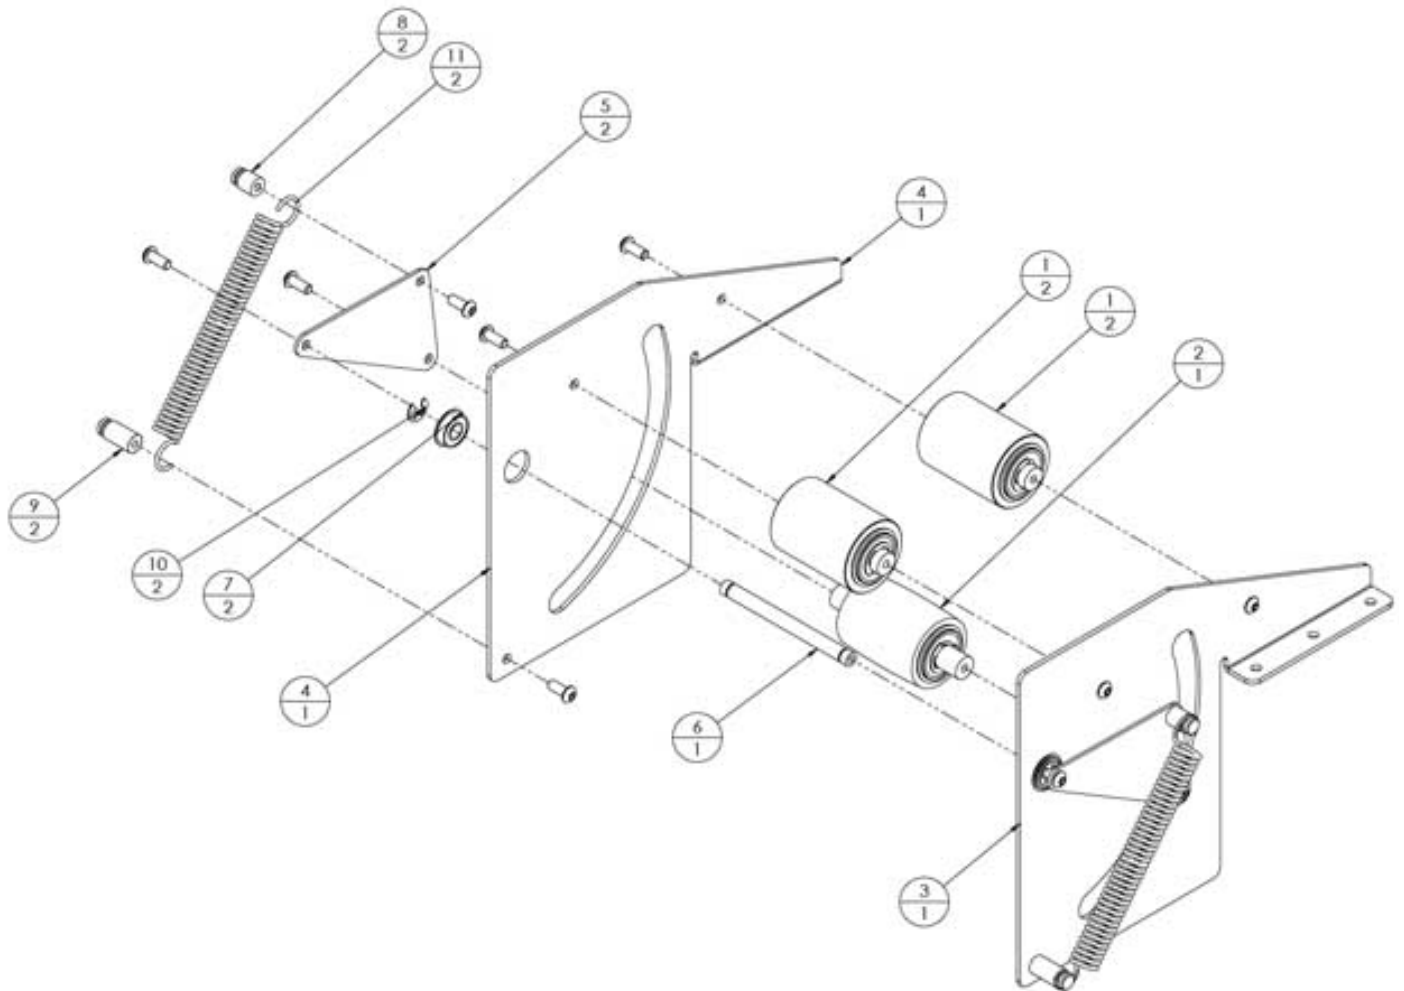


PITNEY BOWES

Sure-Feed Engineering

Assembly, Covers, Turnover (10X13) 20020-051

ITEM #	PART #	DESCRIPTION	QTY
1	18007-042	BLOCK, SIDE COVER MTG	4
2	99039-079	STANOFF, HEX, #10-32	4
3	20012-003	STANDOFF, DRIVE COVER	2
4	20013-003	COVER, LOWER SIDE	2
5	20013-013	COVER, DRIVE	1
6	20013-024	COVER, DISCHARGE END	1
7	99012-002	HANDLE, POCKET PULL	4
8	-	SBHCS, #10-32 X 1/2	10
9	-	SBHCS, #10-24 X 1/2	2
10	-	SHCS, #10-24 X 1-1/4	4

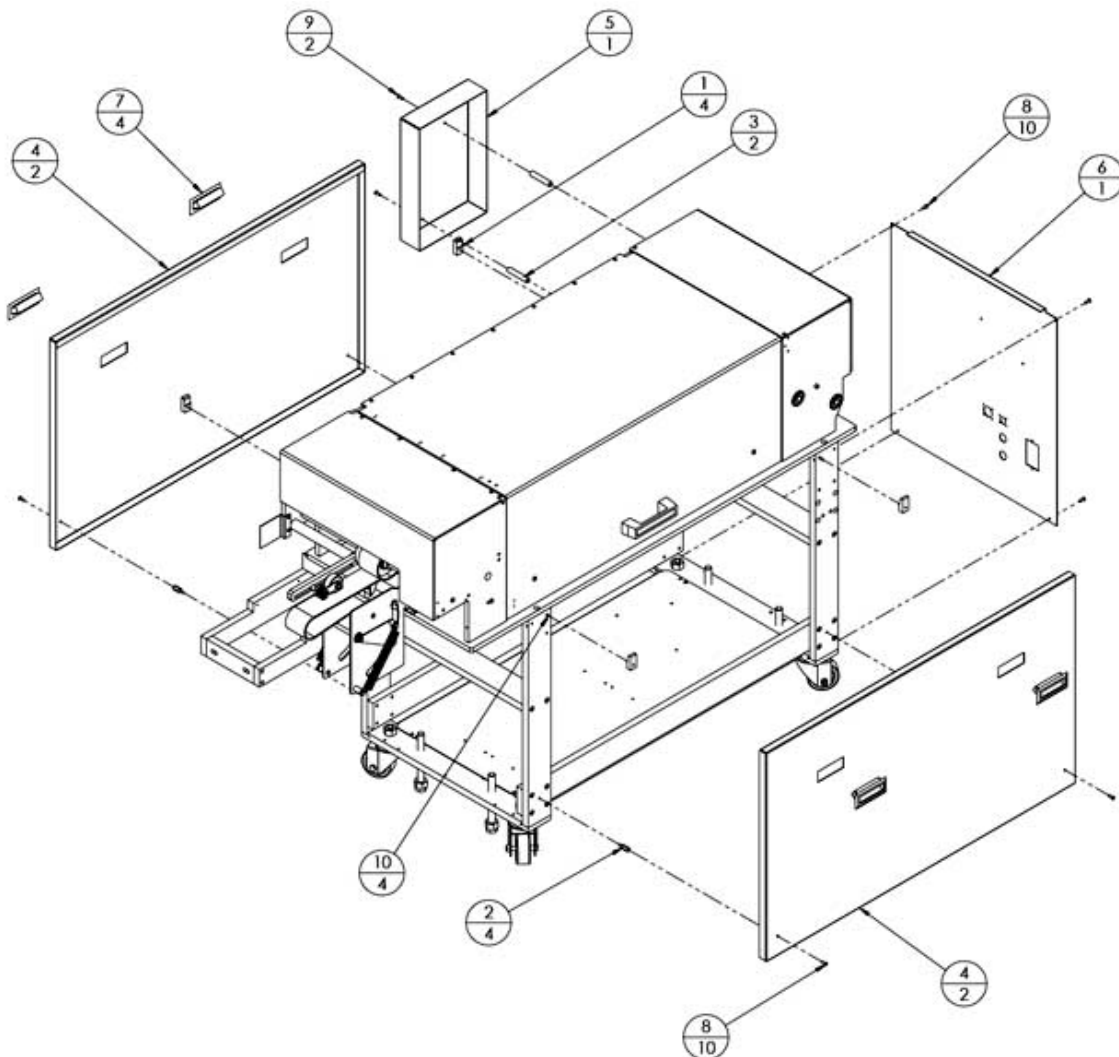


PITNEY BOWES
Sure-Feed Engineering

Assembly, Covers, Turnover (10X13) 20020-051 continued

ITEM #	PART #	DESCRIPTION	QTY
1	20020-042	ASSEMBLY, FRAME, CENTER LEXAN	1
2	20008-005	BAR, END COVER MTG.	1
3	20007-005	BLOCK, END COVER MTG.	2
4	20013-014	COVER, CENTER, LEXAN	1
5	20013-066	COVER, INFEED LEXAN, TO	1
6	20013-010	COVER, DISCHARGE (LEXAN)	1
7	20013-015	COVER, SIDE, LEXAN	1
8	20013-016	COVER, DRIVE BELT	1
9	20009-006	BRACKET, COVER SUPPORT	1
10	99012-001	HANDLE, DOOR	1
11	99014-004	GAS SPRING, 20LB (10.35 TO 18.62)	1
12	99014-006	BRACKET, BALL STUD, 10mm	1
13	99014-005	BALL SOCKET END FITTING 10MM	2
14	99006-024	PIN, STUD, 5/16-24 X 1-1/8	2
15	18007-106	BLOCK, INTERLOCK SWITCH MTG.	1
16	98009-037	SENSOR, RECIEVER, THRU BEAM	REF
17	98009-002	SENSOR, SENDER, THRU BEAM	REF
18	-	SHCS, 1/4-20 X 3/4	2
19	-	SBHCS, 1/4-20 X 1/2	2
20	-	SCREW, SKT HEAD, #10-24 X 3/4	2
21	-	SBHCS, #10-24 X 3/8	19
22	-	SBHCS, #10-24 X 3/8	3
23	-	SHCS, #8-32 X 1/2	3
24	-	SBHCS, #4-40 X 5/8	4
25	-	SBHCS, #4-40 X 1/2	2
26	-	WASHER, FLAT, 1/4	2

PITNEY BOWES

Sure-Feed Engineering

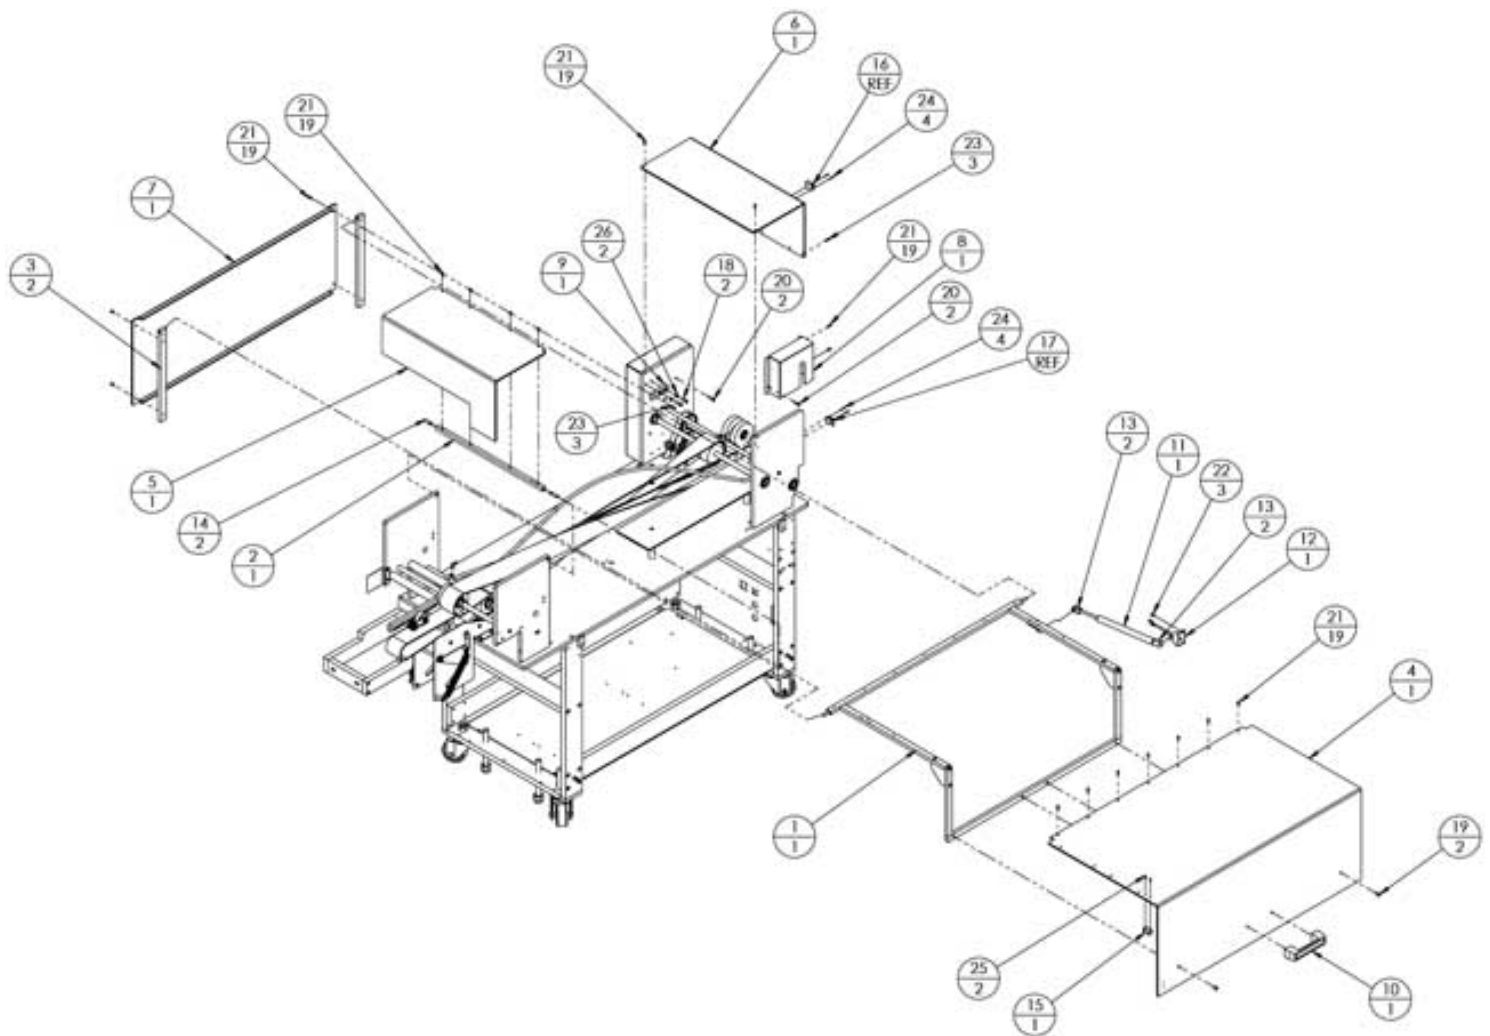


PITNEY BOWES

Sure-Feed Engineering

Assembly, Flat Idler Roller 20020-065

ITEM #	PART #	DESCRIPTION	QTY
1	20004-017	SHAFT, ROLLER	1
2	20006-010	ROLLER IDLER	1
3	99003-006	BEARING, 5/8 X 1-3/8 SEALED W/ S.R.	2
4	99022-011	E-CLIP, 5/8 SHAFT	2

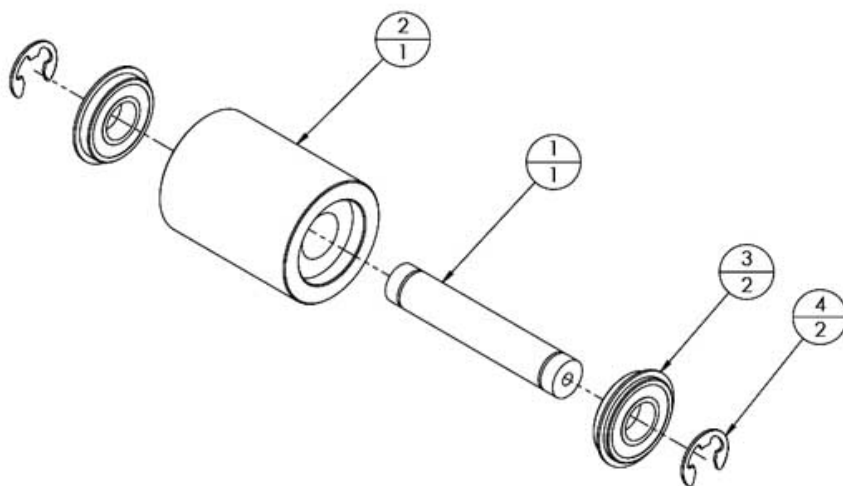


PITNEY BOWES

Sure-Feed Engineering

Assembly, Crowned Idler Roller 20020-066

ITEM #	PART #	DESCRIPTION	QTY
1	20006-012	PULLEY, CROWNED	1
2	20004-019	SHAFT, ROLLER	1
3	99003-006	BEARING, 5/8 X 1-3/8 SEALED W/ S.R.	2
4	99022-011	E-CLIP, 5/8 SHAFT	2

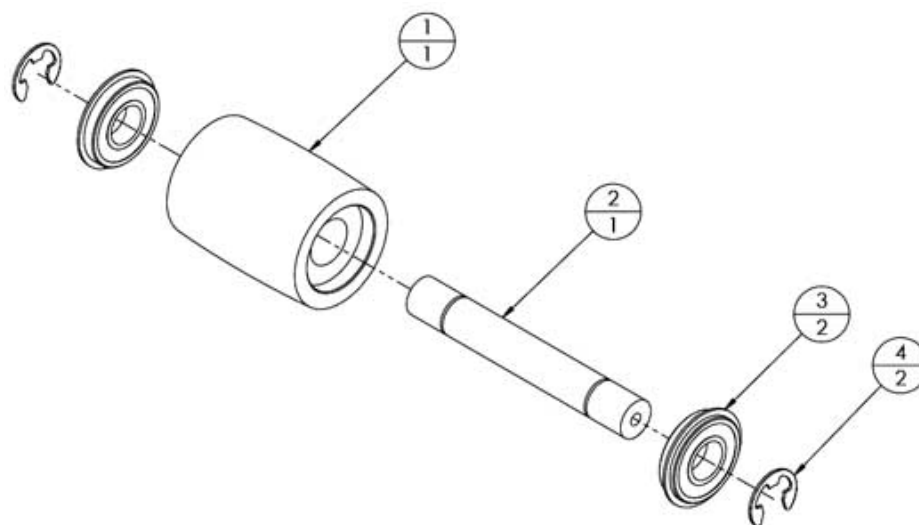

PITNEY BOWES
Sure-Feed Engineering